


# P-4027iw MFP

## Operation Guide

2024.10  
CIDGEEN002

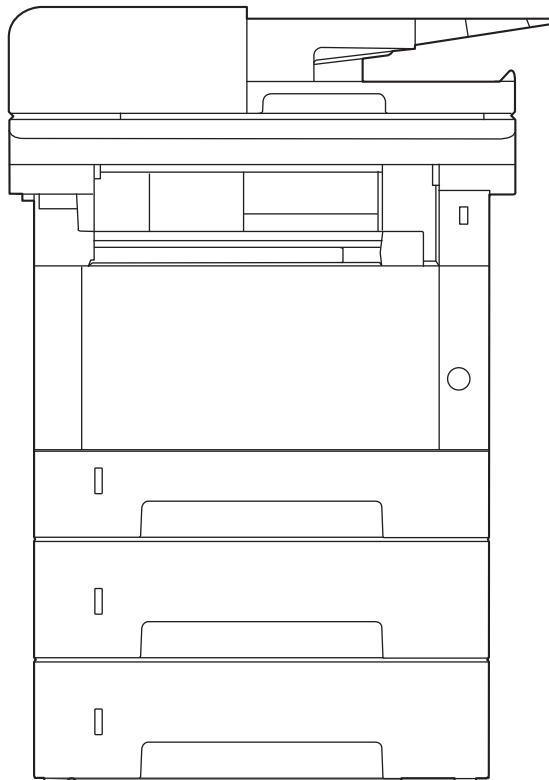

---

# Contents

<b>1</b>	<b>Please Read First.....</b>	<b>1</b>
	Preface .....	2
	Machine Features .....	3
	Optimize your office workflow .....	3
	Save energy and cost .....	5
	Create attractive documents .....	6
	Strengthen security .....	7
	Use functions more efficiently .....	9
	Color and Image Quality Functions.....	11
	Basic Color Modes .....	11
	Adjusting Image Quality and Color .....	12
	Guides Provided with the Machine .....	14
	About the Operation Guide (this Guide).....	16
	Structure of the guide .....	16
	Conventions Used in This Guide .....	17
	Notice .....	21
	Safety Conventions in This Guide .....	21
	Environment .....	22
	Precautions for Use .....	23
	Compliance and Conformity.....	24
	Legal Restriction on Copying/Scanning .....	26
	Wireless Connection .....	27
	Security Precautions when Using Wireless LAN (If equipped) .....	28
	Limited Use of This Product.....	29
	Legal and Safety Information.....	30
	Energy Saving Control Function.....	33
	Automatic 2-Sided Print Function .....	34
	Resource Saving - Paper .....	35
	Environmental benefits of "Power Management".....	36
	ENERGY STAR Program.....	37
	Precautions for security when using wireless LAN.....	38
<b>2</b>	<b>Installing and Setting up the Machine .....</b>	<b>39</b>
	Part Names (Machine Exterior).....	40
	Part Names (Connectors/Interior).....	42
	Part Names (With Optional Equipments Attached).....	44
	How to hold the device .....	45
	Connecting the Machine and Other Devices .....	46
	Connecting Cables.....	48
	Connecting LAN Cable.....	48
	Connecting USB Cable.....	49
	Connecting the Power Cable .....	50
	Power On/Off .....	51
	Power on .....	51
	Power off.....	52
	Using the Operation Panel .....	53
	Operation Panel Keys .....	53
	Touch Panel.....	55
	Using the Touch Panel.....	55
	Home screen .....	57
	Display for Device Information .....	61
	Display Setting Screen.....	62
	Display of Keys That Cannot Be Set .....	63
	Entering Numbers .....	65
	Help Screen.....	68

Login/Logout.....	69
Login.....	69
Simple Login.....	70
Log in by ID card.....	71
Log in using a keyboard.....	72
Logout.....	73
Default Settings of the Machine.....	74
Setting Date and Time.....	74
Network Setup.....	75
Energy Saver function.....	86
Quick Setup Wizard.....	91
Configuring Settings Quick Setup Wizard.....	92
Installing Software.....	94
Published Software (Windows).....	94
Published Software (Mac).....	96
Installing Software in Windows.....	97
Installing Software on a Mac OS Computer.....	98
Configure TWAIN Driver.....	102
Configure WIA Driver.....	104
Check the counter.....	106
Additional Preparations for the Administrator.....	107
Administrator Privileges Overview.....	107
Log in as Machine Administrator or Administrator.....	108
Strengthening the Security.....	109
What is Embedded Web Server RX.....	111
Accessing Embedded Web Server RX.....	112
Changing Security Settings.....	113
Changing Device Information.....	114
SMTP and E-mail Settings.....	115
Registering Destinations.....	118
Transferring Data from Our Other Products.....	119
Migrating the Address Book.....	119

### **3 Preparation before Use.....127**

Load paper.....	128
Loading Paper.....	128
Precaution for Loading Paper.....	129
Paper Specifications available in the Cassettes.....	130
Loading in the Cassettes.....	131
Paper Specifications available in the Multipurpose Tray.....	135
Loading Paper in the Multipurpose Tray.....	136
Specifying Paper Size and Media Type.....	138
Paper Stopper.....	140
Preparation for Sending a Document to a Shared Folder in a PC.....	141
Make a note of the computer name and full computer name.....	141
Make a note of the user name and domain name.....	142
Create a shared folder and make a note of the shared folder name.....	143
Configuring Windows Firewall.....	148
Scan to Folder Setup Tool for SMB.....	153
Registering Destinations in the Address Book.....	155
Adding a Destination (Address Book).....	155
Add One Touch Keys.....	167

### **4 Print from PC.....170**

Printer Driver Print Settings Screen.....	171
Displaying the Printer Driver Help.....	172
Changing the Default Printer Driver Settings (Windows 2016 and later).....	173
Changing the Default Printer Driver Settings (Windows 11).....	174
Printing from PC.....	175

Printing on Standard Sized Paper.....	175
Printing on Non-standard Sized Paper .....	177
Printing with Universal Print .....	181
Canceling Printing from a Computer .....	185
Printing from the Mobile Device.....	186
Printing by AirPrint .....	186
Printing by Mopria .....	187
Printing with Wi-Fi Direct .....	188
Printing Data Saved in the Printer.....	189
Specifying the Job Box from a Computer and Storing the Job .....	189
Printing Documents from Private Print Box.....	191
Deleting the Documents Stored in the Private Print Box .....	192
Printing Document from Stored Job Box .....	193
Deleting the Documents Stored in the Stored Job Box.....	194
Printing Document from Quick Copy Box.....	195
Deleting the Documents Stored in the Quick Copy Box .....	196
Printing Document from Proof and Hold Box.....	197
Deleting the Documents Stored in the Proof and Hold Box.....	198
Printing Documents from PIN Print Box.....	199
Deleting the Documents Stored in the PIN Print Box .....	200
Printing Document from Universal Print Box.....	201
Deleting the Documents Stored in the Universal Print Box .....	203
Job Box Settings .....	204
Monitoring the Printer Status (Status Monitor).....	205
Accessing the Status Monitor.....	205
Exiting the Status Monitor .....	206
Quick View State.....	207
Printing progress tab.....	208
Paper tray status tab .....	209
Toner Status Tab.....	210
Alert tab.....	211
Status Monitor Context Menu .....	212
Status Monitor Notification Settings .....	213

## **5            Operation on the Machine .....215**

Loading Originals .....	216
Placing Originals on the Platen .....	216
Original Specifications available in the Document Processor.....	218
Recalling Frequently Used Functions (Favorites).....	221
ID Card Copy.....	221
Paper Saving Copying .....	222
Simple Sending Job Folder (Destination Entry) .....	223
Simple Sending Job Folder (Address Book).....	224
Simple Sending Email (Destination Entry) .....	225
Simple Sending Email (Address Book).....	226
Register Favorites (Wizard Mode).....	227
Register Favorites (Program Mode).....	228
Recalling Favorites (Wizard Mode).....	229
Recalling Favorites (Program Mode) .....	230
Edit the favorite.....	231
Deleting Favorites .....	232
Using Applications.....	233
Installing Applications.....	233
Activating Applications.....	235
Deactivating Applications .....	236
Uninstalling Applications .....	237
Registering Shortcuts (Copy, Send, and Document Box Settings) .....	238
Creating new shortcuts.....	238
Edit the shortcut.....	239
Delete the shortcut .....	240

Copying .....	241
Copy .....	241
Canceling Jobs .....	242
Basic Scanning (Sending).....	243
Sending Document via E-mail .....	244
Sending Document to Desired Shared Folder on a Computer (Scan to PC) .....	246
Sending Document to Folder on an FTP Server (Scan to FTP) .....	250
Scanning using TWAIN or WIA.....	253
Useful Sending Method .....	255
WSD Scan.....	256
Install the Driver (for Windows 10).....	256
Install the Driver (for Windows 11).....	257
Install the Driver (Microsoft Windows Server 16 and after) .....	258
Executing WSD scan .....	259
Scanning with FMU Connection.....	260
Sending to different types of destinations (Multi sending).....	262
Sending to different types of destinations .....	262
Sending Documents to E-mail Address of Logged in User (to myself).....	264
Using a Fax Server to Send (Fax Server Send) .....	265
Canceling Sending Jobs .....	267
Handling Destination .....	268
Specifying Destination .....	268
Choosing from the Address Book.....	269
Choosing from the External Address Book.....	271
Choosing from One Touch key destinations .....	272
Choosing from the Search (No.).....	273
Checking and Editing Destinations.....	274
Confirmation Screen of Destinations .....	275
Re-entering the New Destination .....	276
Recall .....	277
How to use the FAX Function .....	278
Using Document Boxes .....	279
What is Job Box?.....	279
What is USB Drive Box? .....	280
What is a Fax Memory RX Box/Subaddress Box/Polling Box?.....	281
Using Removable USB Drive .....	282
Printing Documents Stored in Removable USB Drive .....	282
Saving Documents to USB Drive (Scan to USB).....	285
Check the USB Drive Information.....	287
Removing USB Drive.....	288
Cloud Linkage Function .....	289
Set up files and folders in a cloud service.....	289
Installing Cloud Access.....	290
Set Cloud Access user account (authorization information). .....	291
Linkage with the Cloud Service .....	293
Scan and Print using the Cloud Service .....	294

## **6 Using Various Functions .....296**

About Functions Available on the Machine.....	297
Copy .....	297
Send.....	299
USB Drive (Store File, Printing Documents).....	302
Functions .....	305
Original Size.....	305
Paper Selection .....	307
Mixed Size Originals .....	309
Original Orientation .....	311
Collate.....	312
ID Card Copy.....	313
Density .....	314

Original Image .....	315
EcoPrint .....	318
Color Selection .....	319
Sharpness .....	320
Background Density Adj.....	321
Saturation .....	322
Prevent Bleed-thru.....	323
Contrast.....	324
Erase Colors .....	325
Zoom .....	326
Combine.....	329
Border Erase .....	332
DuplexDuplex.....	335
Continuous Scan .....	339
Job Finish Notice.....	340
File Name Entry .....	341
Priority Override.....	342
Detect Folded Corner Originals.....	343
Skip Blank Page.....	344
Duplex .....	345
Sending Size .....	346
File Format.....	348
File Separation.....	355
Scan Resolution.....	356
Clarify Text (Noise Removal).....	357
Email Subject/Body .....	358
FTP Encrypted TX .....	359
Email Encrypted TX .....	360
Digital Signature to Email .....	361
Storing Size .....	363
Encrypted PDF Password .....	364
JPEG/TIFF Print.....	365
XPS Fit to Page.....	366

## **7      Status/Job Cancel.....367**

Checking Job Status.....	368
Displaying Status Screens .....	368
Details of the Status Screens .....	370
Checking Job History .....	375
Displaying Job History Screen .....	375
Checking the Detailed Information of Histories .....	377
Sending the Log History.....	378
Job Operation .....	379
Pause and Resumption of Jobs .....	379
Canceling of Jobs.....	380
Device Information.....	381
Checking the Remaining Amount of Toner and Paper, and the Condition of the Unit.....	382

## **8      System Menu.....383**

Operation Method.....	384
System Menu Settings .....	386
Device Settings .....	391
Language/System of Units .....	391
Keyboard .....	392
Date/Time .....	393
Energy Saver/Timer .....	394
Display Settings.....	396
Sound .....	397

Original/Scan Settings.....	398
Paper Feeding .....	400
Operation Assist.....	408
Error Handling.....	409
Toner Settings .....	410
Device Managed by Administrator .....	411
Notification/Report.....	412
Print Report/List.....	412
Result Report Setting[Result Report Setting] .....	415
[Device Status Notification] .....	416
Fax Communication Report.....	417
History Settings.....	418
History Management.....	419
Function Settings.....	420
Function Defaults.....	420
Copy/Print .....	426
Send/Store .....	427
Email .....	429
Sending Job - Folder.....	431
Fax.....	432
WSD .....	433
Address Book.....	434
One-Touch Key .....	435
Send and Forward.....	436
Forward setting .....	437
Printer.....	438
Document Box.....	443
Job Box .....	444
Subaddress Box.....	445
Fax Memory RX Box.....	446
Home .....	447
Cloud Access Setting .....	448
Status.....	449
Remote Services.....	450
TWAIN/WIA .....	451
Network Settings .....	452
Host Name .....	452
Proxy.....	453
Wi-Fi Direct Settings.....	454
Wi-Fi Settings .....	456
Wired Network Settings .....	463
Protocol Settings.....	468
Ping.....	477
Bonjour.....	478
IP Filter (IPv4).....	479
IP Filter (IPv6).....	480
IPSec .....	481
Restart Network .....	482
Connectivity .....	483
Others.....	485
Security Settings .....	486
Security Quick Setup.....	486
Configuring Security Quick Setup.....	487
Interface Block Setting .....	488
Device Security Settings .....	489
Authentication Security.....	493
Unknown User Settings .....	494
Network.....	495
Job Accounting/Authentication.....	496
Add/Delete Application .....	497
Adjustment/Maintenance.....	498

Image Adjustment .....	498
Others.....	501

<b>9</b>	<b>User Authentication and Accounting (User Login, Job Accounting) .....</b>	<b>502</b>
	Overview of User Login Administration.....	503
	Managing the Job Account from PC .....	503
	Enable User Login Administration.....	505
	Setting User Login Administration .....	506
	Authentication Security .....	506
	Adding a User (Local User List) .....	508
	Change the user properties.....	511
	Deleting a user. ....	513
	Managing the Users that Print on This Machine from a PC .....	514
	Managing the Users to Scan Using TWAIN.....	516
	Managing the Users to Scan Using WIA .....	517
	Managing the Users that Send Faxes from a PC.....	518
	Local Authorization.....	519
	Server Settings .....	520
	Configure Network User Rights .....	521
	Group Authorization Settings.....	522
	Guest Authorization Settings .....	525
	Obtain NW User Property .....	528
	Simple Login Settings.....	530
	IC Card Authentication Kit Settings .....	533
	ID Card Settings .....	536
	PIN Login.....	539
	Using User Login Administration.....	540
	Overview of Job Accounting .....	541
	Enable job accounting .....	543
	Set the Job Accounting(Local) .....	544
	Adding an Account.....	544
	Restricting the Use of the Machine .....	545
	Editing an Account.....	546
	Deleting an Account .....	547
	Job Accounting for Printing .....	548
	Job Accounting for Scan Using TWAIN .....	550
	Job Accounting for Scan Using WIA.....	551
	Job Accounting for the FAX Transmitted from a Computer .....	552
	Configuring Job Accounting .....	553
	Default Counter Limit.....	553
	Counting the Number of Pages Printed .....	555
	Print Accounting Report.....	558
	Using Job Accounting .....	559
	Apply Limit.....	561
	Copier/Printer Count .....	562
	Unknown User Settings .....	563
<b>10</b>	<b>Troubleshooting .....</b>	<b>565</b>
	Regular Maintenance.....	566
	Cleaning .....	566
	Cleaning Platen .....	567
	Cleaning Slit Glass.....	568
	Clean the inside of the main unit.....	569
	Replacing the Toner Container.....	573
	Troubleshooting .....	577
	Solving Malfunctions .....	577
	Machine Operation Trouble.....	578
	Printed Image Trouble .....	627

Remote Operation .....	649
Responding to Messages .....	652
List of Transmission Error Codes .....	708
Adjustment/Maintenance .....	761
Overview of Adjustment/Maintenance .....	761
Perform image adjustment .....	762
Clearing Paper Jams .....	763
Jam Location Indicators .....	763
Remove any jammed paper in the Multipurpose Tray .....	765
Remove paper jams from Cassette 1 to Cassette 3 .....	766
Remove the paper jammed inside the machine .....	768
Remove any jammed paper in Rear Cover and Duplex Unit .....	773
Remove any jammed paper in the Document Processor (Reverse Automatic) ....	776

## 11 **Appendix.....778**

Optional Equipment .....	779
Option configuration .....	779
Overview of the Applications .....	782
Starting Application Use .....	782
Checking Details of Application .....	783
Character Entry Method .....	784
Input screen .....	784
About Paper .....	787
Basic Paper Specifications .....	787
Choosing the Appropriate Paper .....	788
Special Paper .....	791
Specifications .....	801
Machine .....	801
Copy Functions .....	803
Printer Function .....	805
Scanner Functions .....	806
Document Processor .....	807
Paper Feeder (300 250 sheet x 2) .....	808
Backing up your data .....	809
Backing up your data using NETWORK PRINT MONITOR .....	809
Security Quick Setup Function List .....	810
TLS .....	810
Serverside Settings .....	811
Clientside Settings .....	812
IPv4 Settings (Wired Network) .....	813
IPv4 Settings (Wireless Network) .....	814
IPv6 Settings (Wired Network) .....	815
IPv6 Settings (Wireless Network) .....	816
Send Protocols: FTP Client (Transmission) .....	817
Other Protocols: HTTP (Client) .....	818
Other Protocols: SOAP .....	819
Other Protocols: LDAP .....	820
Send Protocols: SMTP (E-mail TX) .....	821
Email: POP3 User Settings .....	822
Print protocols .....	823
Send Protocol .....	825
Other Protocols .....	826
TCP/IP: Bonjour Settings .....	828
Network Settings .....	829
Connectivity .....	830
Interface Block Setting .....	831
Energy Saver/Timer .....	832
User Account Lockout Setting .....	833
Job Status/Job Logs Settings .....	834
Edit Restriction .....	835



---

# 1 Please Read First

---

# Preface

Thank you for purchasing this machine.

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.

Please read this Operation Guide before using the machine.

The product illustrations, screens, settings, etc., in this guide may differ depending on the machine you are using.


**We recommend the use of our genuine toner containers, which have passed rigorous quality control testing, to maintain quality.**

The use of non-genuine toner containers may cause failure.

We will not be liable for any damages caused by the use of third party supplies in this machine.

## Checking the Equipment's Serial Number

The equipment's serial number is printed in the location shown in the figure.

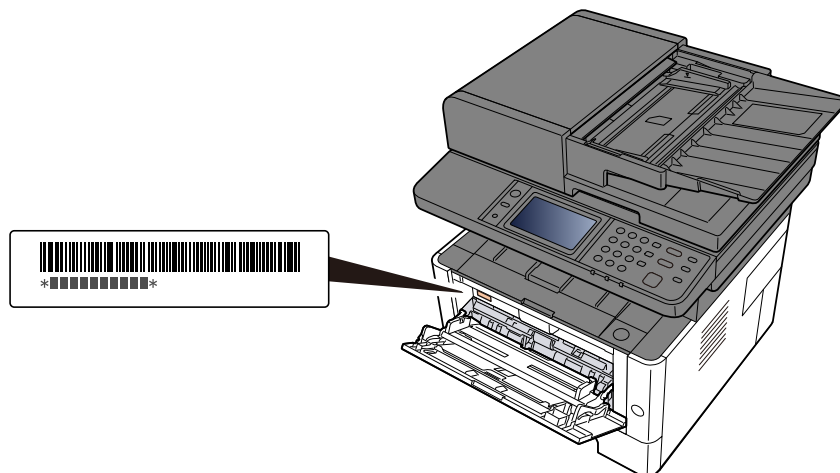

You'll need the equipment's serial number when contacting your Service Representative. Please check the number before contacting your service representative.

# Machine Features

The machine is equipped with many useful functions.


➔ [Using Various Functions \(page 296\)](#)

Here are some examples.

## Optimize your office workflow

### Access to frequently used functions with just one touch (Program)

You can preset frequently used functions. Once you register frequently used settings as a program, you can call up the settings simply by selecting the program number. Using this favorite brings the same results even if operated by another person.

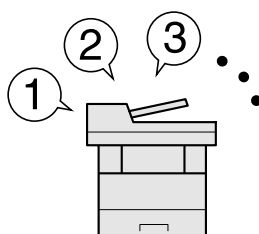


➔ [Recalling Frequently Used Functions \(Favorites\) \(page 221\)](#)

### Scan originals of different sizes at a time (Mixed Size Originals)

It is useful when preparing conference materials.

You can set the different sized originals at one time so you don't need to reset the originals regardless of size.

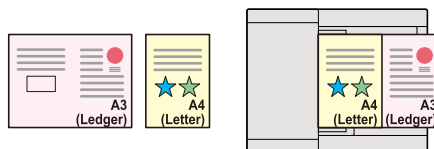


➔ [Mixed Size Originals \(page 309\)](#)

### Scan a large number of originals in separate batches and produce as one job (Continuous Scan)

It is useful when preparing many-page handouts.

When a large number of originals cannot be placed in the document processor at one time, the originals can be scanned in separate batches and then copied or sent as one job.

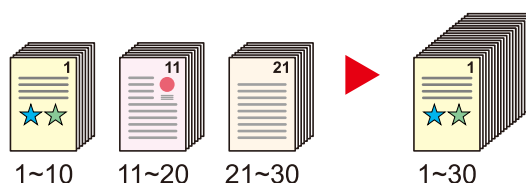


➔ [Continuous Scan \(page 339\)](#)

## Send one time with multiple sending options (Multi Sending)

You can send a same document to the multiple destinations using a different method.

You can specify multiple destinations of different send methods such as Email, SMB, and Fax.

You can reduce your workflow by sending a job at once.

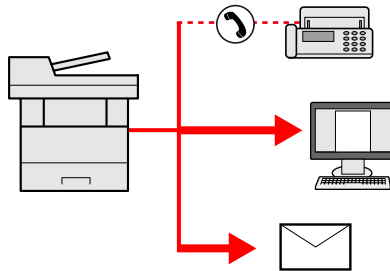


➔ [Sending to different types of destinations \(Multi sending\) \(page 262\)](#)

## Save energy and cost

### Save energy as needed (Energy Saver function)

The machine is equipped with Energy Saver function that automatically switches the machine into Sleep Mode.

You can set appropriate Energy Saver Recovery Level depending on the operation. In addition, the machine can automatically be switched into Sleep and recovered at a specified time for each day of the week.

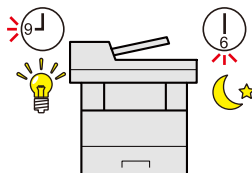


➔ [Energy Saver function \(page 86\)](#)

### Printing with reduced toner consumption (EcoPrint)

You can save toner consumption with this function.

When you only need to check the printed content, such as a trial print run or documents for internal confirmation, use this function to save toner.


Use this function when a high-quality print is not required.

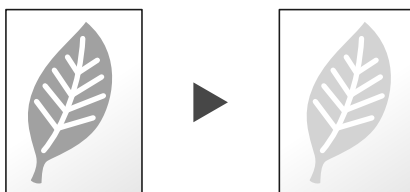

➔ [EcoPrint \(page 318\)](#)

### Reduce paper use (Paper Saving Printing)

You can print originals on both sides of the paper. You can also print multiple originals onto one sheet.

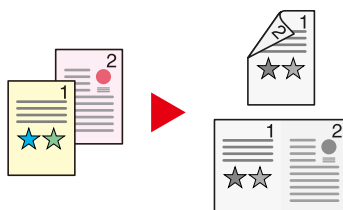

➔ [Combine \(page 329\)](#)

➔ [DuplexDuplex \(page 335\)](#)

### Skip blank pages when printing (Skip Blank Page)

When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.




➔ [Skip Blank Page \(page 344\)](#)

## Create attractive documents

### Prevent image bleed-through (Prevent Bleed-through)

Hides background colors and image bleed-through when scanning thin original.

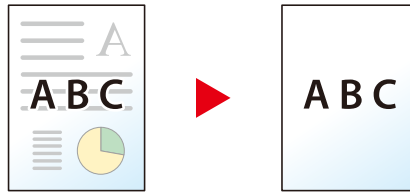


➔ [Prevent Bleed-thru \(page 323\)](#)

## Strengthen security

### Password-protect a PDF file (PDF Encryption Functions)


Use the PDF format's password security options to restrict document viewing, printing and editing.

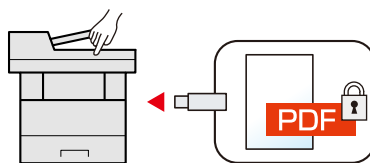

➔ [PDF Encryption Functions \(page 350\)](#)

### Prevent loss of finished documents (Private Print)


Temporarily saving print jobs in the main unit document box and outputting them when in front of the device can prevent documents from being taken by others.

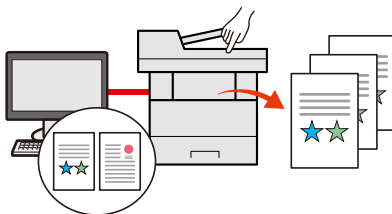

➔ [Printing Documents from Private Print Box \(page 191\)](#)

### Log in by ID card (Card Authentication)


You can log in simply by touching an ID card. You don't need to enter your user name and password.

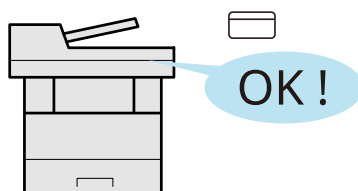

➔ [Overview of the Applications \(page 782\)](#)

### Strengthen security (Settings for Administrator)


Various functions are available for administrators to strengthen security.

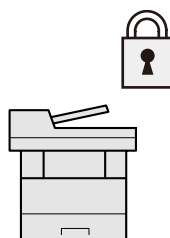

➔ [Strengthening the Security \(page 109\)](#)

## Prevent the execution of malware (Allowlisting)

Prevent malware from running and prevent software tampering and maintain system reliability.

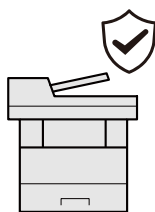


➔ [Device Security Settings \(page 489\)](#)

## Use functions more efficiently

### Make the machine quiet (Quiet Mode)

You can make the machine quiet by reducing its running noise. You can switch ON/OFF with one touch.

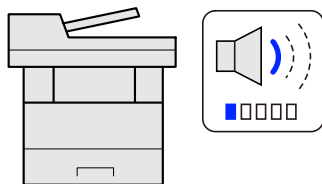


➔ [Use the quiet mode. \(page 90\)](#)

### Expand functions as necessary(Application)

The functionality of the machine can be expanded by installing applications.


Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

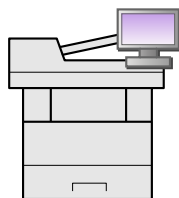

➔ [Overview of the Applications \(page 782\)](#)

### Install the machine without concerning the network cables (Wireless Network)

If there is a wireless LAN environment, it is possible to install the unit without worrying about the network wiring. In addition, Wi-Fi Direct, etc. are supported.

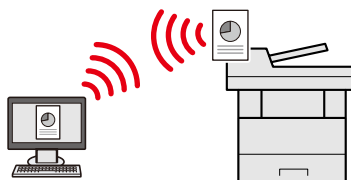


➔ [Configuring the Wireless Network \(page 77\)](#)

### Use USB drive(USB Drive)

It is useful when you need to print documents outside your office or you cannot print documents from your PC.

You can print the document from the USB drive by plugging it directly into the machine.

Original scanned at the machine can be saved in the USB drive also.

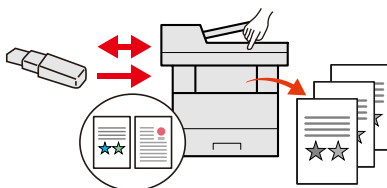


➔ [Using Removable USB Drive \(page 282\)](#)

➔ [Saving Documents to USB Drive \(Scan to USB\) \(page 285\)](#)

## Specify image file format (File Format)

You can select the various file formats when sending/storing images.

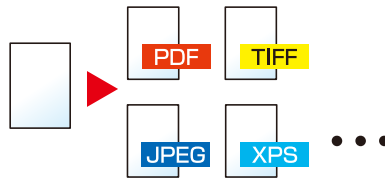

➔ [File Format \(page 348\)](#)

## Detect originals with bent corners (Detection of originals with bent corners)

When scanning a document from the document processor, scanning is automatically stopped when a document with a folded corner is detected.




➔ [Detect Folded Corner Originals \(page 343\)](#)

## Perform remote operation (Embedded Web Server RX)

You can access to the machine remotely to print, send or download data.

You can access to the machine remotely to print data.

Administrators can configure the machine behavior or management settings.

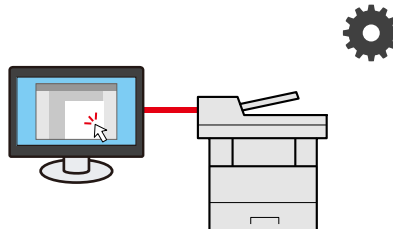

➔ [What is Embedded Web Server RX \(page 111\)](#)

# Color and Image Quality Functions

The machine is equipped with various color and image quality functions. You can adjust the scanned image as desired.

## Basic Color Modes

The basic color modes are as follows.

### Auto Color

Automatically recognizes whether a document being scanned is color or black & white.

#### Reference Image

Before	After
	

### Full Color

Scans the document in full color.

#### Reference Image

Before	After
	

### Grayscale

Scans a document in grayscale.

#### Reference Image

Before	After
	

### Black and White

Scans the document in black and white.

#### Reference Image

Before	After
	



For details, refer to the following.

➔ [Color Selection \(page 319\)](#)

## Adjusting Image Quality and Color

To adjust the image quality or color of an image, use the following functions.








 
### Adjust the color precisely

I want to...	Sample image (before)	Sample image (after)	Function
Adjust the density.			Density

For details, refer to the following:

➔ [Density \(page 314\)](#)

### Adjust the image quality precisely

I want to...	Sample image (before)	Sample image (after)	Function
Emphasize or blur the image outline. Example: Emphasize the image outlines			Sharpness
Adjust the difference between dark and light parts of the image.			Contrast
Darken or lighten the background (the area with no texts or images) of a document. Example: Lightening the background			Background Density
Prevent bleed-through in 2-sided originals.			Prevent Bleed through

For details, refer to the following:



➔ [Sharpness \(page 320\)](#)

➔ [Contrast \(page 324\)](#)

➔ [Background Density Adj. \(page 321\)](#)

➔ [Prevent Bleed-thru \(page 323\)](#)

### Adjust the scanned image

I want to...	Sample image (before)	Sample image (after)	Function
Decrease the file size and produce the characters clearly.			File format [High Comp. PDF]

For details, refer to the following:

➡ [File Format \(page 348\)](#)

# Guides Provided with the Machine

The following guides are provided with the machine. Refer to each guide as needed. The guides can be downloaded from the Download Center. To view the guides on a computer, Adobe Reader Version 8.0 or later needs to be installed.

## Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

## UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.

To set up the machine:	<b>Setup Guide</b> Explains the setup procedure to follow in order to print with this machine.
Start using the machine quickly	<b>Quick Guide</b> Describes frequently-used operations and what to do when problems occur. This printed guide is provided together with the machine.
For safe use of the machine	<b>Safety Guide</b> Provides safety and cautionary information for installation environment and use of the machine. Be sure to read this guide before using the machine. This printed guide is provided together with the machine. <b>Safety Guide (P-4027iw MFP)</b> Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine. This printed guide is provided together with the machine.
Use the machine to its fullest	<b>Operation Guide (this guide)</b> Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.
Use the fax functions	<b>FAX Operation Guide</b> Explains how to use the fax function.
Easily register machine information and configure settings	<b>Embedded Web Server RX User Guide</b> Explains how to access the machine from a Web browser on your computer to check and change settings.

Print data from a computer	<p><b>Printing System Driver User Guide</b></p> <p>Explains how to install the printer driver and use the printer function.</p> <p><b>MAC Driver Setup Guide</b></p> <p>Explains how to install the Mac printer driver and use the printer function (print panel).</p>
Monitor the machine and printers on the network	<p><b>NETWORK PRINT MONITOR User Guide</b></p> <p>Explains how to monitor your network printing system (the machine) with NETWORK PRINT MONITOR.</p>
Scan images and save with information	<p><b>File Management Utility User Guide</b></p> <p>Explains how to use File Management Utility to set various parameters and send and save scanned documents.</p>
I want to configure the appropriate settings and scan with a TWAIN-compatible application.	<p><b>TWAIN Driver User Guide</b></p> <p>Explains how to install TWAIN Driver and how to adjust scan settings.</p>
I want to configure the appropriate settings and scan with a TWAIN-compatible application.	<p><b>Quick Scan User Guide</b></p> <p>Explains how to install Quick Scan and how to set up and create scan profiles.</p>
Print without using the printer driver	<p><b>PRESCRIBE Commands Command Reference</b></p> <p>Describes the native printer language (PRESCRIBE commands).</p> <p><b>PRESCRIBE Commands Technical Reference</b></p> <p>Describes the PRESCRIBE command functions and control for each type of emulation.</p>
Directly print a PDF file	<p><b>Network Tool for Direct Printing Operation Guide</b></p> <p>Explains how to print PDF files without launching Adobe Acrobat or Reader.</p>
Adjust the print or scan position	<p><b>Maintenance Menu User Guide</b></p> <p>Maintenance Menu provides the explanation on how to configure the print, scan, and other settings</p>
Scan and print through the cloud service	<p><b>Cloud Access User Guide</b></p> <p>This section explains how to install Cloud Access and setting procedures for linking with the cloud service.</p>

# About the Operation Guide (this Guide)


## Structure of the guide

The Operation Guide contains the following chapters.

Chapter	Description
Please Read First	Provides precautions regarding use of the machine and trademark information.
Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, login, logout, and other matters related to administration of the machine.
Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to load paper and create an address book.
Print from PC	Explains the basic printing method.
Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, sending documents, and using document boxes.
Using Various Functions	Explains convenient functions that are available on the machine.
Status/Job Cancel	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, how to check the device status, and how to cancel fax transmission.
System Menu	Explains System Menu and how it relates to the operation of the machine.
User Authentication and Accounting (User Login, Job Accounting)	Explains user login and job accounting.
Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.
Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.

# Conventions Used in This Guide

Adobe Reader is used as an example in the explanations below.

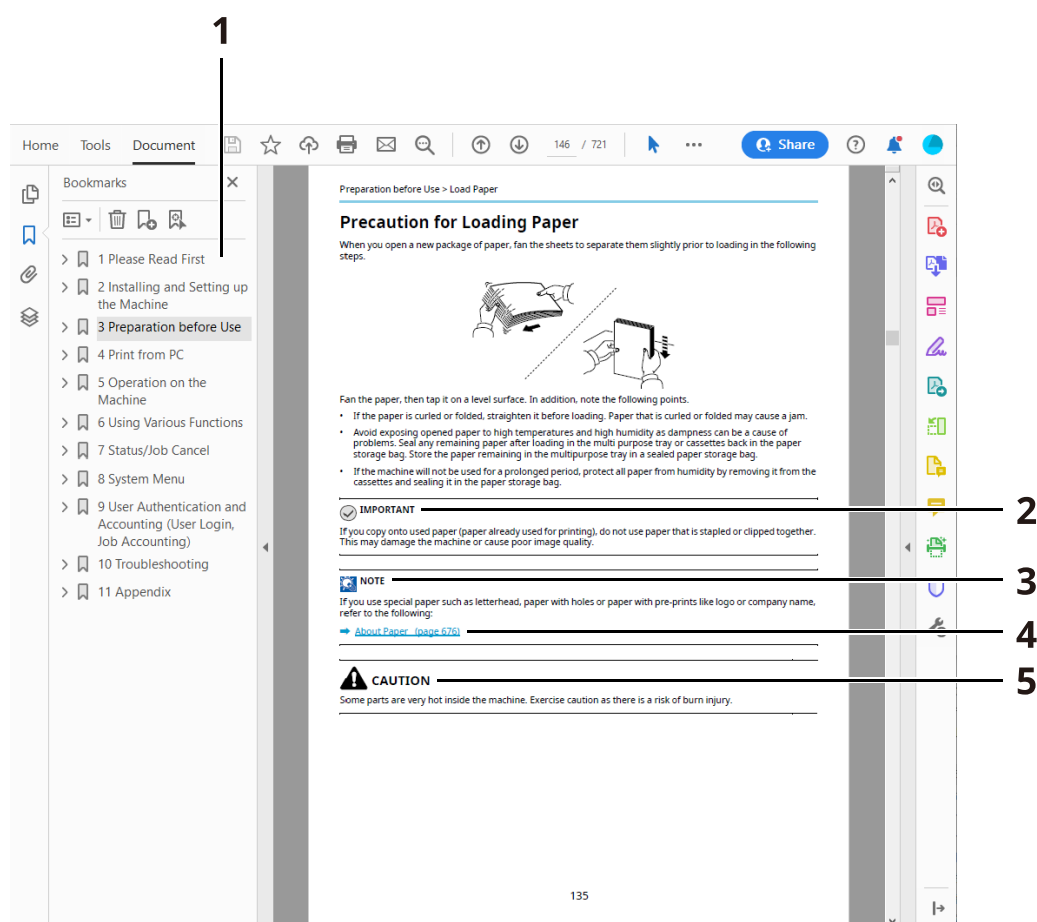

- 1 Click an item in the Table of Contents to jump to the corresponding page.
- 2 Indicates operational requirements and restrictions to operate the machine correctly, and avoid damage to the machine or property.
- 3 Indicates supplemental explanations and reference information for operations.
- 4 Click the underlined text to jump to the corresponding page.
- 5 Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

## NOTE

The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.

Convention	Description
[ ]	Indicates keys and buttons.
" "	Indicates a message.

## Conventions Used in Procedures for Operating the Machine

In this Operation Guide, continuous operation of the keys on the touch panel is as follows:

### Actual procedure


- 1 Select the [System Menu/Counter] key.
- 2 Select [Device Settings].
- 3 Move the screen downwards (i.e. swiping)
- 4 Select [Sound].

### Procedure indicated in this guide


[System Menu/Counter] key > [Device Settings] > [Sound]

### Actual procedure

- 1 Select [Job Accounting/AuthenticationAuthentication].

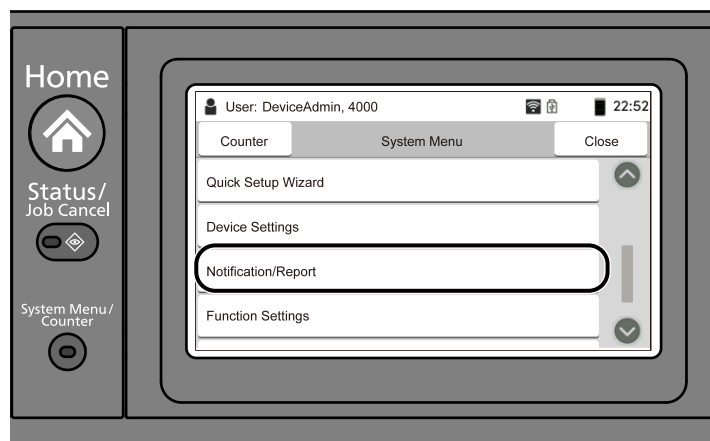

- 2 Select [Job Accounting] from "Job Accounting Setting".

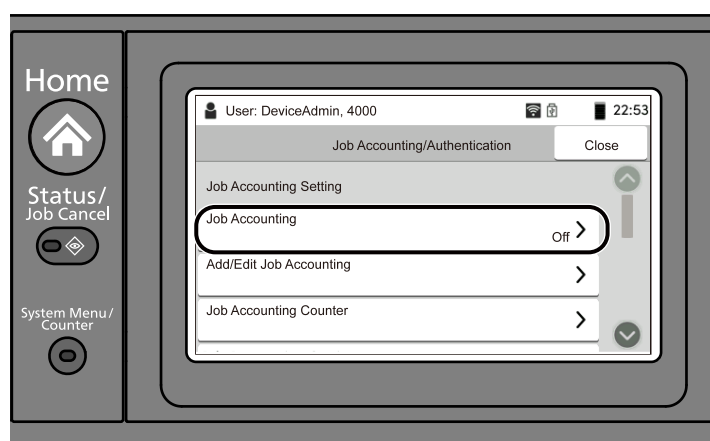

### Procedure indicated in this guide

[Job Accounting/AuthenticationAuthentication] > "Job Accounting Setting" [Job Accounting]

For details on touch panel operation, refer to the following:



➔ [Using the Touch Panel \(page 55\)](#)

## Size of Paper



Paper sizes such as A5 and Statement can be used in both the horizontal and vertical orientations. To distinguish the orientations when these sizes are used, "R" is added to sizes used in the horizontal orientation.

### Set the paper in vertical orientation

#### When loading in a cassette

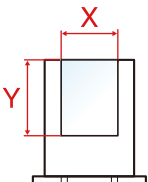Setting Position (X=Width, Y=Length)	Icon on the touch panel	Indicated size in this Guide
		A5-R, Statement-R

#### When loading in the multipurpose tray

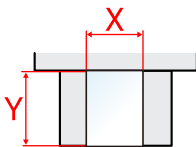

Setting Position (X=Width, Y=Length)	Icon on the touch panel	Indicated size in this Guide
		A5-R, Statement-R

Paper sizes that can be used vary depending on the function and paper feeder unit. For details, refer to the following.



➔ [Specifications \(page 801\)](#)

### Set the paper in horizontal orientation

#### When loading in a cassette

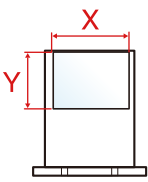Setting Position (X=Width, Y=Length)	Icon on the touch panel	Indicated size in this Guide
		A5, Statement

When loading in the multipurpose tray

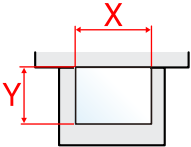Setting Position (X=Width, Y=Length)	Icon on the touch panel	Indicated size in this Guide
		A5, Statement

Paper sizes that can be used vary depending on the function and paper feeder unit. For details, refer to the following.

➡ [Specifications \(page 801\)](#)

# Notice

## Safety Conventions in This Guide

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.



### **WARNING:**


Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.



### **CAUTION:**

Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

## Symbols


The  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.



[General warning]



[Warning of high temperature]


The  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.



[Warning of prohibited action]



[Disassembly prohibited]

The  symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.



[Alert of required action]



[Remove the power plug from the outlet]



[Always connect the machine to an outlet with a ground connection]



### **NOTE**

An original which resembles a bank note closely may not be copied properly in some rare cases because this machine is equipped with a counterfeiting prevention function.

---

## Environment

The service environmental conditions are as follows:

Temperature	10 to 32.5°C/50 to 90.5°F But humidity should be 70% or less when temperature is 90.5 °F (32.5 °C).
Humidity	10 to 80% But temperature should be 86 °F (30 °C) or less when humidity is 80%.

Avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health.

If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant.

To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

## Precautions for Use

### Cautions when handling consumables

---



#### CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

---

### Other precautions

Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.

If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multipurpose (MP) Tray, return it to its original package and reseal it.

## Compliance and Conformity

We hereby declare that this product complies with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

Software Ver.	Frequency Range	Output Power (e.i.r.p)
1.0	2400 - 2483.5 MHz	< 100 mW
1.0	5150 - 5250 MHz	< 50 mW
1.0	5250 - 5725 MHz	< 100 mW
1.0	5725 - 5850 MHz	< 10 mW

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of a non-shielded interface cable with the referenced device is prohibited.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### IMPORTANT NOTE:

#### Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## **Industry Canada statement:**

This device contains licence-exempt transmitter(s) / receiver(s) that complies with Innovation, Science and Economic Development Canada's licence-exempt RSS (s). Operation is subject to the following two conditions:

- 1 This device may not cause interference.
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

Industry Canada ICES-003 Compliance Label: CAN ICES-3B/NMB-3B

\* The above statements are valid only in the United States of America and Canada.

NOTE — Use shielded interface cables.

## **Caution:**

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

Operations in the 5.25-5.35GHz band are restricted to indoor usage only.

## **Radiation Exposure Statement:**

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. \* These above statements are valid in the United States of America, Canada.

## Legal Restriction on Copying/Scanning

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by law. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- Paper money
- Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.

# Wireless Connection


## For European Countries

Frequency Range	Output Power (e.i.r.p)
2400 - 2483.5 MHz	< 100 mW
5150 - 5250 MHz	< 50 mW
5250 - 5725 MHz	< 100 mW
5725 - 5850 MHz	< 10 mW



### NOTE

5150 - 5350MHz is limited to indoor use in below countries

				
AT	BE	BG	CZ	DK
EE	FR	DE	IS	IE
IT	EL	ES	CY	LV
LI	LT	LU	HU	MT
NL	NO	PL	PT	RO
SI	SK	TR	FI	SE
CH	HR	UK	UK(NI)	

## Security Precautions when Using Wireless LAN (If equipped)

Wireless LAN allows information to be exchanged between wireless access points instead of using a network cable, which offers the advantage that a WLAN connection can be established freely within an area in which radio waves can be transmitted.

On the other hand, the following problems may occur if security settings are not configured, because radio waves can pass through obstacles (including walls) and reach everywhere within a certain area.

### Secretly Viewing Communication Contents

A third person with malicious objectives may intentionally monitor radio waves and gain unauthorized access to the following communication contents.

- Personal information including ID, passwords, and credit card numbers
- Contents of email messages

### Illegal Intrusion

A third party with malicious intent may gain unauthorized access to personal or company networks and conduct the following illegal actions.

- Extracting personal and confidential information (information leak)
- Entering into communication while impersonating a specific person and distributing unauthorized information (spoofing)
- Modifying and retransmitting intercepted communications (falsification)
- Transmitting computer viruses and destroying data and systems (destruction)

Wireless LAN cards and wireless access points contain built-in security mechanisms to address these problems and to reduce the possibility of these problems occurring by configuring the security settings of wireless LAN products when the product is used.

We recommend that customers take responsibility and use their judgment when configuring the security settings and that they ensure that they fully understand the problems that can occur when the product is used without configuring the security settings.

## Limited Use of This Product

- Radio waves transmitted from this product may affect medical equipment. When using this product in a medical institution or in the vicinity of medical instruments, either use this product according to the instructions and precautions provided by the administrator of the institution or those provided on the medical instruments.
- Radio waves transmitted from this product may affect automatic control equipment including automatic doors and fire alarms. When using this product in the vicinity of the automatic control equipment, use this product according to the instructions and precautions provided on the automatic control equipment.
- If this product is used in devices that are directly related to service including airplanes, trains, ships, and automobiles or this product is used in applications requiring high reliability and safety to function and in devices requiring accuracy including those used in disaster prevention and crime prevention and those used for various safety purposes, please use this product after considering the safety design of the entire system including adoption of a failsafe design and redundancy design for reliability and safety maintenance of the entire system. This product is not intended for use in applications requiring high reliability and safety including aerospace instruments, trunk communication equipment, nuclear power control equipment, and medical equipment; hence, the decision as to whether to use this product in these applications needs to be fully considered and determined.

## Legal and Safety Information

Unauthorized reproduction (copying) of all or part of this document is prohibited, with the exception of copyright law exceptions.

### Regarding Trade Names

- KPDL is a trademark of Kyocera Corporation.
- Active Directory, Azure, Excel, Microsoft, Microsoft 365, Microsoft Edge, PowerPoint, Windows and Windows Server are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.
- PCL is a trademark of Hewlett-Packard Company.
- Adobe, Acrobat, PostScript and Reader are registered trademarks or trademarks of Adobe Inc. in the U.S.A. and/or other countries.
- Ethernet is a registered trademark of Fuji Xerox Co., Ltd.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AppleTalk, Bonjour, Mac, and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- All European language fonts installed in this machine are used under licensing agreement with Monotype Imaging Inc.
- Monotype, Helvetica Palatino, Times, and UFST are trademarks of Monotype Imaging Inc., registered with the U.S. Patent and Trademark Office and may be registered in other countries or regions.
- Helvetica, Palatino and Times are registered trademarks of Linotype GmbH.
- ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC Zapf Dingbats are trademarks of Monotype Imaging Inc., registered with the U.S. Patent and Trademark Office and may be registered in other countries or regions.
- ThinPrint is a trademark of Cortado AG in Germany and other countries.
- This product has UFST Font Stylizer and <sup>™</sup> MicroType <sup>®</sup> fonts licensed from Monotype Imaging Inc. installed in this machine.
- iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- AirPrint and the AirPrint logo are trademarks of Apple Inc.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple Inc.
- Google is trademarks and/or registered trademarks of Google LLC.
- Mopria <sup>™</sup> is a registered trademark of Mopria <sup>™</sup> Alliance.
- Wi-Fi, Wi-Fi Direct and Wi-Fi Protected Setup are trademarks and/or registered trademarks of Wi-Fi Alliance.
- RealVNC, VNC and RFB are registered trademarks of RealVNC Ltd. in the U.S. and in other countries.

All other brands and product names are registered trademarks or trademarks of their respective companies. Neither <sup>™</sup> nor <sup>®</sup> will be specified in the main text.

## Monotype Imaging License Agreement

- 1 Software shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
- 2 You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols (Typefaces) solely for your own customary business or personal purposes at the address stated on the registration card you return to Monotype Imaging. Monotype Imaging retains all rights, titles and interests to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
- 3 To protect proprietary rights of Monotype Imaging, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
- 4 You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy.
- 5 This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Monotype Imaging if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Monotype Imaging. When this License expires or is terminated, you shall either return to Monotype Imaging or destroy all copies of the Software and Typefaces and documentation as requested.
- 6 You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
- 7 Monotype Imaging warrants that for ninety (90) days after delivery, the Software will perform in accordance with Monotype Imaging-published specifications, and the diskette will be free from defects in material and workmanship. Monotype Imaging does not warrant that the Software is free from all bugs, errors and omissions.  
  
The parties agree that all other warranties, expressed or implied, including warranties of fitness for a particular purpose and merchantability, are excluded.
- 8 Your exclusive remedy and the sole liability of Monotype Imaging in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Monotype Imaging.  
  
In no event will Monotype Imaging be liable for lost profits, lost data, or any other incidental or consequential damages, or any damages caused by abuse or misapplication of the Software and Typefaces.
- 9 Massachusetts U.S.A. law governs this Agreement.
- 10 You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Monotype Imaging.
- 11 Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate.  
  
Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
- 12 You acknowledge that you have read this Agreement, understand it, and agree to be bound by its terms and conditions. Neither party shall be bound by any statement or representation not contained in this Agreement. No change in this Agreement is effective unless written and signed by properly authorized representatives of each party.

## OpenSSL License

For the Open Source Software license, go into the following URL.

### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

## Energy Saving Control Function

To reduce power consumption when idle, the device comes equipped with a power management function that automatically shifts to "Sleep" to minimize power consumption after a certain period of time has passed since the device was last used.

➔ [Sleep \(page 86\)](#)

Power Off Timer (models for Europe)

## Automatic 2-Sided Print Function

This device includes 2-sided printing as a standard function. For example, by printing two 1-sided originals onto a single sheet of paper as a 2-sided print, it is possible to lower the amount of paper used.

➔ [DuplexDuplex \(page 335\)](#)

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

## Resource Saving - Paper

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognized ecolabels, which meet EN 12281:2002\* or an equivalent quality standard, be used.

This machine also supports printing on 64 g/m<sup>2</sup> paper. Using such paper containing less raw materials can lead to further saving of forest resources.

\* : EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes"

Contact your dealer or service representative for recommended paper types.

## **Environmental benefits of "Power Management"**

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time.

Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.

## **ENERGY STAR Program**

We participate in the ENERGY STAR® Program. We provide the products that comply with ENERGY STAR standards to the market.

ENERGY STAR is an energy efficiency program with the goal of developing and promoting the use of products with high energy efficiency in order to help prevent global warming. By purchasing the products that comply with ENERGY STAR, customers can help reduce emissions of greenhouse gases during product use and cut energy-related costs.

## Precautions for security when using wireless LAN

Wireless LAN has the advantage that it allows free LAN connections within the range of radio waves because it uses radio waves to exchange information between a PC and a wireless access point, not using a network cable.

On the other hand, radio waves can reach any location though obstacles (such as walls) within a certain range, so if you do not perform security setting, the following problems may occur.

### Eavesdropping of communications

A malicious third party may intentionally intercept radio waves and eavesdrops the following types of communications.

- Personal information such as an ID, password, or credit card number
- Contents of emails

### Illegal access

A malicious third party may gain access to your personal or company network without your permission and perform the following illegal actions.

- Extract personal or confidential information (information leakage)
- Impersonate a certain person and spread false information (impersonation)
- Change and transmit the contents of intercepted communications (alteration)
- Spread computer viruses to destroy data and systems (destruction)

Wireless LAN cards and wireless access points originally have security mechanisms to deal with these problems, so by configuring the security settings of your wireless LAN products and using them, the chances of these problems occurring can be reduced.


We recommend that you configure security settings and use the product at your own discretion and responsibility, after gaining a thorough understanding of the problems that may occur if the product is used without security settings.

---

## 2 Installing and Setting up the Machine

---


## Part Names (Machine Exterior)

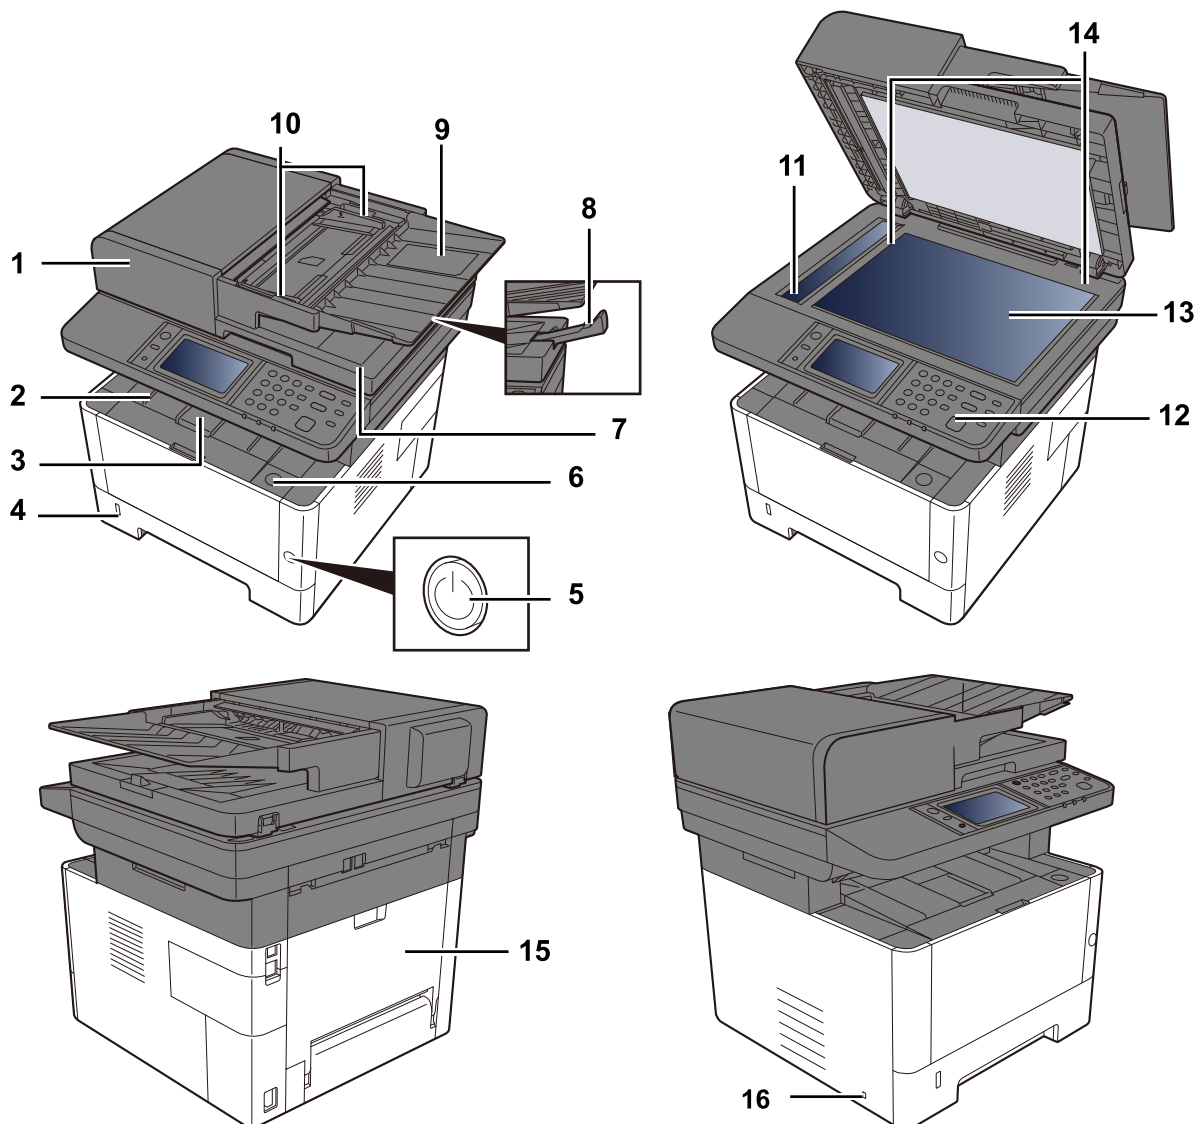

- 1 Document processor
- 2 Inner tray
- 3 Eject stopper
- 4 Cassette 1
- 5 Main switch
- 6 Front cover open button
- 7 Original eject table
- 8 Original stopper
- 9 Original tray
- 10 Original width guide
- 11 Slit glass
- 12 Operation panel
- 13 Original glass
- 14 Original size indicator plate
- 15 Rear cover


16 Anti-theft slot

## Part Names (Connectors/Interior)

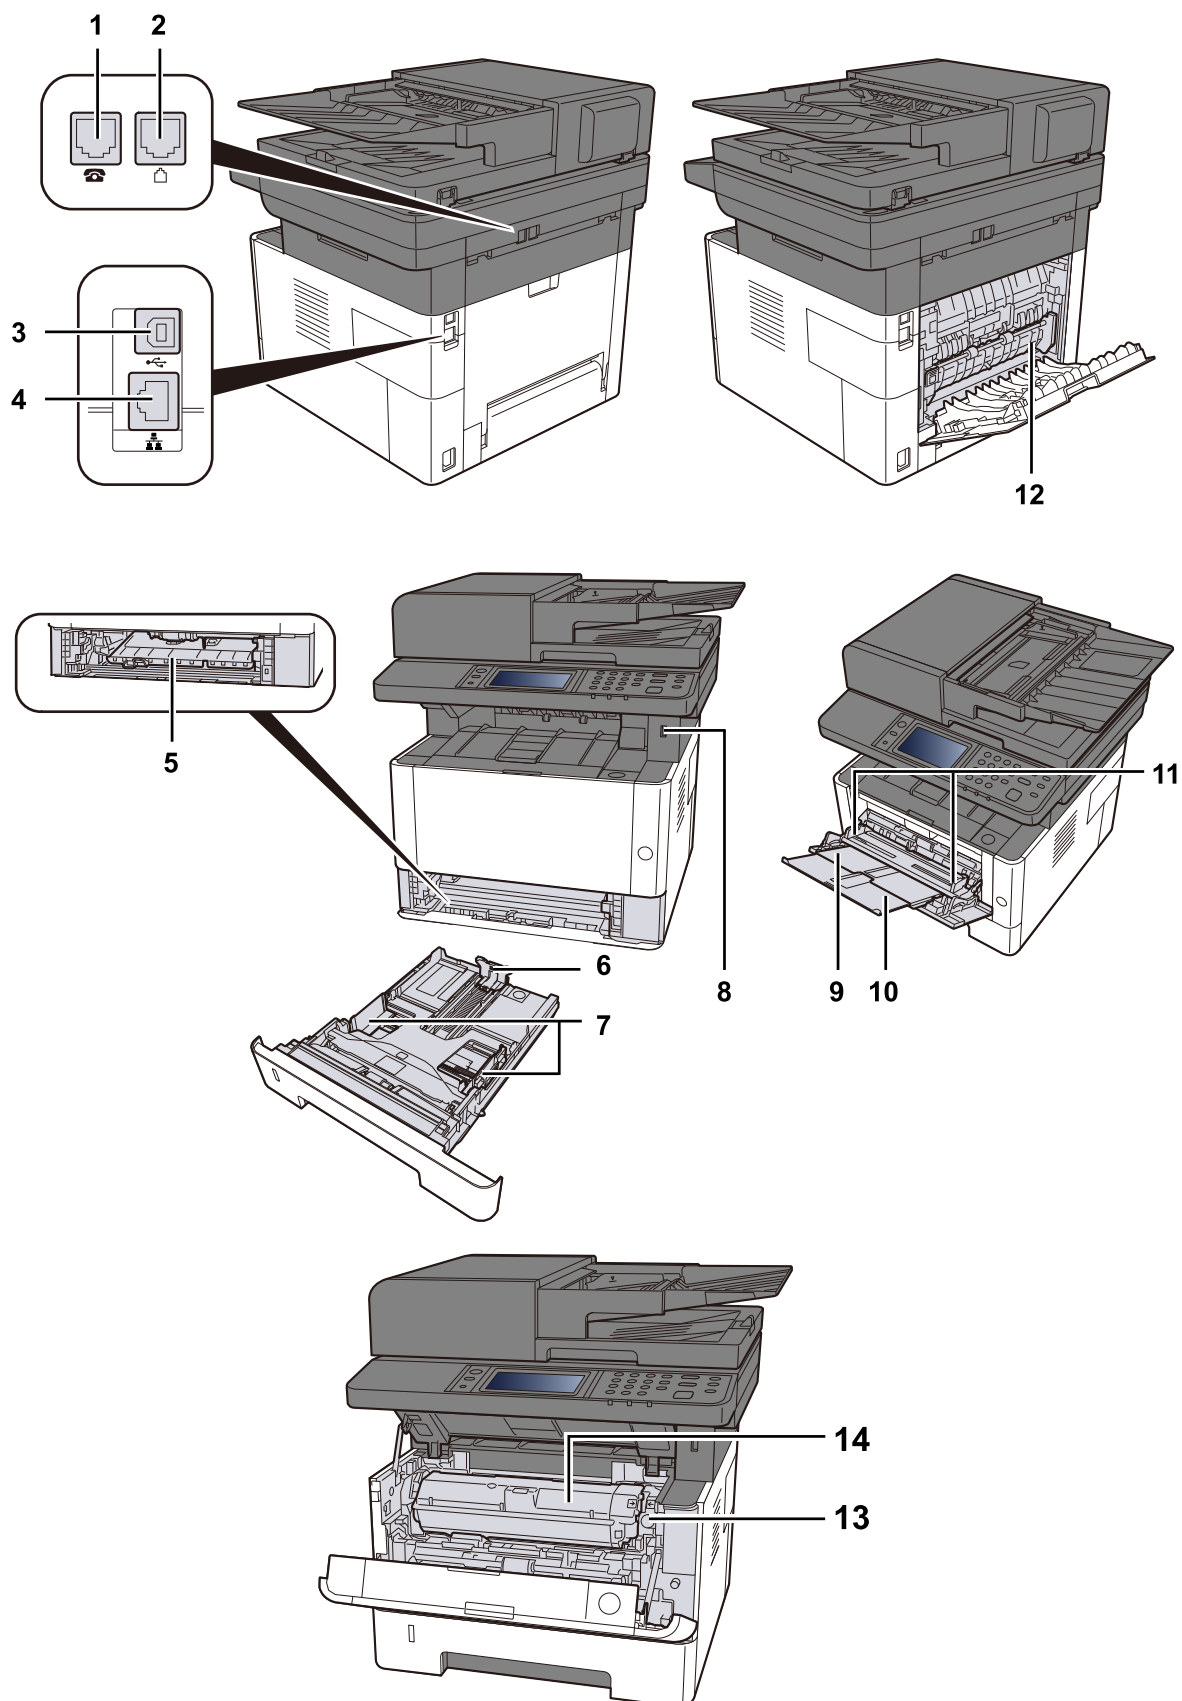

- 1 TEL connector
- 2 LINE connector
- 3 USB interface connector
- 4 Network interface connector
- 5 Conveying cover
- 6 Paper length guide
- 7 Paper width guide
- 8 USB Memory slot
- 9 MP Tray
- 10 MP support tray
- 11 Paper guide
- 12 Fuser cover
- 13 Toner container Release Button
- 14 Toner container

## Part Names (With Optional Equipments Attached)

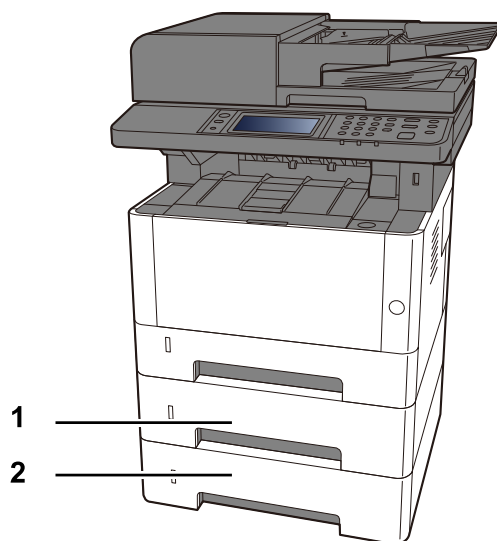

1 Cassette 2

2 Cassette 3


# How to hold the device

When carrying the device, be careful where you hold it.

---

## **IMPORTANT**


To carry the machine, hold the scanner unit as shown in the illustration. Do not hold the control panel of the main unit as this may cause damage.

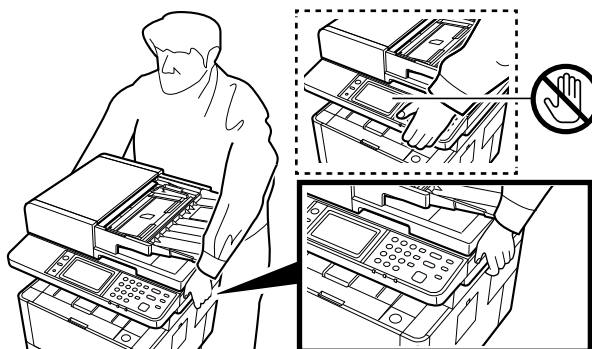


# Connecting the Machine and Other Devices

Prepare the cables necessary to suit the environment and purpose of the machine use.

## When Connecting the Machine to the PC via USB

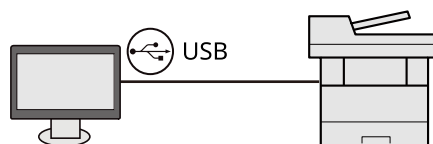

## When Connecting the Machine to the PC or Tablet by network cable, Wi-Fi, or Wi-Fi direct

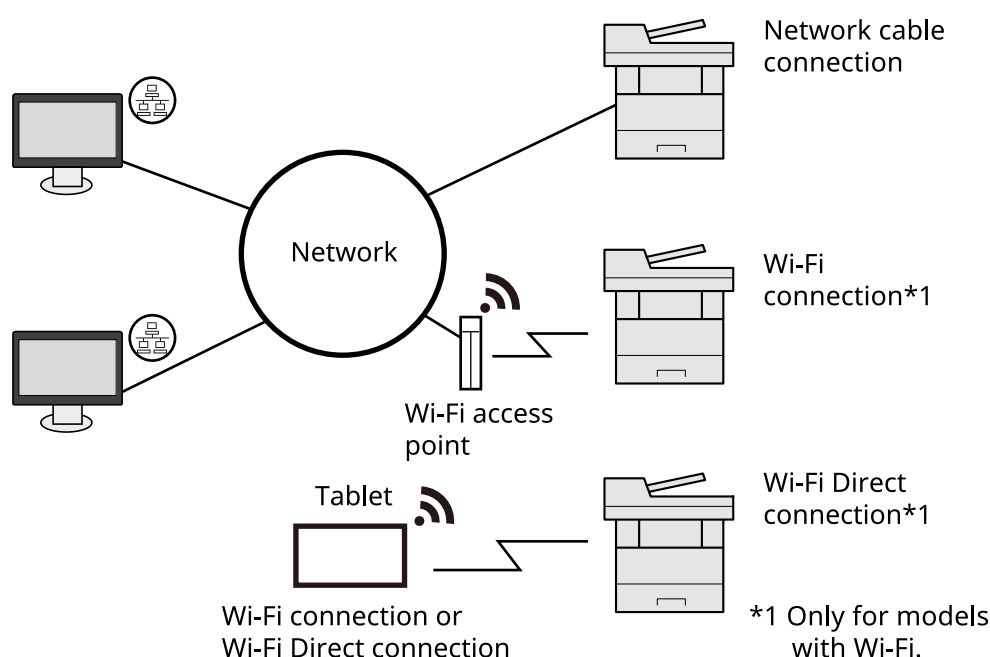

### NOTE

If you are using wireless LAN, refer to the following.

➔ [Configuring the Wireless Network \(page 77\)](#)

## Cables that Can Be Used

When a network cable is used to connect the machine

Function	Necessary Cable
Printer/Scanner/Network FAX*1	LAN cable (10BASE-T, 100BASE-TX, 1000BASE-T)

### When a USB cable is used to connect the machine

Function	Necessary Cable
Printer/Scanner (TWAIN/WIA)	USB 2.0 compatible cable (Hi-Speed USB compliant, max. 5.0 m, shielded)

\*1 The fax function can be used on products equipped with fax capability. For more information on Network FAX, refer to the following:

➔ **FAX Operation Guide**

---

 **IMPORTANT**

Using a cable other than a USB 2.0 compatible cable may cause failure.

---

# Connecting Cables

## Connecting LAN Cable

---

### ✓ IMPORTANT


If the power is on, turn the power switch off.

➔ [Power off \(page 52\)](#)

---

### 1 Connect the cable to the machine.

- 1 Connect the LAN cable to the network interface connector.

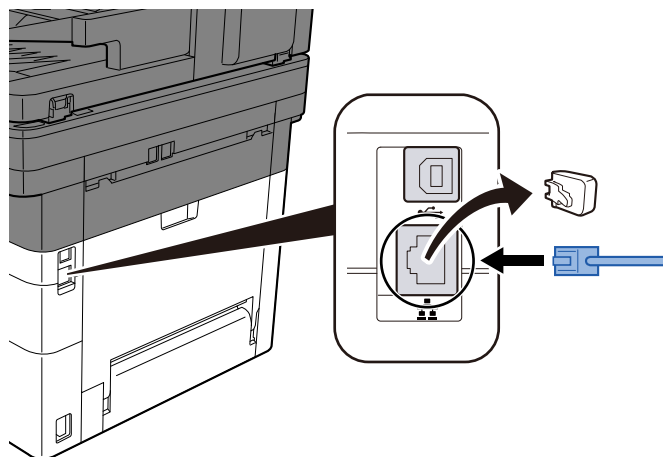

- 2 Connect the other end of the cable to the hub.

### 2 Power on the machine and configure the network.

➔ [Network Setup \(page 75\)](#)

## Connecting USB Cable

---

### ✓ IMPORTANT


If the power is on, turn the power switch off.

Power off

---

## 1 Connect the cable to the machine.

- 1 Connect the USB cable to the USB interface connector.

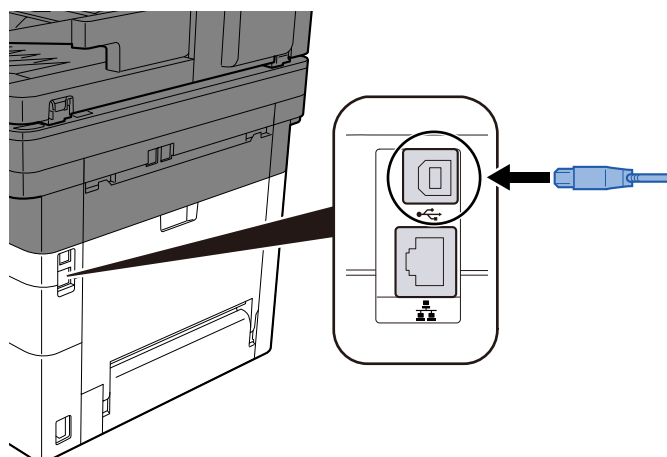


- 2 Connect the other end of the cable to the PC.

## 2 Power on the machine.

## Connecting the Power Cable

### 1 Connect the cable to the machine.

Connect one end of the supplied power cable to the machine and the other end to a power outlet.

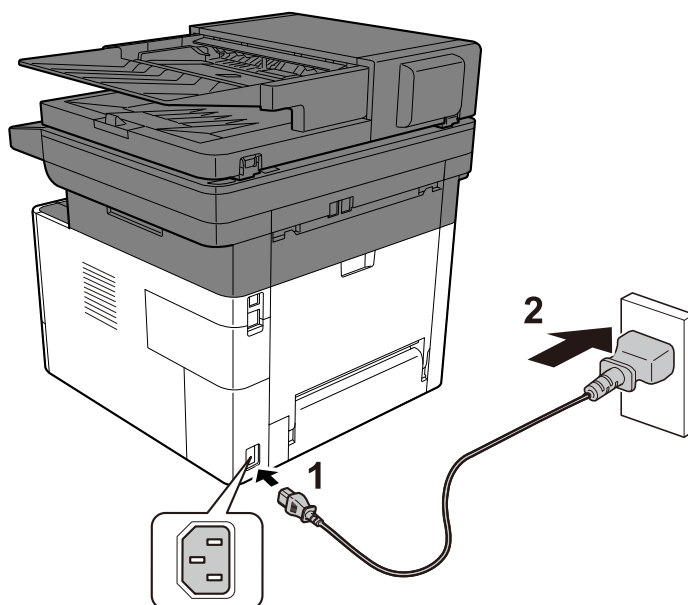

---

#### **IMPORTANT**


Only use the power cable that comes with the machine.

---

# Power On/Off

## Power on

- 1 Turn the power switch on.

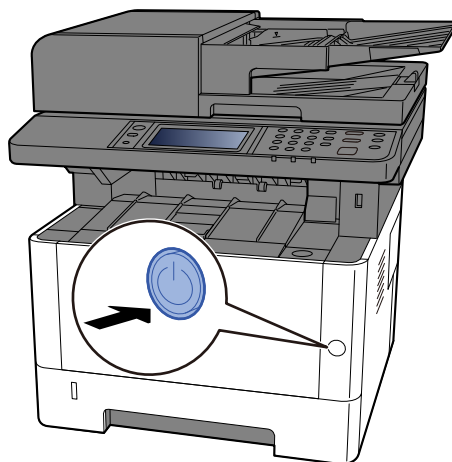

---


✓ **IMPORTANT**

Wait more than 5 seconds, and then turn on the power switch.

---

## Power off

### 1 Turn the power switch off.

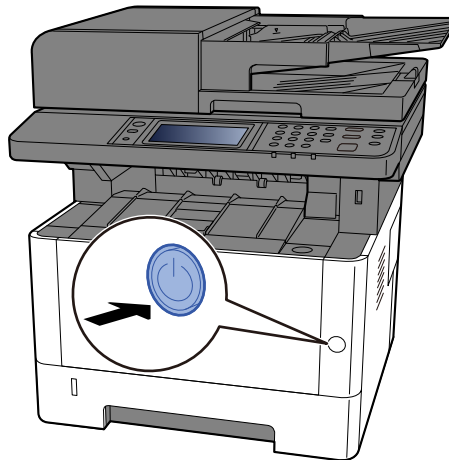

The confirmation message for power supply off is displayed.

It takes approximately 3 minutes for power off.

---

### CAUTION

If this machine will be left unused for an extended period (e.g. overnight), turn it off at the power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.


---

### IMPORTANT

- If using the products equipped with the fax function, note that turning the machine off at the power switch disables fax transmission and reception.
  - Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.
-

# Using the Operation Panel

## Operation Panel Keys

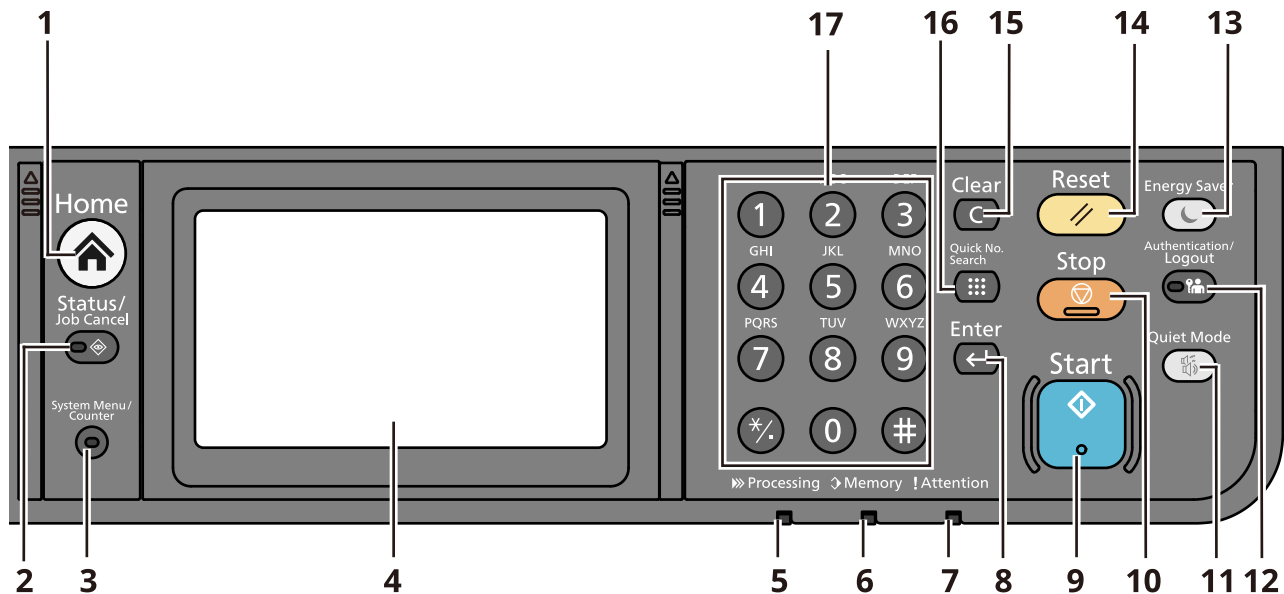

- 1 [Home] key  
Displays the Home screen.
- 2 [Status/Job Cancel] key  
Displays the Status/Job Cancel screen.
- 3 [System Menu/Counter] key  
Display the System Menu/Counter screen.
- 4 Touch panel  
This is a touch panel. Touch this key to make each settings.
- 5 [Processing] indicator  
Blink while printing or TX processing. And lights up when there is a reserved job.
- 6 [Memory] indicator  
Flashes while accessing the device's memory or fax memory.
- 7 [Attention] indicator  
Lights or blinks when an error occurs and a job is stopped.
- 8 [Enter] key  
Confirm the numeric key input and the contents of the function that is set. It is linked with [OK] on the touch panel.
- 9 [Start] key  
Start copying and scanning operations and processing for setting operations.
- 10 [Stop] key  
Cancel or pause the job in progress
- 11 [Quiet Mode] key  
The operating sound of the machine can be suppressed.
- 12 [Authentication/Logout] key  
Authentication of the switching users and finish operation of each user (Log out).

13 [Energy Saver] key

Make this main unit into the Sleep Mode condition. Recovers from the Sleep Mode in case of the sleep mode condition.

14 [Reset] key

Return settings to the default condition.

15 [Clear] key

Delete the value or the letter inputted.

16 [Quick No. Search] key

Specify registration details by number, such as address number and user ID.

17 Numeric keys

Input the number or the symbol.

# Touch Panel

## Using the Touch Panel

This section explains the basic operation of the touch panel.


### Tapping

This is the operation used to select an icon or key. In this guide, the tap operation is expressed as "select." In this document, the tap operation is expressed as "select."



### Popover


Tap the icons and keys to display detailed information on the icons and menus. A popover displays information and menus without switching between screens.

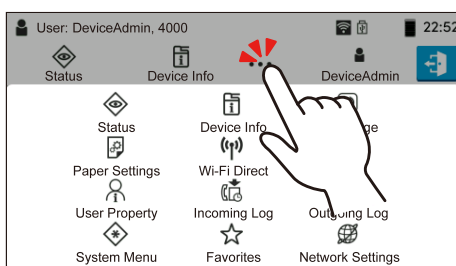


### Swiping

This is the operation used to switch between screens and to display items that are not displayed in the list. Move in one direction as if tracing on the screen.

The figure shown below is an example of swiping Home Screen. Move the screen to the left and right.

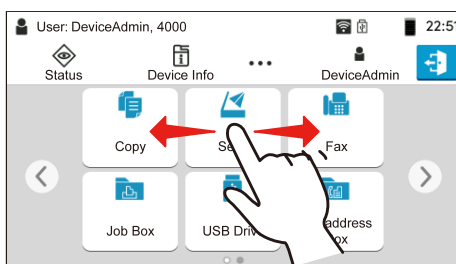

## Operating the touch panel

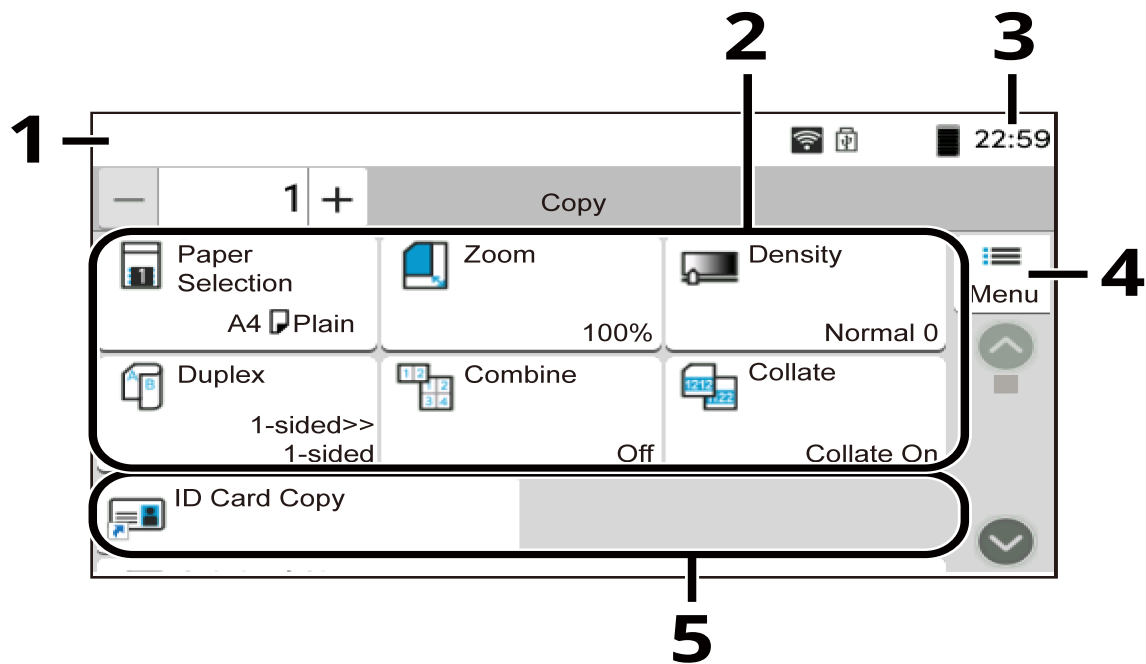








- 1 Displays the status of the equipment as well as necessary operation messages.
- 2 Set the copy functions.
- 3 Displays the time.
- 4 Use this to register, edit, and delete shortcuts and favorites. It is also used when making settings for each function, such as registering destinations in the address book.
- 5 Displays registered shortcuts.

## Home screen

This screen is displayed by selecting the [Home] key on the operation panel. Touching an icon will display the corresponding screen. You can change the icons to display on the Home screen as well as its background.

➔ [Editing the Home Screen \(page 57\)](#)

The appearance may differ from your actual screen, depending on your configuration and option settings.

No.	Item	Description
1	Status Area	Displays the messages and status icons for the current status. Displays the logged-in user name when user login administration is enabled.
2	Taskbar	Displays task icons. If an error occurs, "!" in the [Status] icon is displayed. Once the error clears, the display will return to normal.
3	Desktop	Displays the application icons. Also displays registered favorite features. Icons that are not displayed on the first page will appear by changing the page.
4	Screen-switching keys	Use these buttons to switch between desktop pages.  <div>  <b>NOTE</b>            It is also possible to use swiping to switch between displays.            ➔ <a href="#">Using the Touch Panel (page 55)</a> </div>
5	[Login]/[Logout]	Logs in or logs out when user login administration is enabled.
6	Remaining amount of toner	Displays the remaining amount of toner. Select this icon to display details of the remaining amount of toner in a popover.
7	Status icon (USB drive)	"  " is displayed when a USB drive is connected to this machine. Tapping the USB drive icon and selecting [Remove USB] allows you to safely remove the USB drive.
8	Sub status icons	Displays the icons that indicate the status of the machine. Five icons can be displayed. Select this area to display the icon information in a popover.
	Status icon (Wi-Fi)	The icon "  " is displayed when Wi-Fi is connected. When Wi-Fi is not connected, "  " is displayed.
	Status icon (Security level: Low)	"  " is displayed when the security level is set at [Low].
	Status icon (Remote operation)	"  " is displayed when using the remote operation.
	Status icon (FAX Memory RX Box capacity)	"  " is displayed when the capacity of the FAX Memory RX Box is 10% or less.
9	[...]	Displays every task icons including the icons displayed in a taskbar area in a popover.

## Editing the Home Screen

You can change the background of the Home screen as well as which icons are displayed.

## 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [Home]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

## 2 Configure the settings

Configurable items are as follows:

### Customize Desktop

Specify the function icons to display on the desktop. Displays function icons including the installed applications.

Select [Add] to display the screen for selecting the functions to display. Select [Menu] > [Filter] to narrow down the functions by application and favorites. Select the function to display and [OK].

Select an icon and [Previous] or [Next] to change the display position of the selected icon on the Desktop.

To delete an icon from the desktop, select the desired one and select [Delete].

### Customize Taskbar

Specify the task icons to display on the taskbar. Select [Taskbar Button 1] or [Taskbar Button 2]. Select the function to display and [OK]. Two task icons can be displayed.



### NOTE

Functions that are hidden can be displayed by selecting [...] (popover icon) on the right end of the taskbar.




Taskbar buttons for which [None] has been selected will not be displayed. Other taskbar buttons will be displayed from left to right.










### Wallpaper

Configure the wallpaper of the Home screen.

Value: Images 1 to 8

## Available Functions to Display on Desktop

Function	Icon	Description
Copy* <sup>1</sup>		Displays the Copy screen. ➔ <a href="#">Copy (page 241)</a>
Send* <sup>1</sup>		Displays the Send screen. ➔ <a href="#">Basic Scanning (Sending) (page 243)</a>
Fax Server* <sup>2</sup>		Displays the Fax Server screen. ➔ <a href="#">Using a Fax Server to Send (Fax Server Send) (page 265)</a>

Function	Icon	Description
Fax <sup>*3</sup>		Displays the Fax screen. ➔ <b>FAX Operation Guide</b>
Job Box <sup>*5</sup>		Displays the Job Box screen. ➔ <a href="#">Printing Data Saved in the Printer (page 189)</a>
USB Drive <sup>*1</sup>		Displays the USB Drive screen. ➔ <a href="#">Using Removable USB Drive (page 282)</a>
Subaddress Box <sup>*3</sup>		Displays the Subaddress Box screen. ➔ <b>FAX Operation Guide</b>
Polling Box <sup>*3</sup>		Displays the Polling Box screen. ➔ <b>FAX Operation Guide</b>
Fax Memory RX Box <sup>*3</sup>		Displays the Fax Memory RX Box screen. ➔ <b>FAX Operation Guide</b>
CloudAccess		When you select a user and log in, a cloud service screen linked with CloudAccess appears.
Send to Me (Email) <sup>*5</sup>		Displays the Send screen. The E-mail address of the logged-in user is set as the destination. ➔ <a href="#">Sending Documents to E-mail Address of Logged in User (to myself) (page 264)</a>
Favorites		Calls up the registered favorite. The icon will change according to the function of the favorite. ➔ <a href="#">Recalling Frequently Used Functions (Favorites) (page 221)</a>
Application Name <sup>*6</sup>	—	Displays the selected applications. ➔ <a href="#">Using Applications (page 233)</a>

\*1 Selected at the time of shipment from factory.













\*2 This is displayed when the external server (Fax Server) is set.

\*3 This item is displayed for fax-compatible machines.

\*4 Displayed when user login administration is enabled.

\*5 The icon of the application appears.<sup>\*6</sup>

## Available Functions to Display on Taskbar

Function	Icon	Description
Status/Job Cancel*1		Displays the Status/Job Cancel screen.
Device Information*1		Displays the Device Information screen. Check the system and network information, and information on the options that are used. It is also possible to print various reports and lists. ➔ <a href="#">Display for Device Information (page 61)</a>
Language selection*1		Displays the Language setting screen in System Menu. ➔ <a href="#">Language/System of Units (page 391)</a>
Paper Settings*1		Displays the Paper setting screen in System Menu. ➔ <a href="#">Paper Feeding (page 400)</a>
Wi-Fi Direct		Wi-Fi Direct is set and a list of information relating to the machine that can use the network appears. ➔ <a href="#">Setting Wi-Fi Direct (page 83)</a>
Help		Shows the Help screen. ➔ <a href="#">Help Screen (page 68)</a>
User Property		Displays the User Property screen. ➔ <a href="#">Change the user properties (page 511)</a>
Incoming Fax Log*2		Displays the Incoming Fax Log screen. ➔ <b>FAX Operation Guide</b>
Outgoing Fax Log*2		Displays the Outgoing Fax Log screen. ➔ <b>FAX Operation Guide</b>
System Menu		Displays the System Menu screen. ➔ <a href="#">Operation Method (page 384)</a>
Counter		Displays the Counter screen. ➔ <a href="#">Check the counter (page 106)</a>
Favorites		Displays the favorite list screen. ➔ <a href="#">Recalling Frequently Used Functions (Favorites) (page 221)</a>

\*1 Selected at the time of shipment from factory.

\*2 This item is displayed for fax-compatible machines.

## Display for Device Information

Shows Device Information. It is possible to check the status of the system and network, the status of consumables such as toner and paper and the situation of the options being used. It is also possible to print various reports and lists.

### 1 [Home] key > [Device Info]

### 2 Check the device Information.

#### **[Identification/Wired NetworkWired Network]**

You can check ID information such as the model name, serial number, host name and location, and the IP address of the wired network.

#### **[Wi-Fi Direct]/[Wi-Fi]**

You can check the status of Wi-Fi connection, such as the device name, network name and IP address.

#### **[Supplies/PaperPaper]**

You can check the presence of toner and paper, and the condition of the unit.

#### **[Fax]**

You can check the local fax number, local fax name, local fax ID and other fax information.

This item is displayed only for fax-compatible machines.

#### **[USB/BluetoothBluetooth]**

You can check the connection status of USB drive and Bluetooth keyboard.

#### **[Option/ApplicationApplication]**

You can check information on the options and applications that are used.

#### **[Capability/VersionVersion]**

You can check the software version and performance.

#### **[Security]**

You can check the security information on the machine.

#### **[Report]**


You can print various reports and lists.

#### **[Remote Operation StatusStatus]**

You can check the status of remote operation.

## Display Setting Screen

The following procedure is an example of the Copy screen.

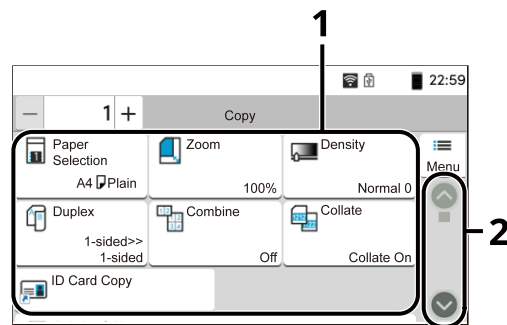


### 1 Body

Displays various copying functions.


### 2 Arrow Button

Move the screen up and down.

Select the Arrow Button to scroll the screen to display each function.

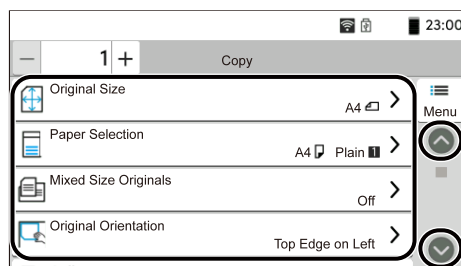


When an On/Off Flipswitch is displayed for a function, select the switch to change between ON and OFF.

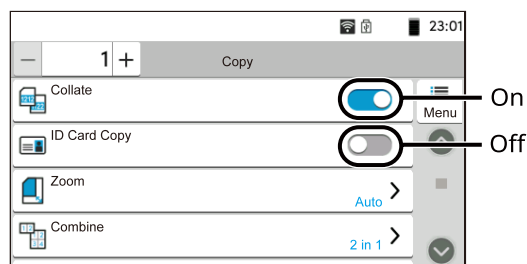


## Display of Keys That Cannot Be Set

Keys of features that cannot be used due to feature combination restrictions or non-installation of options are in a nonselectable state.

### Normal

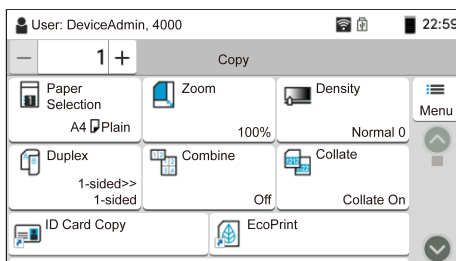


### Grayed out

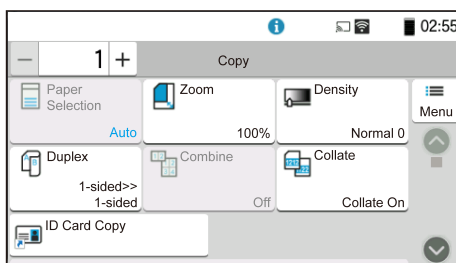


In the following cases, the key is grayed out and cannot be selected.

- Cannot be used in combination with a feature that is already selected.
- Use prohibited by user control.

### Normal

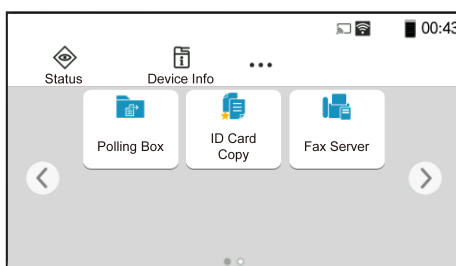

### Hidden

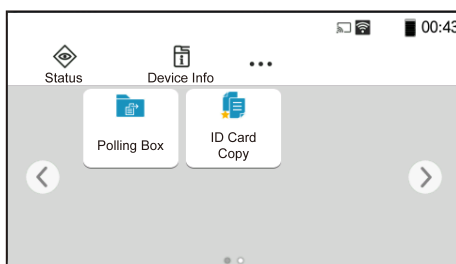

Keys for functions that cannot be used are not displayed because of the setting status of the function.

Example) If the fax server is not set, [Fax Server] is not displayed.




**NOTE**

- If a key that you wish to use is grayed out, the settings of the previous user may still be in effect. In this case, select the [Reset] key and try again.
  - If the key is still grayed out after the [Reset] key is selected, it is possible that you are prohibited from using the function by user login administration. Check with the administrator of the machine.
-

## Entering Numbers

When entering numbers, numeric keys appear on the touch panel if you select the area in which the number is entered.

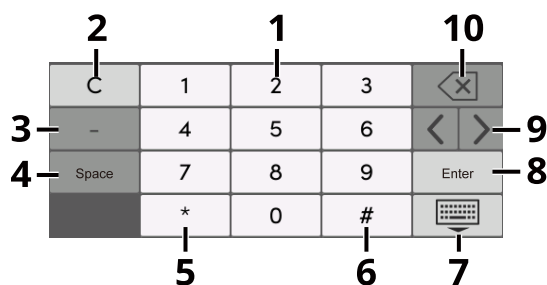


- 1 Enter numbers.
- 2 Clear entered numbers.
- 3 Enters [-].
- 4 Insert a space.
- 5 When [.] is displayed: Enter the decimal point. The numbers entered after selecting this key will be the numbers after the decimal point.  
When [\*] is displayed: Enter [\*].
- 6 When [+/-] is displayed: Switch between positive and negative numbers.  
When [#] is displayed: Enter [#].
- 7 Close the numeric keypad.
- 8 Entry by numeric keys is confirmed.
- 9 Move the cursor.
- 10 Delete a character to the left of the cursor.


### NOTE

- Depending on the item being entered, some of the keys other than the number keys may not be usable.
- Numeric keys do not appear on the touch panel if an optional numeric keypad is installed.


### Example: When entering the number of copies

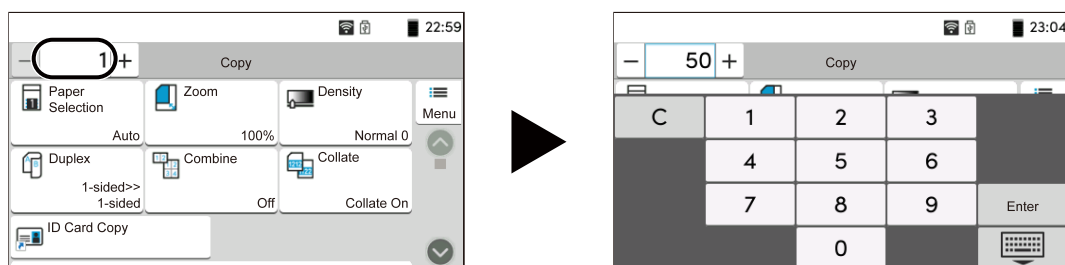

Example: When entering a one-touch key number

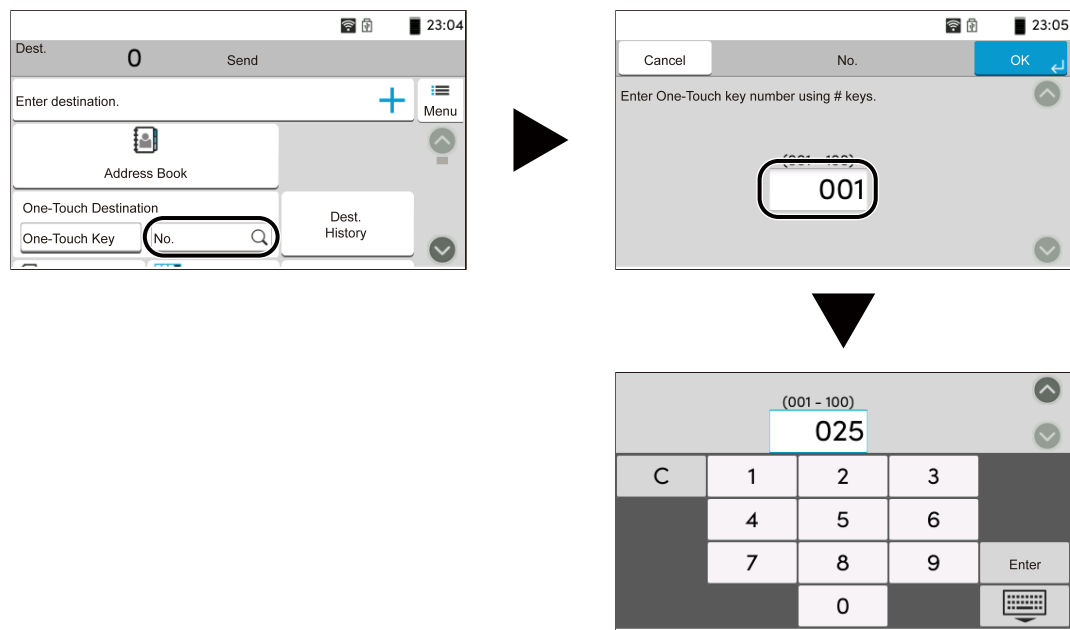

Example: When searching for an address number

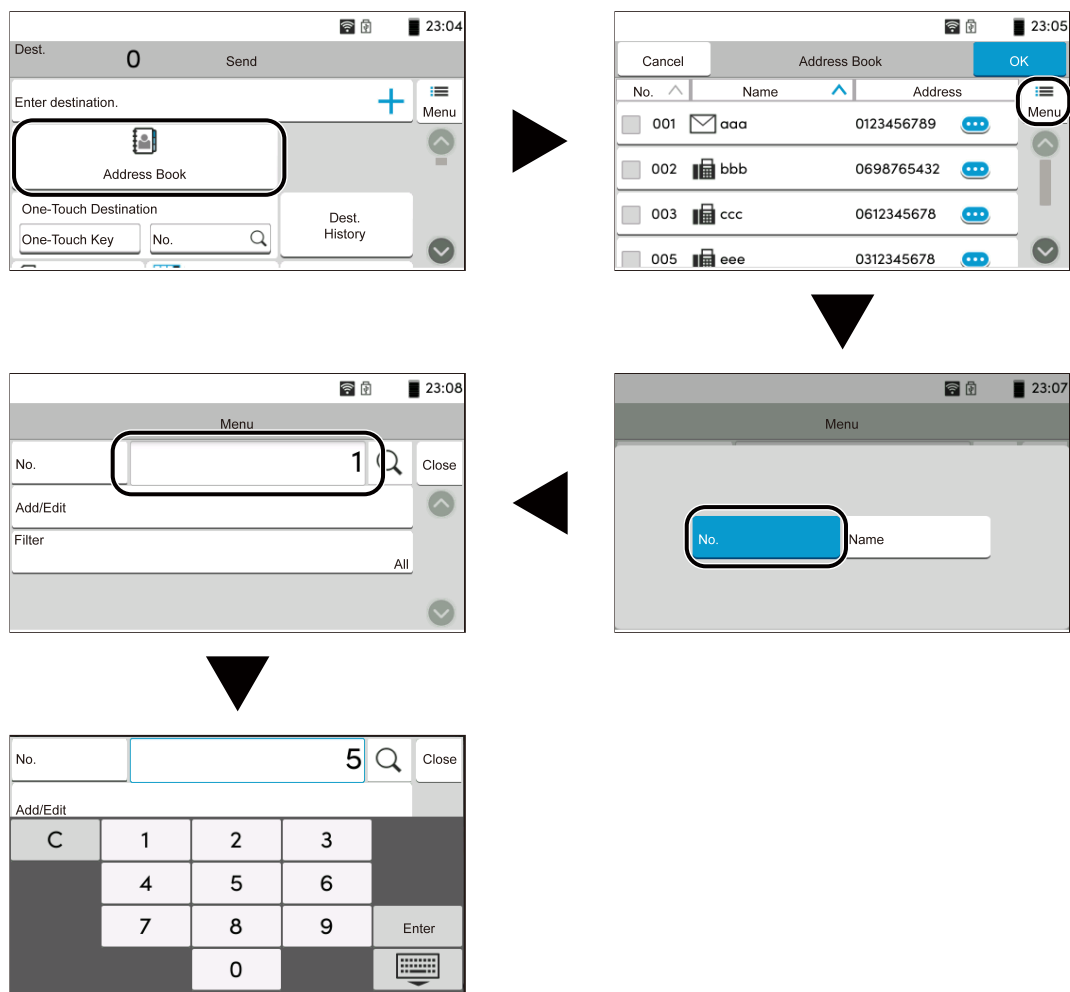



**NOTE**


For copy and print screens, you can set numeric keys to be displayed in advance. In addition, you can select the layout for numeric keys that are used on the application.

---



## Help Screen

If you have difficulty operating the machine, you can check how to operate it using the touch panel. Select [Help] from the Home screen and the help list will be displayed.

### 1 [Home] key > [...] > [Help]

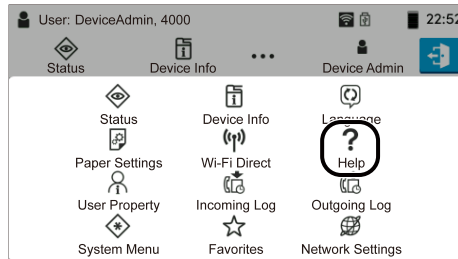

### 2 Select the item to check from the list.

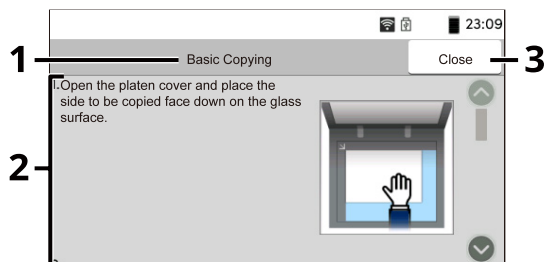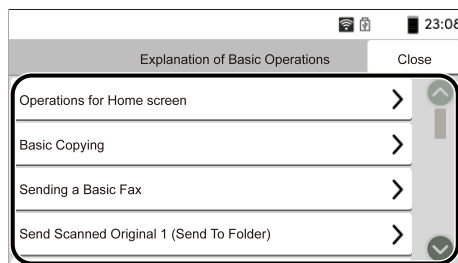


- 1 Help titles
- 2 Displays information about functions and machine operation.
- 3 Closes the Help screen and returns to the original screen.

# Login/Logout

## Login

### 1 Enter the login user name.

If this screen is displayed during operations, enter the login user name and login password.

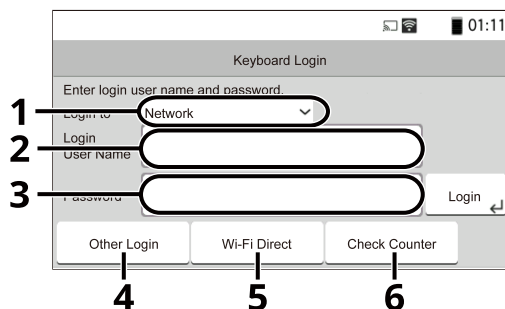

1 If the user authentication method is set to [Network Authentication], the authentication destination is displayed. Select [Local] or [Network] for the authentication destination.

2 Enter the login user name.

3  **NOTE**

If you do not know your login User Name, please contact your Administrator.

4 Enter the password.

➔ [Character Entry Method \(page 784\)](#)

 **NOTE**

If you do not know your login Password, please contact your Administrator.

5 Select [Simple Login], [PIN Login], or [ID Card Login] as the login method.

➔ [User Authentication and Accounting \(User Login, Job Accounting\) \(page 502\)](#)


6 Check the Wi-Fi Direct environment.

7 Refer to the number of pages printed and the number of pages scanned. Displayed when job accounting is enabled.

### 2 Select [Login].

## Simple Login

- 1 If the following screen is displayed during operations, select a user and log in.

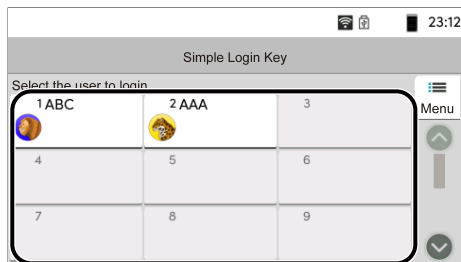

### NOTE

If a user password is required, an input screen will be displayed.

---

➔ [Enabling Simple Login \(page 530\)](#)

## Log in by ID card

- 1** When IC card authentication is enabled and user management is set, "Use ID card to login." appears when the machine is used.
- 2** Hold the Login card over the IC card reader to log in.



### IMPORTANT

- Hold the IC card 10 mm or closer to the IC card reader to read the IC card.
  - Do not stack more than one IC card for reading.
- 



### NOTE

If you have set [Additional Authentication] to [Use Password], enter your login password after authenticating with your IC card.

Refer to the following for the setting method.

➡ [Additional Authentication \(page 537\)](#)

---

## Log in using a keyboard

If IC card authentication is enabled, you can log in without using an IC card by entering your login username and password.



You can allow or prevent logins. Refer to the following for the setting method.

→ [Keyboard Login \(page 536\)](#)

---

- 1 [Other Login] > [Keyboard Login]**
- 2 Enter your login username and password, and select [Login].**




To return to the IC card login screen, select [Other Login] > [ID Card Login] key.

---

## Logout

### 1 Select the [Logout] key.

You will return to the login user name/login password entry screen.

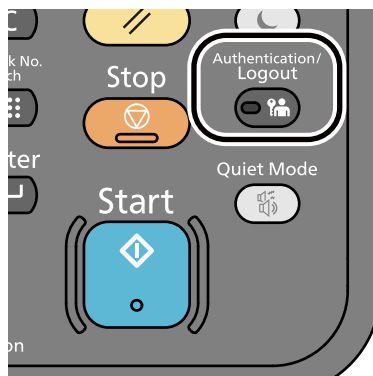

#### NOTE

Users are automatically logged out in the following circumstances:

- When the machine enters the sleep state.
  - When the auto panel reset function is activated.
-

# Default Settings of the Machine

The default settings of the machine can be changed in [System Menu/Counter]. Before using this machine, configure such settings as date and time, network configuration, and energy saving functions as needed.



## NOTE

For items that can be set with [System Menu/Counter], refer to the following:

➔ [System Menu \(page 383\)](#)

---

## Setting Date and Time

Follow the steps below to set the local date and time at the place of installation. When you send an E-mail using the transmission function, the date and time as set here will be printed in the header of the E-mail message. Set the date, time and time difference from GMT of the region where the machine is used.



## NOTE

- To make changes after this initial configuration, refer to the following:  
➔ [Date/Time \(page 393\)](#)
  - The correct time can be periodically set by obtaining the time from the network time server.  
➔ **Embedded Web Server RX User Guide**
- 

### 1 Display the screen

[System Menu/Counter] key > [Device Settings] > [Date/Time]

### 2 Configure the settings

Select and set [Time Zone] > [Date and Time] > [Date Format] in this order.

#### [Time Zone]

Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.

#### [Date and Time]

Set the date and time for the location where you use the machine. If you perform Send as Email, the date and time set on the machine will be displayed on the header.

Value: Year (2000 to 2035), Month (1 to 12), Day (1 to 31), Hour (0 to 23), Minute (0 to 59), Second (0 to 59)

#### [Date Format]

Select the display format of year, month, and date. The year is displayed in Western notation.

Value: [Month/Day/Year], [Day/Month/Year], [Year/Month/Day]

# Network Setup

## Configuring the Wired Network

The machine is equipped with network interface, which is compatible with network protocols such as TCP/IP (IPv4), TCP/IP (IPv6), NetBEUI, and IPSec. It enables network printing on the Windows, Mac, UNIX and other platforms. The configuration methods are as follows:

Configuration Method	Description
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu.
Configuring Connections on the Web Page	For the equipped network interface, the connection can be set by using Embedded Web Server RX. ➔ <b>Embedded Web Server RX User Guide</b>



### NOTE

When you want to switch to the network interface other than Wired, select the desired setting on [Primary Network (Client)].

➔ [Primary Network \(Client\) \(page 485\)](#)

For other network settings, refer to the following:

➔ [Network Settings \(page 452\)](#)

## TCP/IP (IPv4) setting



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

## 1 Display the screen

[System Menu/Counter] key > [Network Settings] > [Wired Network Settings] > [IPv4 Settings]



### NOTE

- For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers], in that order.

## 2 Configure the settings

- When using DHCP server
  - [DHCP]: Configure the settings
- When setting the static IP address
  - [DHCP]: Off
  - [Auto-IP]: Off
  - [IP Address]: Enter the address.
  - [Subnet Mask]: Enter the subnet mask in decimal representation (0 to 255).
  - [Default Gateway]: Enter the address.

- When using the Auto-IP

Enter "0.0.0.0" in IP Address.

- When setting the DNS server

In the following cases, set the IP address of DNS (Domain Name System) server.

- When using the host name with [DHCP] setting set to Off.
- When using the DNS server with IP address that is not assigned by DHCP automatically.

Select [Use DNS Server from DHCP] or [Use DNS Server from DHCP]. If you selected [Use DNS Server from DHCP], enter the [DNS Server (Primary)] and [DNS Server (Secondary)].

---

### **IMPORTANT**

After changing the setting, perform with the following procedure, or turn the machine OFF and then ON.

[System Menu/Counter] key > [Network Settings] > [Restart Network]Restart Network

➔ [Restart Network \(page 482\)](#)

---

## Configuring the Wireless Network

When Wi-Fi settings are configured, it is possible to print or send in a wireless network (wireless LAN) environment.

The configuration methods are as follows:

Configuration Method	Description
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu. ➔ <a href="#">Configuring Settings Quick Setup Wizard (page 92)</a>
Using the Wi-Fi Setup Tool	This is a tool that can be downloaded from Download Center. You can configure the connection according to the instructions provided by the wizard.  <b>Triumph-Alder</b> EN: <a href="https://www.triumph-adler.com/ta-en-de/customer-service/download-centre">https://www.triumph-adler.com/ta-en-de/customer-service/download-centre</a> DE: <a href="https://www.triumph-adler.com/ta-de-de/kundendienst/download-center">https://www.triumph-adler.com/ta-de-de/kundendienst/download-center</a>  <b>UTAX</b> EN: <a href="https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre">https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre</a> DE: <a href="https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center">https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center</a> ➔ <a href="#">Wired Connection with LAN Cable Using Wi-Fi Setup Tool (page 78)</a>
Configuring Connections on the Web Page	➔ <b>Embedded Web Server RX User Guide</b>

Configuration Method	Description
	<p>This is a tool that can be downloaded from Download Center and from digital content distribution services. You can configure the connection according to the instructions provided by the wizard.</p> <p><b>Triumph-Alder</b></p> <p>EN:  <a href="https://www.triumph-adler.com/ta-en-de/customer-service/download-centre">https://www.triumph-adler.com/ta-en-de/customer-service/download-centre</a></p> <p>DE:  <a href="https://www.triumph-adler.com/ta-de-de/kundendienst/download-center">https://www.triumph-adler.com/ta-de-de/kundendienst/download-center</a></p> <p><b>UTAX</b></p> <p>EN:  <a href="https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre">https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre</a></p> <p>DE:  <a href="https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center">https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center</a></p>

**NOTE**

Using the Printer Setup Tool

When you want to switch to the network interface other than Wired, select the desired setting on [Primary Network (Client)].

→ [Others \(page 485\)](#)

## Wired Connection with LAN Cable Using Wi-Fi Setup Tool

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or mobile device with the machine locally. To use a wired LAN cable directly connected to the machine, the Auto-IP (Link-local) address will be assigned to the machine and the computer. This machine applies Auto-IP as the default settings.

**NOTE**

Configure the settings on the operation panel if your computer supports WPS.

→ [Wi-Fi Settings \(page 456\)](#)

## 1 Connect the machine with a computer.

- 1 Connect the machine with a computer via LAN cable when the machine is powered on.
  - 2 Turn on the computer.
- IP addresses (link local addresses) of the machine and computer are generated automatically.

## 2 Launch the Wi-Fi Setup Tool.

- 1 Launch your Web browser.
- 2 Enter URL into the browser's address bar or location bar.



### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

- 3 Double-click the downloaded installer to launch.



#### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
  - If the user account management window appears, click [Yes].
-

### 3 Configure the settings

1 [Do not user WPS] > [Next] > [Next]

2 [LAN Cable] > [Next] > [Next]

3 [Quick Setup] > [Next]

The machine is detected.



#### NOTE

- Only one machine can be searched using Wi-Fi Setup Tool. It may take times to search the machine.
  - If the device is not detected, select [Detail Settings] > [Next]. You can specify an IP address or hostname as the detection method by selecting either [Express] or [Custom] from the detection methods of the machine.
- 

4 Select the machine > [Next]

5 Select [Use device settings] from [Authentication mode] and enter [Login User Name] and [Login Password] > [Next]

Enter the administrator login user name and login password.

6 Configure the communication settings and click [Next].

7 Change the settings of access point as necessary > [Next]

The network is configured.

## Wireless LAN Connection by Wi-Fi Direct Using Wi-Fi Setup Tool

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or mobile device with the machine locally.

To use Wi-Fi Direct, confirm that the Wi-Fi Direct is enabled (Wi-Fi Direct is set to ON) and Restart Network from the operation panel, before your computer will be connected to this machine with Wi-Fi Direct.



### NOTE

Configure the settings on the operation panel if your computer supports WPS.

➔ [Wi-Fi Settings \(page 456\)](#)

---

## 1 Display the screen

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

## 2 Configure the settings

[Wi-Fi Direct]: On > [Close]

## 3 Restart the network.

[System Menu/Counter] key > [Network Settings] > "Network Settings"[Restart Network] > [Restart]

## 4 Connect a computer or a mobile device with the machine.

➔ [Setting Wi-Fi Direct \(page 83\)](#)

## 5 Launch the Wi-Fi Setup Tool.

- 1 Launch your Web browser.
- 2 Enter URL into the browser's address bar or location bar.



### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

- 3 Double-click the downloaded installer to launch.



**NOTE**

- Installation on Windows must be done by a user logged on with administrator privileges.
  - If the user account management window appears, click [Yes].
- 

## 6 Configure the settings

- 1 [Do not use WPS] > [Next] > [Next]
- 2 [Wi-Fi Direct] > [Next] > [Next]
- 3 [Detail Settings] > [Next]  
Select either [Express] or [Custom] from the detection methods of the machine. You can specify an IP address or hostname as the discovery method.
- 4 Select the machine > [Next]
- 5 Select [Use Device Settings.] from [Authentication Mode] and enter [Login User Name] and [Login Password] > [Next]  
Enter administrator's Login User Name and Login Password.
- 6 Configure the communication settings and click [Next].
- 7 Change the settings of access point as necessary > [Next]  
The network is configured.

## Setting Wi-Fi Direct

After configuring the [Wi-Fi Direct] connection settings, you will be able to print in the Wi-Fi Direct environment. The configuration methods are as follows:

- Configuring the connection from the operation panel on this machine
- Configuring the connection by using push button

### Connecting to Computers or Mobile Devices that Support Wi-Fi Direct

#### 1 Display the screen

[System Menu/Counter] key > "Network Settings" > "Network Settings" [Wi-Fi Direct Settings]

#### 2 Configure the settings

[Wi-Fi Direct]: [On] > [Close]

#### 3 Restart the network.

[System Menu/Counter] key > "Network Settings" > "Network Settings" [Restart Network] > [Restart]

#### 4 Specify the machine from the computer or mobile device.

If a confirmation message appears on the operation panel of the machine, select [Yes].

The network between this machine and the computer or mobile device is configured.

## Connecting to Computers or Mobile Devices Unsupported Wi-Fi Direct

Here, we'll explain the procedures for connecting to iOS mobile devices.

### 1 Display the screen

[System Menu/Counter] key > "Network Settings" > [Network Settings] [Wi-Fi Direct Settings]

### 2 Configure the settings

"Wi-Fi Direct": On > [OK]

### 3 Restart the network.

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Restart Network] > [Restart]

### 4 [Home] key > [Device Info] > [Wi-Fi Direct/Wi-Fi]

### 5 Note the network name (SSID), IP address, and password of "Wi-Fi Direct"

### 6 Configure the mobile device.

1 [Setting] > [Wi-Fi]

2 Select the network name (SSID) appeared in step 5 from the list.

3 Enter the password that was provided in step 5 > [Connected]

The network between this machine and the computer or mobile device is configured.

## Configuring the connection by using push button

When your computer or mobile device does not support Wi-Fi Direct but supports WPS, you can configure the network using push button.

### 1 Display the screen

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

### 2 Configure the settings

"Wi-Fi Direct": On > [Close]

### 3 Restart the network.

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Restart Network] > [Restart]

### 4 [Home] key > [Device Info] > [Wi-Fi Direct/Wi-Fi]

### 5 Press the push button on the computer or mobile device and select "Wi-Fi Direct" [Push Button Setup] > [OK] on the screen of operation panel.

The network between this machine and the computer or mobile device is configured.



#### IMPORTANT

You can connect up to 1010 mobile devices at the same time using Wi-Fi Direct setting. When the devices that support Wi-Fi Direct are connected, if you want to connect other device, disconnect the already connected devices from the network. The disconnection methods are as follows:

- Disconnect the network from the computer or handheld computer
- Disconnecting all devices from the network on the operation panel

Select the [Home] key > [Device Info] > [Wi-Fi Direct/Wi-Fi] > "Wi-Fi Direct" [Device] > [Disconnect] > [Disconnect].


- Configuring auto disconnecting time from the System menu
    - ➡ [Wi-Fi Direct Settings \(page 454\)](#)
  - Configuring auto disconnecting time from the Embedded Web Server RX
    - ➡ **Embedded Web Server RX User Guide**
-

## Energy Saver function

If a certain period of time elapses after the machine is last used, the machine automatically enters Sleep to minimize power consumption.

### Sleep

To enter Sleep, select the [Energy Saver] key, message display and all indicators on the operation panel will go out to save a maximum amount of power except the Energy Saver indicator. This status is referred to as Sleep.

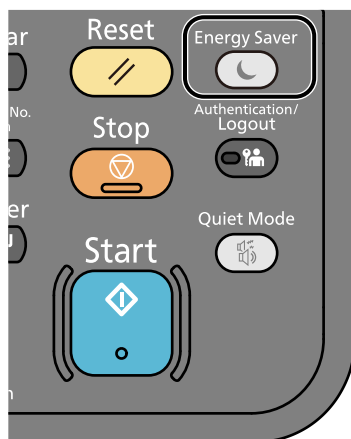

If print data is received during Sleep, the machine automatically wakes up and starts printing.

For fax-compatible models, when fax data arrives while the machine is in Sleep, the machine automatically wakes up and starts printing.

In addition, the machine wakes up when the following operations are performed:

- Select any key on the operation panel.
- Touch the touch panel.

Recovery time from Sleep Mode is as follows.

10 seconds or less

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

## Auto Sleep

Auto Sleep automatically switches the machine into Sleep if left idle for a preset time.

The amount of time before entering Sleep is as follows.

- 11 minutes (default setting)

To change the preset sleep time, refer to the following:

➡ [Energy Saver/Timer \(page 394\)](#)

## Sleep Level (Energy Saver mode and Quick Recovery mode)

Sleep can be switched to two modes: Energy Saver mode and Quick Recovery mode. The default setting is Energy Saver mode.

Energy saver mode allows for the per function setting of whether to operate sleep mode in a state that uses even less energy than Return Priority mode. IC card is also not recognized.

Selecting the [Energy Saver] key on the operation panel will recovery immediately. Further, if print data is received during Sleep, the machine automatically wakes up and starts printing.



### NOTE

Use the Energy Saver mode under normal circumstances. Use the Quick Recovery mode only when the computer does not recognize USB-connected devices. Note that this will consume more power.

---

For more information on Sleep Level settings, refer to the following:

➔ [Quick Setup Wizard \(page 91\)](#)

## Energy Saver Recovery Level

This machine can reduce power consumption when recovering from Energy Saver Mode. For Energy Saver Recovery Level, [Full Recovery], [Normal Recovery], or [Power Saving Recovery] can be selected. The factory default is [Normal Recovery].

For more information on Energy Saver Mode settings, refer to the following:

➔ [Configuring Settings Quick Setup Wizard \(page 92\)](#)

## Power Off Timer

If the machine is not used while in sleep mode, the power automatically turns off. The Power Off Timer is used to set the time until the power turns off.

The factory setting for the time until the power turns off: 20 minutes

➔ [Date/Time \(page 393\)](#)

## Use the quiet mode.

The operating sound of the machine can be suppressed. Set Quiet Mode if you are concerned about the operating sound. If [Quiet Mode] is selected, the [Quiet Mode] key will light and quiet mode will be set.

---



In Quiet Mode, the processing speed will be slower than normal.

---

# Quick Setup Wizard

The following settings can be configured in a wizard-style screen.

## Fax Setup

Configures basic fax settings. This item is displayed only for fax-compatible machines.

➔ **FAX Operation Guide**

Item	Description
Dialing/RX Mode	Dialing Type Reception Mode
Local Fax Information	Local Fax Station Name Local Fax Station Number Local Fax ID TTI
Volume	Fax Speaker Volume Fax Monitor Volume Job Finish
Rings	Rings (Normal) Rings (TAD) Rings (Fax/Phone)
Paper Source/Output	Paper Source Settings
Redial	Retry Times
Show Power Off Message	Show Power Off Message

## Paper setup

Configure the paper used for printing.

Item	Description
Cassette	Paper size (Cassette 1 to Cassette 3) Paper type (Cassette 1 to Cassette 3)
Multipurpose Tray	Paper Size Media Type

## Energy Saver Setup

Configures sleep mode and low power mode.

Item	Description
Sleep Mode	Sleep Timer Sleep Rules
Recovery Mode	Energy Saver Recovery Level

## Network Setup

Configures network settings.

Item	Description
Network	Network Selection Wi-Fi easy setup Wi-fi wired DHCP*1 IP Address*2 Subnet Mask*2 Default Gateway*2

\*1 This item appears when [Wired Network] is selected.

\*2 This function is not displayed when DHCP is set to [On].

## Email Setup

Set SMTP server name and sender address to enable mail sending.

Item	Description
Email	SMTP (Email TX) SMTP Server Name*1 SMTP Port Number*1 Sender Address*1

\*1 This function is displayed when SMTP (Email TX) is set to [On].

## Security Settings

Specify the security level by Security Quick Setup.

## Notification Setup

Set whether the panel notifies that the replacement time for consumables is approaching.

# Configuring Settings Quick Setup Wizard



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

## 1 Display the screen

[System Menu/Counter] key > [Quick SetupWizard]

## 2 Select a function.

### 3 Configure the settings

Start the wizard. Follow the instructions on the screen to configure settings.

---



#### NOTE

If you experience difficulty configuring the settings, refer to the following:

➔ [Help Screen \(page 68\)](#)

---

#### [End]

Exits the wizard. Settings configured so far are applied.

#### [<< Previous]

Returns to the previous item.

#### [Skip >>]

Advances to the next item without setting the current item.

#### [Next >]

Advances to the next screen.

#### [< Back]

Returns to the previous screen.

#### [Finish]

Register the settings and exit the wizard.

# Installing Software

To use printer function, TWAIN/WIA connection, or network fax function, download and install the required software from Download Center.

## Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

## UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

## Published Software (Windows)

Software	Description	Recommended software
Printing System Driver	This driver enables files on a computer to be printed by the machine. Multiple page description languages (PCL XL, KPDL, etc.) are supported by a single driver. This printer driver allows you to take full advantage of the features of the machine. Use this driver to create PDF files.	○
KPDL mini-driver/PCL minidriver	This is a Microsoft MiniDriver that supports PCL and KPDL. There are some restrictions on the machine features and option features that can be used with this driver.	—
FAX Driver	This makes it possible to send a document created in a computer software application as a fax via the machine.	—
TWAIN Driver	This driver enables scanning on the machine using a TWAIN compliant software application.	○
WIA Driver	WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.	—
NETWORK PRINT MONITOR	This is a utility that enables monitoring of the machine on the network.	—
Status Monitor 5	This is a utility that monitors the printer status and provides an ongoing reporting function.	○
File Management Utility	This makes it possible to send and save a scanned document to a specified network folder.	—

Software	Description	Recommended software
Network Tool for Direct Printing	This makes it possible to print a PDF file without starting Adobe Acrobat/Reader.	—
Quick Scan	This is a tool that allows you to configure settings for saving or sending scanned originals from your computer.	—
FONTS	These are display fonts that enable the machine's built-in fonts to be used in a software application.	○
Quick Network Setup Tool	A tool to configure the network (wired LAN) settings of the machine.	—
Wi-Fi Setup Tool	A tool to configure the wireless network (wireless LAN) settings of the machine.	—
Scan to Folder Setup Tool for SMB	A tool for creating shared folders on your PC, setting the created shared folders as destination folders on this machine, and the like.	—
Cloud Access	Software that enables the use of cloud services from this product.	—
Cloud Access Client	Software that enables the use of cloud services from this product. Follow the guidance on the screen to install the software.	—

**NOTE**

- Installation on Windows must be done by a user logged on with administrator privileges.
- The fax function can be used on products equipped with fax capability.

## Published Software (Mac)

Software	Description	Recommended software
Mac Driver	This driver enables files on Mac to be printed by the machine. Multiple page description languages (PCL KPD L and PDF) are supported by a single driver. This printer driver allows you to take full advantage of the features of the machine.	—

# Installing Software in Windows

## Downloading and installing from the website

Download and install a software from our website.

### 1 Download a software from the website.

- 1 Launch your Web browser.
- 2 Enter URL to the browser's address bar or location bar.



#### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

#### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

### 2 Double-click the downloaded installer to launch.

Follow the guidance on the screen to install the software.



#### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
  - If the user account management window appears, click [Yes].
-

# Installing Software on a Mac OS Computer

A printer driver can be installed for a Macintosh computer.




## NOTE

- Installation on Mac OS must be done by a user logged on with administrator privileges.
- When installing for a Mac, set the machine's emulation to [KPD] or [KPD (Aoto)].  
➔ [Printer \(page 438\)](#)
- If connecting by Bonjour, enable Bonjour in the machine's network settings.  
➔ [Bonjour \(page 478\)](#)
- In the Authenticate screen, enter the name and password used to log in to the operating system.
- When printing via AirPrint, you do not have to install the software.

## 1 Download a software from the website.

- 1 Launch your Web browser.
- 2 Enter URL into the address bar.

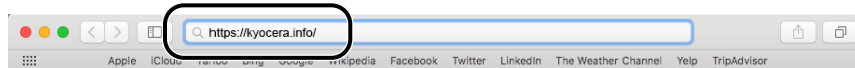

### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:


<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

## 2 Install an application.

Double-click the downloaded installer to launch.

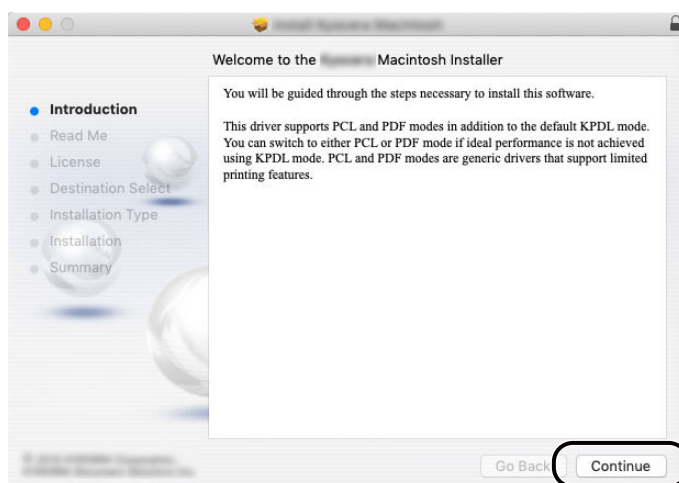


Install the printer driver as directed by the instructions in the installation software. This completes the printer driver installation.


If a USB connection is used, the machine is automatically recognized and connected. If an IP connection is used, the settings below are required.

### 3 Configure the settings


- 1 Open System Preferences and add the printer.

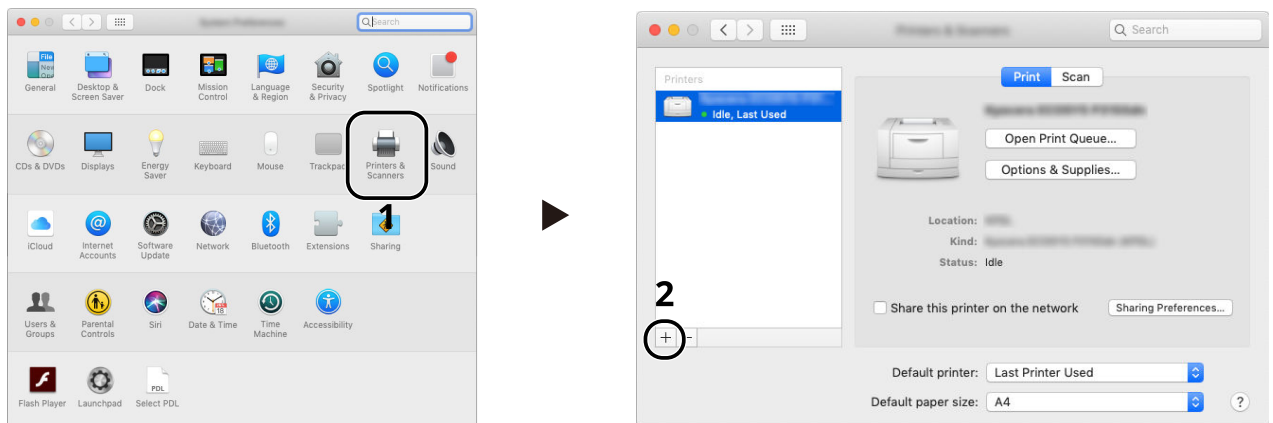

- 2 Select [Default], click the item that appears in "Name", and then select the driver.

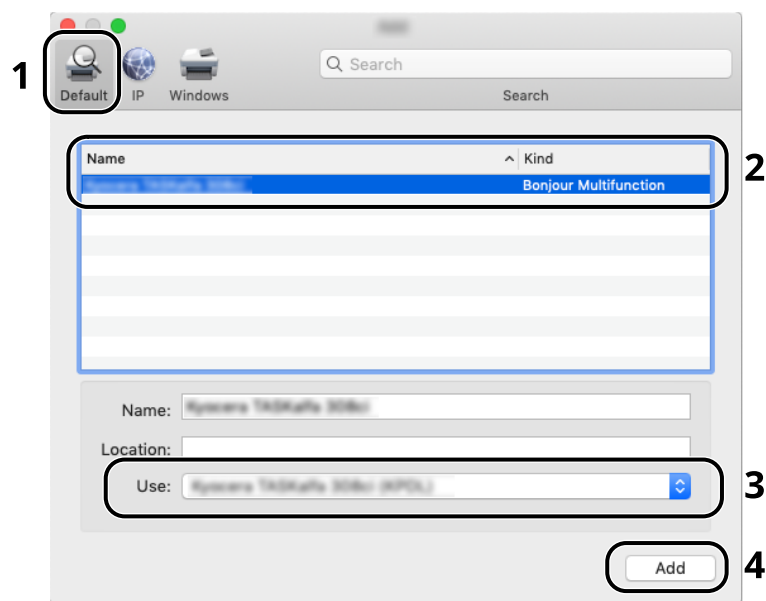

The selected machine is added.

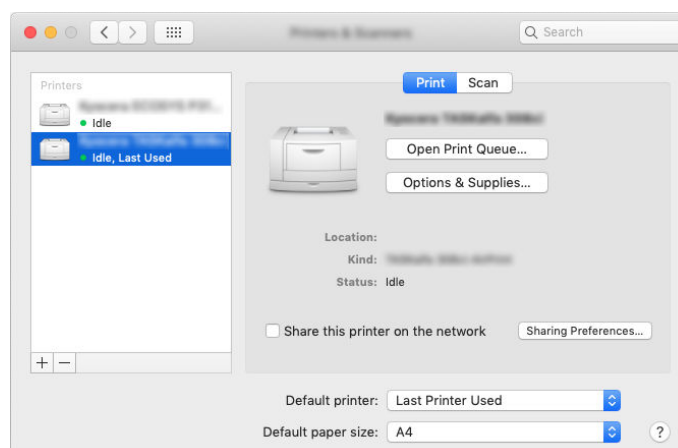




### NOTE

When using an IP address, select the [IP] and then enter the host name or IP address. "Name" is automatically filled in with the number entered in "Address". Change the settings as required.

- 3 Select the options equipped with the machine.

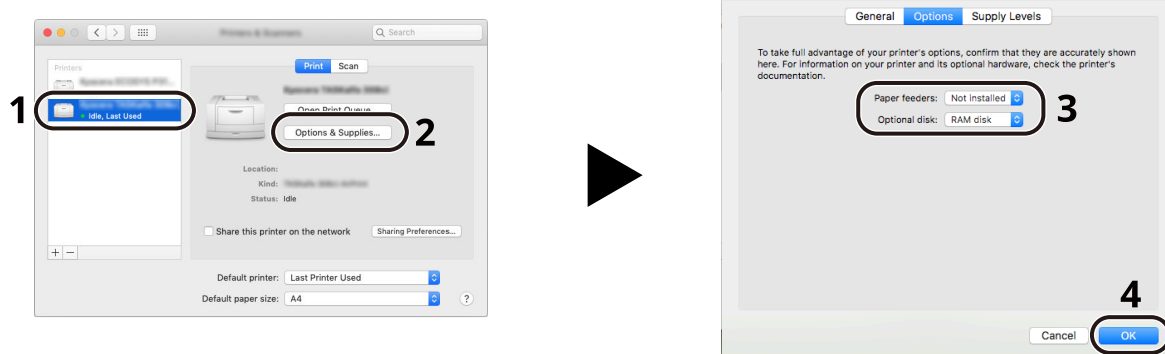


## Configure TWAIN Driver.


Register this machine to the TWAIN Driver. Instructions are based on interface elements as they appear in Windows 10.

### 1 Display the screen

- 1 Click the search box in the taskbar, and enter "TWAIN Driver Setting". Select [TWAIN Driver Setting] in the search list. Displays the TWAIN Driver Settings screen.
- 2 Click [Add].

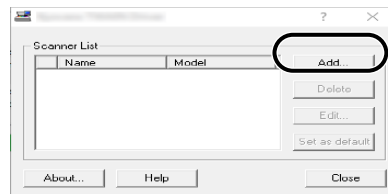

### 2 Configure TWAIN Driver.

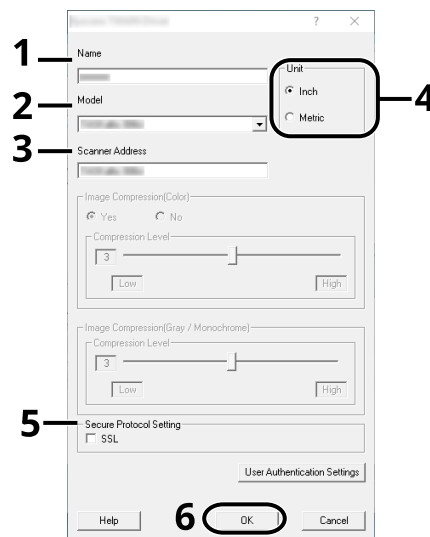

- 1 Enter the machine name.
- 2 Select this machine from the list.
- 3 Enter the machine's IP addresses or host name.
- 4 Set units of measurement.
- 5 When using SSL, select the checkbox beside SSL.

- 6 Click [OK].




**NOTE**

When the machine's IP address or host name is unknown, contact Administrator.

---

### 3 Finish registering.

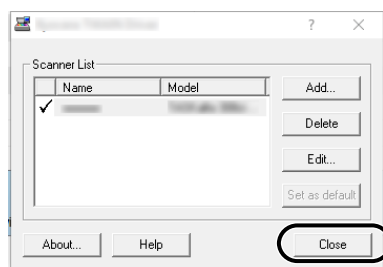

**NOTE**

Click [Delete] to delete the added machine. Click [Edit] to change names.

---

## Configure WIA Driver.

Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows 10.

### 1 Display the screen


- 1 Click [Search] in taskbar, and enter "View scanners and cameras" in the search box. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.




#### NOTE

For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel], in that order. Enter "Scanner" into the search field on the control panel. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and click the [Properties] button.

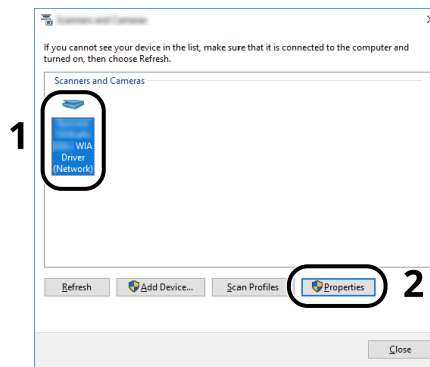

## 2 Configure WIA Driver.

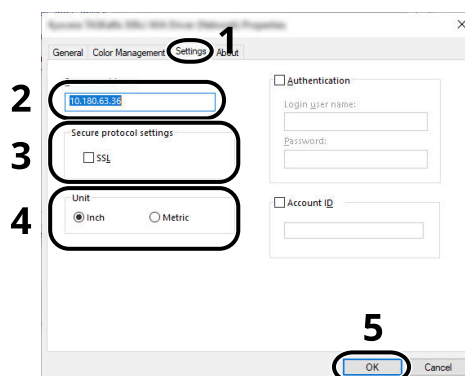

- 1 Click the [Settings] tab.
- 2 Enter the machine's IP addresses or host name.
- 3 When using SSL, select the checkbox beside SSL.
- 4 Set units of measurement.
- 5 Click [OK].

# Check the counter

Check the number of sheets printed and scanned.

## 1 Display the screen

[System Menu/Counter] key > [Counter]

## 2 Check the counter

# Additional Preparations for the Administrator

## Administrator Privileges Overview

This machine is shipped with two default users registered one with Machine Administrator privileges, and another with Administrator privileges. The user with Machine Administrator privileges and the user with Administrator privileges can configure important settings for the machine. The differences in the privileges are as follows:

### User with Machine Administrator privileges

This user can configure the product's network settings, security settings such as user registration, and the machine's security level.

➔ [\[Data Security\] \(page 475\)](#)

### User with Administrator privileges

This user can configure the product's network settings, and security settings such as user registration. This user cannot set the machine's security level.

## Log in as Machine Administrator or Administrator

**NOTE**

The user with Machine Administrator privileges or the user with Administrator privileges must log in to configure important settings for the product, such as network settings and security settings. The factory default login user name and login password are set as shown below.

**Machine Administrator**

User Name	DeviceAdmin
Login user name	4000
Login Password	For security purposes, the individual passwords listed on the sheet provided with this product are set at the time of shipment. We recommend that you refer to the this guide to change the password to the desired one.

**Administrator**

User Name	Admin
Login user name	Admin
Login Password	For security purposes, the individual passwords listed on the sheet provided with this product are set at the time of shipment. We recommend that you refer to the this guide to change the password to the desired one.

**IMPORTANT**

To ensure security, be sure to change the factory default user name, login user name, and login password. Also, change your password regularly.

➔ [Change the user properties \(page 511\)](#)

## Strengthening the Security

This machine is shipped with two default users registered one with Machine Administrator rights, and another with Administrator rights. Logging in as this user will allow you to configure all settings; therefore, please change the login user name and password.

In addition, this machine is equipped with user authentication function, which can be configured to limit the access to this machine to only those who have a registered login name and password. For details, refer to the following:

➔ [User Authentication and Accounting \(User Login, Job Accounting\) \(page 502\)](#)



### NOTE

This product has an optional security chip called TPM (Trusted Platform Module). The encryption key used to encrypt confidential information on this machine is stored in a dedicated storage area on the TPM chip. Since this storage area cannot be read from outside the TPM, confidential information can be safely protected.

---

## Restrict the users of the machine

- User Login
  - ➔ [Overview of User Login Administration \(page 503\)](#)
- Authentication Security
  - ➔ [Authentication Security \(page 506\)](#)
- Auto Panel Reset
  - ➔ [Energy Saver/Timer \(page 394\)](#)
- ID Card Settings

The optional IC Card Authentication Kit is required.

  - ➔ [ID Card Settings \(page 536\)](#)

## Restrict the basic functions that can be used

- Local Authorization
  - ➔ [Local Authorization \(page 519\)](#)
- Group Authorization Setting
  - ➔ [Group Authorization Settings \(page 522\)](#)
- Guest Authorization Set.
  - ➔ [Guest Authorization Settings \(page 525\)](#)

## Output the document stored in the machine at the time when user operates the device via operation panel

- Remote Printing
  - ➔ [Remote Printing \(page 442\)](#)

## Prevent the data stored in the machine from being leaked

- PDF Encryption Functions
  - ➔ [PDF Encryption Functions \(page 350\)](#)

## Completely delete the data on the machine before disposing of the machine

- Data Sanitization
  - ➔ [\[Data Security\] \(page 475\)](#)

## Protect the transmission from interception and wiretapping

- IPP over TLS
  - ➔ [IPP over TLS \(page 470\)](#)
- HTTPS
  - ➔ [HTTPS \(page 471\)](#)
- LDAP Security
  - ➔ **Embedded Web Server RX User Guide**
- SMTP Security
  - ➔ [SMTP \(Email TX\) \(page 468\)](#)
- POP3
  - ➔ [POP3 \(Email RX\) \(page 468\)](#)
- FTP Encrypted TX
  - ➔ [FTP Encrypted TX \(page 359\)](#)
- Enhanced WSD over TLS
  - ➔ [Enhanced WSD over TLS \(page 472\)](#)
- IPSec
  - ➔ [IPSec \(page 481\)](#)
- SNMPv3
  - ➔ [SNMPv3 \(page 471\)](#)

## Verify the software in the machine

- Software Verification
  - ➔ [Software Verification \(page 490\)](#)

## Preventing from execution of the unauthorized programs

- Allowlisting
  - ➔ [Allowlisting \(page 490\)](#)

# What is Embedded Web Server RX

If the machine is connected to the network, you can configure various settings using Embedded Web Server RX. This section explains how to access Embedded Web Server RX, and how to change security settings and the host name.

## → Embedded Web Server RX User Guide



### NOTE

To fully access the features of the Embedded Web Server RX pages, you must enter the user name and password and log in. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings/Registration on the navigation menu.

Settings that the administrator and general users can configure in Embedded Web Server RX are as follows.

Item	Description	Administrator	General User
Device Information/Remote Operation	The machine's structure can be checked.	Yes	Yes
Job Status	Displays all device information, including print and scan jobs, storing jobs, scheduled jobs, and job log history.	Yes	Yes
Address Book	Create, edit, or delete addresses and address groups.  The logged in user may not be able to configure some settings, depending on the privilege of the user.	Yes	Yes
Device Settings	Configure the advanced settings of the machine.	Yes	No
Function Settings	Configure the advanced function settings.	Yes	No
Network Settings	Configure the network advanced settings.	Yes	No
Security Settings	Configure the security advanced settings.	Yes	No
Management Settings	Configure the advanced management settings.	Yes	No



### NOTE

The setting item which can be set or configured from Embedded Web Server RX.


Here, information on the FAX settings has been omitted.

## → FAX Operation Guide

# Accessing Embedded Web Server RX

## 1 Display the screen

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.  
Click in the following order to check the machine's IP address and the host name.  
[Device Info] in the home screen > [Identification/Wired Network/Wired Network]  
Example: https://10.180.81.1 (in the case of /IP address)  
https://MFP001 (if the host name is MFP001)

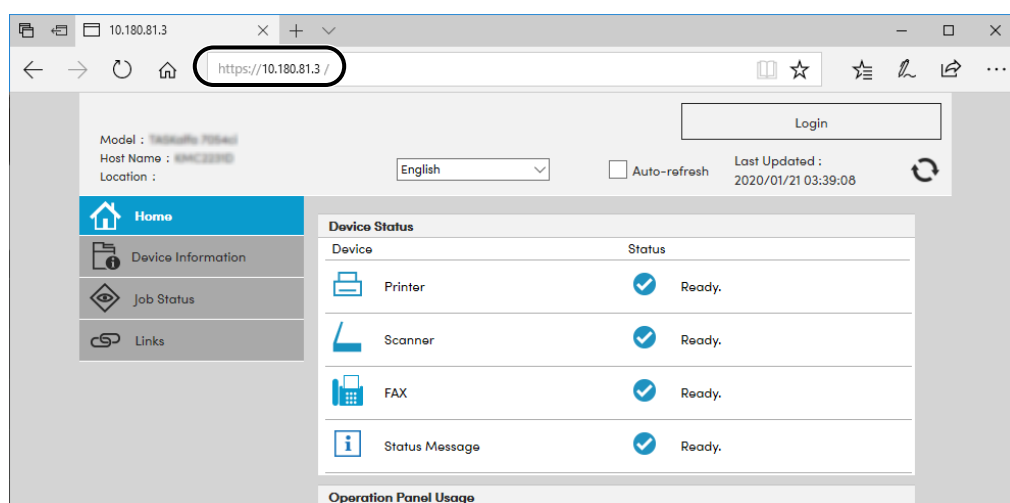

The web page displays basic information about the machine and Embedded Web Server RX as well as their current status.



### NOTE

If "There is a problem with this website's security certificate" is displayed, configure the certificate.

➔ **Embedded Web Server RX User Guide**

You can also continue the operation without configuring the certificate.

## 2 Configure the settings

Select a category from the navigation bar on the left of the screen.




### NOTE

To fully access the features of the Embedded Web Server RX pages, you must enter the user name and password and log in. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings/Registration on the navigation menu.

# Changing Security Settings

## 1 Display the screen


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.  
Click in the following order to check the machine's IP address and the host name.  
[Device Info] in the home screen > [Identification/Wired NetworkWired Network]
- 3 Log in with administrator privileges.

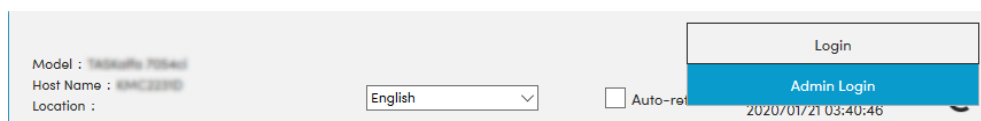

- 4 Click [Security Settings].

## 2 Configure the settings

From the [Security Settings] menu, select the setting you want to configure.

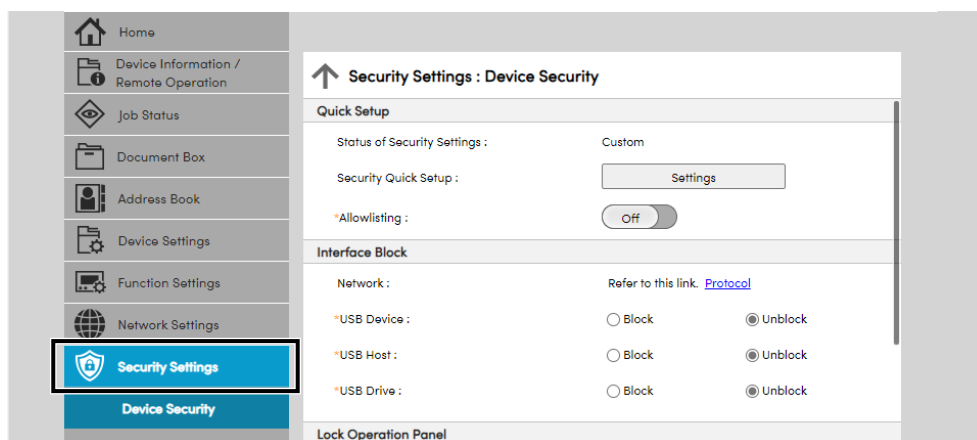

### NOTE


For details on settings related to certificates, refer to the following:

➔ **Embedded Web Server RX User Guide**


# Changing Device Information

## 1 Display the screen

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.  
Click in the following order to check the machine's IP address and the host name.  
[Device Info] in the home screen > [Identification/Wired NetworkWired Network]
- 3 Log in with administrator privileges.

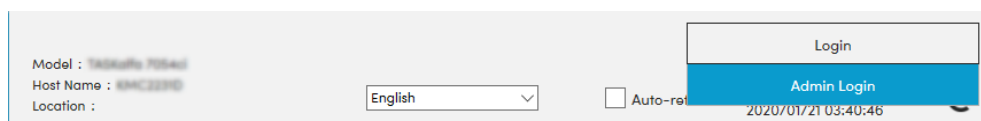

- 4 From the [Device Settings] menu, click [System].

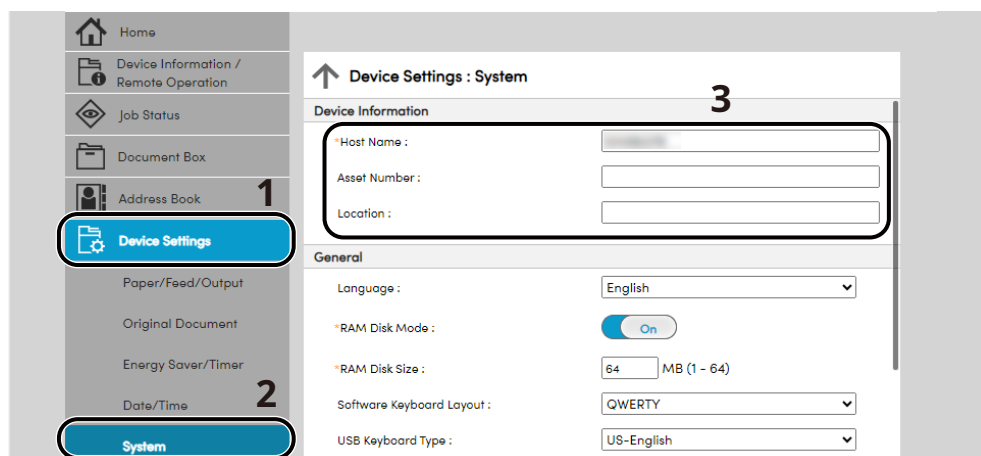

## 2 Configure the settings

Enter the device information, and then click [Submit].

### ✓ IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON. To restart the network interface card, click [Reset] in the [Management Settings] menu, and then click [Restart Network] in "Restart".

## SMTP and E-mail Settings

By configuring the SMTP settings, it is possible to send the images scanned by the machine as E-mail attachments and to send E-mail notices when jobs have been completed. To use this function, this machine must be connected to a mail server using the SMTP protocol.

In addition, configure the following.

### SMTP settings

"SMTP Protocol" and "SMTP Server Name" in "SMTP"

### The sender address when the machine sends E-mails

"Sender Address" in "E-mail Send Settings"

### The setting to limit the size of E-mails


"E-mail Size Limit" in "E-mail Send Settings"

The procedure for specifying the SMTP settings is explained below.


## 1 Display the screen

Display the SMTP Protocol screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.  
Click in the following order to check the machine's IP address and the host name.  
[Device Info] in the home screen > [Identification/Wired Network/Wired Network]
- 3 Log in with administrator privileges.

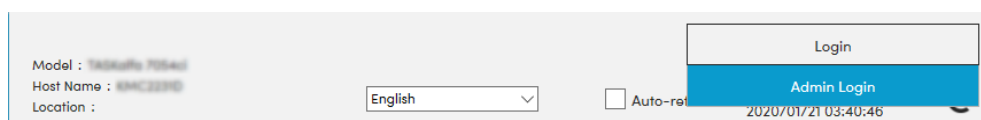


- 4 From the [Network Settings] menu, click [Protocol].

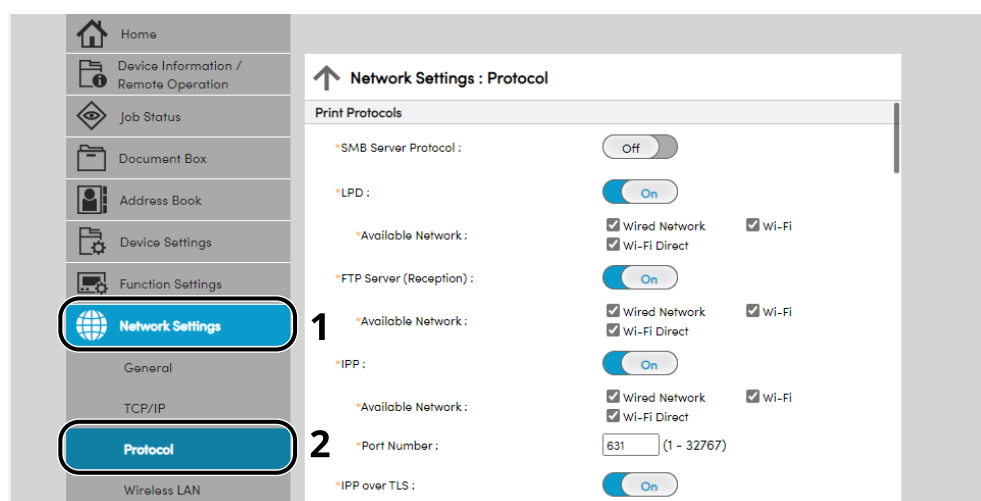

## 2 Configure the settings


Set "SMTP (E-mail TX)" to [On] in the "Send Protocols".

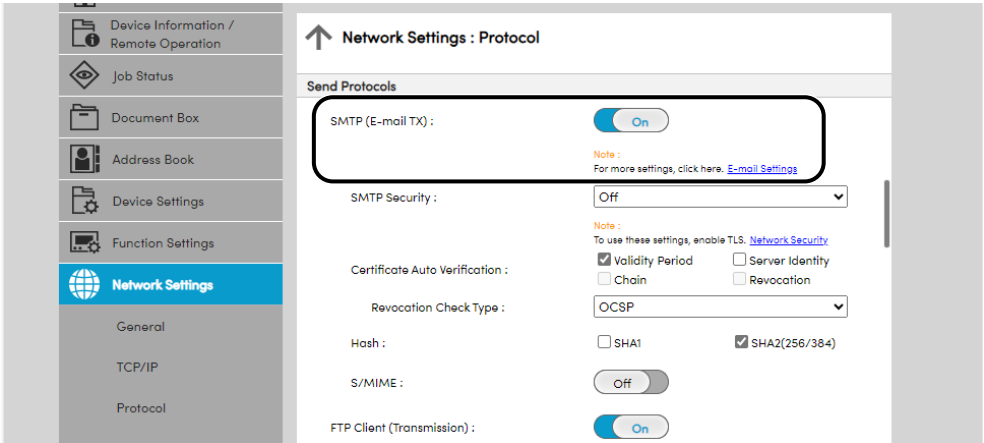

## 3 Display the screen

Display the E-mail Settings screen.

From the [Function Settings] menu, click [E-mail].

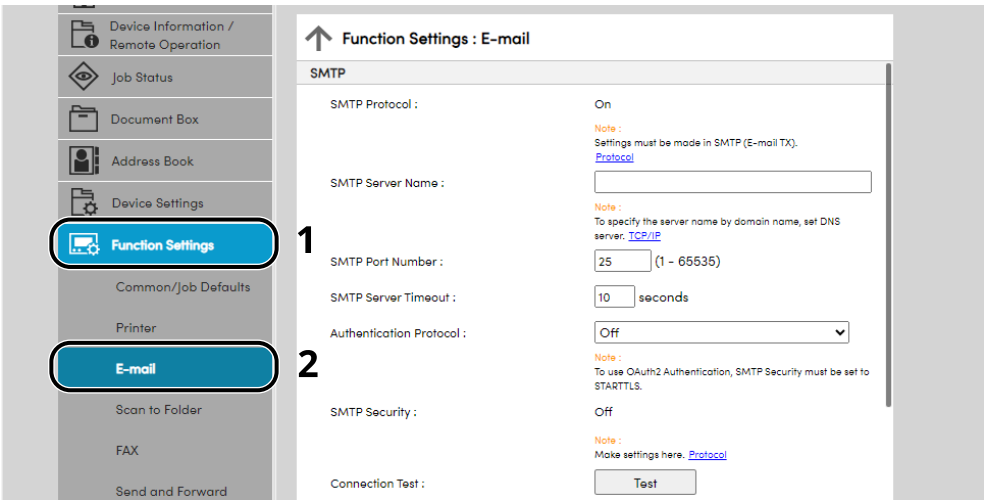

## 4 Configure the settings

Enter "SMTP" and "E-mail Send Settings" items.

### SMTP

Set to send e-mail from the machine.

#### [SMTP Protocol]

Displays the SMTP protocol settings. Check that [SMTP Protocol] is set to [On]. If [Off] is set, click [Protocols] and set the SMTP protocol to [On].

#### [SMTP Server Name]

Enter the host name or IP address of the SMTP server. Be sure to enter the items.

#### [SMTP Port Number]

Specify the port number to be used for SMTP. The factory default port number is 25.

#### [SMTP Server Timeout]

Set the amount of time to wait before time-out in seconds.

**[Authentication Protocol]**

To use SMTP authentication, enter the user information for authentication.

**[SMTP Security]**

Set SMTP security. Set [SMTP Security] of "SMTP (E-mail TX)" on the "Protocols" page.

**[Connection Test]**

Tests to confirm the proper operation under the settings without sending an email.

**[Domain Restrictions]**

To restrict the domains, click the [Domain List] and enter the domain names of addresses to be allowed or rejected. Restriction can also be specified by e-mail address.

**POP3**

You don't need to set the items when you only use the function of sending e-mail from the machine. Set the items if you want to enable the function of receiving e-mail on the machine.

➔ **Embedded Web Server RX User Guide**

**E-mail Send Settings**

**[E-mail Size Limit]**

Enter the maximum size of E-mail that can be sent in kilobytes. When E-mail size is greater than this value, an error message appears and E-mail sending is canceled. Use this setting if you have set E-mail Size Limit for SMTP server. If not, enter a value of 0 (zero) to enable E-mail sending regardless of the size limit. Entering 0 will allow for the sending of E-mail regardless of E-mail size limits.

**[Sender Address]**

Specify the sender address for when the machine sends E-mails. Non-delivery report may be sent back to the sender address specified here. It is recommended that you specify an e-mail address that can be received by the device administrator. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 256 characters. Be sure to enter the items.

**[Signature]**

Enter the signature. The signature is free form text that will appear at the end of the E-mail body. It is often used for further identification of the machine. The maximum length of the signature is 512 characters.

**[SMTP Authentication and Sender Address]**

Select the information source (quotation destination) for the login user name, password, and sender address used for SMTP authentication and email sending. Select [Use Device Setting] or [Use Login User Information].

**[Function Default]**


Change the function default settings in [Common/Job Defaults] page.

**5 Click [Submit].**


# Registering Destinations

## 1 Display the screen

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.  
Click in the following order to check the machine's IP address and the host name.  
[Device Info] in the home screen > [Identification/Wired NetworkWired Network]
- 3 Log in with administrator privileges.

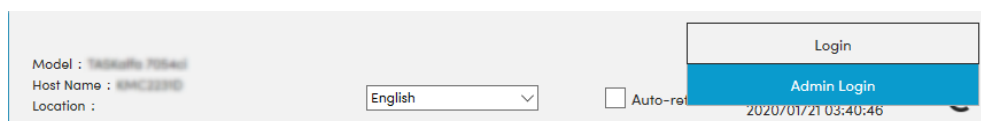

- 4 In the [Address Book] menu, click [Machine Address Book].

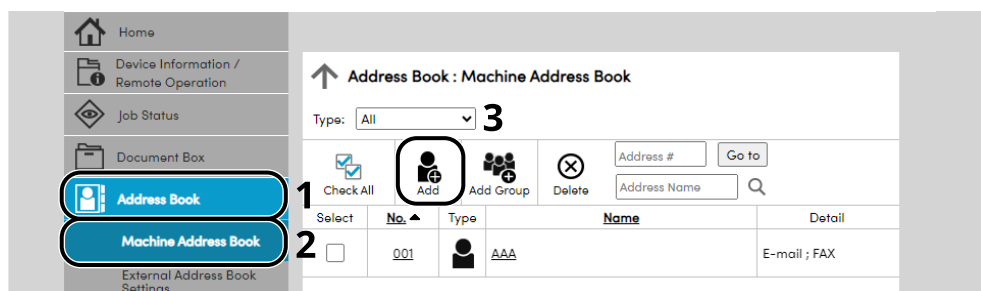

- 5 Click [Add].

## 2 Configure the settings.

- 1 Enter the destination information.  
Enter the information for the destination you want to register. The fields to populate are the same as when registering via operation panel.  
➔ [Registering Destinations in the Address Book \(page 155\)](#)
- 2 Click [Submit].

# Transferring Data from Our Other Products

By using the machine's utility, you can smoothly migrate address books when the machine is to be replaced. This section explains how to transfer data between our products.

## Migrating the Address Book

This is a tool that can be downloaded from Download Center. You can configure the connection according to the instructions provided by the wizard.

### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

For details on NETWORK PRINT MONITOR operation, refer to the following:


➔ **NETWORK PRINT MONITOR User Guide**

## Backing up Address Book Data to PC


- 1 Start up NETWORK PRINT MONITOR.**

## 2 Create a backup.


- 1 Right-click on the name of the model from which you want to back up the Address Book, and select [Advanced] > [Set multiple devices].

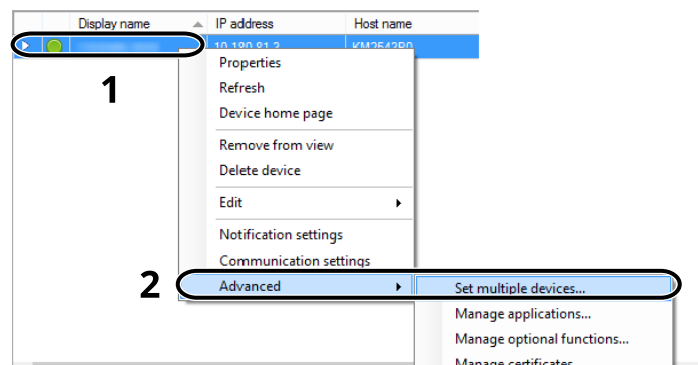


- 2 Select [Custom mode] and click [Next].

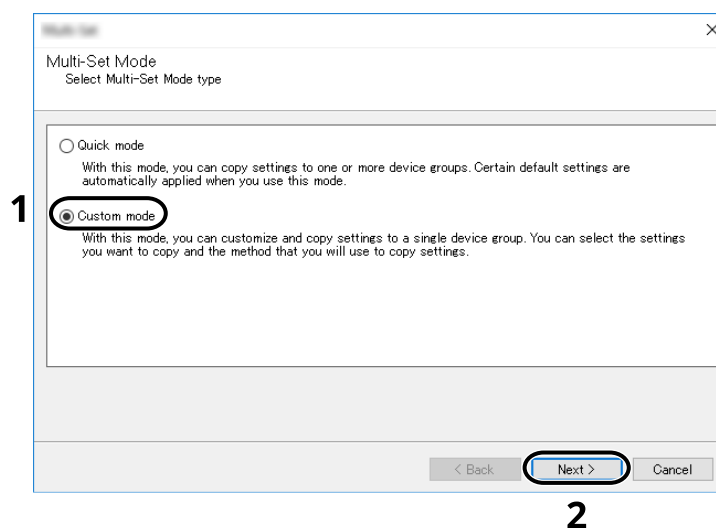


- 3 Select destination device group and click [Next].

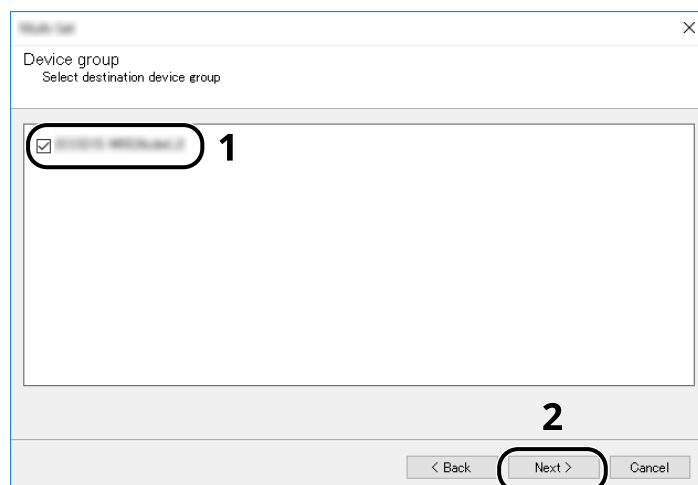


- 4 Select [Device Address Book] and click [Next].

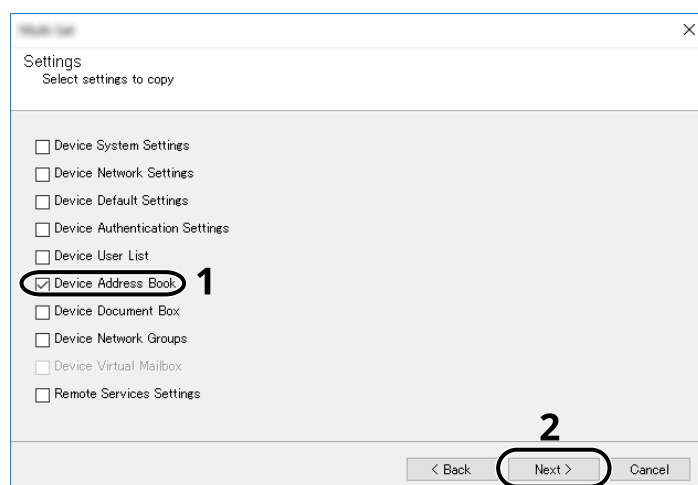

- 5 Select [Create from device], uncheck [Overwrite settings on target device], and click [Next].

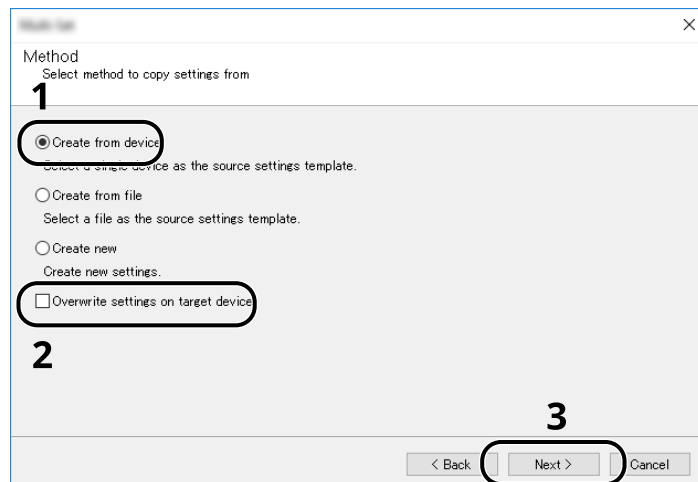


- 6 Select the model you want to back up, and click [Next].

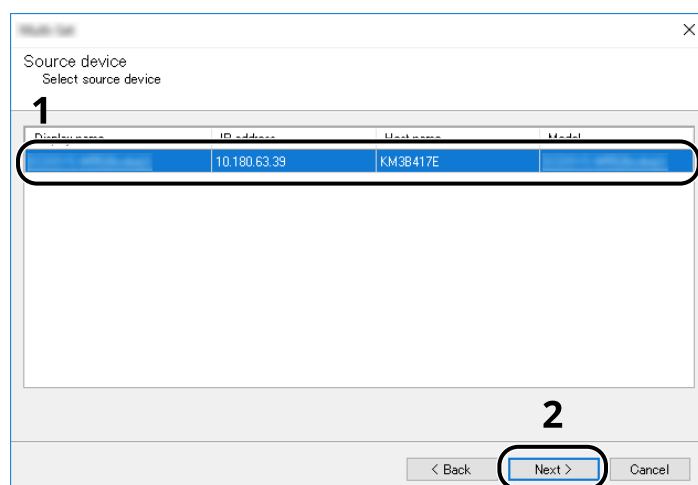


 **NOTE**

If the "Administrator login" screen appears, enter the administrator's login user name and password, and then click [OK].

- 7 Click [Save to file].

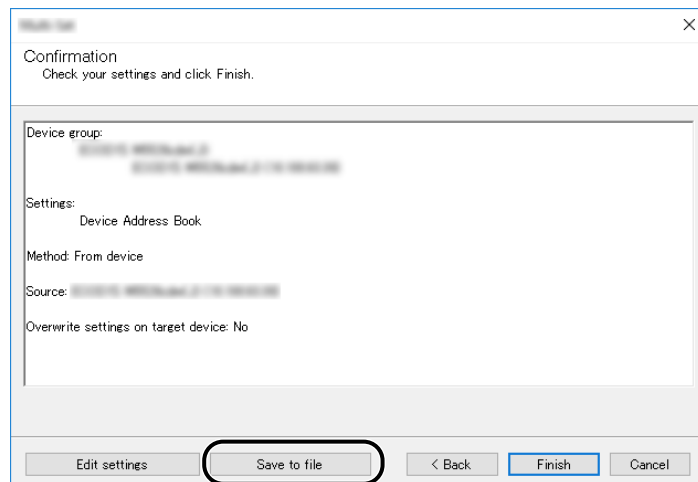

- 8 Specify the location to save the file, enter the file name, and then click [Save].  
Be sure to select "XML file" for "File format".
- 9 After saving the file, always click [Cancel] to close the screen.

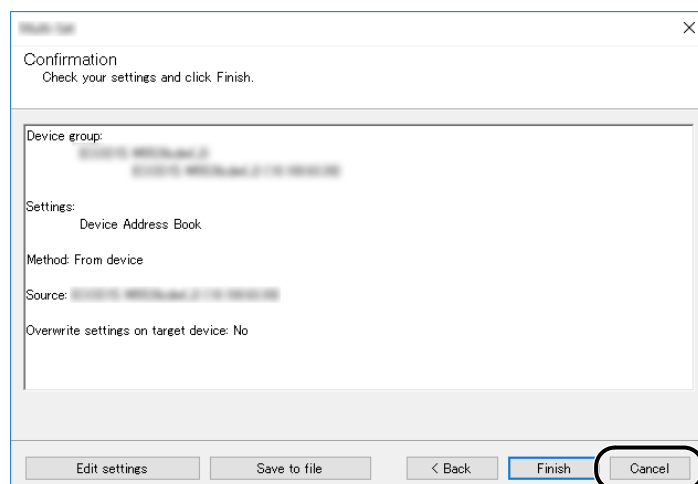


Please note that selecting [Finish] will write the data to the machine's Address Book.

## Writing Address Book Data to the Machine


**1** Start up NETWORK PRINT MONITOR.

**2** Load the Address Book data.


- 1 Right-click on the name of the model from which you want to forward the Address Book, and select [Advanced] > [Set mutiple devices].

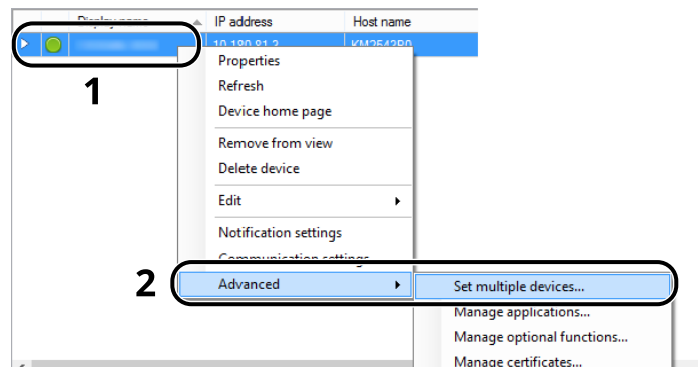


- 2 Select [Custom mode] and click [Next].

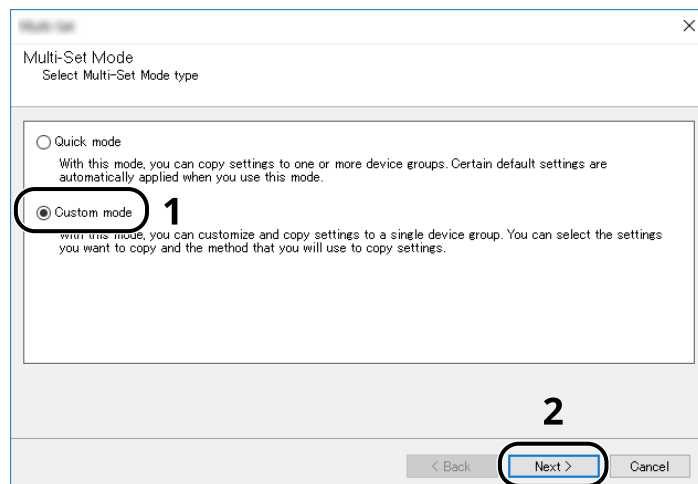


- 3 Select a destination device group and click [Next].

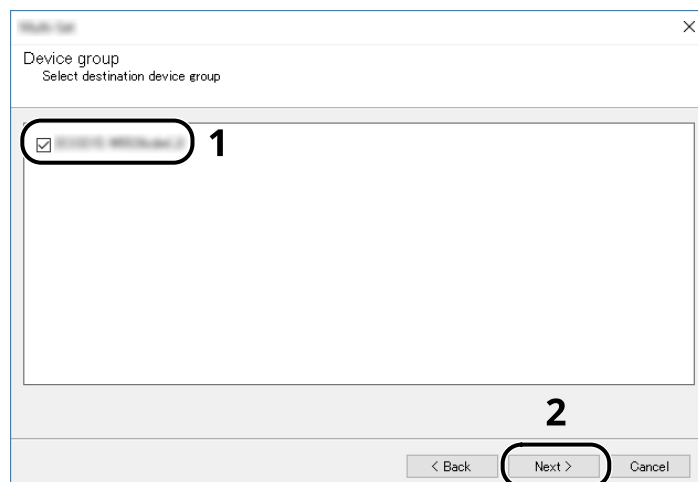

- 4 Select [Device Address Book] and click [Next].

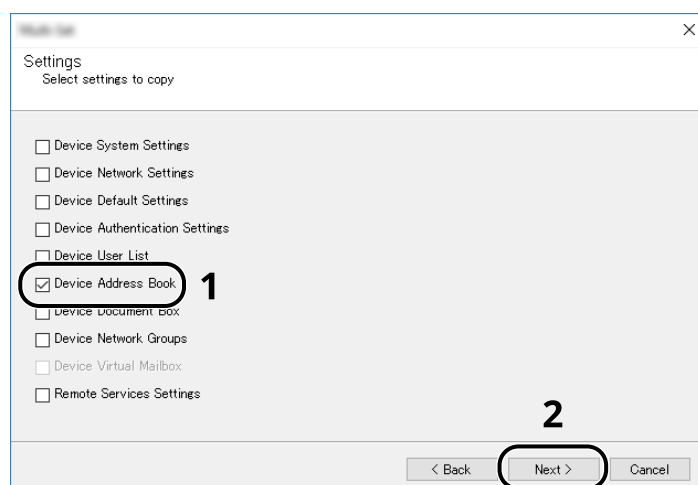


- 5 Select [Create from file], uncheck [Overwrite settings on target device], and click [Next].

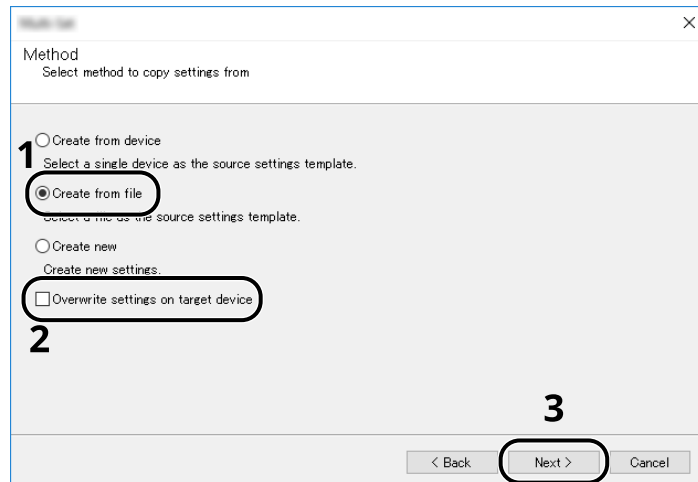

Selecting the [Overwrite settings on target device] checkbox will overwrite the machine's Address Book from entry No.1.

- 6 Click [Reference] and select the backup Address Book file, and then click [Next].
- 7 Click [Fininsh].

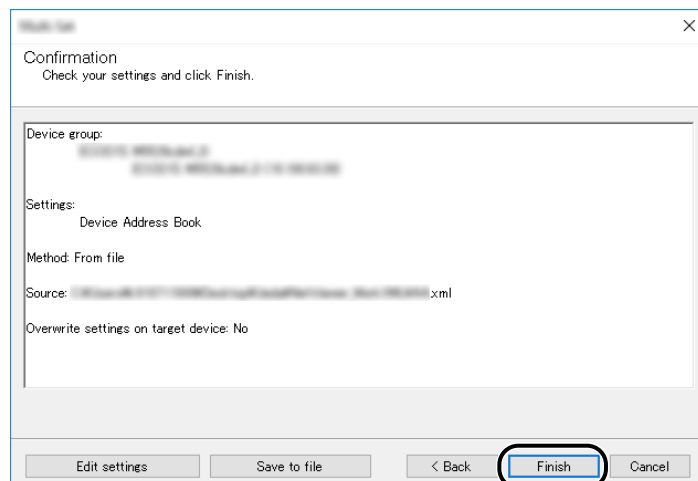

The write process of the Address Book data starts.

- 8 Once the write process is complete, click [Close].

---

## **3 Preparation before Use**


---

# Load paper

## Loading Paper

Load paper in the cassettes and multipurpose tray.

For the paper load methods for each cassette, refer to the page below.

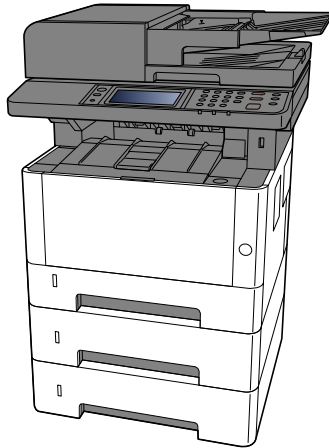

1 Cassette 1

➔ [Loading in the Cassettes \(page 131\)](#)

2 Cassette 2

➔ [Loading in the Cassettes \(page 131\)](#)

3 Cassette 3

➔ [Loading in the Cassettes \(page 131\)](#)

4 MultipurposeTray

➔ [Loading Paper in the Multipurpose Tray \(page 136\)](#)




### NOTE

- The number of sheets that can be held varies depending on your environment and paper type (thickness).
  - Do not use inkjet printer paper or paper with special coatings. (Doing so may lead to failures such as paper jams.)
-

## Precaution for Loading Paper

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

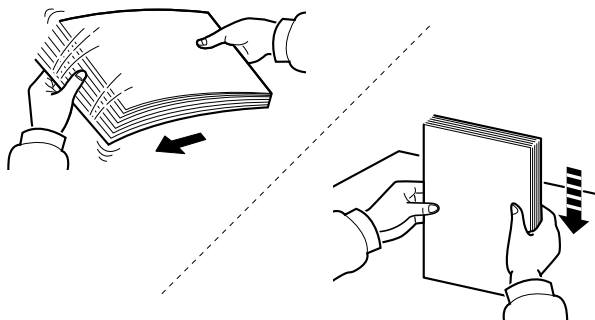

Fan the paper, then tap it on a level surface. In addition, note the following points.

- If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.
- Avoid exposing opened paper to high temperatures and high humidity as dampness can be a cause of problems. Seal any remaining paper in the cassettes back in the paper storage bag. Seal any remaining paper after loading in the multipurpose tray in the paper storage bag.
- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.

---

### IMPORTANT

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.

---

---

### NOTE

If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to the following:

➔ [About Paper \(page 787\)](#)

---

## Paper Specifications available in the Cassettes

The cassettes can hold plain paper, recycled paper or color paper. The number of sheets that can be loaded in each cassette is shown below.

Cassette	Capacity
Cassette 1 to 3	250 sheets (Plain paper: 80 g/m <sup>2</sup> )

For details of the supported paper sizes, refer to the following:

➔ [Choosing the Appropriate Paper \(page 788\)](#)

For the paper type setting, refer to the following:

➔ [\[Media Type Setting\] \(page 403\)](#)




### IMPORTANT

- Cassettes 1 to 3 can hold 80 to 163 g/m<sup>2</sup> of paper.
  - If you are using a paper weight of 106 g/m<sup>2</sup> or more, set the media type to Thick and set the weight of the paper you are using.
-


## Loading in the Cassettes

- 1 Pull the cassette completely out of the machine.

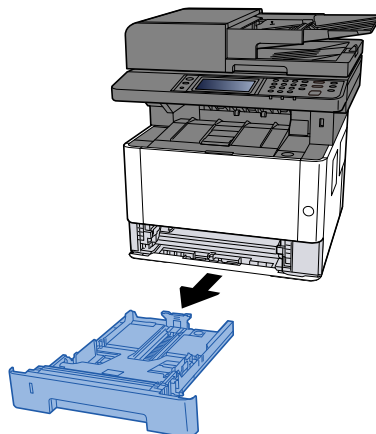

### NOTE


If the baseplate is rising, push the baseplate until it locks.

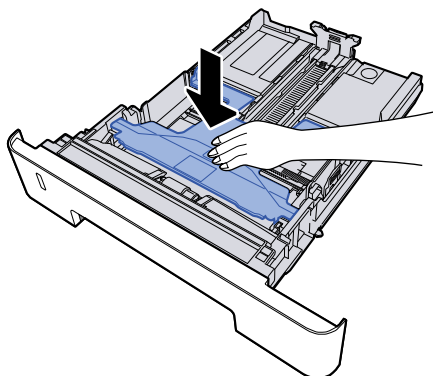

## 2 Adjust the cassette size.


- 1 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

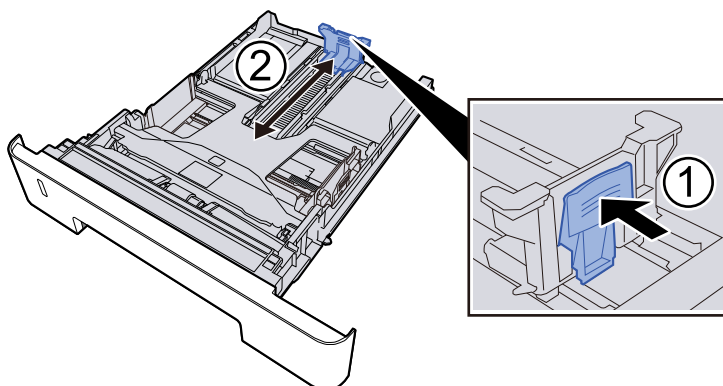


### ✓ IMPORTANT

When using Folio, Oficio II, or Legal

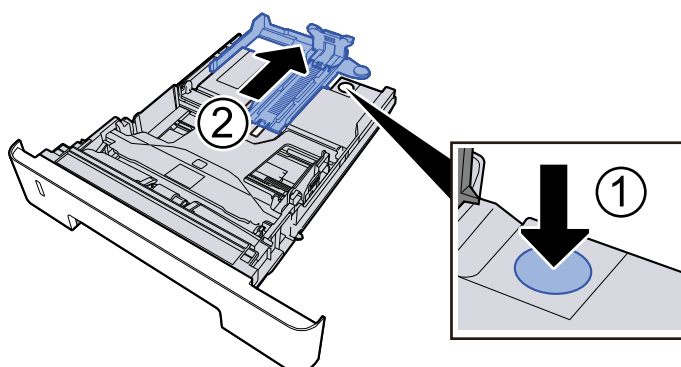


- 2 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

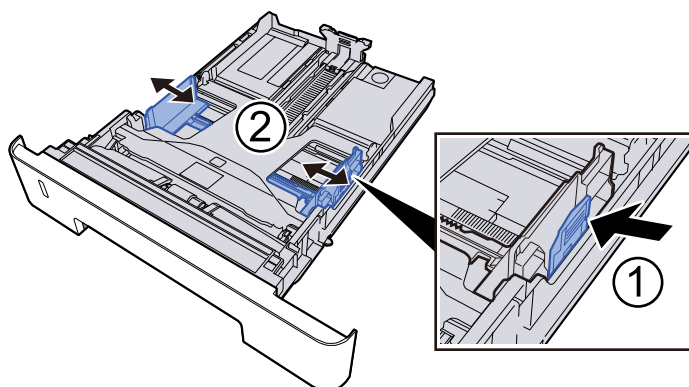

### 3 Load paper

- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

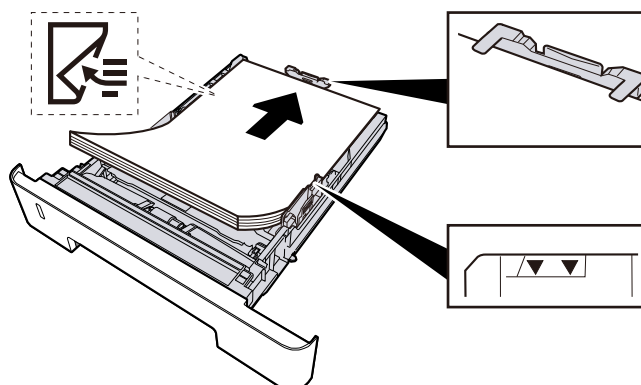


---

#### ✓ IMPORTANT

- Load the paper with the print side facing down.
  - After removing new paper from its packaging, fan out the paper before loading it in the cassettes.  
→ [Precaution for Loading Paper \(page 129\)](#)
  - Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
  - Ensure that the loaded paper does not exceed the level indicator.
  - If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.
-

## 4 Gently push the cassette back in.

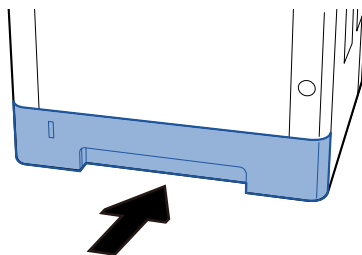

---


### IMPORTANT

Push all cassettes all the way in. If they are not pushed all the way in, they may cause a jam.

---

### NOTE

There is a paper gauge on the right side of the front of the cassette. The display changes up and down to match the remaining amount of paper.

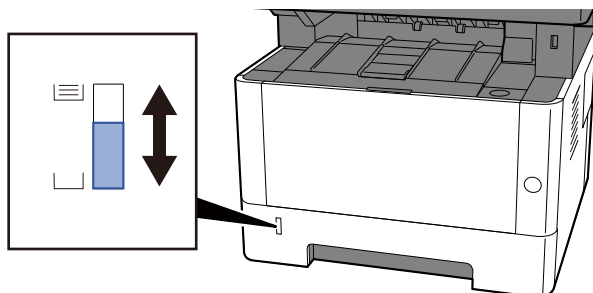

---

## 5 Specify the type of paper loaded in the cassette using the operation panel.

➔ [Loading in the Cassettes \(page 131\)](#)

## Paper Specifications available in the Multipurpose Tray

Up to 100 sheets of Plain paper (80 g/m<sup>2</sup>) can be added to the multipurpose tray.

For details of the supported paper sizes, refer to the following:

➔ [Choosing the Appropriate Paper \(page 788\)](#)

For the paper type setting, refer to the following:

➔ [\[Media Type Setting\] \(page 403\)](#)

Be sure to use the multipurpose tray when you print on any special paper.

---

### **IMPORTANT**

If you are using a paper weight of 106 g/m<sup>2</sup> or more, set the media type to Thick and set the weight of the paper you are using.

---

The capacity of the multipurpose tray is as follows.


- Plain paper (80 g/m<sup>2</sup>): 100 sheets
  - Thick paper (209 g/m<sup>2</sup>): 5 sheets
  - Thick paper (157 g/m<sup>2</sup>): 5 sheets
  - Thick paper (104.7 g/m<sup>2</sup>): 70 sheets
  - Hagaki (Cardstock): 15 sheets
  - Envelope DL, Envelope C5, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Youkei 4, Youkei 2: 55 sheets
  - Transparencies: 1 sheets
- 

### **NOTE**

- When you load custom size paper, enter the paper size by referring to the following:
    - ➔ [Paper Specifications available in the Multipurpose Tray \(page 135\)](#)
  - When using special paper such as transparency or thick paper, set the media type.
- ➔ [\[MP Tray Settings\] \(page 401\)](#)
-


## Loading Paper in the Multipurpose Tray

### 1 Open the multipurpose tray.

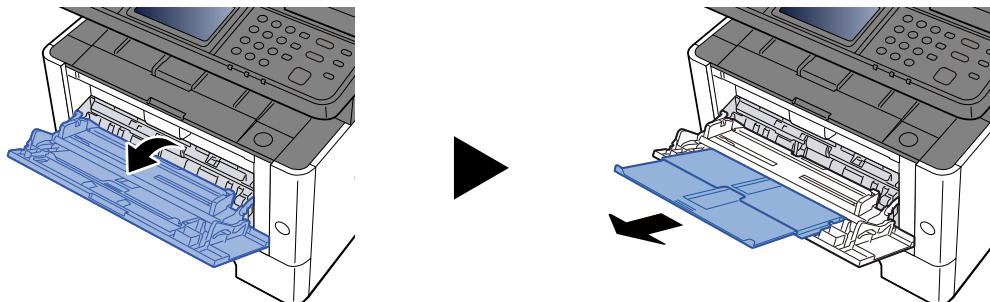


### 2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

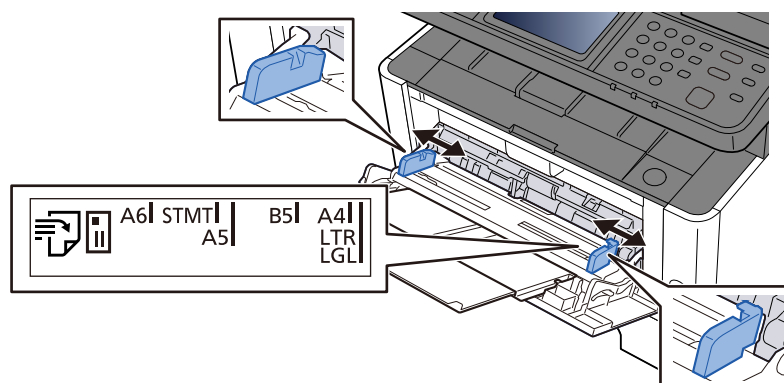

### 3 Load paper

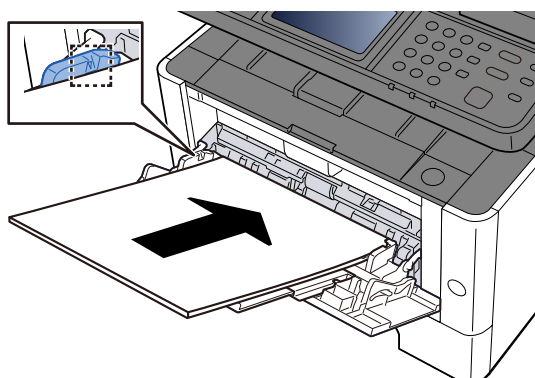

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

➔ [Precaution for Loading Paper \(page 129\)](#)

#### ✓ IMPORTANT

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in


the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.

- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
  - Ensure that the loaded paper does not exceed the load limits.
- 

When you load envelopes or cardstock in the multipurpose tray, load the paper with the print side facing up. For the procedure for printing, refer to the Printer Driver User Guide.

➔ **Printing System Driver User Guide**

**Example: When printing the address.**

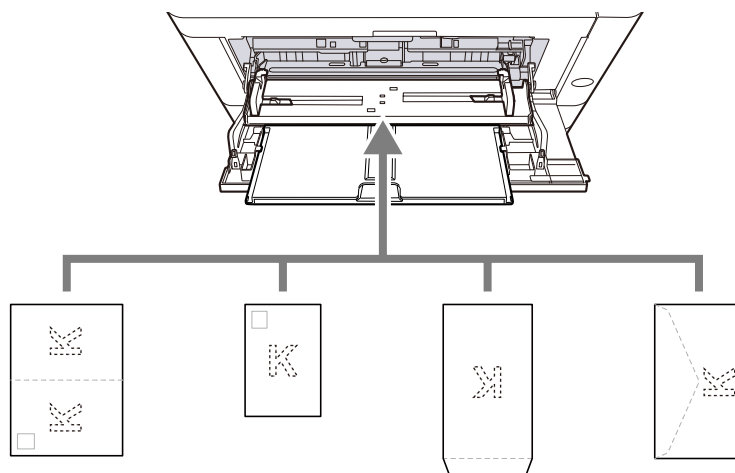

- Oufuku hagaki (Return postcard)
  - Hagaki (Cardstock)
  - Vertical envelope (open opening)
  - Horizontal envelope (close opening)
- 

✓ **IMPORTANT**

- Use unfolded Oufuku hagaki (Return postcard).
  - How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.
- 

 **NOTE**

When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

➔ [\[MP Tray Settings\] \(page 401\)](#)

---

## **4 Specify the type of paper loaded in the multipurpose tray using the operation panel.**

Specifying Paper Size and Media Type

## Specifying Paper Size and Media Type

The default paper size setting for cassette 1, for the multipurpose tray and for the optional paper feeder (cassettes 2 to 3) is "A4", and the default media type setting is "Plain". To change the type of paper to be used in cassettes, specify the paper size and media type.


### 1 Display the screen

- 1 Select [System Menu/Counter] > [Device Settings] > [Paper Feeding] > [Cassette 1 Settings] to [Cassette 3 Settings] or [MP Tray Settings]

### 2 Select the paper size and type



#### Cassette Paper Size and Media Type

Set the size of paper and Media type used in cassettes.

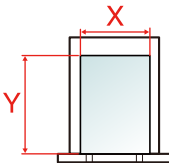Item	Description
[Paper Size]	<p>Select the paper size.</p> <p><b>Value (Cassette 1 to 3)</b></p> <p>[A4], [A5-R], [A5], [A6], [B5], [B6], [Folio], [216 x 340 mm], [Letter], [Legal], [Statement], [Executive], [OfficioII], [16K], [ISO B5], [Custom]</p> <p>For custom paper size, set the size for each cassette.</p> <p>➔ <a href="#">[Custom Paper Settings] (page 402)</a></p> <p style="text-align: center;"><b>Vertical</b></p> 
[Media Type]	<p><b>Value (Cassette 1 to 3)</b></p> <p>[Plain], [Recycled], [Preprinted], [Bond], [Color], [Prepunched][Letterhead], [Thick], [High Quality], [Vellum], [Custom 1] to [Custom 8]</p> <ul style="list-style-type: none"> <li>• To change to a media type other than "Plain," refer to the following. ➔ <a href="#">[Media Type Setting] (page 403)</a></li> <li>• When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.</li> <li>• To print on preprinted or prepunched paper or on letterhead, refer to the following: ➔ <a href="#">[Paper Feed Settings] (page 406)</a></li> </ul>

## Multipurpose Tray Paper Size and Media Type

Set the size of paper and media type used in the multipurpose tray.

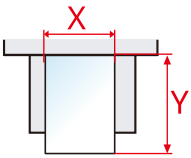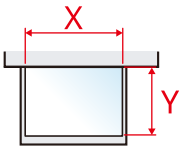Item	Description
[Paper Size]	<p>Select the paper size.</p> <p>Value: [A4], [A5-R], [A5], [A6], [B5], [B6], [Folio], [216 x 340 mm], [Letter], [Legal], [Statement], [Executive], [OfficioII], [16K], [ISO B5], [Envemope #10], [Envemope #9], [Envemope #6], [Envemope Monarch], [Envemope DL], [Envemope C5], [Cardstock], [Ofuku], [Youkei 4], [Youkei 2], [Younaga 3], [Nagagata 3], [Nagagata 4], [Custom]</p> <p>For custom paper size, set the size for each cassette.</p> <p>➔ <a href="#">[Custom Paper Settings] (page 402)</a></p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
[Media Type]	<p>Select the media type.</p> <p>Value: [Plain], [Labels], [Recycled], [Preprinted], [Bond], [Cardstock], [Transparency], [Vellum], [Color], [Prepunched], [Letterhead], [Envelope], [Thick], [High Quality], [Custom 1] to [Custom 8]</p> <p>To change to a media type other than "Plain," refer to the following.</p> <p>➔ <a href="#">[Media Type Setting] (page 403)</a></p> <p>To print on preprinted or prepunched paper or on letterhead, refer to the following:</p> <p>➔ <a href="#">[Special Paper Action] (page 406)</a></p>

### NOTE


The available media types for printing received faxes are as shown below.

Value: [Plain], [Labels], [Recycled], [Vellum], [Bond], [Color], [Envelope], [Cardstock], [Thick], [High Quality], [Custom 1] to [Custom 8]

Fax function is available for fax models.

# Paper Stopper

When using paper A4/Letter or larger, open the paper stopper shown in the figure.

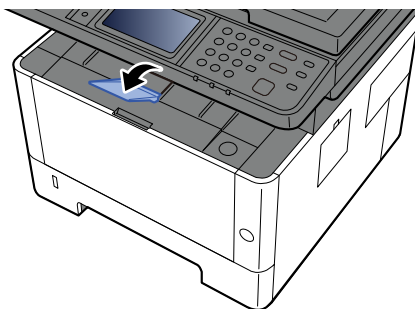

# Preparation for Sending a Document to a Shared Folder in a PC

Check the information that needs to be set on the machine and create a folder to receive the document on your computer. Screens of Windows 10 are used in the following explanation. The details of the screens will vary in other versions of Windows.



Log on to Windows with administrator privileges.

---

## Make a note of the computer name and full computer name

Check the name of the computer name and full computer name.

### 1 Display the screen


Select the Windows [Start] button → [Windows System] → [Control Panel] → [System], in that order.



For Windows 11, select the Windows [Start] button → [All apps] → [Settings] → [System] → [About] → [Advanced system settings], in that order.

---

### 2 Check the information.

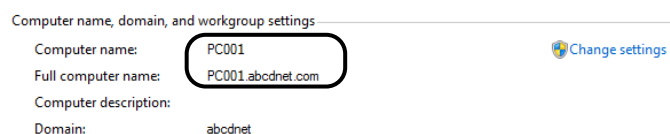

Check the computer name and full computer name.

#### Screen example:

Computer name: PC4050

Full computer name: pc4050.abcdnet.com

After checking the computer name, click the  [Close] button to close the "System" screen.

## Make a note of the user name and domain name

Check the domain name and user name for logging onto Windows.

### 1 Display the screen

Select the Windows [Start] button → [Windows System] → [Command Prompt], in that order.



#### NOTE

For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Command Prompt], in that order.

The Command Prompt window appears.

### 2 Check the domain name and user name.

At the Command Prompt, enter "net config workstation" and then press [Enter].

```
Microsoft Windows [Version 10.0.15063]
(c) 2017 Microsoft Corporation. All rights reserved.

C:\Users\PC0270>net config workstation
Computer name                PC0270
Full Computer name           PC0270
User name                    PC0270

Workstation active on
NetBT_Tcpip_{FABABC9C-741F-40DF-B0ED-BD92F1900FE6} (00252261F4D8)

Software version             Windows 10 Pro
Workstation domain           PC0270
Logon domain                  PC0270

COM Open Timeout (sec)       0
COM Send Count (byte)        16
COM Send Timeout (msec)      250
The command completed successfully.

C:\Users\PC0270>
```

Check the user name and domain name.

#### Screen example:

User Name: yamada

Domain Name: ABCDNET

## Create a shared folder and make a note of the shared folder name


Create a shared folder to receive the document in the destination computer.

### NOTE

If there is a workgroup in System Properties, configure the settings below to limit folder access to a specific user or group.

- 1 For Windows 10, open up a window in File Explorer and select [View]→ [Options] → [Folder Options], in that order.

For Windows 11, open up a window in File Explorer and select [...] → [Options], in that order.

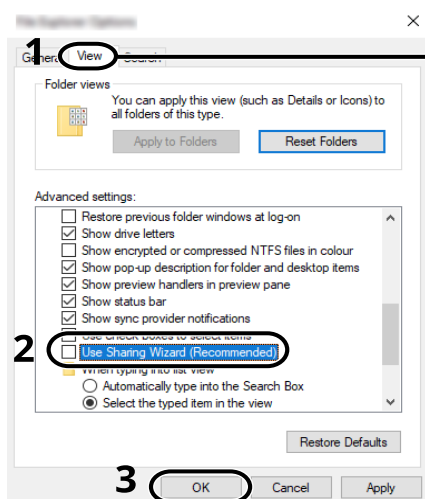


Make sure that the [View] tab is selected.

- 2 Uncheck [Use Sharing Wizard (Recommended)] in "Advanced setting".
- 3 Click [OK].


### 1 Create a folder.

Create a folder on your computer. For example, create a folder with the name "scannerdata" on the desktop.

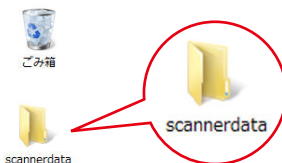


## 2 Configure permission settings.

- 1 Right-click the "scannerdata" folder, click [Properties]→ [Sharing] tab, → [Advanced Sharing], in that order.

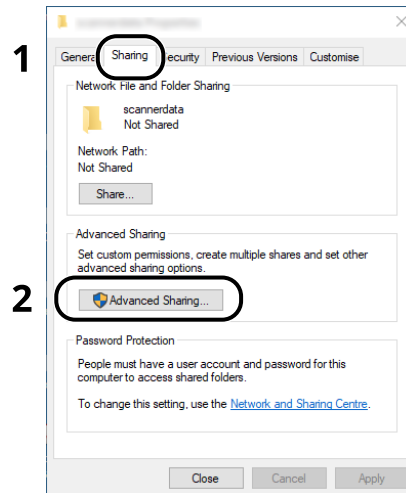


- 2 Select the [Share this folder] checkbox, and then click the [Permissions] button.

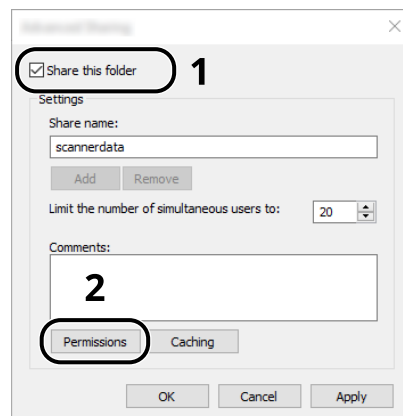


- 3 Make a note of the Share name.

- 4 Click the [Add] button.

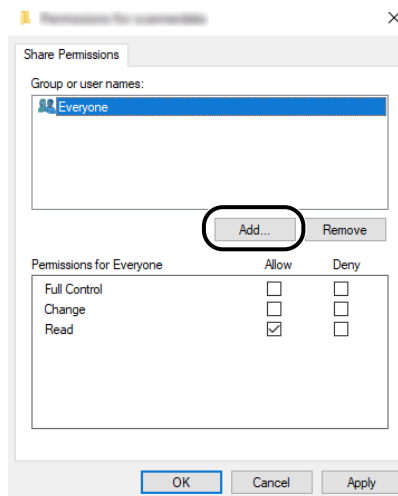


- 5 Specify the location.

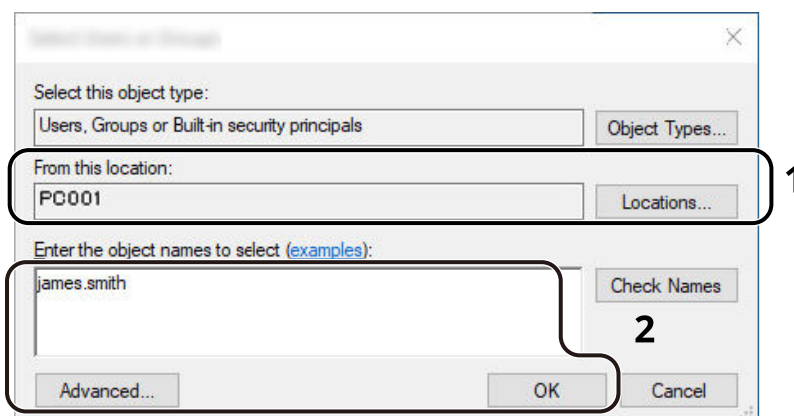

- 1 If the computer name that you made a note is the same as the domain name:  
 If the computer name is not shown in "From this location", click the [Location] button, select the computer name, and click the [OK] button.  
 Example) pc4050  
 If the computer name that you made a note is not the same as the domain name:  
 If the text after the first dot (.) in the full computer name that you made a note of does not appear in the "Location", click the [Location] button, select the text after the dot (.), and click the [OK] button.  
 Example: abcdnet.com  
 ➔ [Make a note of the computer name and full computer name \(page 141\)](#)
- 2 Enter the user name that you made a note of on page in the text box, and click the [OK] button.  
 Also the user name can be made by clicking the [Advanced] button and selecting a user.

- 6 Set the access permission for the user selected.

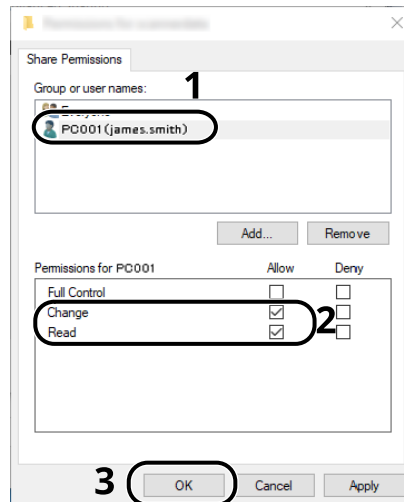

- 1 Select the user you entered.
- 2 Select "Change" checkbox of "Read" and [Change].
- 3 Click the [OK] button.




#### NOTE

"Everyone" gives sharing permission to everyone on the network. To strengthen security, it is recommended that you select "Everyone" and remove the checkmark of [Allow] of "Read".

---

- 7 Click the [OK] button in the "Advanced Sharing" screen to close the screen.

8 Check the details set in the [Security] tab.

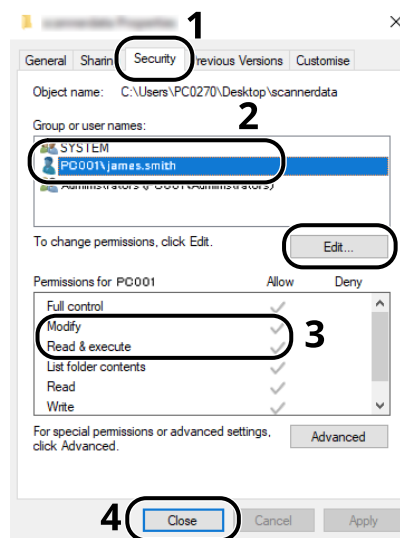

1 Select the [Security] tab.

2 Select the user you entered.

If the user does not appear on "Group or user names", click [Edit] button to add user in a similar way of "configuration of permission settings".

3 Make sure that checkmarks appear on the [Allow] checkbox for "Modify" and "Read & execute".

4 Click the [Close] button.

# Configuring Windows Firewall


Permit sharing of files and printers and set the port used for SMB transmission.

## NOTE

Log on to Windows with administrator privileges.

## 1 Check file and printer sharing.


- 1 Select the Windows [Start] button → [Windows System] → [Control Panel] → [System] → [Allow an app through Windows Firewall], in that order.

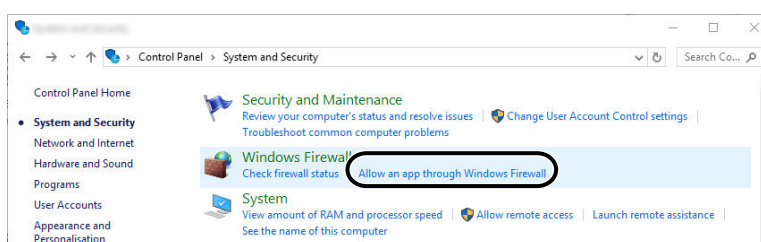

## NOTE


- For Windows 11, select the Windows [Start] button →→ [All apps] → [Windows Tools] → [Control Panel] → [System] → [Allow an app through Windows Firewall], in that order.
- If the User Account Control dialog box appears, click the [OK] button.

- 2 Select the [File and printer sharing] checkbox.

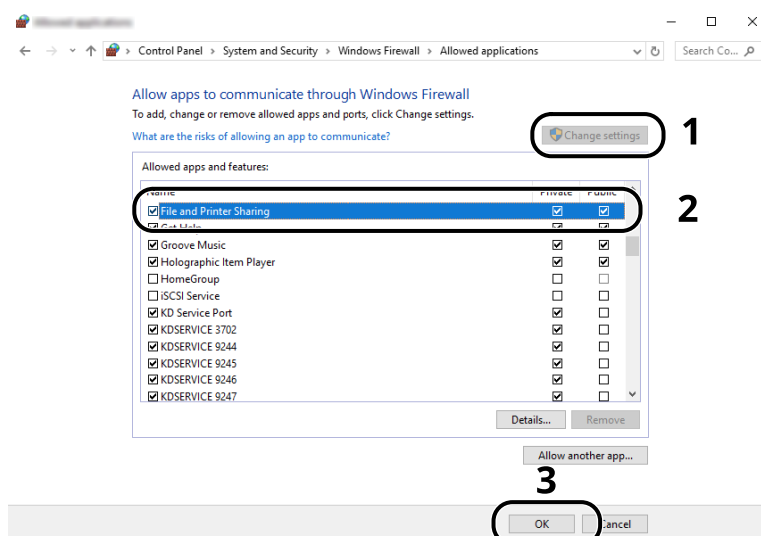


## 2 Add a port.


- 1 Please select the Windows [Start] button → [Windows System Tools] → [Control Panel] → [System and Scurity] → [Check Firewall Status], in that order.

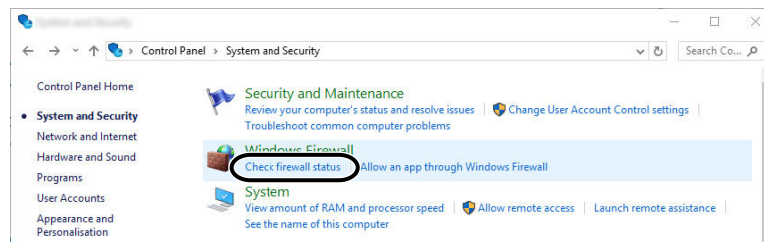


- 2 Click [Advanced settings].

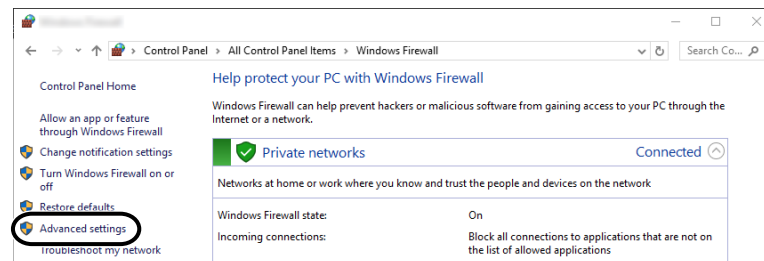


- 3 Click [Inbound Rules].

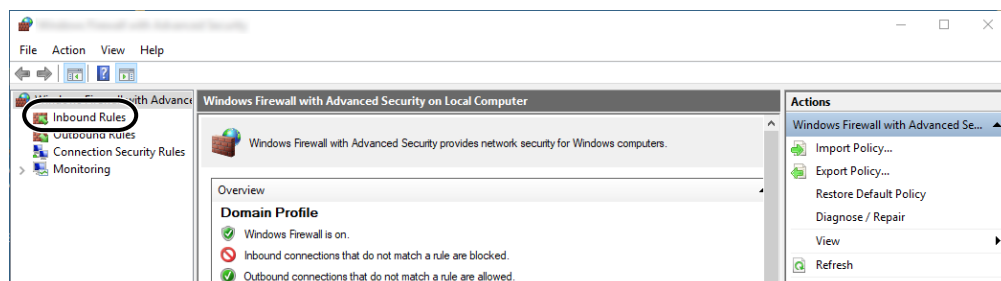


- 4 Click [New Rules].

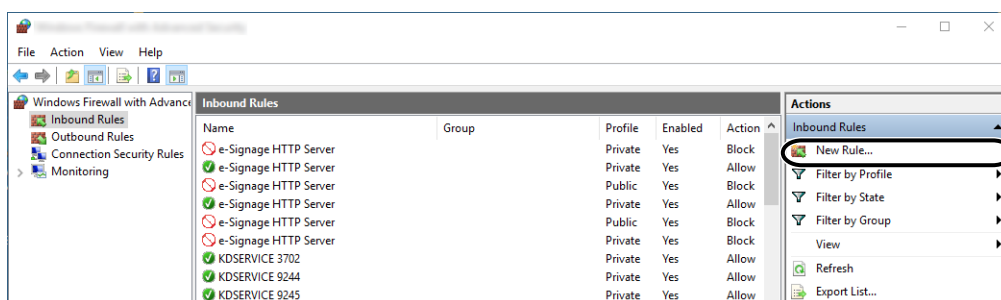


- 5 Select [Port] from the rule.

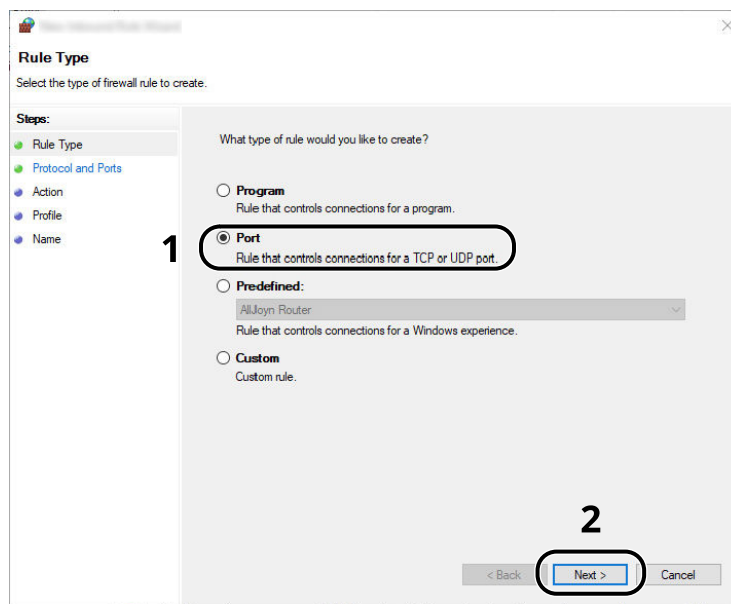


- 6 Select [TCP] as the port to apply the rule to. Then select [Specific local ports] and enter "445" then click [Next].

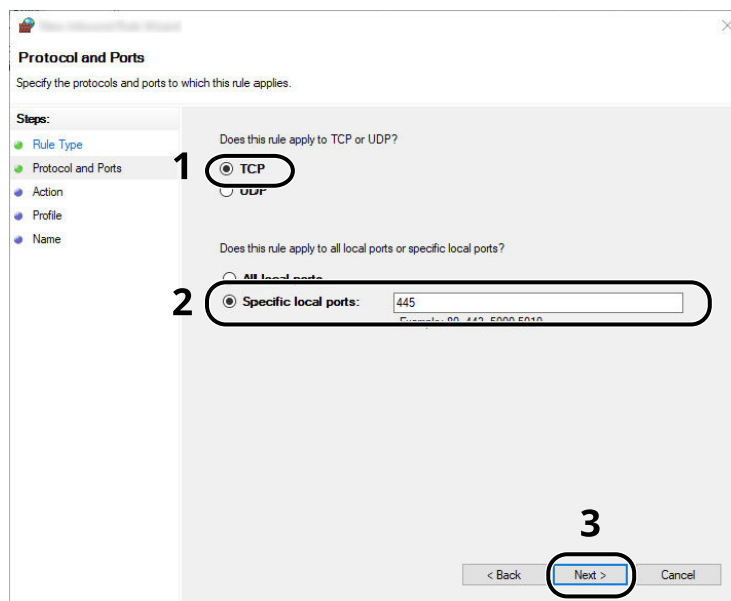

- 7 Select [Allow the connection] and click [Next].

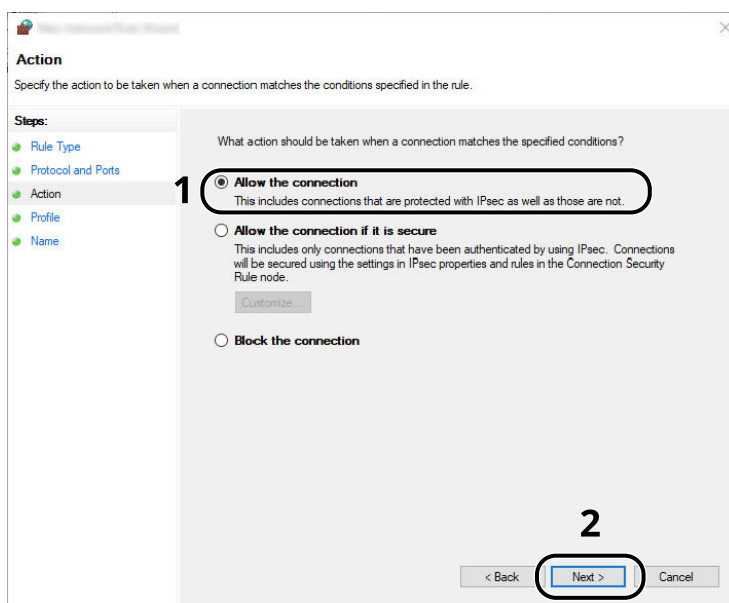

- 8 Make sure all checkboxes are selected and click the [Next] button.

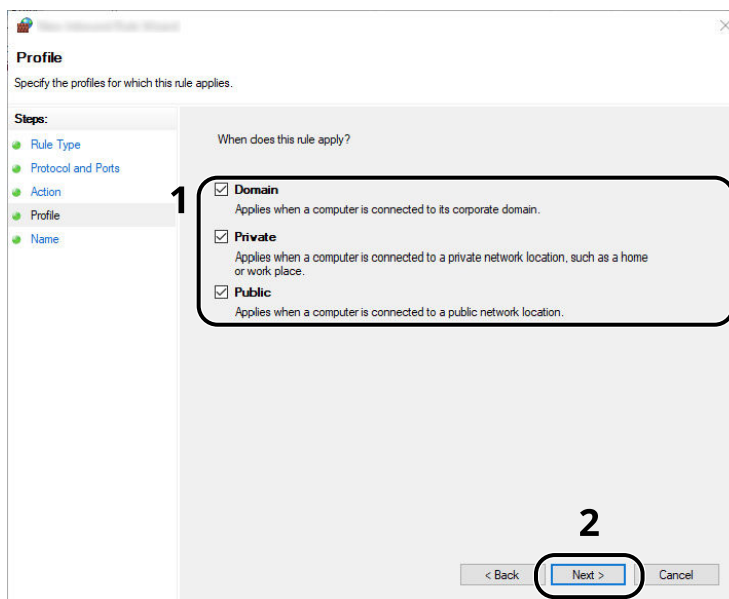

- 9 Enter "Scan to SMB" in [Name] and click [Finish].

The screenshot shows a window titled "Name" with a close button (X) in the top right corner. Below the title bar, it says "Specify the name and description of this rule." On the left side, there is a "Steps:" list with five items: "Rule Type", "Protocol and Ports", "Action", "Profile", and "Name". The "Name" item is selected and highlighted. The main area of the window contains a "Name:" label followed by a text input field containing "Scan to SMB". A large number "1" is placed to the left of this input field. Below the input field is a "Description (optional):" label followed by a large empty text area. At the bottom right of the window, there are three buttons: "< Back", "Finish", and "Cancel". The "Finish" button is highlighted with a blue border, and a large number "2" is placed above it.

## Scan to Folder Setup Tool for SMB

An environment for sending a document to Windows can be set up smoothly by using the Scan to Folder Setup Tool for SMB downloaded from Download Center.

### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

By operating the Scan to Folder Setup Tool for SMB, you can configure the following settings.

- Create a shared folder in a PC for receiving documents:

A new folder can be easily created on the desktop. Also, the newly created folder is automatically set as a shared folder.

- Set the created shared folder as an address on this machine:

Information about such things as the name of the computer and shared names for the shared folder is easily recorded in the address book of this machine with a sequence of actions. Can also be registered on the One Touch Keys.



### NOTE

- Log on to Windows with administrator privileges.
  - If user login administration is enabled, log in with administrator privileges or as a user with execution authority.
- 

## 1 Download a software from the website.

- 1 Launch your Web browser.
- 2 Enter URL to the browser's address bar or location bar.



### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

**UTAX**

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

- 3** Follow the guidance on the screen to download the Scan to Folder Setup Tool.
- 4** Double-click the downloaded installer to launch.

# Registering Destinations in the Address Book

Save frequently used destinations to the Address Book or One Touch Keys. The saved destinations can be changed. The destinations are available for Send as E-mail, Send to Folder, and Fax Transmission (Only on products with the fax function installed).



## NOTE

- Registering and editing of the Address Book can also be done in Embedded Web Server RX.  
→ [Registering Destinations \(page 118\)](#)
  - Editing of the Address Book and One Touch Keys can be restricted to administrators.  
→ [One-Touch Key \(page 435\)](#)
- 

## Adding a Destination (Address Book)

Add a new destination to the Address Book. There are two registering methods, contacts and groups. When adding a group, enter the group name and select group members from the Address Book.



## NOTE

If registering and editing of the Address Book is restricted to administrators, you can edit the Address Book by logging in with administrator privileges.

- [One-Touch Key \(page 435\)](#)
  - [Embedded Web Server RX User Guide](#)
- 

## Registering an Address (E-mail Address)

The registering method of an E-mail address to Address Book is as follows.

### 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book] > [Menu] > [Add] > [Contact]

### 2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.



## NOTE

For details on entering characters, refer to the following:

- [Character Entry Method \(page 784\)](#)
-

### 3 Enter an address number.


To have the number assigned automatically, select [Auto] (000).



#### NOTE

- Address Number is an ID for a destination. You can select any available number out of 300 numbers for contacts and 50 numbers for groups.
  - If you specify an address number that is already in use, an error message appears when you select [Register] and the number cannot be registered. If you set [Auto] (000) as the address number, the address is registered under the lowest available number.
- 

### 4 Add the address.

- 1 Select .
- 2 Select the entry field, and enter the E-mail address.



#### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

### 5 Check if the destination entry is correct > [Add]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [Add] and follow the on-screen instructions to enter the necessary information.



#### NOTE

To add a new address to the One Touch Key, follow the on-screen instructions.

---

## Registering an Address (Folder (SMB) Address)

The registering method of an folder (SMB) address to Address Book is as follows.

### 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book] > [Menu] > [Add] > [Contact]

### 2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.



#### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

- 2 Enter an address number.


To have the number assigned automatically, select [Auto] (000).



#### NOTE

- Address Number is an ID for a destination. You can select any available number out of 200200 numbers for contacts and 5050 numbers for groups.
  - If you specify an address number that is already in use, an error message appears when you select [Register] and the number cannot be registered. If you set [Auto] (000) as the address number, the address is registered under the lowest available number.
- 

### 3 Add the address.

- 1 Select .
- 2 To directly specify the SMB folder, enter "Host Name", "Port", "Folder Path", "Login User Name" and "Login Password".



#### NOTE

For the computer name, share name, domain name, and user name, enter the information that you noted when you created the shared folder. For details on creating shared folders, refer to the following:

➔ [Preparation for Sending a Document to a Shared Folder in a PC \(page 141\)](#)

---

You can search for a folder on a PC on the network. Select [Search Folder from Network] or [Search Folder by Host Name]. Select the folder from the Search Results list. Select the folder from the Search Results list.

**NOTE**

- If you selected [Search Folder from Network], you can search all PCs on the network for a destination.
  - If you selected [Search Folder by Host Name], you can enter the "Domain/Workgroup", and "Host Name" to search PCs on the network for the destination.
  - A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [OK]. The login user name and login password entry screen appears.
  - After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select [OK]. The address of the selected shared folder is set.
- 

The table below explains the items to be entered.

**"Host Name"**

Computer name.

Specify "Host name" or "IP address". To enter the IPv6 address, enclose the IPv6 address in brackets [ ].

(Example: [2001:db8:a0b:12f0::10])

**"Port"**

Port number

If the port number is not specified, the default port number is 445.

**"Folder Path""Path"**

Share name

For example: scannerdata

If saving in a folder in the shared folder:

share name\folder name in shared folder

**"Login User Name"**

- If the computer name and domain name are the same

User Name

For example: james.smith.

- If the computer name and domain name are different

Domain name\User name

For example: abcdnet\james.smith

**"Login Password"**

Windows logon password

(Case sensitive)

**NOTE**

- For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

## 4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [Register] and follow the on-screen instructions to enter the necessary information.



### NOTE

Refer to the following for registering the One Touch Key.

➔ [Add One Touch Keys. \(page 167\)](#)

---

## Registering an Address (Folder (FTP) Address)

The registering method of an folder (FTP) address to Address Book is as follows.

### 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book] > [Menu] > [Add] > [Contact]

### 2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.



#### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

- 2 Enter an address number.


To have the number assigned automatically, select [Auto] (000).



#### NOTE

- Address Number is an ID for a destination. You can select any available number out of 200200 numbers for contacts and 5050 numbers for groups.
  - If you specify an address number that is already in use, an error message appears when you select [Register] and the number cannot be registered. If you set [Auto] (000) as the address number, the address is registered under the lowest available number.
- 

### 3 Add the address.

- 1 Select .
- 2 To directly specify the FTP folder, enter "Host Name", "Port", "Folder Path", "Login User Name" and "Login Password".

The table below explains the items to be entered.

#### "Host Name"

Host name or IP address of FTP server

To enter the IPv6 address, enclose the IPv6 address in brackets [ ].

(Example: [2001:db8:a0b:12f0::1])

#### "Port"

Port number

If the port number is not specified, the default port number is 21.

#### "Folder Path"

Path for the file to be stored.

For example) ¥User¥scandata

If no path is entered, the file is stored in the home directory.

When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

**"Login User Name"**

FTP server login user name

**"Login Password"**

FTP server login password



**CAUTION**

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

You can confirm the connection to the FTP server you set up by selecting [Connection confirmation] or [Connection confirmation (encrypted)]. If you cannot connect, check the items you entered.

---

## 4 Check if the destination entry is correct > [Add]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [Add] and follow the on-screen instructions to enter the necessary information.



**NOTE**

Refer to the following for registering the One Touch Key.

➔ [Add One Touch Keys. \(page 167\)](#)

---

## Add the group

Compile two or more contacts into a group. Designations in the group can be added at the same time. When adding a group, a maximum of 5050 groups can be added in the Address Book.



### NOTE

To add a group, you need individually added destinations. Register one or more individual destinations as needed before proceeding. Up to 100 destinations for the E-mail, 500 for FAX, 100 for i-Fax, and a total of 10 destinations for the FTP and SMB can be registered per group.

---

## 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book] > [Menu] > [Add] > [Group]

## 2 Add the name.

- 1 Enter an address number.

To have the number assigned automatically, select [Auto] (000).



### NOTE

- Address Number is an ID for a destination. You can select any available number out of 200200 numbers for contacts and 5050 numbers for groups.
  - If you specify an address number that is already in use, an error message appears when you select [Register] and the number cannot be registered. If you set [Auto] (000) as the address number, the address is registered under the lowest available number.
- 

- 2 Enter the group name displayed on the Address Book.



### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

## 3 Select the destinations.

- 1 Select destinations (contacts) to add to the group > [OK].

Put a checkmark in the checkbox to select an item and remove the checkmark to cancel the selection.



### NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 269\)](#)

---

## 4 Check if the group entry is correct > [Add]

The group is added to the Address Book.

To add a new address to the One Touch Key, select [Add] and follow the on-screen instructions to enter the necessary information.



### NOTE

Refer to the following for registering the One Touch Key.


➔ [Add One Touch Keys. \(page 167\)](#)

---

## Editing Contact Address in Address Book

Edit the destinations (contacts) you added to the Address Book.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
- 2 Select  (information icon) for the destination or group to edit.



#### NOTE

Destinations and group can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 269\)](#)

---


### 2 Edit a contact address.

- 1 Change "Name", "Address Number" and destination type and address.
  - ➔ [Registering an Address \(E-mail Address\) \(page 155\)](#)
  - ➔ [Registering an Address \(Folder \(SMB\) Address\) \(page 157\)](#)
  - ➔ [Registering an Address \(Folder \(FTP\) Address\) \(page 160\)](#)
- 2 [Save] > [OK]  
Register the changed destination.

## Editing Group Address in Address Book

Edit the destinations (group address) you added to the Address Book.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
- 2 Select  (information icon) for the destination or group to edit.



#### NOTE

Destinations and group can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 269\)](#)

---

### 2 Edit a destination to a group.

- 1 Change "Name" and "Address Number".  
➔ [Add the group \(page 162\)](#)
- 2 Change the destination.  
Put a checkmark in the checkbox to select an item and remove the checkmark to cancel the selection.
- 3 [Save] > [OK]  
Register the changed destination.

## Deleting Address Book Entries

Delete the destinations (contacts) you added to the Address Book.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
- 2 Select a destination or group to delete.



#### NOTE

Destinations and group can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 269\)](#)

---

### 2 [Menu] > [Delete] > [Delete]

Delete the contact or group.

# Add One Touch Keys.

Assign a new destination (contact or group) to an one touch key.

 
## NOTE


- When the Shift Lock light is off, the one-touch keys are numbered 1 to 11. If the shift lock light is on when you select a key, the one touch keys are numbered 12 to 22.[Shift lock]
- Refer to the following for use of One Touch Key.
  - ➔ [Choosing from One Touch key destinations \(page 272\)](#)
- You can add One Touch Keys and edit their settings on Embedded Web Server RX.
  - ➔ **Embedded Web Server RX User Guide**
- If registering and editing of the One Touch Keys is restricted to administrators, you can edit the One Touch Keys by logging in with administrator privileges.
  - ➔ **Embedded Web Server RX User Guide**

## 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [One-Touch Key] > [Add/Edit One-Touch Key]

## 2 Add One Touch Keys.

- 1 Select a One Touch Key number for the destination > [Menu] > [Add/Edit]  
Enter a number in [No.] and select  (search icon) to display that One Touch key.  
Select a One Touch Key with no registered destination.

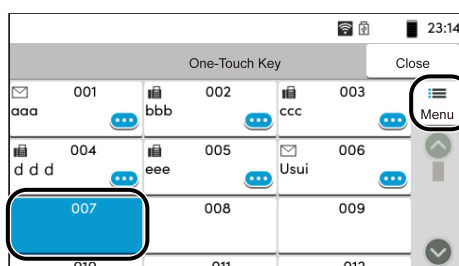


- 2 Enter the One Touch Key name displayed in the send base screen.

## NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

- 3 Select [Destination].  
The Address Book appears.

- 4 Select a destination (contact or group) to add to the One Touch Key number > [OK]  
Selecting  (information icon) shows the detailed information of the selected destination.



#### NOTE

Destinations can be sorted or searched by destination name or address number.


➔ [Choosing from the Address Book \(page 269\)](#)

---

- 5 Select [OK].  
The destination will be added to the One Touch Key.


## Editing the Destination to the One Touch Key

### 1 Display the screen

- 1 [System Menu/Counter] key > [Function Settings] > [One-Touch Key] > [Add/Edit One-Touch Key]
- 2 Select a One Touch Key number to edit > [Menu] > [Add/Edit]  
Enter a number in [No.] and select  (search icon) to display that One Touch Key.



#### NOTE

Select  (information icon) for the One Touch Key to display the information registered in the One Touch Key.

---

### 2 Change the Registered Information.

- 1 Change "Display Name".




#### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

- 2 Select [Destination], and select a new destination (contact or group). Selecting  (information icon) shows the detailed information of the selected destination.



#### NOTE

Destinations can be sorted or searched by destination name or address number.


➔ [Choosing from the Address Book \(page 269\)](#)

---

- 3 [OK] > [OK]  
The destination will be added to the One Touch Key.

## Deleting the Destination to the One Touch Key

### 1 Display the screen

- 1 [System Menu/Counter] key > [Function Settings] > [One-Touch Key] > [Add/Edit One-Touch Key]
- 2 Select a One Touch Key number to delete.  
Enter a number in [No.] and select  (search icon) to display that One Touch key.

### 2 Delete the Registered Information.

[Menu] > [Delete] > [Delete]

The data registered in the One Touch Key is deleted.

---


## **4 Print from PC**

---

# Printer Driver Print Settings Screen


The printer driver print settings screen allows you to configure a variety of print-related settings.

➔ **Printing System Driver User Guide**

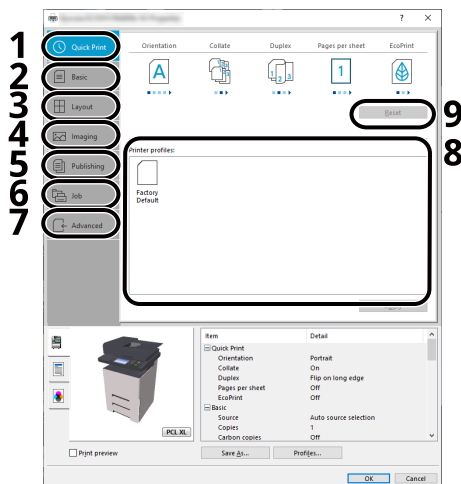

## 1 [Quick Print] tab

Provides icons that can be used to easily configure frequently used functions. Each time you click an icon, it changes to an image resembling the print results and applies the settings.

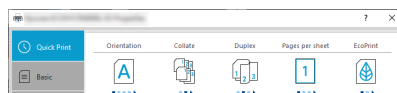

## 2 [Basic] tab

This tab groups basic functions that are frequently used. You can use it to configure the paper size, destination, and duplex printing.

## 3 [Layout] tab

This tab lets you configure settings for printing various layouts, including booklet printing, combine mode, poster printing, and scaling.

## 4 [Imaging] tab

This tab lets you configure settings related to the quality of the print results.

## 5 [Publishing] tab

This tab lets you create covers and inserts for print jobs and put inserts between sheets of OHP film.

## 6 [Job] tab

This tab lets you configure settings for saving print data from the computer to the machine. Regularly used documents and other data can be saved to the machine for easy printing later. Since saved documents can be printed directly from the machine, this function is also convenient when you wish to print a document that you don't want others to see.

## 7 [Advanced] tab

This tab lets you configure settings for adding text pages or watermarks to print data.

## 8 [Profiles]

Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.


## 9 [Factory Default]

Click to revert settings to their initial values.

# Displaying the Printer Driver Help

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.

## 1 Click the [?] button.

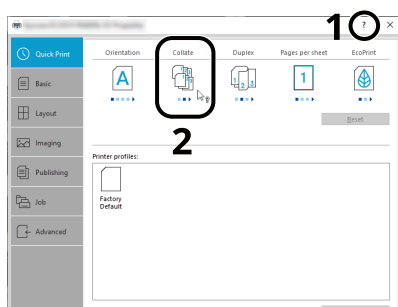

## 2 Click the item you want to know about.

---

### NOTE

The Help appears, even when you click the item you want to know about and press the [F1] key on your keyboard.

---

## Changing the Default Printer Driver Settings (Windows 2016 and later)

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to the following:

### ➔ **Printing System Driver User Guide**

- 1** Click the Windows [Start] button → [Windows System] → [Control Panel] → [Devices and Printer].
- 2** Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3** Click the [Preference] button on the [General] tab.
- 4** Select the default settings and click the [OK] button.

## Changing the Default Printer Driver Settings (Windows 11)

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to the following:

### ➔ Printing System Driver User Guide

- 1** Click the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers].
- 2** Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3** Click the [Preference] button on the [General] tab.
- 4** Select the default settings and click the [OK] button.

# Printing from PC

This section provides the printing method using the Printing System Driver.



## NOTE

- To print the document from applications, install the printer driver downloaded from Download Center on your computer.

### Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

### UTAX


EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

- In some environments, the current settings are displayed at the bottom of the printer driver.

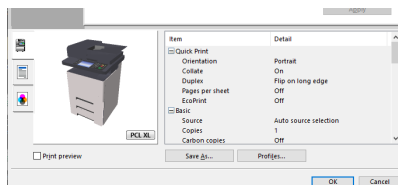

- When printing the cardstock or envelopes, load the cardstock or envelopes in the multipurpose tray before performing the following procedure.

➔ [Loading Paper in the Multipurpose Tray \(page 136\)](#)

## Printing on Standard Sized Paper

If you loaded a paper size that is included in the print sizes of the machine, select the paper size in the [Preference] tab of the print settings screen of the printer driver.



## NOTE

Specify the paper size and media type to print from the operation panel.

➔ [Paper Feeding \(page 400\)](#)


## 1

### Display the screen

Click [File] and select [Print].

## 2 Configure the settings

- 1 Select the machine from the "Printer" menu and click the [Properties] button.

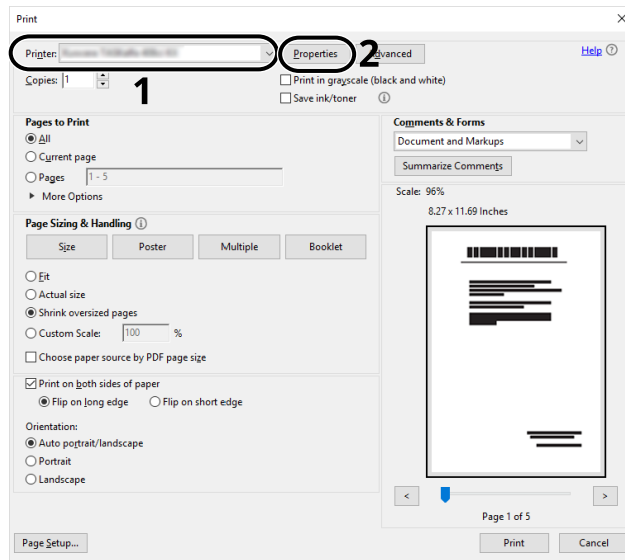


- 2 Select the [Preference] tab.

- 3 Click the "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

➔ [Printing on Non-standard Sized Paper \(page 177\)](#)

To print on the special paper such as thick paper or transparency, click the "Media type" menu and select the media type.

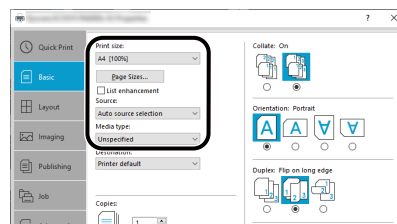

- 4 Click the [OK] button to return to the Print dialog box.

## 3 Start printing.

Click the [OK] button.

## Printing on Non-standard Sized Paper

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the [Preference] tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.



### NOTE

Specify the paper size and media type to print from the operation panel.

→ [Paper Feeding \(page 400\)](#)

---

## 1 Display the screen

- 1 Select the Windows [Start] button → [Windows System] → [Control Panel] → [Devices and Printers].



### NOTE


For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers].

---


- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Preference] in [General].

## 2 Register the user.

- 1 Click the [Preference] tab.

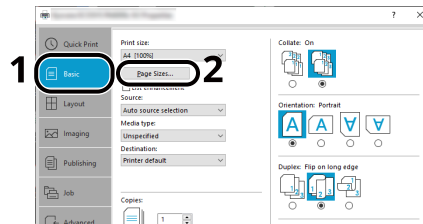


- 2 Click the [Paper Sizes] button.
- 3 Click the [New] button.

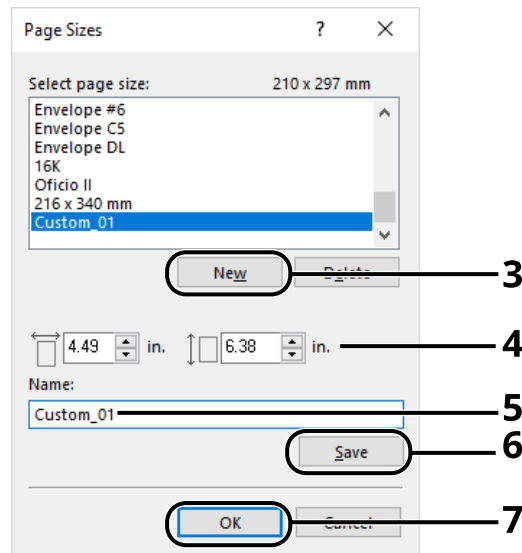

- 4 Enter the paper size.
- 5 Enter the name of the paper.
- 6 Click the [Save] button.
- 7 Click the [OK] button.

- 8 Click the [OK] button.

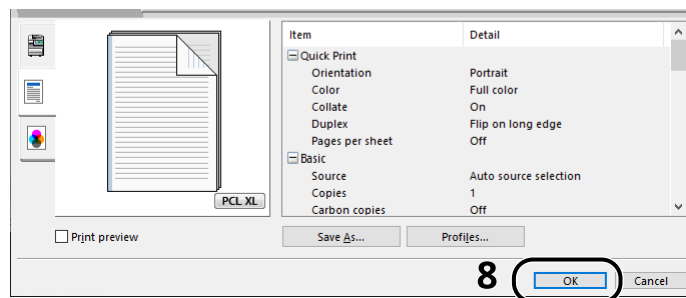


### 3 Display the print settings screen.

Click [File] and select [Print].


### 4 Select the paper size and type of non-standard size paper.

- 1 Select the machine from the "Printer" menu and click the [Properties] button.

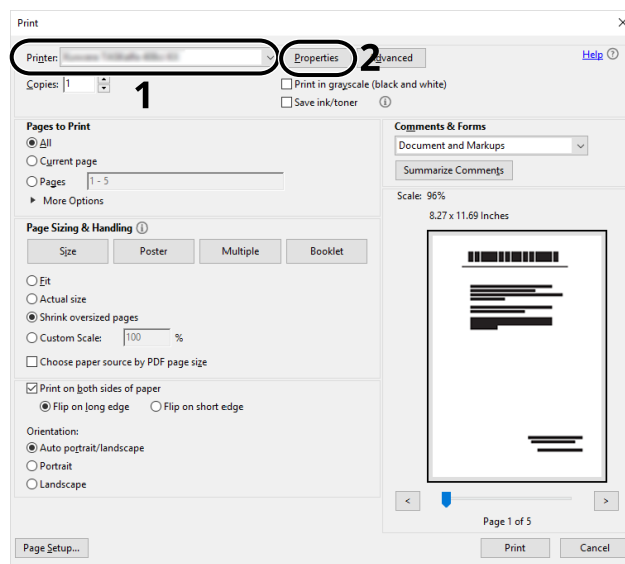

- 2 Select the [Preference] tab.

- 3 Click "Paper size" menu and select the paper size registered in step 2.

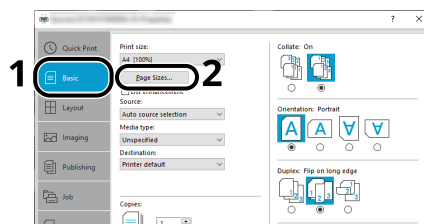

To print on the special paper such as thick paper or transparency, click the [Media type] menu and select the media type.



#### NOTE

If you loaded a postcard or envelope, select [Hagaki] or [Envelope] in the "Media type" menu.

---

- 4 Select the paper source in the "Source" menu.
- 5 Click the [OK] button to return to the Print dialog box.

## 5 Start printing.

Click the [OK] button.

## Printing with Universal Print

Jobs can be printed via the cloud by using the cloud service [Universal Print] provided by Microsoft Corporation. Users authorized in the Azure Active Directory can print to Universal Print ready printers from anywhere.

---



### NOTE

- A Microsoft 365 license and an Azure Active Directory account are necessary in order to use Universal Print. If you do not have one, please obtain these licenses and accounts.
  - In order to use Universal Print, the following prerequisites need to be met:
    - A Universal Print-eligible license must be assigned to the user account used
    - Printer Administrator or Global Administrator privileges must be assigned to all administrators
- 

## Registering the Machine to Universal Print

### 1 Start up the browser.

Specify https: // [Host name] and start Embedded Web Server RX.

### 2 Display the screen

[Functions] > [Printer] > "Universal Print Settings" > [Settings]

### 3 Configure the settings

- 1 Enter "Remote Printer Name" of "Basic".
- 



### NOTE

Set the proxy if required.

➔ **Embedded Web Server RX User Guide**

---

- 2 Click "Universal Print" in [Register].  
A Microsoft URL and an access code are displayed.
  - 3 Click the URL and enter the access code obtained in Step 2 > [Next]
  - 4 Log in as Azure administrator.
- 



### NOTE

Credential is required only when you register for the first time. Click [Approve].

---

- 5 Close the Microsoft web page and return to the Embedded Web Server RX screen.

**6** Click [OK].

Returns to the Universal Print Settings screen.



**NOTE**

Once registration is complete, [Register] in "Universal Print" will change to [Unregister], and the expiration date of certificate will be shown. Click [Refresh] if the display remains unchanged.

---

**7** Click [Edit] in "Universal Print Preferences" and copy the unregister URL.

**8** Open a new tab in the browser and past the URL.

You will be redirected to the Universal Print web page.

**9** Click [Printer].

Registered printers are displayed.

**10** Check the box for this machine and click [Sharing].

The "Share printer" screen is displayed.

**11** Select the users you want to share this machine with from the "Select member" menu and click the [Share this printer] button.



**NOTE**

Enable [Allow to access all member] to share this machine with all users in your organization.

---

**12** Close the Universal Print web page.

## Registering a Shared Printer to a Computer

To use Universal Print, it is necessary to add a shared printer registered with Universal Print to the computer.

### 1 Login

- 1 Select the Windows Start button → [Settings] → [Accounts] → [Access work or school], in that order.
- 2 Confirm that the Azure administrator account name is displayed in [Access work or school], and click it.



#### NOTE

If the Azure administrator account name is not displayed, click [+] (Connect), and use the Azure administrator account name and password to log in.

---

### 2 Display the screen

Select [Home] → [Devices] → [Printers and scanners], in that order.

### 3 Configure the settings

- 1 Click [Adding Printer or Scanner in Windows].
- 2 Select the shared printer and click [Add device].

The shared printer is registered.


## Print the Job

### 1 Display the screen

Select [File] and click [Print].

### 2 Configure the settings

- 1 Select a registered shared printer from the [Printer] menu and click the [Properties] button.

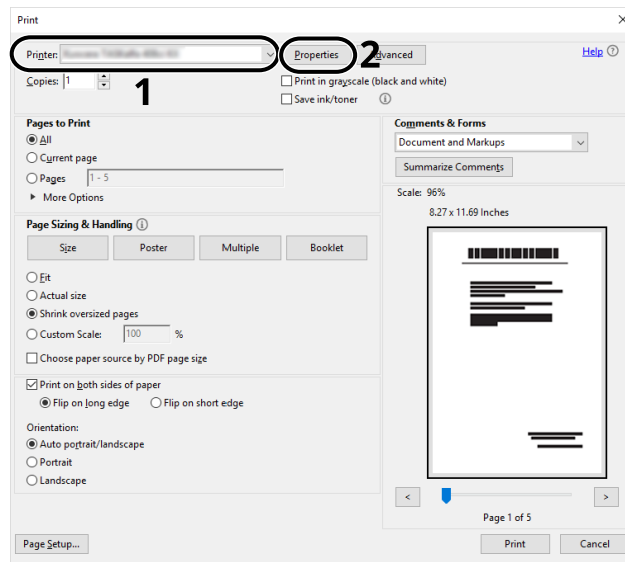

- 2 Set the paper size, printer function, etc., as desired.

- 3 Click [OK] button to return to the Print dialog box.

### 3 Start printing.

Click the [OK] button.

## Canceling Printing from a Computer

To cancel a print job executed using the printer driver before the printer begins printing, do the following:

---

### NOTE

When canceling printing from this machine, refer to the following:

➔ [Canceling Jobs \(page 242\)](#)

---

- 1 Double-click the printer icon (🖨️) displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.**
- 2 Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.**

# Printing from the Mobile Device

This machine supports the AirPrint and Mopria. According to the supported OS and application, you can print the job from any mobile device or computer without installing a printer driver.

## Printing by AirPrint

AirPrint is a printing function that is included standard in iOS 4.2 and later products, and Mac OS X 10.7 and later products. To use the AirPrint, make sure that the AirPrint setting is enabled in the Embedded Web Server RX.

➡ **Embedded Web Server RX User Guide**



## Printing by Mopria

Mopria is a standard on printing function included in Android 4.4 or later products. Mopria Print Service needs to be installed and enabled in advance. For details on how to use, refer to a Web site of Mopria Alliance.



## Printing with Wi-Fi Direct

Wi-Fi Direct is a wireless LAN standard that Wi-Fi Alliance has been established. This is one of the functions of the wireless LAN, without a wireless LAN access point or wireless LAN router, between devices can communicate directly on a peer to peer basis.

The printing procedure by the Wi-Fi Direct is the same as that from the normal mobile devices.

When you use a printer name or Bonjour name on the port settings of the printer property, you can print the job by specifying the name at Wi-Fi Direct connection. When you use an IP address for the port, specify the IP address of this machine.

# Printing Data Saved in the Printer

You can save the print job into the Job Box of this device and print it as necessary.

An SD/SDHC Memory Card is required to use the Stored Job Box and the Quick Copy Box.

---

## IMPORTANT

SD/SDHC memory cards store unencrypted data. Please be careful when storing sensitive documents.

---

---

## NOTE

When using the Job Box with an SD/SDHC memory card, set [RAM Disk Setting] to [Off].

---

If you configure settings in the [Store job] tab of the printer driver and then print, the print job will be saved in the Job Box (memory) and printing can be executed at the machine.

To print the job in Job Box, specify the Job Box from a computer and sending the print job, then specify a file within a Box and printing it, using the operation panel.

You can print the documents from the following boxes.

- Private Print Box
  - ➔ [Printing Documents from Private Print Box \(page 191\)](#)
- Stored Job Box
  - ➔ [Printing Document from Stored Job Box \(page 193\)](#)
- Quick Copy Box
  - ➔ [Printing Document from Quick Copy Box \(page 195\)](#)
- Proof and Hold Box
  - ➔ [Printing Document from Proof and Hold Box \(page 197\)](#)
- PIN Print Box
  - ➔ [Printing Documents from PIN Print Box \(page 199\)](#)
- Universal Print Box
  - ➔ [Printing the Documents Stored in the Universal Print Box \(page 202\)](#)

## Specifying the Job Box from a Computer and Storing the Job

### 1 Click [File] and select [Print] in the application.

The Print dialog box displays.

### 2 Click the [▼] button of the Name to select the machine from the list.

### 3 Click the [Properties] button.

The Properties dialog box displays.

## **4 Click the [Job storage] tab and select the [Job enhancement] check box to set the function.**



### **NOTE**

For information on how to use the printer driver software, refer to the following:

➔ **Printing System Driver User Guide**

---

## Printing Documents from Private Print Box

In Private Printing, you can specify that a job is not to be printed until you operate the machine. When sending the job from the application software, specify a password in the printer driver. The job is released for printing by entering the password on the operation panel, ensuring confidentiality of the print job. The data will be deleted upon completion of the print job or after the power switch is turned off.

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

### 2 Print the document.

- 1 Select the document to print and > [Menu] > [Print]
- 2 Enter the password. > [OK]
- 3 Specify the number of copies to print as desired.
- 4 Select [Start Print].

Printing starts. Upon completion of printing, the Private Print job is automatically deleted.

## Deleting the Documents Stored in the Private Print Box

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

### 2 Delete the document.

- 1 Select the document to delete > [Menu] > [Delete]
- 2 Enter the password > [OK]  
The document is deleted.



#### NOTE

Please contact the administrator if you have forgotten your password.

Click on [Forgot password] to display the login screen. If the login is successful, a message will be displayed. Select [Delete].

---

## Printing Document from Stored Job Box

In Stored Job, the print data sent from the application is saved to the machine. You can set up a password as necessary. If you set up a password, enter the password when printing. Print data will be stored in the Stored Job Box after printing. This will allow printing of the same print data repeatedly.

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

### 2 Print the document.

- 1 Select the document to print and > [Menu] > [Print]



#### NOTE

If the document is protected by a password, the password entry screen will be displayed. Enter the password.

---

- 2 Specify the number of copies to print as desired.
  - 3 Select [Start Print].
- Printing starts.

## Simple Job Printing

When you save a print job performed via user login to the Stored Job Box, logging in with an IC card at the time of printing displays a list of your print jobs in the Stored Job Box. When you run the print job, printing starts immediately.

User login administration that uses the optional IC Card Authentication Kit is required. For details on user login administration for printing, refer to the following:

➔ [Adding a User \(Local User List\) \(page 508\)](#)

➔ [Managing the Users that Print on This Machine from a PC \(page 514\)](#)

For IC card settings, refer to the following:

➔ [ID Card Settings \(page 536\)](#)

For Simple Job Printing settings, refer to the following:

➔ [Simple Job Printing \(page 538\)](#)

## Deleting the Documents Stored in the Stored Job Box

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

### 2 Delete the document.

- 1 Select the document to delete > [Menu] > [Delete]
- 2 If the document is protected by a password, enter the password > [OK]  
The document is deleted.



#### NOTE

Please contact the administrator if you have forgotten your password.

Click on [Forgot password] to display the login screen. If the login is successful, a message will be displayed. Select [Delete].

---

## Printing Document from Quick Copy Box

Quick Copy feature facilitates additional prints of a document already printed. Activating Quick Copy and printing a document using the printer driver allow the print data to be stored in the Quick Copy Job Box. When additional copies are required, you can reprint the required number of copies from the touch panel. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.



### NOTE

- When the number of jobs reaches the limit, the oldest job will be overwritten by the new one.
- To maintain free space on the hard disk, you can set the maximum number of stored jobs.

➔ [Quick Copy Job Retention \(page 444\)](#)

---

## 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

## 2 Print the document.

- 1 Select the document to print and > [Menu] > [Print]
- 2 Specify the number of copies to print as desired.
- 3 Select [Start Print].  
Printing starts.

## Deleting the Documents Stored in the Quick Copy Box

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

### 2 Delete the document.

- 1 Select the document to delete > [Menu] > [Delete] > [Delete]  
The document is deleted.

## Printing Document from Proof and Hold Box

The Proof and Hold feature produces only a single proof print of multiple-print job and holds printing of the remaining copies. Printing a multiple-print job in Proof and Hold using the printer driver allows only a single copy to be printed while maintaining the document data in the Job Box. To continue to print the remaining copies, use the touch panel. You can change the number of copies to print.

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

### 2 Print the document.

- 1 Select the document to print and > [Menu] > [Print]
- 2 Specify the number of copies to print as desired.
- 3 Select [Start Print].

## Deleting the Documents Stored in the Proof and Hold Box

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

### 2 Delete the document.

- 1 Select the document to delete > [Delete] > [Delete]  
The document is deleted.

## Printing Documents from PIN Print Box

This PIN Print Box holds printing when printing is executed from applications that use the IPP protocol, such as AirPrint and Mopria. A pending print job can be output by entering the PIN code that was set at the time of printing.

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [PIN Print].
- 3 Select the creator of the document.

### 2 Print the document.

- 1 Select the document to print and > [Menu] > [Print]
- 2 Enter the PIN code.
- 3 Select [Print].

Printing starts.

Upon completion of printing, the PIN Print job is automatically deleted.

## Deleting the Documents Stored in the PIN Print Box

### 1 Display the screen

- 1 [Home] key > [Job Box]
- 2 Select [PIN Print].
- 3 Select the creator of the document.

### 2 Delete the document.

- 1 Select the document to delete > [Menu] > [Delete]
- 2 Enter the PIN code.
- 3 Select [Delete].  
The document is deleted.

## Printing Document from Universal Print Box

For added security, Universal Print can set a PIN code for the printing jobs. Jobs with a PIN code will be saved in the cloud without being printed. By entering the PIN code from the operation panel, jobs from this machine can be printed.



### NOTE

- To use Universal Print, this machine must be registered as a shared printer.
  - ➔ [Registering the Machine to Universal Print \(page 181\)](#)
- To use the Universal Print box, you need a Windows 11 and Microsoft 365 license and an Azure Active Directory account.


## Storing a Job in the Universal Print Box

### 1 Display the screen

Click [File] and select [Print].

### 2 Configure the settings

- Select a registered shared printer from the "Printer" menu and click the [Properties] button.

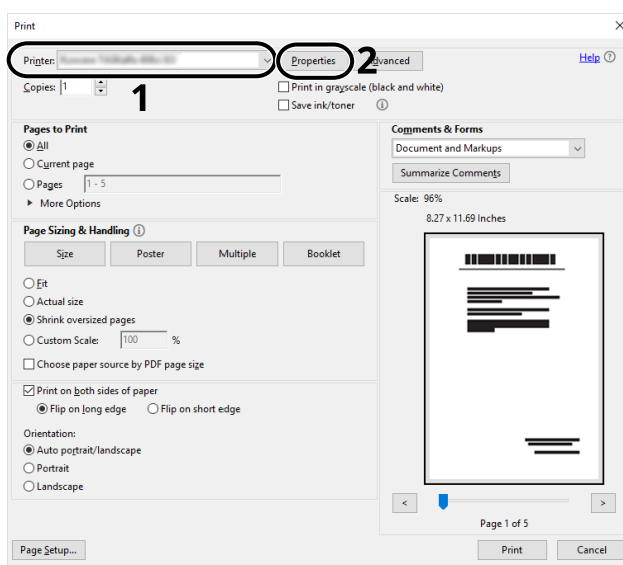

- Click [Advanced settings].
- Set [PIN-protected printing] to [On], and set a PIN code (4 digits) as the [PIN-protected printing PIN].
- Select the [OK] button > the [OK] button to return to the Print dialog box.

### 3 Start printing.

Click the [OK] button.

## Printing the Documents Stored in the Universal Print Box

### 1 Display the screen

- 1 Select [Universal Print] in the Home screen.
- 2 Select the creator of the document.

### 2 Print the document.

- 1 Select the document to print and > [Menu][Print]
- 2 Enter the PIN code.
- 3 Select [Start Print].

Printing starts.

Upon completion of printing, the Universal Print data is automatically deleted.

## Deleting the Documents Stored in the Universal Print Box

### 1 Display the screen

- 1 Select [Universal Print] in the Home screen.
- 2 Select the creator of the document.

### 2 Delete the document.

- 1 Select the document to delete and select > [Menu] > [Delete].
- 2 Enter the PIN code.
- 3 Select [Delete].

The document is deleted.

# Job Box Settings

Configure settings for Job Box.

## 1 Display the screen

[System Menu/Counter] key > [Function Settings] > [Job Box]

## 2 Configure the settings

Configurable items are as follows:

### [Quick Copy Job Retention]

To maintain free space on the hard disk, you can set the maximum number of stored jobs.

Value: number between 0 and 300



#### NOTE

When 0 is set, Quick Copy cannot be used.

---

### [Deletion of Job Retention]

This setting specifies that documents, such as Private Printing, Quick Copying, or Proof and Hold Printing, saved temporarily in the job box are automatically deleted after they have been saved for a set time.

Value: [Off], [1 hour], [4 hours], [1 day], [1 week]



#### NOTE

This function is valid for documents saved after the function is set. Regardless of this function setting, temporary documents are deleted when the power switch is turned off.

---

### [Storage Media]

Set the save destination of Job Box.

Displayed when the optional SD card is installed.

Value:

# Monitoring the Printer Status (Status Monitor)

The Status Monitor monitors the printer status and provides an ongoing reporting function.

---



## NOTE

When you activate Status Monitor, check the status below.

- Printing System Driver is installed.
- Either [Enhanced WSD] or [Enhanced WSD over TLS] is enabled.

➡ [Protocol Settings \(page 468\)](#)

---

## Accessing the Status Monitor

The Status Monitor also starts up when printing is started.

## Exiting the Status Monitor

Use either of the methods listed below to exit the Status Monitor.

### **Exit manually**


Click the settings icon and select Exit in the menu to exit the Status Monitor.

### **Exit automatically**

The Status Monitor automatically shuts down after 7 minutes if it is not being used.

## Quick View State

The status of the printer is displayed using icons. Detailed information is displayed when the Expand button is clicked.

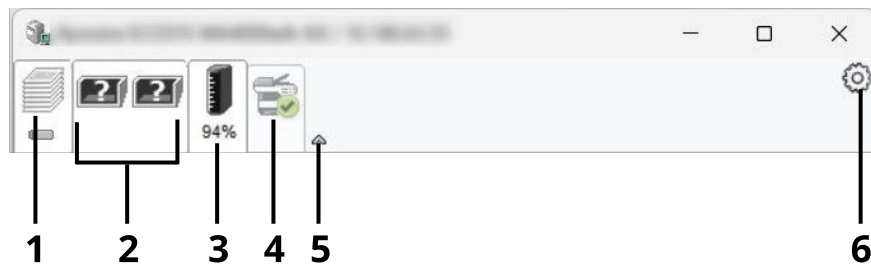


- 1 Printing progress tab
- 2 Paper tray status tab
- 3 Toner Status Tab
- 4 Alert tab
- 5 Expand button
- 6 Settings icon

Detailed information is displayed by clicking on each icon tab.

## Printing progress tab

The status of the print jobs is displayed.

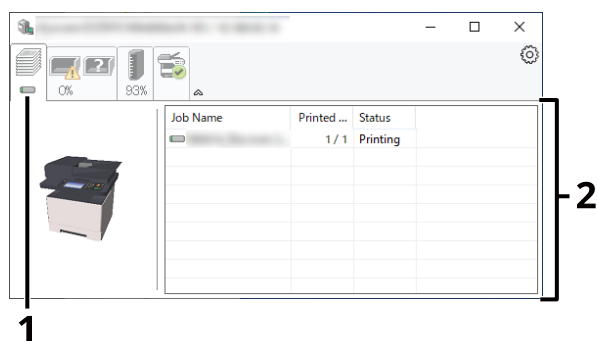


1 Status icon

2 Job list

Select a job on the job list and it can be canceled using the menu displayed with a right-click.


# Paper tray status tab

Information is displayed about the paper in the printer and about the amount of paper remaining.

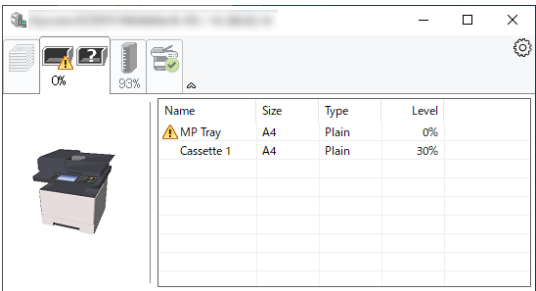


# Toner Status Tab

The amount of toner remaining is displayed.

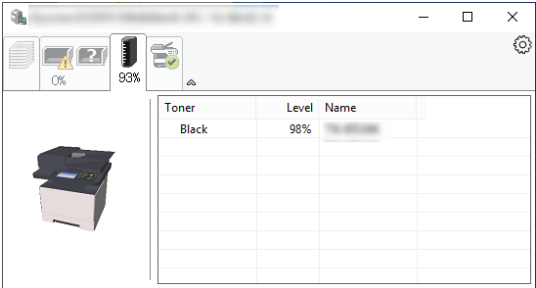


## Alert tab

If an error occurs, a notice is displayed using a 3D image and a message.

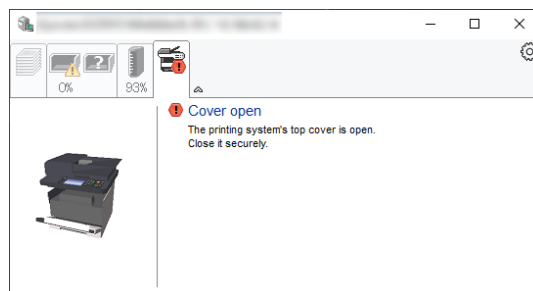

## Status Monitor Context Menu

The following menu is displayed when the settings icon is clicked.

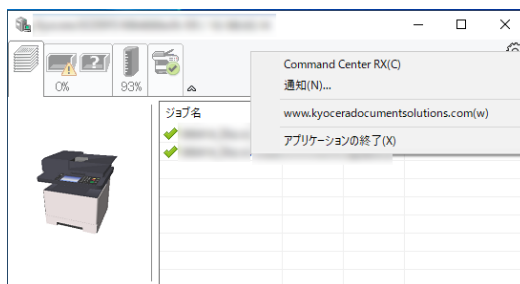

### Embedded Web Server RX

If the printer is connected to a TCP/IP network and has its own IP address, use a web browser to access the Embedded Web Server RX to modify or confirm the network settings. This menu is not displayed when using USB connection.

➡ **Embedded Web Server RX User Guide**

### [Notification...]

This sets the display of the Status Monitor.


➡ [Status Monitor Notification Settings \(page 213\)](#)

### [Exit]

Exits the Status Monitor.

## Status Monitor Notification Settings

The Status Monitor settings and event list details are displayed.

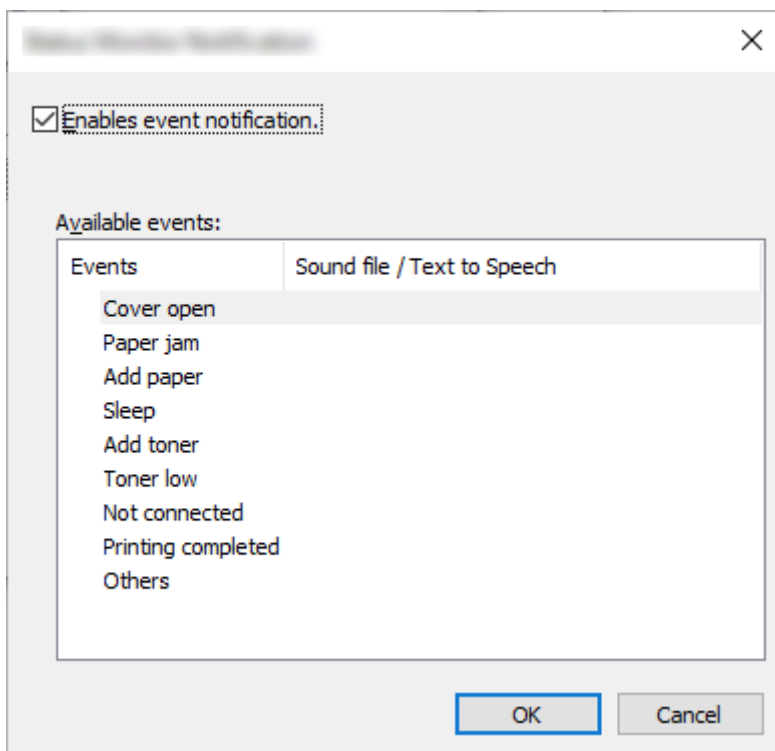

Select whether notification is performed when an error in the event list occurs.


### 1 Select "Enable event notification".

If this setting is set to Off, then the Status Monitor will not start up even when printing is executed.

### 2 Select an event to use with the text to speech function in Available events.

### 3 Click the "Sound file / Text to Speech" field.

Click the browse (...) button to notify the event by sound file.

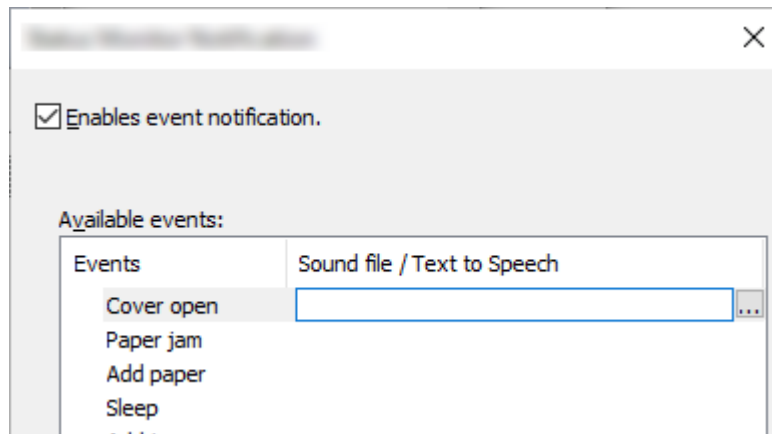

**NOTE**

The available file format is WAV.

---

When customizing the message texts to read on the screen aloud, enter the texts in the text box.

---

## 5 Operation on the Machine

---

# Loading Originals

Load the originals on the platen or document processor, depending on the original size, type, volume, and function.

## Platen

Place the sheet, book, postcards, and envelopes.


## Document Processor

Place the multiple originals. You can also place the two sided originals.

## Placing Originals on the Platen

You may place books or magazines on the platen in addition to ordinary sheet originals.

### 1 Put the scanning side facedown.

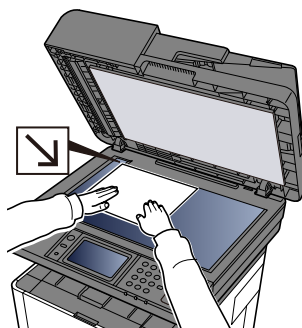

### 2 Align it flush against the original size indicator plates with the back left corner as the reference point.




#### NOTE

For details on Original Orientation, refer to the following:

➔ [Original Size \(page 305\)](#)

## Placing Envelopes or Cardstock on the Platen

### 1 Put the scanning side facedown.

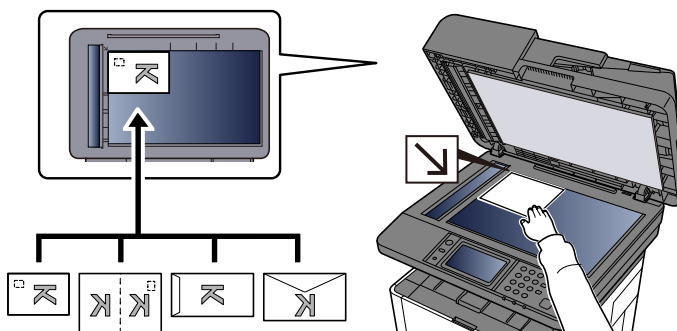

## 2 Align it flush against the original size indicator plates with the back left corner as the reference point.



### NOTE

For the procedure for feeding envelopes or cardstock, refer to the following:

➔ [Loading Paper in the Multipurpose Tray \(page 136\)](#)

---



### CAUTION

Do not leave the Document Processor open. Doing so may cause injury.

---



### IMPORTANT

- Do not push the document processor forcefully when you close it. Excessive pressure may crack the platen glass.
  - When placing books or magazines on the machine, do so with the document processor in the open position.
-

## Original Specifications available in the Document Processor

The document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

### Originals Supported by the Document Processor

The document processor supports the following types of originals.

Item	Description
Thickness	50 to 160g/m <sup>2</sup> (duplex: 50 to 160 g/m <sup>2</sup> ) Applicable to MFP
Size	100 x 148 mm to 216 x 356 mm
No. of sheets	50 sheets (80 g/m <sup>2</sup> ) maximum

### Originals Not Supported by the Document Processor

Do not use the document processor for the following types of originals. Otherwise, the originals may be jammed or the document processor may become dirty.

- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)
- Originals with adhesive tape or glue
- Originals with cut-out sections
- Curled original
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Carbon paper
- Crumpled paper


## Loading Originals in the document processor

---

### IMPORTANT


- Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.
  - Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.
-

- 1 **Open the document tray and adjust the document width guide to the document size.**

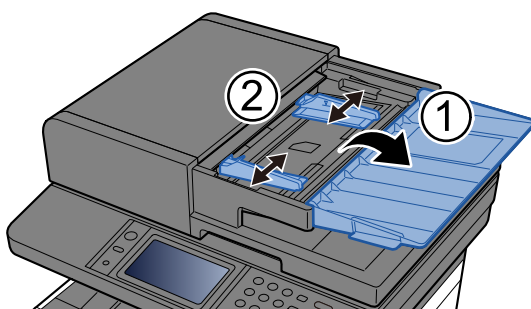

- 2 **Load paper.**

- 1 Put the side to be scanned (or the first side of two-sided originals) face-up.

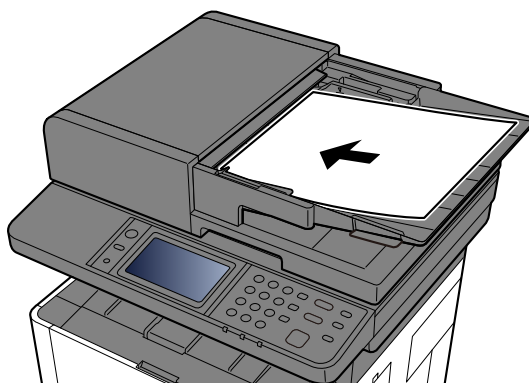

#### NOTE


For details on Original Orientation, refer to the following:

➔ [Original Orientation \(page 311\)](#)



#### IMPORTANT

Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

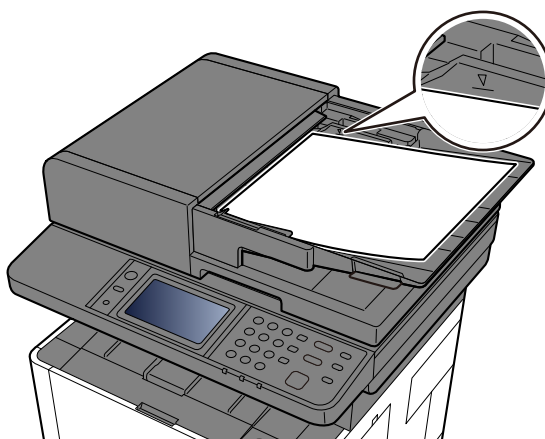


Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.

Originals with punched holes or perforated lines should be placed with the punched holes or perforated lines facing forward (so that they will be scanned last).

---

- 2 Open the original stopper. (If the original size is Folio/Legal)

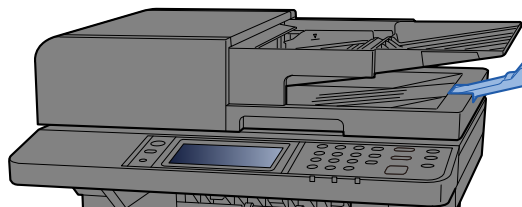

# Recalling Frequently Used Functions (Favorites)

After you add frequently used functions to Favorites, you can recall them quickly and easily.

Favorites are registered by selecting from two types of recalling methods.

- Wizard Mode (Selection Dialog): Recall the registered settings in order and configure while confirming or modifying them.
- Program Mode: When you select a key registered as a favorite, the setting is recalled immediately.

The favorites below have been preregistered. The registered contents can be re-registered for easier use in your environment.



## NOTE

- Up to 20 functions combining copying and sending can be registered in the favorites.
  - If user login administration is enabled, you can only register functions by logging in with administrator privileges.
- 

## ID Card Copy

Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.

Default Registration

- Copy Functions
- ID Card Copy (identification card)
- Border Erase: [Sheet Border Erase]
- Paper selection: [Cassette 1]
- Zoom (XY Zoom): [100%]

## Paper Saving Copying

Use when you want to save paper. Follow the instructions on the screen to configure page aggregation or 2-sided copying.

Default Registration

- Copy Functions
- Page aggregation:[2 in 1]
- Duplex/Split: [1-sided>>2-sided]
- Paper selection: Cassette 1
- Number of copies printed: 1

## Simple Sending Job Folder (Destination Entry)

Use when you want to send images to a shared folder on any computer or to a folder on the FTP server. Follow the instructions on the screen to configure the settings, such as the destination or color selection.

### Default Registration

- Sending Function
- Destination: New Folder
- Color selection:[Auto Color (Color/B & W)]
- Continuous scanning: Off
- File format: [PDF]
- Scanning resolution: [300x300dpi]
- Input document name: Document name: doc
- Additional information: [job number] and [date and time]
- Confirm: Call destination: 1

## Simple Sending Job Folder (Address Book)

Use when you want to send images to a shared folder on a computer registered in the address book or to a folder on the FTP server. Follow the instructions on the screen to configure the settings, such as the destination or color selection.

### Default Registration

- Sending Function
- Destination: Address Book
- Continuous scanning: Off
- File format: [PDF]
- Scanning resolution: [300x300dpi]
- Input document name: Document name: doc
- Additional information: [job number] and [date and time]
- Confirm: Call destination: 1

## Simple Sending Email (Destination Entry)

Use when you want to send images to any email address. Follow the instructions on the screen to configure the settings, such as the destination or color selection.

### Default Registration

- Sending Function
- Destination: New Email Address
- Color selection: [Auto color (color/black and white)]
- Continuous scanning: Off
- File format: [PDF]
- Scanning resolution: [300x300dpi]
- Document name entry: Document name Email subject: Please enter the email subject. Body: Please enter the body.
- Additional information: [job number] and [date and time]
- Confirm: Call destination: 1

## Simple Sending Email (Address Book)

Use when you want to send images to an email address registered in the address book. Follow the instructions on the screen to configure the settings, such as the destination or color selection.

### Default Registration

- Sending Function
- Destination: Address Book
- Color selection: [Auto color (color/black and white)]
- Continuous scanning: Off
- File format: [PDF]
- Scanning resolution: [300x300dpi]
- Document name entry: Document name Email subject: Please enter the email subject. Body: Please enter the body.
- Confirm: Call destination: 1

## Register Favorites (Wizard Mode)

The following procedure is an example of registering the copying function.

### 1 Display the screen

- 1 [Home] key > [Copy]
- 2 Select [Menu] > [Favorites].

### 2 Register Favorites.

- 1 [Menu] > [Add] > Select a number (0101 to 2020) for the favorite number.



#### NOTE

If you register on a favorite number already registered, delete the currently registered favorite before registering.

---

- 2 Select [Wizard].
- 3 Select the function to recall > [Next]
- 4 Enter the new favorite name > [Register]

The favorite is registered.

To display a registered favorite on the Home screen, select [Add] on the confirmation screen that appears.

- 5 Select [OK].

## Register Favorites (Program Mode)

When selecting the program format, first set the copy function, transmission function, fax function, destination, etc. to be registered.

### 1 Display the screen

- 1 [Home] key > [Copy]
- 2 Select [Menu] > [Favorites] while the copy mode is accessed.

### 2 Register Favorites.

- 1 [Menu] > [Add] > Select a number (0101 to 2020) for the favorite number.



#### NOTE

If you register on a favorite number already registered, delete the currently registered favorite before registering.

---

- 2 Select [Program].
- 3 Enter the new favorite name > [Register]

The favorite is registered.

To display a registered favorite on the Home screen, select [Add] on the confirmation screen that appears.

- 4 Select [OK].

## Recalling Favorites (Wizard Mode)

### 1 Recall the favorite.

- 1 Select the [Favorites] registered on the home screen, or select the icon displayed in [Menu] > [Favorites] from each function screen.

If you selected the icon of a favorite, that favorite will be recalled. If you selected [Favorites], proceed to the next step.

- 2 Select the favorite number you want to recall.

Select [Search], enter the favorite number (0101 to 2020), and select [OK] to call up that favorite.

### 2 Execute the favorite.

- 1 The screens will be displayed in order, so make the settings then select [>].

After setting to the end, a confirmation screen will be displayed.



#### NOTE

If you need to change the settings, select [<] and change the settings.

---

- 2 Place the originals > Select the [Start] key.

## Recalling Favorites (Program Mode)

### 1 Recall the favorite.

- 1 Select the [Favorites] registered on the home screen, or select the icon displayed in [Menu] > [Favorites] from each function screen.

If you selected the icon of a favorite, that favorite will be recalled. If you selected [Favorites], proceed to the next step.

Select [Search], enter the favorite number (0101 to 2020), and select [OK] to call up that favorite. Select the favorite number you want to recall.

### 2 Execute the favorite.

Place the originals > [Start] key

## Edit the favorite.

You can change favorite number and favorite name.

### 1 Display the screen

- 1 [Home] key > [...] > [Favorites]
- 2 Select [Menu] > [Edit].

### 2 Edit the favorite.

- 1 Select corresponding to the favorite number (0101 to 2020) to change.
- 2 Select [Menu] > [Edit] to change the favorite number and favorite name.  
➡ [Register Favorites \(Wizard Mode\) \(page 227\)](#)
- 3 [OK] > [OK]

## Deleting Favorites.

### 1 Display the screen

1 [Home] key > [...] > [Favorites]

2 Select [Menu] > [Edit].

### 2 Deleting Favorites.

1 Select corresponding to the favorite number (0101 to 2020) to delete.

2 [Menu] > [Delete] > [Delete]

# Using Applications

The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

For details, contact your sales representative or dealer.

## Installing Applications

To use applications, first install the application in the machine and then activate the application.



### NOTE

You can install applications and certificates on the machine. The number of applications you can run may vary according to the type of application.

---

## 1

### Display the screen

[System Menu/Counter] key > [Add/Delete ApplicationApplication] > "Application" [Add/Delete Application]

---



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

## 2 Install an application.


- 1 [Menu] > [Add] > [OK]
- 2 Insert the USB drive containing the application to be installed into the USB Drive Slot.



### NOTE

If "USB Drive is recognized.Displaying files." is displayed, select [Cancel].

---

- 3 Select the application to be installed > [Install]  
You can view detailed information on the selected application by selecting  (information icon).
- 4 Select [Yes] on the confirmation screen.  
Installation of the application begins. Depending on the application being installed, the installation may take some time.  
Once the installation ends, the original screen reappears.



### NOTE

- To install another application, repeat steps 2-3 and 2-4.
  - To remove the USB drive, select[Remove USB Drive], and remove the USB Drive after "USB Drive can be safely removed." is displayed.
-

# Activating Applications

## 1 Display the screen

[System Menu/Counter] key > [Add/Delete Application] > "Application" [Add/Delete Application]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

## 2 Select the desired application > [Menu] > [Activate]

You can view detailed information on the selected application by selecting  (information icon).

## 3 Enter the license key > [Official]

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to step 4.

To use the application as a trial, select [Trial] without entering the license key.

## 4 Select [Start] in the confirmation screen.



### IMPORTANT

- If you change the date/time while using the trial version of an application, you will no longer be able to use the application.
  - Icons of activated application are displayed in the Home screen.
- 

## 5 Select the application icon in the Home screen.

Select the application icon.

The application will start up.

# Deactivating Applications

## 1 Display the screen

[System Menu/Counter] key > [Add/Delete Application] > "Application" [Add/Delete Application]

---



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

## 2 Deactivate the application.

- 1 Select the application you want to deactivate and select [Menu] > [Deactivate].  
You can view detailed information on the selected application by selecting the [information] icon.
  - 2 Select [Yes].
- 



### NOTE

- Select [×] on the screen if you want to exit the application running.
  - The procedure for exiting some applications may differ.
-

# Uninstalling Applications

## 1 Display the screen

[System Menu/Counter] key > [Add/Delete ApplicationApplication] > "Application" [Add/Delete Application]

---




### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

## 2 Deleting

- 1 Select the application you want to delete > [Menu] > [Delete]

You can view detailed information on the selected application by selecting  (information icon).

- 2 Select [Yes].

# Registering Shortcuts (Copy, Send, and Document Box Settings)

You can register shortcuts for easy access to the frequently used functions. A function name linked to a registered shortcut can be changed as necessary.

## Creating new shortcuts

New shortcuts can be created in the basic screen of each function.

### 1 Display the basic screen you want to register.

### 2 Register the shortcut.

- 1 Select [Menu] > "Shortcut".

The "Add/Edit Shortcut" screen is displayed.



- 2 Select [Menu] > [Add].
- 3 Select the function you want to register > [Next]
- 4 Enter name > [Next]



#### NOTE

The function name will be displayed if you do not enter a shortcut name.

---

- 5 Confirm the entry.  
Select [Shortcut Name] or [Function] to change the settings.
- 6 Select [Finish].  
The shortcut is registered.

## Edit the shortcut.

Shortcut editing is performed in the basic screen of each function.

### 1 Display the basic screen you want to register.

### 2 Edit the shortcut.

- 1 Select [Menu] > "Shortcut".



- 2 Select [Menu] > [Edit].
- 3 [Shortcut Name] or [Function] > Change the Settings > [OK]
- 4 [Finish] > [Update]

## Delete the shortcut.

Shortcut deletion is performed in the basic screen of each function.

### 1 Display the basic screen you want to register.

### 2 Delete the shortcut.

- 1 Select [Menu] > "Shortcut".

The [Add/Edit Shortcut] screen is displayed.



- 2 Select the shortcut you want to delete > [Menu] > [Delete]


# Copying

The procedures here represent the basic copy operation and how to cancel the copy.

## Copy

**1** [Home] key > [Copy]

**2** Load paper.

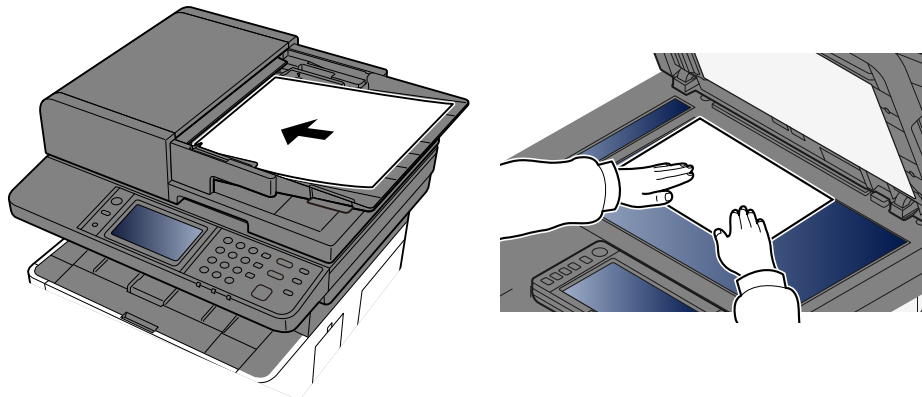

➔ [Loading Originals \(page 216\)](#)


**3** **Configure the settings**

Scroll the screen to select and set functions.

➔ [Copy \(page 297\)](#)

**4** **Use the numeric keys to enter the copy quantity.**

You can select the entry field and specify the number of copies.

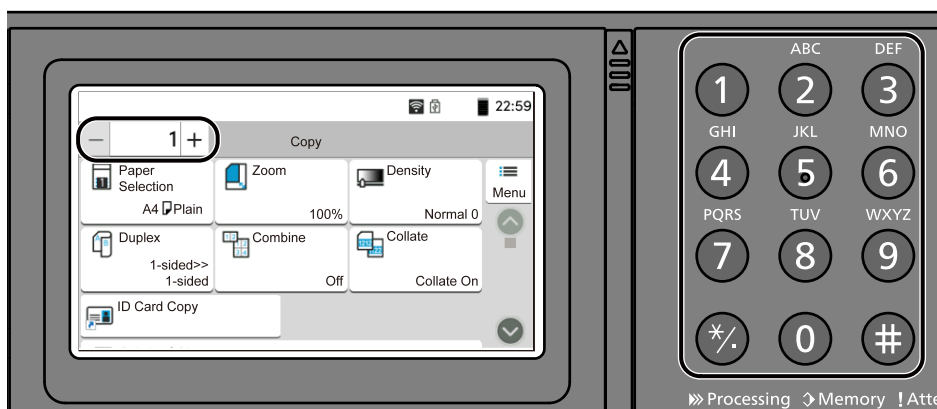

**5** **Press the [Start] key.**

Copying begins.

## Canceling Jobs

**1** Select the [Stop] key with the copy screen displayed.

**2** Cancel a job.

When there is a job is being scanned, the copy job is canceled.

When there is a job printing or on standby, canceling job screen appears. The current print job is temporarily interrupted.

Select the job you wish to cancel > [Cancel] > [Yes]

## Basic Scanning (Sending)


This machine can send a scanned image as an attachment of an E-mail message or to a PC linked to the network. In order to do this, it is necessary to register the sender and destination (recipient) address on the network.

A network environment which enables the machine to connect to a mail server is required in order to send E-mail. It is recommended that a Local Area Network (LAN) be used to assist with transmission speed and security issues.

Follow the steps below for basic sending. The following four options are available.

- Send as E-mail (E-mail Addr Entry): Sends a scanned original image as an E-mail attachment.

➔ [Sending Document via E-mail \(page 244\)](#)

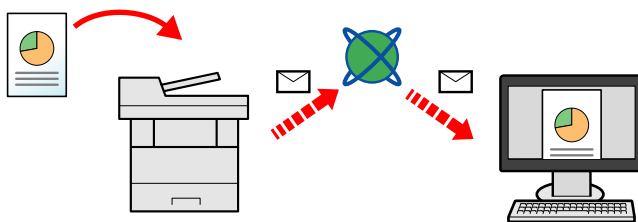


- Send to Folder (SMB): Stores a scanned original image in a shared folder of any PC.

➔ [Sending Document to Desired Shared Folder on a Computer \(Scan to PC\) \(page 246\)](#)

- Send to Folder (FTP): Stores a scanned original image in a folder of an FTP server.

➔ [Sending Document to Folder on an FTP Server \(Scan to FTP\) \(page 250\)](#)

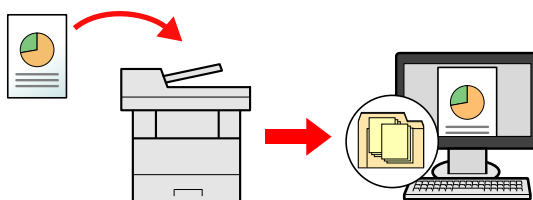

- Image Data Scanning with TWAIN / WIA: Scan the document using a TWAIN or WIA compatible application program.

➔ [Scanning using TWAIN or WIA \(page 253\)](#)

---

### NOTE

- Different sending options can be specified in combination.

➔ [Sending to different types of destinations \(Multi sending\) \(page 262\)](#)

- The fax function can be used for sending.

Fax function is available for fax models.

➔ **FAX Operation Guide**

---

# Sending Document via E-mail




## NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.  
➔ [Others \(page 485\)](#)
- Before sending the scanned document with an E-mail, configure the SMTP and E-mail settings using the Embedded Web Server RX.  
➔ [SMTP and E-mail Settings \(page 115\)](#)

**1** [Home] key > [Send]

**2** Load paper.

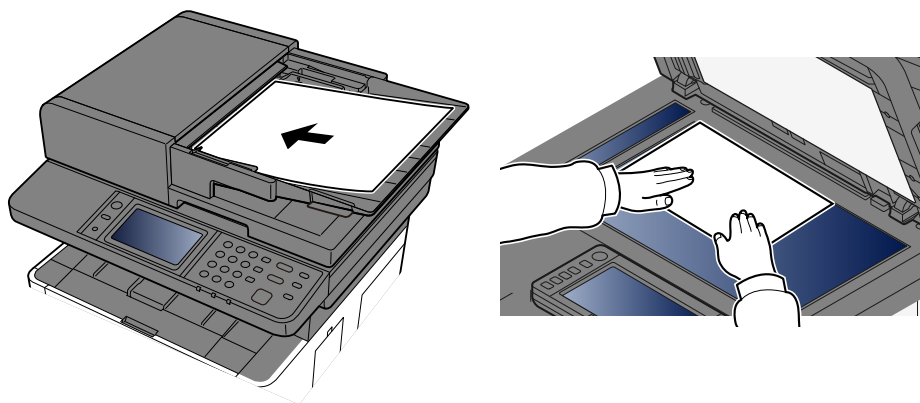

➔ [Loading Originals \(page 216\)](#)

**3** In the destination screen for sending, select [Enter destination.] > [Email]

**4** Enter address > [OK] key

Up to 256 characters can be entered.

➔ [Character Entry Method \(page 784\)](#)

When selecting On for "Entry Check for New Dest.", the re-entering screen for the destination information appears.

➔ [Re-entering the New Destination \(page 276\)](#)

To enter multiple destinations, select [Next Destination] and enter the next destination. Up to 100 E-mail addresses can be specified.

You can register the entered E-mail address in the Address Book by selecting [Add to Address Book]. You can also replace the information for a previously registered destination.

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 274\)](#)



#### NOTE

- If "Broadcast" is set to [Prohibit], multiple destinations cannot be entered.

➔ [Send/Store \(page 427\)](#)

---

## 5 Configure the settings

Scroll the screen to select and set functions.

➔ [Send \(page 299\)](#)

---



#### IMPORTANT

- [Email Encrypted TX] or [Digital Signature to Email] is displayed when S/MIME is configured from Embedded Web Server RX.
    - ➔ **Embedded Web Server RX User Guide**
  - When using [Email Encrypted TX] and [Digital Signature to Email], specify the Email addresses which have encryption certificate, from the address book. Cannot be set from the directly-entered address.
- 

## 6 Press the [Start] key.



#### NOTE

When selecting On for "Destination Check before Send", the confirmation screen appears.

➔ [Confirmation Screen of Destinations \(page 275\)](#)

---



#### NOTE

A confirmation prompt is displayed on the screen if more than one destination is specified. Confirm and select [Yes]. Sending starts.

---

# Sending Document to Desired Shared Folder on a Computer (Scan to PC)


You can store the scanned document into the desired shared folder on a computer.

## NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.  
➔ [Primary Network \(Client\) \(page 485\)](#)
- Before sending the scanned document to the shared folder on your computer, you must configure the following settings:
  - Make a note of the computer name and full computer name  
➔ [Make a note of the computer name and full computer name \(page 141\)](#)
  - Make a note of the user name and domain name  
➔ [Make a note of the user name and domain name \(page 142\)](#)
  - Create a shared folder and make a note of the shared folder name  
➔ [Create a shared folder and make a note of the shared folder name \(page 143\)](#)
  - Configure the Windows firewall  
➔ [Configuring Windows Firewall \(page 148\)](#)

**1** [Home] key > [Send]

**2** Load paper.

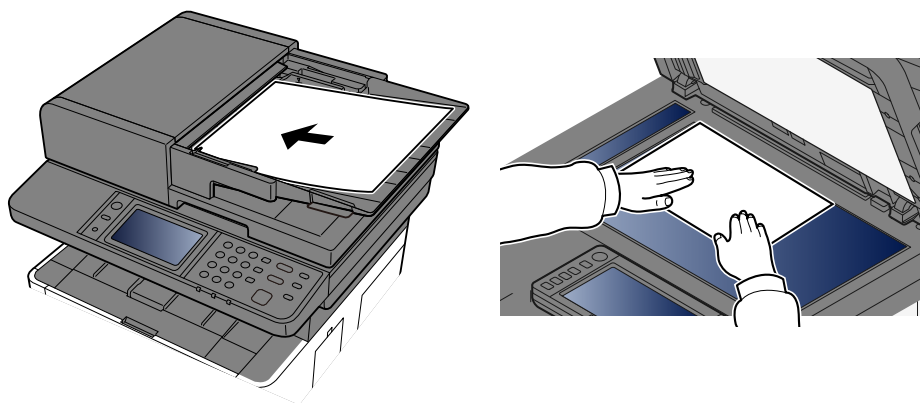

➔ [Loading Originals \(page 216\)](#)

**3** In the destination screen for sending, select [Enter destination.] > [SMB]

## 4 Enter the destination details.

To directly specify the SMB folder, select [Folder Path Entry] and enter each item.




### NOTE

When selecting On for "Entry Check for New Dest.", the re-entering screen for the destination information appears.

→ [Re-entering the New Destination \(page 276\)](#)

The table below explains the items to be entered.

Item	Description
Host Name	<p>Computer name</p> <p>Enter "Host Name" or "IP Address". To enter the IPv6 address, enclose the IPv6 address in brackets [ ].</p> <p>Limited character count: 256 characters or less</p> <p>Example: [2001:db8:a0b:12f0::10] (Example: [2001:db8:a0b:12f0::10])</p>
Port	<p>Port number</p> <p>If the port number is not specified, the default port number is 445.</p>
Folder Path	<p>Share name</p> <p>Limited character count: 260 characters or less</p> <p>For example: scannerdata</p> <p>If saving in a folder in the shared folder: share name\folder name in shared folder</p>
Login User Name	<ul style="list-style-type: none"> <li>If the computer name and domain name are the same User Name For example: james.smith.</li> <li>If the computer name and domain name are different Domain name\User name For example: abcdnet\james.smith</li> </ul> <p>Limited character count: 64 characters or less</p> <hr/> <div>  <b>NOTE</b> </div> <p>When transmitting using the wireless network, only alphanumeric characters are allowed. Also, if the computer name and domain name are different because "\" is not available, use @ to enter the user name in the following format:</p> <p>User name@Domain name (Example: james.smith@abcdnet)</p> <hr/>
Login Password	<p>Login password.</p> <p>Limited character count: 128 characters or less</p> <p>Upper case and lower case letters are distinguished (case sensitive).</p>

You can search for a folder on a PC on the network. Select [Search Folder from Network] or [Search Folder by Host Name]. Select the folder from the Search Results list.



#### NOTE

- If you selected [Search Folder from Network], you can search all PCs on the network for a destination.
  - If you selected [Search Folder by Host Name], you can search for a destination from among PCs that are connected to the network by entering "Domain/Workgroup Name"/"Host Name".
  - A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [OK]. The login user name and login password entry screen appears.
  - After you enter the login user name and login password of the destination PC, the shared folders appear. Select the folder that you want to specify and select [OK]. The address of the selected shared folder is set.
- 

## 5 Check the information.

- 1 Check the information.

Change the settings as required.

- 2 Select [Connection Test] to check the connection.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [Next Destination] and enter the next destination.

You can register the entered information in the Address Book by selecting [Add to Address Book].



#### NOTE

- If "Broadcast" is set to [Prohibit], multiple destinations cannot be entered.
- 

## 6 Select [OK].

Destinations can be changed later.

## 7 Configure the settings

Scroll the screen to select and set functions.

## 8 Press the [Start] key.



### NOTE

When selecting On for "Destination Check before Send", the confirmation screen appears.

➔ [Confirmation Screen of Destinations \(page 275\)](#)

---



### NOTE

A confirmation prompt is displayed on the screen if more than one destination is specified. Confirm and select [Yes]. Sending starts.

---


# Sending Document to Folder on an FTP Server (Scan to FTP)

## NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.  
➔ [Primary Network \(Client\) \(page 485\)](#)
- Before sending a document, configure the FTP Client (Transmission).  
➔ [Protocol Settings \(page 468\)](#)

**1** [Home] key > [Send]

**2** Load paper.

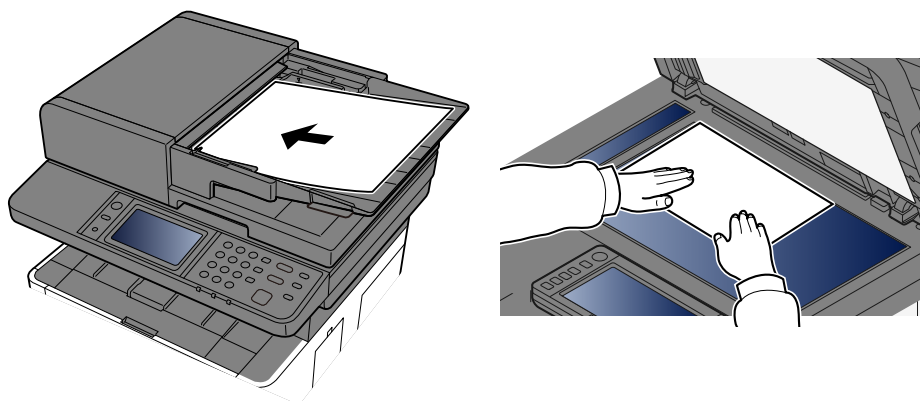

➔ [Loading Originals \(page 216\)](#)

**3** In the destination screen for sending, select [Enter destination.] > [FTP]

**4** Enter the destination details.

➔ [Character Entry Method \(page 784\)](#)

## NOTE

When selecting On for "Entry Check for New Dest.", the re-entering screen for the destination information appears.

➔ [Re-entering the New Destination \(page 276\)](#)

The table below explains the items to be entered.

Item	Description
Host Name	Host name or IP address of FTP server To enter the IPv6 address, enclose the IPv6 address in brackets [ ]. Limited character count: 64 characters or less Example: [2001:db8:a0b:12f0::1]
Port	Port number If the port number is not specified, the default port number is 21.
Folder Path	Path for the file to be stored Limited character count: 128 characters or less For example: User\ScanData If no path is entered, the file is stored in the home directory. When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.
Login User Name	FTP server login user name Limited character count: 64 characters or less
Login Password	FTP server login password Limited character count: 64 characters or less Upper case and lower case letters are distinguished (case sensitive).

## 5 Check the information.

### 1 Check the information.

Change the settings as required.

### 2 Select [Connection Test] to check the connection.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [Next Destination] and enter the next destination.

You can register the entered information in the Address Book by selecting [Add to Address Book].



#### NOTE

- If "Broadcast" is set to [Prohibit], multiple destinations cannot be entered.

➔ [Broadcast \(page 427\)](#)

## 6 Select [OK].

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 274\)](#)

## 7 Configure the settings

Select the Global Navigation to display other functions.

Scroll the screen to select and set functions.

➔ [Send \(page 299\)](#)

## 8 Press the [Start] key.



### NOTE

When selecting On for "Destination Check before Send", the confirmation screen appears.

➔ [Confirmation Screen of Destinations \(page 275\)](#)

---



### NOTE

A confirmation prompt is displayed on the screen if more than one destination is specified. Confirm and select [Yes]. Sending starts.

---

# Scanning using TWAIN or WIA

This subsection explains how to scan an original using TWAIN. The WIA driver is used in the same way.

---

## NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.  
➔ [Others \(page 485\)](#)
  - Before sending a document, confirm that TWAIN/WIA driver is installed on a computer and the settings are configured.  
➔ [Configure TWAIN Driver. \(page 102\)](#)  
➔ [Configure WIA Driver. \(page 104\)](#)
- 

## 1 Display the screen

- 1 Activate the TWAIN compatible application software.
  - 2 Select the machine using the application and display the dialog box.
- 

## NOTE

For selecting the machine, see the Operation Guide or Help for each application software.

---

## 2 Configure the settings

Select scanning settings in the dialog box that opens.


---

## NOTE

For the settings, refer to Help in the dialog box.

---

## 3 Load paper.

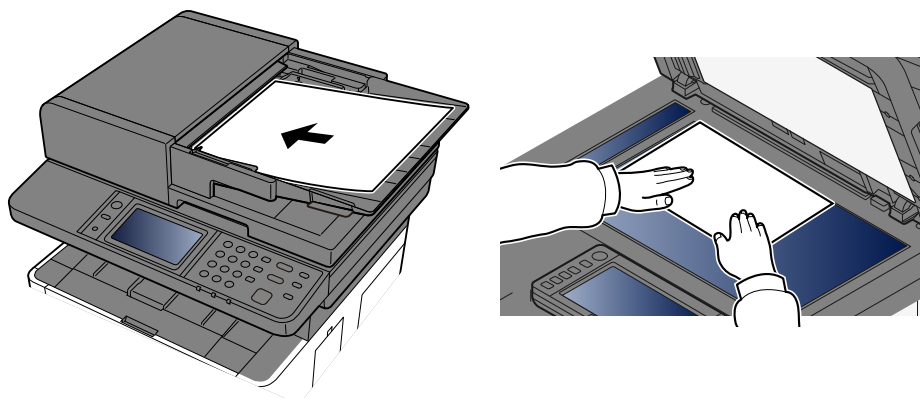

➔ [Loading Originals \(page 216\)](#)

## **4 Scan the originals.**

Click the [Scan] button. The document data is scanned.

# Useful Sending Method

You can specify the following useful scanning (sending) methods.

## WSD Scan

Saves images of originals scanned on this machine as files on a WSD-compatible computer.

➡ [Executing WSD scan \(page 259\)](#)

## Scanning using File Management Utility

Scans a document using the settings of File Management Utility and saves the image data and scanning information on a specified server or in a specified folder.

➡ [Scanning with FMU Connection \(page 260\)](#)

## Scanning using the fax server

You can send a scanned document via a fax server.

➡ [Using a Fax Server to Send \(Fax Server Send\) \(page 265\)](#)

## Sending to different types of destinations (Multi sending)

Sends to different types of destination (E-mail addresses, folders, etc.) in a single operation.

➡ [Sending to different types of destinations \(Multi sending\) \(page 262\)](#)

## Send to Me (Email)

Sends to the E-mail address of the logged in user when user login is enabled.

➡ [Sending Documents to E-mail Address of Logged in User \(to myself\) \(page 264\)](#)

# WSD Scan

WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

---



## NOTE

- ➡ [Executing WSD scan \(page 259\)](#)
  - For information on operating the computer, refer to the computer's help or the operation guide of your software.
  - When transmitting using wireless LAN, select the interface dedicated to the send function in advance.  
➡ [Primary Network \(Client\) \(page 485\)](#)
- 

## Install the Driver (for Windows 10)

**1** Right-click the Windows [Control Panel] button and select [Start] → [Devices and Printers].

**2** Install the driver.

Click [Add a device]. Select the icon that displays the machine model name, and click [Next].

When the machine model icon is displayed as a "Printer" on the "Devices and Printers" screen, installation is complete.

## Install the Driver (for Windows 11)

**1** Click the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers].

**2** Install the driver.

Click [Add a device]. Select the icon that displays the machine model name, and click [Next].

When the machine model icon is displayed as a "Printer" on the "Devices and Printers" screen, installation is complete.

## Install the Driver (Microsoft Windows Server 16 and after)

**1** Right-click the Windows [Start] button and select [Control Panel] → [Devices and Printers]

**2** Install the driver.

Click [Add a device]. Select the icon that displays the machine model name, and click [Next].


When the machine model icon is displayed as a "Printer" on the "Devices and Printers" screen, installation is complete.

## Executing WSD scan

WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

**1** [Home] key > [Send]

**2** Load paper.

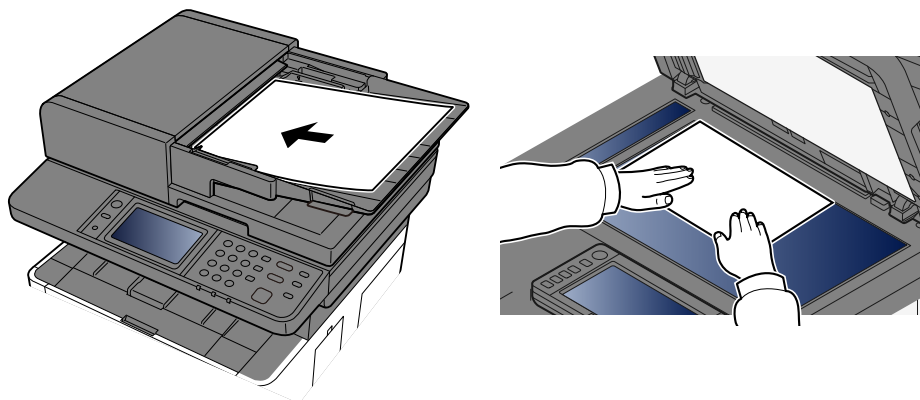

➔ [Loading Originals \(page 216\)](#)

**3** In the destination screen for sending, select [Enter destination.] > [WSD Scan]

**4** Scan the originals.

- For procedure using this machine, refer to step [8](#) in step [5](#).
- For procedure from your computer, refer to step [10](#) in step [9](#).

**5** (Procedure using this machine) [From Operation Panel] > [Next >]

**6** Select the destination computer > [OK]

Select [Reload] to reload the computer list.

You can view information on the selected computer by selecting  (information icon).

**7** Set the type of original, file format, etc., as desired.

**8** Press the [Start] key.

Sending begins and the software installed on the computer is activated.

**9** (Procedure from your computer) [From Computer] > [Start]

**10** Use the software installed on the computer to send the images.

# Scanning with FMU Connection

"FMU Connection" is installed on the machine as a standard application. FMU Connection can be used to scan an original according to the settings configured with "File Management Utility" (downloaded from Download Center), and save the image data and scanning information on a specified server or folder. Unlike regular transmission functions, this application lets you use metadata such as the scan date and time and the data format.

## Triumph-Alder

EN:

<https://www.triumph-adler.com/ta-en-de/customer-service/download-centre>

DE:

<https://www.triumph-adler.com/ta-de-de/kundendienst/download-center>

## UTAX

EN:

<https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre>

DE:

<https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center>

## 1 Configure the settings.

The first time you use FMU Connection, you must start it up in System Menu.

➔ [Activating Applications \(page 235\)](#)

To use FMU Connection, you must install File Management Utility on your computer and configure the multifunction machine to be used, scanning conditions, and the file save location. For installation of File Management Utility, refer to the following:

➔ [Installing Software \(page 94\)](#)



### NOTE


For information on using File Management Utility, refer to the following:

➔ **File Management Utility User Guide**

---

## 2 Make sure that File Management Utility is running on the computer (or server) on which File Management Utility is installed.

### **3 Load paper.**

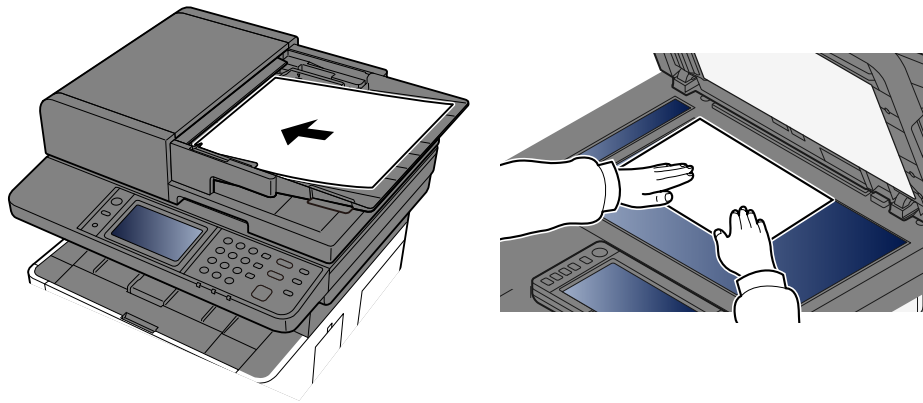

### **4 Select FMU Connection.**

FMU Connection will start up.

### **5 Follow the on-screen instructions to enter the necessary information and select [Next].**

### **6 When the scan settings screen appears, select each item and configure the necessary settings.**


The features that can be set depend on File Management Utility.

### **7 Press the [Start] key.**

Sending starts.

## Sending to different types of destinations (Multi sending)

You can specify destinations combining E-mail addresses, folders (SMB or FTP), and fax numbers. This is referred to as Multi Sending. This is useful for sending to different types of destination (E-mail addresses, folders, etc.) in a single operation.

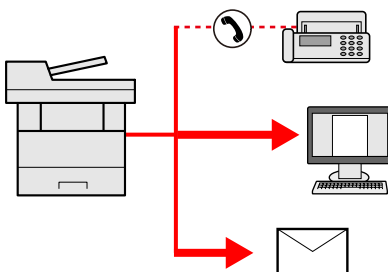

No. of broadcast items: Up to 5050

However, number of items are restricted for the following sending options.

- E-mail and fax: Up to 100100 in total
- Folders (SMB, FTP): Total of 55 SMB and FTP

Also, depending on the settings, you can send and print at the same time.

Procedures are the same as used in specifying the destinations of respective types. Continue to enter E-mail address or folder path so that they appear in the destination list. Press the [Start] key to start transmission to all destinations at one time.



### NOTE

- If the destinations include a fax, the images sent to all destinations will be black and white.
- If [Broadcast] is set to [Prohibit], multiple destinations cannot be entered.

➔ [Send/Store \(page 427\)](#)

---

## Sending to different types of destinations

**1** [Home] key > [Send]

**2** Load paper.

**3** Specify the recipient.

**4** Configure the settings

Select the Global Navigation to display other functions.

Scroll the screen to select and set functions.

➔ [Send \(page 299\)](#)

## 5 Press the [Start] key.

---



### NOTE

When selecting On for "Destination Check before Send", the confirmation screen appears.

➔ [Confirmation Screen of Destinations \(page 275\)](#)

---

## 6 Press the [Start] key.

---



### NOTE

A confirmation prompt is displayed on the screen. Confirm and select [Yes].

---

Sending starts.

# Sending Documents to E-mail Address of Logged in User (to myself)

Sends to the E-mail address of the logged in user when user login is enabled.

## 1 Configure the settings.

Before using this function, the following are necessary.

- The function icon must be displayed in the home screen.  
➔ [Editing the Home Screen \(page 57\)](#)
- An E-mail address must be set in user login for the user who logs in.  
➔ [Adding a User \(Local User List\) \(page 508\)](#)

## 2 Select the [Home] key

## 3 Select [Send to Me (Email)].



### NOTE

When this function is used, functions other than transmission cannot be used.

---

# Using a Fax Server to Send (Fax Server Send)

You can send a scanned document via a fax server.




## NOTE

- A fax server is required to use this function. For information about the fax server, contact the applicable administrator.
  - FAX server settings must be configured to send a FAX. For details, refer to the following:
    - ➔ **Embedded Web Server RX User Guide**
    - ➔ [Fax Server \(page 483\)](#)
- 

**1** [Home] key > [Send]

**2** Load paper.

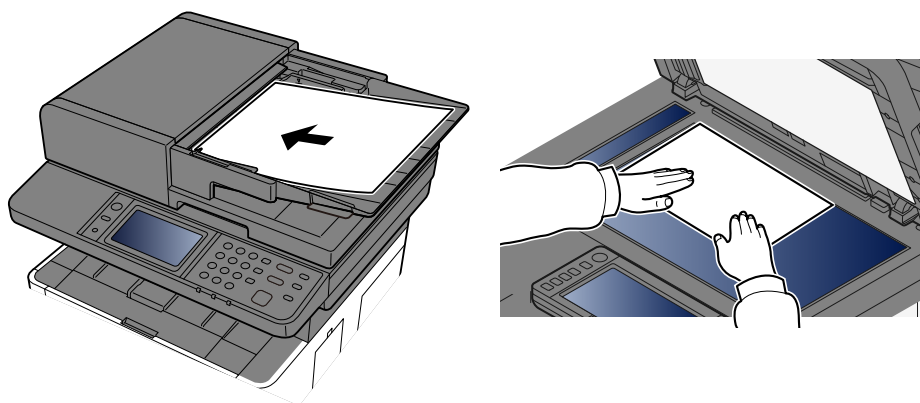

➔ [Loading Originals \(page 216\)](#)

**3** Display the screen

In the destination screen for sending, select [Enter destination.] > [Fax Server].

## 4 Enter the recipient information.

- 1 Select [Fax No. Entry].
- 2 Enter the fax number > [Enter] > [OK]



### NOTE

- Use the numeric keys to enter a number.
- When selecting On for "Entry Check for New Dest.", the re-entering screen for the destination information appears.  
➔ [Re-entering the New Destination \(page 276\)](#)

---

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 274\)](#)



### NOTE

- When selecting the information from the Address Book, select [Address Book], and specify the destination > [OK].  
➔ [Choosing from the Address Book \(page 269\)](#)
- When selecting the information from an External Address Book, select [External Address Book], and specify the destination > [OK].

For details on the External Address Book, refer to the following:

➔ **Embedded Web Server RX User Guide**

---

## 5 Configure the settings

You can configure settings for each function by scrolling the screen.

➔ [Send \(page 299\)](#)

## 6 Press the [Start] key.



### NOTE

When selecting On for "Destination Check before Send", the confirmation screen appears.

➔ [Confirmation Screen of Destinations \(page 275\)](#)

---

## 7 Press the [Start] key.



### NOTE

A confirmation prompt is displayed on the screen if more than one destination is specified. Confirm and select [Yes]. Sending starts.

---

# Canceling Sending Jobs

**1** Select the [Stop] key with the send screen displayed.

**2** Cancel a job.

When there is a job is being scanned, Job Cancel appears.

When there is a job sending or on standby, Canceling job screen appears. Select the job you wish to cancel  
> [Cancel] > [Yes]



## NOTE

Selecting the [Stop] key will not temporarily stop a job that you have already started sending.

---

# Handling Destination

This section explains how to select and confirm the destination.

## Specifying Destination

Select the destination using either of the following methods except entering address directly:

- Choosing from the Address Book
  - ➔ [Choosing from the Address Book \(page 269\)](#)
- Choosing from the External Address Book

For details on the External Address Book, refer to the following:

  - ➔ **Embedded Web Server RX User Guide**
- Choosing from One Touch key destinations
  - ➔ [Choosing from One Touch key destinations \(page 272\)](#)
- Choosing from the Search (No.)
  - ➔ [Choosing from the Search \(No.\) \(page 273\)](#)
- Choosing from the FAX

Fax function is available for fax models.

  - ➔ **FAX Operation Guide**



### NOTE

- You can set the machine up so that the address book screen appears when you select the [Send] key.
    - ➔ [Default Screen \(page 396\)](#)
  - If you are using the products equipped with the fax function, you can specify the fax destination. Enter the other party number using the numeric keypad.
-

## Choosing from the Address Book

For more information about how to register destinations in the Address Book, refer to the following:

➔ [Registering Destinations in the Address Book \(page 155\)](#)

### 1 In the Destination screen for sending, select [Address Book] >



#### NOTE

For details on the External Address Book, refer to the following:

➔ **Embedded Web Server RX User Guide**

### 2 Select the destinations.

Select the checkbox to select the desired destination from the list. Multiple destinations can be selected. The selected destinations are indicated by a checkmark in the check box. To use an address book on the LDAP server, select [Select] > [Address Book] > [External Address Book].

Select [Name] or [No.] to sort the destination list.




#### NOTE

- To deselect, select the checkbox again and remove the checkmark.
- If "Broadcast" is set to [Prohibit], multiple destinations cannot be selected. This also applies to a group in which multiple destinations are registered.

➔ [Broadcast \(page 427\)](#)

Destinations registered in the Address Book can be searched or refined by selecting [Menu].

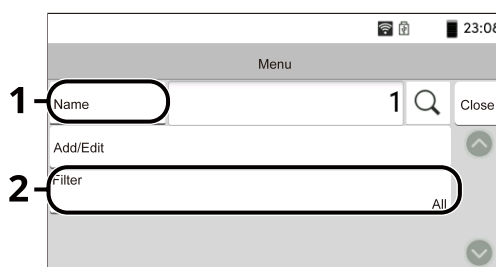

1 [Filter]

➔ [Narrow Down \(page 434\)](#)

2 [No.] or [Name]

Search by registered address number or name. Select either [No.] or [Name] to switch between [No.] and [Name].

### 3 **Accept the destination > [OK]**

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 274\)](#)

---



#### **NOTE**

You can set the default sort setting of the address for the address book.

➔ [Sort \(page 434\)](#)

---

## Choosing from the External Address Book

---



For details on the External Addresses, refer to the following:

➔ **Embedded Web Server RX User Guide**

---

### 1 Select the destinations.

- 1 Specify the destination.




To check detailed information about the selected destination, press [Menu] > [Details] > [OK] key

---



➔ [Character Entry Method \(page 784\)](#)

## Choosing from One Touch key destinations

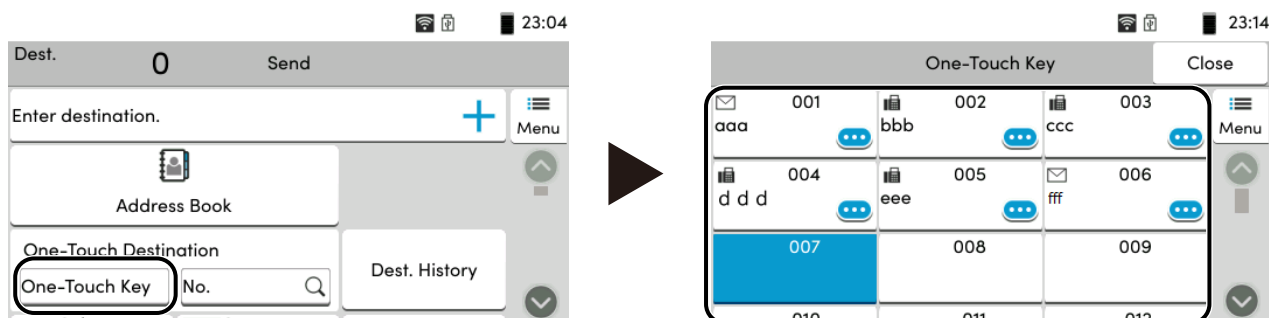- 1 In the destination screen for sending, select [One-Touch Key] to display the One-Touch Key screen.



### NOTE

- If the One Touch Key for the desired destination is hidden on the touch panel, select  or . Displays One Touch Keys that are hidden. This procedure assumes that One Touch Keys have already been registered. For more information on adding One Touch keys, refer to the following:  
➔ [Add One Touch Keys. \(page 167\)](#)
- Use to directly enter a number with the numeric keys, such as specifying a transmission address using a one-touch key number, or calling up a stored program using the program number. For information on one-touch key numbers, refer to the following:  
➔ [Choosing from the Search \(No.\) \(page 273\)](#)


## Choosing from the Search (No.)

Access the destination by specifying the 4-digit (0001 to 1000) One Touch Key number.

- 1 In the destination screen for sending, select [No.] to display the numeric entry screen. Select the number entry field and enter the One-Touch Key number with the numeric keypad.

### NOTE

If you entered the One Touch Key in 1 to 3-digit, select [OK].

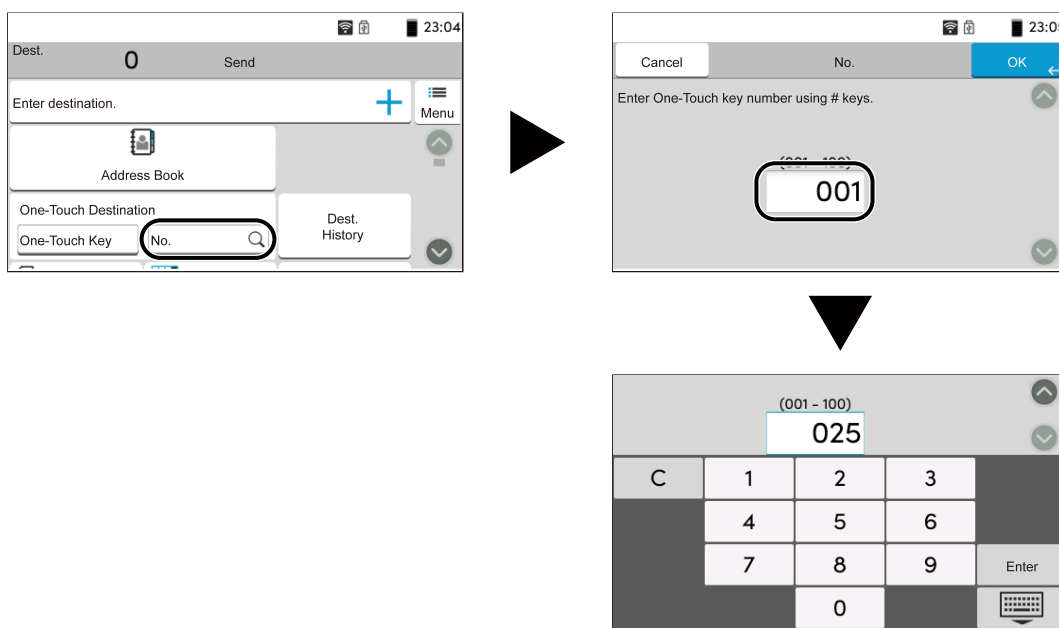

## Checking and Editing Destinations




### 1 Display the screen

Specify the destination.

➔ [Specifying Destination \(page 268\)](#)

### 2 Check and edit the destination.

Select [Confirmation] to display a destination list.

- Select  (information icon) to check the destination.
- Select  (edit icon) to modify the destination.  
Select [Next >] to change the recipient to CC or Bcc.
- Select  (delete icon) to remove the destination from the list.



#### NOTE


- When selecting On for "Entry Check for New Dest.", the confirmation screen appears. Enter the same destination again, and select [OK].  
➔ [Entry Check for New Dest. \(page 427\)](#)
  - If "Destination Check before Send" is set to On, the confirmation screen appears when the [Start] key is pressed.  
➔ [Destination Check before Send \(page 427\)](#)  
➔ [Confirmation Screen of Destinations \(page 275\)](#)
-

## Confirmation Screen of Destinations

When selecting On for "Destination Check before Send", the confirmation screen of destinations appears after pressing the [Start] key.

➔ [Destination Check before Send \(page 427\)](#)

### 1 Move the screen to the bottom and confirm all destinations.

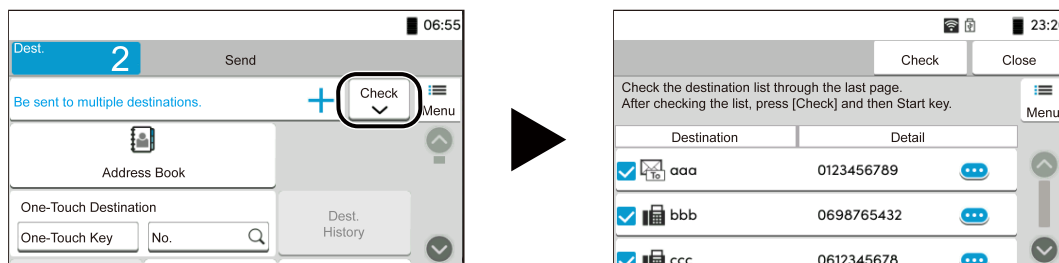

Selecting (information icon) shows the detailed information of the destination.

To delete the destination, select the destination you want to delete > [Menu] > [Delete] > [Delete]

To add the destination, select [Close] and then return to the destination screen.

### 2 Select the destinations.

Select the checkbox to select the desired destination from the list. The selected destinations are indicated by a checkmark in the check box.

### 3 Select [Check].




#### NOTE

Be sure to confirm all destination by displaying them on the touch panel. You cannot select [Check] unless you have confirmed all destination.

## Re-entering the New Destination

When selecting On for "Check New Dest.", the re-entering screen for the destination information appears.

➡ [Entry Check for New Dest. \(page 427\)](#)

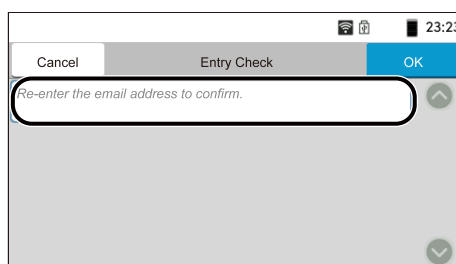

Enter the same destination information again, and select the [OK] key.

## Recall

[Recall Destination] is a function allowing you to send the last entered destination once again. To send to the same destination again, select [Recall Destination] to call the destination to the destination list.

### 1 Select [Recall Destination].

The destination you sent is displayed on the destination list.



#### NOTE

[Recall Destination] is displayed when [Recall Destination] in [Prevent Mis-sending Settings] is set to [Allowed].

When the last sending included FAX, folders and E-mail destinations, they are also displayed.

- If necessary, add or delete the destination.

### 2 Press the [Start] key.

Sending starts.



#### NOTE

- If "Destination Check before Send" is set to On, the destination confirmation screen appears when the [Start] key is pressed.  
➡ [Confirmation Screen of Destinations \(page 275\)](#)
  - Recall information is canceled in the following conditions.
    - When you turn the power off
    - When you send a next image (new recall information is registered)
    - When you log out
-

# How to use the FAX Function

On products with a FAX function, it is possible to use the FAX function.

Fax function is available for fax models.

➔ **FAX Operation Guide**

# Using Document Boxes

Document Box is a function for saving print data from a computer and sharing it with multiple users. The following types of document boxes are available:

- Job Box
- USB Drive Box
- Fax Memory RX Box (only for fax-compatible models)
- Subaddress Communication Box (only for fax-compatible models)
- Polling Box (only for fax-compatible models)

## What is Job Box?

Job Box is a generic name for the "Private Print/Stored Job Box", "Quick Copy/Proof and Hold Box", and "PIN Print Box".

These Job Boxes cannot be created or deleted by a user.



### NOTE

- An SD/SDHC Memory Card is required to use the Stored Job Box and the Quick Copy Box.
- You can set up the machine so that temporary documents in job boxes are automatically deleted.  
➔ [Deletion of Job Retention \(page 444\)](#)
- For details on operating the "Private Print/Job Hold Box", "Quick Copy/Proof and Hold Box", or "PIN Print Box", refer to the following:  
➔ [Printing Data Saved in the Printer \(page 189\)](#)



### IMPORTANT

SD/SDHC memory cards store unencrypted data. Please be careful when storing sensitive documents.

---

## What is USB Drive Box?

A USB drive can be connected to the USB drive slot on the machine to print a saved file. You can print data directly from the USB drive without a PC.

Image files scanned using this machine can also be saved to USB drive in the PDF, TIFF, JPEG, XPS, OpenXPS, or high compression PDF format (Scan to USB).

## What is a Fax Memory RX Box/Subaddress Box/Polling Box?

Fax Box store the fax data.

Fax function is available for fax models.

For details, refer to the following:

➔ **FAX Operation Guide**

## Using Removable USB Drive

Plugging USB drive directly into the machine enables you to quickly and easily print the files stored in the USB drive without having to use a computer.

The following file types can be printed:

- PDF file (Version 1.7/2.0 or older)
- TIFF file (TIFF V6/TTN2 format)
- JPEG file
- XPS file
- OpenXPS file
- Encrypted PDF file

In addition, you can store scanned image files in USB drive connected to the machine. The following file formats can be stored:

- PDF file
- TIFF file
- JPEG file
- XPS file
- OpenXPS file
- High-compression PDF file format

## Printing Documents Stored in Removable USB Drive

---




### NOTE

- PDF files you wish to print should have an extension (.pdf).
  - Use USB drive properly formatted by this machine.
  - Plug the USB drive directly into the USB Drive Slot.
-

## 1 Insert the USB drive

- 1 Plug the USB drive into the USB Drive Slot.

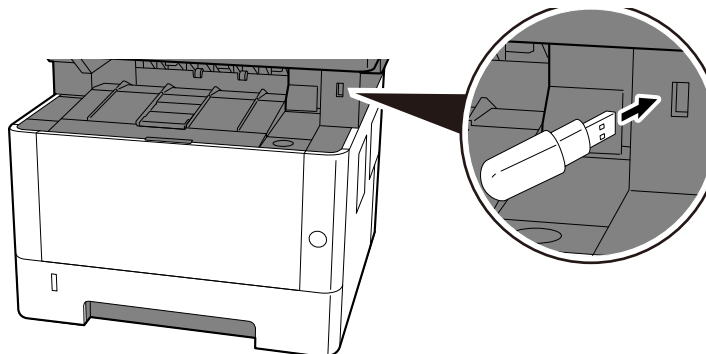

When the machine recognizes the USB drive, the message "USB Drive is recognized.Displaying files." appears.

- 2 Select [Continue].  
Displays the USB drive operation screen.



### NOTE

If the message does not appear, select [USB Drive] on the Home screen.

---

## 2 Print the document.

- 1 Select the folder containing the file to be printed.



### NOTE

- 1,000 documents can be displayed.
  - To return to a higher level folder, select [Back].
- 

- 2 Select the file to be printed > [Print]
- 3 Change the number of copies, duplex printing, etc. as desired.

For the functions that can be set, refer to the following:

➔ [USB Drive \(Printing Documents\) \(page 304\)](#)

---



### NOTE

After a document saved in the machine is selected, [Use File Settings] may appear in the setting screen for the feature to be used.

**To use the settings saved with the document, select [Use File Settings].**

**If you need to change the print settings, select the desired feature.**

---

- 4 Press the [Start] key.

Printing of the selected file begins.

### 3 Create a folder on the USB Drive.

- 1 Insert the USB drive

Plug the USB drive into the USB Drive Slot.

When the machine recognizes the USB drive, the message "USB Drive is recognized.Displaying files." appears.

- 2 Select [Connected].

Displays the USB Drive screen.



#### NOTE

If the message does not appear, select [USB Drive] on the Home screen.

---

- 3 Create a folder.

[Menu] > [Folder Path Entry] > Enter folder name> > [Connected]

The folder is created.

## Saving Documents to USB Drive (Scan to USB)

You can store scanned documents to a removal USB drive.


---

### NOTE

The maximum number of the storable files is 1,000.

---


### 1 Load paper.

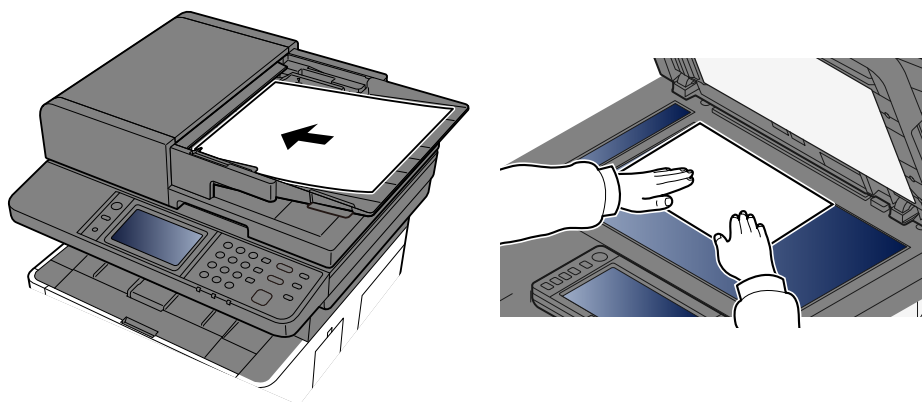

→ [Loading Originals \(page 216\)](#)

### 2 Insert the USB Drive

- 1 Plug the USB drive into the USB Drive Slot.

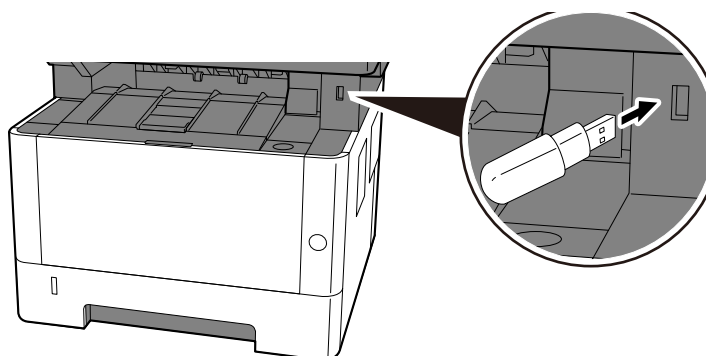

When the machine recognizes the USB drive, the message "USB Drive is recognized.Displaying files." appears.

- 2 Select [Continue].  
Displays the USB Drive screen.

---

### NOTE

If the message does not appear, select [USB Drive] on the Home screen.

---

### 3 Store the document.

- 1 Select the folder where the file will be stored.
- 2 Select [Menu] > [Store File].
- 3 Set the type of original, file format, etc., as desired.  
For the functions that can be set, refer to the following:

➡ [USB Drive \(Store File\) \(page 302\)](#)

- 4 Check the storing image.
- 5 Press the [Start] key.  
The original is scanned and the data is stored in the USB drive.

## Check the USB Drive Information

- 1** In the USB drive screen, select [Menu][USB Info]
- 2** Once you confirm the information, select [Close].

## Removing USB Drive

---

### IMPORTANT

Be sure to follow the proper procedure to avoid damaging the data or USB drive.

---

#### 1 Display the screen

[Home] key > [USB Drive]

#### 2 Select [Menu] > [Remove USB]

When "USB Drive can be safely removed." is displayed, select [OK] then remove the USB drive.

---



#### NOTE

USB drive can also be removed via Device Information.

➔ [Device Information \(page 381\)](#)

Tapping the USB drive icon shown at the top of the touch panel and selecting [Remove USB] allows you to safely remove the USB drive.

➔ [Home screen \(page 57\)](#)

---

# Cloud Linkage Function

Use Cloud Access to link the cloud service (Google Drive) this machine. You can save scanned documents to a folder in the cloud service and print files in the cloud service.

Access the cloud service in advance, upload the file you want to print, and create a destination folder.

This section explains procedures for individual users who do not need administrator rights to use the cloud integration function as an example. The action is as follows:

- 1 Set up files and folders in a cloud service.**
- 2 Install Cloud Access.**
- 3 Set Cloud Access user account (authentication information).**
- 4 Link with the cloud service.**
- 5 Scan and print through the cloud service.**



## NOTE

For procedures for users who require administrator privileges to use the cloud linkage function, refer to the following:

➔ [Cloud Access User Guide](#)

---

## Set up files and folders in a cloud service.

Before using the cloud linkage function, please do the following preparations in the cloud service:

- 1 Upload the file you want to print.**
- 2 Create a destination folder.**

# Installing Cloud Access

---

## IMPORTANT

Depending on the usage environment, the installation may take some time to complete. Do not force a termination during the installation.

---

### 1 Downloading Installer

➔ [Downloading and installing from the website \(page 97\)](#)

### 2 Click the installer.

The installer will start up.

### 3 Select the setup language > [OK]

### 4 Scroll and confirm the license agreement and select [Accept] > [Next].

### 5 Select [Next] in the "Information" screen.

The "Information" screen displays additional components that will be installed on the computer.

### 6 Select [Next] without checking [Manage settings as an administrator.].



#### NOTE

To manage Cloud Access as an administrator for your organization or team, select this setting.

➔ [Cloud Access User Guide](#)

---

### 7 Select [Install].

Installation of the application begins.

### 8 Select [Restart computer now], then select [Finish].

## Set Cloud Access user account (authorization information).

Set the Cloud Access user authorization information to link with the cloud.

### 1 Double-click the Cloud Access icon.

The browser launches and the Cloud Access setup screen appears.



#### NOTE

You can also display the setup screen by entering the following URL in a browser.

<https://cloudaccessapp.com:11022/>

---

### 2 Select [Start].

### 3 Set Cloud Access account (authorization information).

Enter the following information:

- User Name
- Name
- E-mail Address
- Password



#### NOTE

Enter a new security password of 8 or more characters and symbols. You can include symbols.

---

### 4 Select [Generate PIN].

A 6-digit PIN code will be generated, so please write it down.

### 5 Select a question from the [Security Question] drop-down list and enter your answer.

This information is used to verify the user identity and recover the password.

### 6 Select [Next].

Advances to the proxy setting screen.

### 7 Enter the address and port of the proxy server > [Next]

Check it from your browser. If you do not know them, please contact your provider.



#### NOTE

The same username and password as those set in the previous step are displayed.

---

- 8 Confirm the printer that you want to link with the cloud service, and select [Connect].**
- 9 Select [Finish] and then "Sign in".**

## Linkage with the Cloud Service

Link Cloud Access account with the cloud service and set up the folders and files you want to use.

- 1** Select **[Add]** in the "Linked Cloud Service Account" screen.
- 2** Select **[Google Drive]** in the "Select your cloud service" screen.
- 3** Select **[Connect to Google]**.
- 4** On the "Sign in" screen, select the user (e-mail address) of the cloud service.
- 5** Enter the password > **[Next]** > **[Continue]**  
Go to the screen to link with the cloud service to be used.
- 6** Select **[Set up folders and files]**.
- 7** Select **[Add folder]**.
- 8** Select the destination folder for scanned data created on the cloud service > **[Select]** > **[Next]**
- 9** Select the file you want to print from the files uploaded to the cloud service > **[Select]**



### NOTE

- Printable file formats are JPEG, PDF, and TIFF.
  - To print multiple files, select them while pressing and holding **[Shift]**.
- 

## 10 Confirm that printable files are displayed > **[Finish]**

---



### NOTE

You can add, edit, and delete scanned folders and printable files. Select **[Home]**, and then select **[Setup]** of the email address. Select "Scan Destinations" and "Printable Files" tabs, set them, and then select **[Save]**.

---

This completes the operation of the cloud service linkage in Cloud Access. Next, use the operation panel to link this machine with the could service via the Cloud Access and perform scan/print operations.

# Scan and Print using the Cloud Service

## Print a file on the cloud service

### 1 Display the screen

If [Cloud Access] is displayed on the Home screen, this step is not necessary.

- 1 [System Menu/Counter] > [Function Settings] > [Cloud Access Setting]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 [Connect to Cloud Access] > [On]
- 3 Select [Edit Restriction], [Off], or [Administrator Only].
- 4 Select [System Menu/Counter] key > [Function Settings] > [Home] > [Customize Desktop] > [Add] > [Connect to Cloud Access]
- 5 [OK] > [Close]

### 2 Log in to the cloud service from this machine

- 1 [Home] key > [Cloud Access]  
The connection list appears.
- 2 Select the name of the connection.
- 3 Enter your user ID and password to connect to Cloud Access > [Login]



#### NOTE

You can also select [Other Login] and enter the PIN code created when you set up your Cloud Access account.

---

### 3 Print a file in Google Drive

- 1 [Google Drive] > [OK]



#### NOTE

You can search for the target folder or file on the search screen.

---

- 2 Select the file to be printed > [Menu] > [Print]
- 3 Select and set print functions as needed.

### 4 Press the [Start] key.

Printing begins.

## Scan and send files to the cloud service

### 1 Display the screen

If [Cloud Access] is displayed on the Home screen, this step is not necessary.

- 1 [System Menu/Counter] key > [Function Settings] > [Cloud Access Setting]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 [Connect to Cloud Access] > [On]
- 3 Select [Edit Restriction], [Off], or [Administrator Only].
- 4 Select [System Menu/Counter] key > [Function Settings] > [Home] > [Customize Desktop] > [Add] > [Connect to Cloud Access]
- 5 [OK] > [OK] > [Close] > [Close] > [Close]

### 2 Log in to the cloud service from this machine

- 1 [Home] key > [Cloud Access]  
The connection list appears.
- 2 Select the name of the connection.
- 3 Enter your user ID and password to connect to Cloud Access > [Login]



#### NOTE

You can also select [Other Login] and enter the PIN code created when you set up your Cloud Access account.

---

### 3 Send a file to a folder in Google Drive

- 1 [Google Drive] > [OK]



#### NOTE

You can search for the target folder on the search screen.

---

- 2 Select the file to send > [Menu] > [Send]
- 3 Select and set send functions as needed.

### 4 Press the [Start] key.

Sending starts.

---

## 6 Using Various Functions

---

# About Functions Available on the Machine

This machine provides the various functions available.

## Copy

For details on each function, see the table below.

Function	Description
[Paper Selection]	Select the cassette or multipurpose tray that contains the required paper size. ➔ <a href="#">Paper Selection (page 307)</a>
[Collate]	Prints the output by page or set. ➔ <a href="#">Collate (page 312)</a>
[ID Card Copy]	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet. ➔ <a href="#">ID Card Copy (page 313)</a>
[Duplex]	Produces two-sided copies. You can also create single-sided copies from two-sided originals. ➔ <a href="#">Duplex (When copying) (page 336)</a>
[Zoom]	Adjust the zoom to reduce or enlarge the image. ➔ <a href="#">Zoom (When copying) (page 326)</a>
[Combine]	Combines 2 or 4 original sheets into 1 printed page. ➔ <a href="#">Combine (page 329)</a>
[Border Erase]	Erases the black borders that form around the image. ➔ <a href="#">Border Erase (page 332)</a>
[Original Size]	Specify the original size to be scanned. ➔ <a href="#">Original Size (page 305)</a>
[Original Orientation]	Select the orientation of the original document top edge to scan correct direction. ➔ <a href="#">Original Orientation (page 311)</a>
[Mixed Size Originals][Mixed Size Orig.]	Scan the documents of different sizes that are set in the document processor all at once. ➔ <a href="#">Mixed Size Originals (page 309)</a>
[Original Image]	Select original image type for best results. ➔ <a href="#">Original Image (page 315)</a>
[Density]	Adjust density. ➔ <a href="#">Density (page 314)</a>
[EcoPrint]	EcoPrint saves toner when printing. ➔ <a href="#">EcoPrint (page 318)</a>
[Continuous Scan]	Scans a large number of originals in separate batches and then produces as one job. ➔ <a href="#">Continuous Scan (page 339)</a>

Function	Description
[File Name Entry]	Name a document. ➔ <a href="#">File Name Entry (page 341)</a>
[Job Finish Notice]	Sends E-mail notice when a job is complete. ➔ <a href="#">Job Finish Notice (page 340)</a>
[Priority Override]	Suspends the current job and gives a new job top priority. ➔ <a href="#">Priority Override (page 342)</a>
[Sharpness]	Adjusts the sharpness of image outlines. ➔ <a href="#">Sharpness (page 320)</a>
[Contrast]	You can adjust the contrast between light and dark areas of the image. ➔ <a href="#">Contrast (page 324)</a>
[Background Density Adj.]	Removes dark background from originals, such as newspapers. ➔ <a href="#">Background Density Adj. (page 321)</a>
[Prevent Bleed-thru]	Hides background colors and image bleed-through when scanning thin original. ➔ <a href="#">Prevent Bleed-thru (page 323)</a>
[Erase Colors]	Erases colors in the source document. ➔ <a href="#">Erase Colors (page 325)</a>
[Skip Blank Page]	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank. ➔ <a href="#">Skip Blank Page (page 344)</a>

# Send

For details on each function, see the table below.

Function	Description
[Color Selection]	Select the color setting. ➔ <a href="#">Color Selection (page 319)</a>
[Original Size]	Specify the original size to be scanned. ➔ <a href="#">Original Size (page 305)</a>
[Original Image]	Select original image type for best results. ➔ <a href="#">Original Image (page 315)</a>
[Scan Resolution]	Select fineness of scanning resolution. ➔ <a href="#">Scan Resolution (page 356)</a>
[Sending Size]	Select size of image to be sent. ➔ <a href="#">Sending Size (page 346)</a>
[Border Erase/Full Scan]	Erases the black borders that form around the image. ➔ <a href="#">Border Erase (page 332)</a>
[Zoom]	Adjust the zoom to reduce or enlarge the image. ➔ <a href="#">Zoom (When printing/sending/storing) (page 328)</a>
[Original Orientation]	Select the orientation of the original document top edge to scan correct direction. ➔ <a href="#">Original Orientation (page 311)</a>
[Mixed Size Originals]	Scan the documents of different sizes that are set in the document processor all at once. ➔ <a href="#">Mixed Size Originals (page 309)</a>
[Continuous Scan]	Scans a large number of originals in separate batches and then produces as one job. ➔ <a href="#">Continuous Scan (page 339)</a>
[File Format]	Specify the image file format. Image quality level can also be adjusted. ➔ <a href="#">File Format (page 348)</a>
[File Name Entry]	Name a document. ➔ <a href="#">File Name Entry (page 341)</a>
[Email Subject/Body]	Adds subject and body when sending a document. ➔ <a href="#">Email Subject/Body (page 358)</a>
[Job Finish Notice]	Sends E-mail notice when a job is complete. ➔ <a href="#">Job Finish Notice (page 340)</a>
[Fax TX Resolution]	Select fineness of images when sending FAX. Displays only for fax models. ➔ <b>FAX Operation Guide</b>

Function	Description
[Fax Delayed Transmission]	Set a send time. Displays only for fax models. ➔ <b>FAX Operation Guide</b>
[Fax Direct Transmission]	Sends FAX directly without reading original data into memory. Displays only for fax models. ➔ <b>FAX Operation Guide</b>
[Fax Polling RX]	Dial the destination and receive documents for Polling Transmission stored in the polling box. Displays only for fax models. ➔ <b>FAX Operation Guide</b>
[Fax TX Report]	Print a report of fax transmission results. This item is displayed for fax-compatible machines. ➔ <b>FAX Operation Guide</b>
[Density]	Adjust density. ➔ <a href="#">Density (page 314)</a>
[Clarify Text (Noise Removal)]	When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text. ➔ <a href="#">Clarify Text (Noise Removal) (page 357)</a>
[Duplex]	Select the type and orientation of the binding based on the original. ➔ <a href="#">Duplex (page 345)</a>
[FTP Encrypted TX]	Encrypts images when sending via FTP. ➔ <a href="#">FTP Encrypted TX (page 359)</a>
[File Separation]	Creates a file for each scanned original data page and sends the files. ➔ <a href="#">File Separation (page 355)</a>
[Sharpness]	Adjusts the sharpness of image outlines. ➔ <a href="#">Sharpness (page 320)</a>
[Contrast]	You can adjust the contrast between light and dark areas of the image. ➔ <a href="#">Contrast (page 324)</a>
[Background Density Adj.]	Removes dark background from originals, such as newspapers. ➔ <a href="#">Background Density Adj. (page 321)</a>
[Saturation]	Adjust the color saturation of the image. ➔ <a href="#">Saturation (page 322)</a>
[Prevent Bleed-thru]	Hides background colors and image bleed-through when scanning thin original. ➔ <a href="#">Prevent Bleed-thru (page 323)</a>
[Erase Colors]	Erases colors in the source document. ➔ <a href="#">Erase Colors (page 325)</a>

Function	Description
[Detect Folded Corner Originals]	When scanning a document from the document processor, scanning is automatically stopped when a document with a folded corner is detected. ➔ <a href="#">Detect Folded Corner Originals (page 343)</a>
[Skip Blank Page]	When there are blank pages in a scanned document, this function skips the blank pages and sends only pages that are not blank. ➔ <a href="#">Skip Blank Page (page 344)</a>
[Email Encrypted TX]	Sends encrypted E-mail using the electronic certificate. ➔ <a href="#">Email Encrypted TX (page 360)</a>
[Digital Signature]	Add a digital signature to the email, using the electronic certificate. ➔ <a href="#">Digital Signature to Email (page 361)</a>

## USB Drive (Store File, Printing Documents)

For details on each function, see below:

➔ [USB Drive \(Store File\) \(page 302\)](#)

➔ [USB Drive \(Printing Documents\) \(page 304\)](#)

### USB Drive (Store File)

For details on each function, see the table below.

Function	Description
[Color Selection]	Select the color setting. ➔ <a href="#">Color Selection (page 319)</a>
[Original Size]	Specify the original size to be scanned. ➔ <a href="#">Original Size (page 305)</a>
[Original Image]	Select original image type for best results. ➔ <a href="#">Original Image (page 315)</a>
[Scan Resolution]	Select fineness of scanning resolution. ➔ <a href="#">Scan Resolution (page 356)</a>
[Storing Size]	Select size of image to be stored. ➔ <a href="#">Storing Size (page 363)</a>
[Border Erase/Full Scan]	Erases the black borders that form around the image. ➔ <a href="#">Border Erase (page 332)</a>
[Zoom]	Adjust the zoom to reduce or enlarge the image. ➔ <a href="#">Zoom (When printing/sending/storing) (page 328)</a>
[Original Orientation]	Select the orientation of the original document top edge to scan correct direction. ➔ <a href="#">Original Orientation (page 311)</a>
[Mixed Size Originals]	Scan the documents of different sizes that are set in the document processor all at once. ➔ <a href="#">Mixed Size Originals (page 309)</a>
[Continuous Scan]	Scans a large number of originals in separate batches and then produces as one job. ➔ <a href="#">Continuous Scan (page 339)</a>
[File Format]	Specify the image file format. Image quality level can also be adjusted. ➔ <a href="#">File Format (page 348)</a>
[File Separation]	Creates a file for each scanned original data page and sends the files. ➔ <a href="#">File Separation (page 355)</a>
[File Name Entry]	Name a document. ➔ <a href="#">File Name Entry (page 341)</a>
[Job Finish Notice]	Sends E-mail notice when a job is complete. ➔ <a href="#">Job Finish Notice (page 340)</a>

Function	Description
[Density]	Adjust density. ➡ <a href="#">Density (page 314)</a>
[Clarify Text (Noise Removal)]	When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text. ➡ <a href="#">Clarify Text (Noise Removal) (page 357)</a>
[Duplex]	Select the type and orientation of the binding based on the original. ➡ <a href="#">Duplex (page 345)</a>
[Sharpness]	Adjusts the sharpness of image outlines. ➡ <a href="#">Sharpness (page 320)</a>
[Contrast]	You can adjust the contrast between light and dark areas of the image. ➡ <a href="#">Contrast (page 324)</a>
[Background Density Adj.]	Erases colors in the source document. ➡ <a href="#">Erase Colors (page 325)</a>
[Saturation]	Adjust the color saturation of the image. ➡ <a href="#">Saturation (page 322)</a>
[Prevent Bleed-thru]	Hides background colors and image bleed-through when scanning thin original. ➡ <a href="#">Prevent Bleed-thru (page 323)</a>
[Erase Colors]	Erases colors in the source document. ➡ <a href="#">Erase Colors (page 325)</a>
[Skip Blank Page]	When there are blank pages in a scanned document, this function skips the blank pages and stores only pages that are not blank. ➡ <a href="#">Skip Blank Page (page 344)</a>

## USB Drive (Printing Documents)

Function	Description
[Paper Selection]	Select the cassette or multipurpose tray that contains the required paper size. ➡ <a href="#">Paper Selection (page 307)</a>
[Collate]	Prints the output by page or set. ➡ <a href="#">Collate (page 312)</a>
[Duplex]	Print a document to 1-side or 2-sides. ➡ <a href="#">2-sided (USB drive) (page 338)</a>
[File Name Entry]	Name a document. ➡ <a href="#">File Name Entry (page 341)</a>
[Job Finish Notice]	Sends E-mail notice when a job is complete. ➡ <a href="#">Job Finish Notice (page 340)</a>
[EcoPrint]	EcoPrint saves toner when printing. ➡ <a href="#">EcoPrint (page 318)</a>
[Priority Override]	Suspends the current job and gives a new job top priority. ➡ <a href="#">Priority Override (page 342)</a>
[Encrypted PDF Password]	Enter the password you set to print the PDF data. ➡ <a href="#">Encrypted PDF Password (page 364)</a>
[JPEG/TIFF Print]	Select the image size when printing JPEG or TIFF files. ➡ <a href="#">JPEG/TIFF Print (page 365)</a>
[XPS Fit to Page]	Reduces or enlarges the image size to fit to the selected paper size when printing XPS file. ➡ <a href="#">XPS Fit to Page (page 366)</a>

# Functions

On pages that explain a convenient function, the modes in which that function can be used are indicated by icons.



## Original Size



Specify the original size to be scanned.

### [Auto (Standard Size)]

Value	Description
-	Specify the original size. This function is displayed when [Auto (Standard Size)] of System Menu set to [On]. ➔ <a href="#">Auto Detect Original Size (DP) (page 398)</a>

### [Auto (Non-standard Size)]

Value	Description
-	Scans an original of non-standard size, and automatically measures and sets the original size.

### [Metric]

Value	Description
A4, A5, A6, B5, B6, Folio, 216 × 340 mm	Select from standard sizes of Metric.

### [Inch]

Value	Description
Letter, Legal, Statement, Oficio II, Exective	Select from standard sizes of Inch.

### [Others]

Value	Description
16K postcard, return postcard, custom, Envelope Monarch, Envelope #10, Envelope #9, Envelope #6, Envelope DL, Envelope C5, ISO B5, Yougata 2, Yougata 4, Nagagata 3, Nagagata 4, Younaga 3	Select from special standard sizes and custom original sizes. For instructions on how to specify the custom original size, refer to the following: ➔ <a href="#">Custom Original Size (page 398)</a>



**NOTE**

Be sure to always specify the original size when using custom size original.

---

## Paper Selection



Select the cassette or multipurpose tray that contains the required paper size. If [Auto] is selected, paper the same size as the original is automatically selected.



### NOTE

- Specify in advance the size and type of the paper loaded in the cassette.
- Cassettes after Cassette 2 are displayed when the optional paper feeder is installed.

To change the paper size and media type of the multipurpose tray, select [Change Multipurpose Tray Settings] and change the Paper Size and Media Type. The available paper sizes and media types are shown in the table below.

## Paper Size

### Standard Size

Value	Description
A4, A5-R, A5, A6, B5, B6, Letter, Legal, Statement, Executive, Oficio II, Folio, 216 × 340 mm, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Yougata 4, Yougata 2, Nagagata 3, Nagagata 4, Younaga 3, Custom *1	Select from Standard Size and custom sizes.

### [Size Entry]

Value	Description
Metric X: 70 to 216 mm (in 1 mm increments) Y: 148 to 356 mm (in 1 mm increments)	Enter the size not included in Standard Size. The input units can be changed in System Menu. If [Size Entry] is selected, use [▲], [▼], or [Numeric keys] to set the size of "X" (width) and "Y" (length).
Inch X: 2.76 to 8.50" (in 0.01" increments) Y: 5.83 to 14.02" (in 0.01" increments)	

## Media Type

Value	Description
Plain (60 to 105 g/m <sup>2</sup> ), Transparency, Labels, Recycled, Preprinted *2, Bond, Cardstock, Color, Prepunched *2, Letterhead *2, Envelope, Thick (106 to 220 g/m <sup>2</sup> ), High Quality, Custom 1 to 8 *2	Select the media type. Displayed after setting [Standard Size] and [Size Entry].

\*1: For instructions on how to specify the custom paper size, refer to the following:

➔ [\[Custom Paper Settings\] \(page 402\)](#)

\*2: For instructions on how to specify the custom paper types 1 to 8, refer to the following:

➔ [\[Media Type Setting\] \(page 403\)](#)

To print on preprinted or prepunched paper or on letterhead, refer to the following:

□ □ [\[Special Paper Action\] \(page 406\)](#)



#### NOTE

- You can conveniently select in advance the size and type of paper that will be used often and set them as default.  
➔ [\[MP Tray Settings\] \(page 401\)](#)
  - If paper of the specified paper size is not loaded in the paper source cassette or multipurpose tray, the confirmation screen appears. When the setting is , if the detected size of paper is not loaded, a paper confirmation screen appears. Load the required paper in the multipurpose tray and select the [OK] key. Copying begins.
-

## Mixed Size Originals



Scan the documents of different sizes that are set in the document processor all at once. This function cannot be used if platen is used.

### Copying

Value	Description
[Off]	—
[Same Width]	Scans and copies multiple sheets of the same width using the document processor.
[Different Width]	Scans and copies multiple sheets of different width using the document processor.

### Sending/Storing

Value	Description
[Off]	—
[Same Width]	Scans and sends/stores multiple sheets of the same width using the document processor.
[Different Width]	Scans and sends/stores multiple sheets of different width using the document processor.


## Supported Combinations of Originals

### [Same Width]

When the original widths are the same, the combinations of originals that can be placed are as follows.

- A4 and Folio (Legal and Letter)

#### Example: Folio and A4

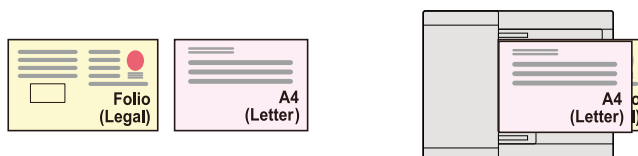

### [Different Width]

The supported combinations of originals are as follows.

- Letter, A4, Folio, Legal

#### Example: A4, Legal

 **IMPORTANT**

When placing originals of different width, arrange the originals so that their left sides and top sides are aligned, and place the originals in alignment with the far width guide. If the originals are not aligned in this way, they may not be scanned correctly, and skewing or original jams may result.

---

## Copy Size

Originals are detected individually for size and copied to the same size paper as originals.

---

 **NOTE**

This function is available regardless of whether originals have the same width or not.

---

## Original Orientation




Select the orientation of the original document top edge to scan correct direction.

To use any of the following functions, the document's original orientation must be set.


- 2-Sided
- Border Erase, Border Erase/Full Scan
- Combine
- 2-Sided (2-Sided originals)

Select the orientation of the original from [Top Edge on Top], [Top Edge on Left] or [Auto].

### [Top Edge on Top]

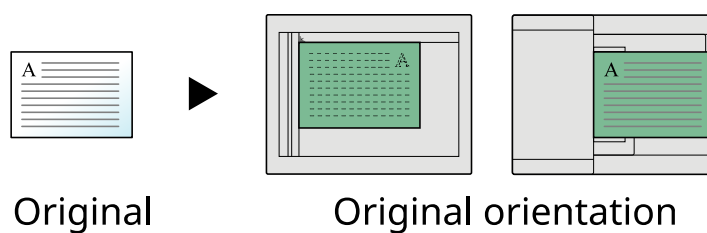

### [Top Edge on Left]

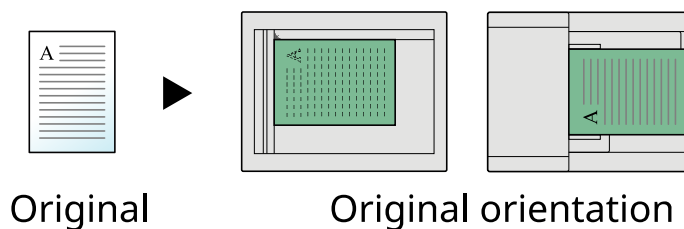

### NOTE

The default setting for Original Orientation can be changed.

➔ [Function Defaults \(page 420\)](#)

## Collate



Scans multiple originals and delivers complete sets of copies as required according to page number.  
(Values [Off]/[On])




## ID Card Copy



Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.

(Values [Off]/[On])

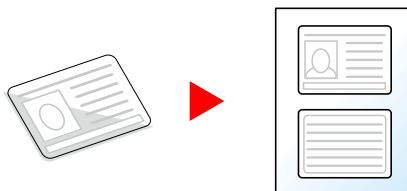

## Density



Make the overall density darker or lighter.

Select [-4] to [4] (lighter to darker) to set the darkness.



## Original Image



Select original image type for best results.

### Original Image Quality (Copy)

#### [Text+Photo]

##### Highlighter Enhancement

Value	Description
[Off], [On (Normal)], [On (Bright)]	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].



#### NOTE

If gray text is not printed completely using [Text+Photo], selecting [Text] may improve the result.

#### [Photo]

Best for photos taken with a camera.

#### [Text]

##### Highlighter Enhancement

Value	Description
[Off], [On (Normal)], [On (Bright)]	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].

#### [Printer Output]

##### Highlighter Enhancement

Value	Description
[Off], [On (Normal)], [On (Bright)]	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].

**[Graphic/Map]****Highlighter Enhancement**

Value	Description
[Off], [On (Normal)], [On (Bright)]	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].

## Original Image (When sending/printing/saving)

### [Text+Photo]

Best for mixed text and photo documents.

#### Highlighter Enhancement

Value	Description
[Off], [On (Normal)], [On (Bright)]	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].

### [Photo]

Best for photos taken with a camera.

### [Text]

#### Highlighter Enhancement

Value	Description
[Off], [On (Normal)], [On (Bright)]	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].

## EcoPrint



EcoPrint saves toner when printing. Use this function for test prints or any other occasion when high quality print is not required.



Value: [Off], [On]

## Color Selection



Select the color setting.

### Sending/Storing

Item	Description
[Auto Color (Color/Grayscale)]	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Grayscale.
[Auto Color (Color/B & W)]	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Black and White.
[Full Color]	Scans the document in full color.
[Grayscale]	Scans the document in grayscale. Produces a smooth, detailed image.
[Black & White]	Scans the document in black and white.

# Sharpness



Adjusts the sharpness of image outlines.

When copying penciled originals with rough or broken lines, clear copies can be taken by adjusting sharpness toward "Sharpen". When copying images made up of patterned dots such as magazine photos, in which moire <sup>\*1</sup> patterns appear, edge softening and weakening of the moire effect can be obtained by setting the sharpness toward "Blur".

Less Sharp



Original



More Sharp



Value	Description
[1] to [3] (Sharpen)	Emphasizes the image outline.
[-1] to [-3] (Blur)	Blurs the image outline. Can weaken a Moire <sup>*1</sup> effect.

<sup>\*1</sup> Patterns that are created by irregular distribution of halftone dots.

# Background Density Adj.



Removes dark background from originals, such as newspapers.

If the background color is obtrusive, select [Auto]. If selecting does not remove the background color, select [Manual] and adjust the density of the background color.

Item	Description
[Off]	Does not adjust the ground color.
[Auto]	Automatically adjusts the background density based on the original.
[Manual]	Select [1] to [7] (Lighter to Darker) to adjust the background density manually.

# Saturation



Adjust the color saturation of the image.

Grayish



Results in paler color.

Original



Vivid



Results in more vivid color.

**NOTE**

This feature is used when full color or auto color are selected in [Color Selection]. Saturation is disabled if Auto Color detects black and white originals.


Item	Description
[-1] to [-3] (lighter)	Results in paler color.
[1] to [3] (darker)	Results in more vivid color.

## Prevent Bleed-thru



Hides background colors and image bleed-through when scanning thin original.

(Values [Off]/[On])

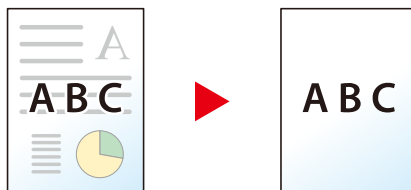

# Contrast

Copy

Send

USB Drive

You can adjust the contrast between light and dark areas of the image.

Lower



Original



Higher



Item	Description
1 to [4]	Increases the sharpness of colors.
[-1] to [-4]	Creates smoother colors.

# Erase Colors



Erases colors in the source document.

[Off]/[On]

Value	Description
[Yellow], [Red], [Cyan], [Magenta], [Green], [Blue], [Black]	Select the colors to erase. You can select up to 6 colors. Choose the color and select [Select] > [Details] to adjust the range for erasing.

Value	Description
[1] (Narrower) to [5] (Wider)	The larger the number, the wider the range of colors you want to erase. For example, if you specify [Yellow] and select [5] (Wider) from the color range, greens and reds close to yellow will be erased.

NOTE

If you select only [Black], you cannot set the "Color Range" color range.

# Zoom




Adjust the zoom to reduce or enlarge the image.

## Zoom (When copying)

The following zoom options are available.

### [Auto]

Adjusts the image to match the paper size.

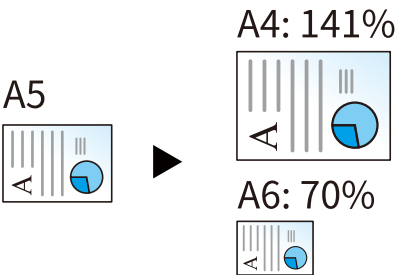

## Standard Zoom

Select from main Standard Zoom and perform Zoom.

[200%]	—
[141%]	A5→A4
[115%]	B5→A4
[100%]	-
[86%]	A4→B5
[70%]	A4→A5
[50%]	—

### More[More]

You can also select other magnifications. \*1


[400%]	Maximum
[200%]	-
[141%]	A5→A4
[129%]	STMT → Letter
[115%]	B5→A4
[90%]	Folio→ A4
[86%]	A4→B5
[78%]	Legal→ Letter

[70%]	A4→A5
[64%]	Letter→ STMT
[50%]	—
[25%]	Minimum

\*1: STMT = Statement

Zoom Entry

Manually reduces or enlarges the original image in 1% increments between 25% and 400%. [ + ] , [ - ], or the numeric keys can be used to set the value.

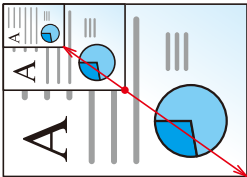

## Zoom (When printing/sending/storing)

Item	Description
[100%]	Reproduces the original size.
[Auto]	Reduces or enlarges original to sending/storing size.



### NOTE

To reduce or enlarge the image, select the paper size, sending size, or storing size.

➔ [Paper Selection \(page 307\)](#)

➔ [Sending Size \(page 346\)](#)


➔ [Storing Size \(page 363\)](#)

---

# Combine



Combines 2 or 4 original sheets into 1 printed page.  
You can select the page layout and the type of boundary lines around the pages.  
The following types of the boundary lines are available.

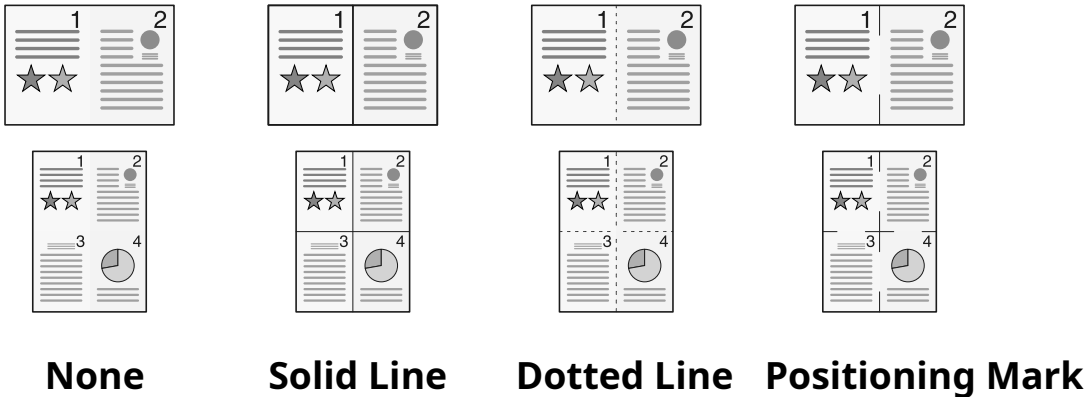

[Off]

[2 in 1]

If you select [More], you can perform the following settings.

➡ [Function Defaults \(page 420\)](#)

### Layout

Value	Description
[Left to Right/Top to Bottom] [Right to Left/Bottom to Top]	Select the page layout of scanned originals and select the [OK] key.

### Border Line

Value	Description
[None], [Solid Line], [Dotted Line], [Positioning Mark]	Set the boundary line type and select the [OK] key.

### Original Orientation

Value	Description
[Top Edge on Top], [Top Edge on Left]	Select the orientation of the original document top edge to scan correct direction.  Select the orientation of the original from [Top Edge on Top] or [Top Edge on Left] and select the [OK] key.

[4 in 1]

If you select [More], you can perform the following settings.

➡ [Function Defaults \(page 420\)](#)

Layout

Value	Description
[Right then Down], [Down then Right], [Left then Down], [Down then Left]	Select the page layout of scanned originals and select the [OK] key.

Border Line


Value	Description
[None], [Solid Line], [Dotted Line], [Positioning Mark]	Set the boundary line type and select the [OK] key.

Original Orientation


Value	Description
[Top Edge on Top], [Top Edge on Left]	Select the orientation of the original document top edge to scan correct direction.  Select the orientation of the original from [Top Edge on Top] or [Top Edge on Left] and select the [OK] key.

Layout image (2 in 1)

[Left to Right/Top to Bottom]

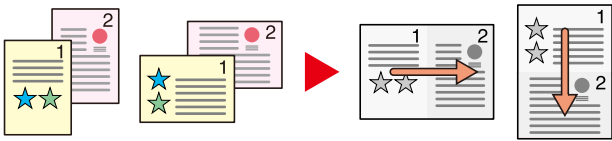


[Right to Left/Bottom to Top]

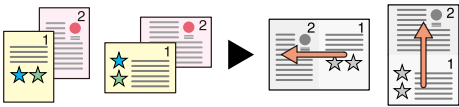


Layout image (4 in 1)


[Right then Down]

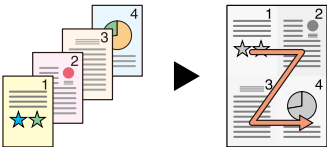


[Left then Down]

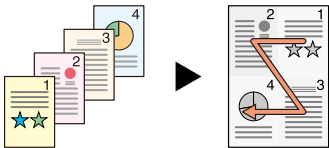

**[Down then Right]**

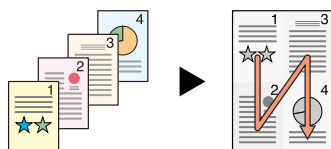

**[Down then Left]**

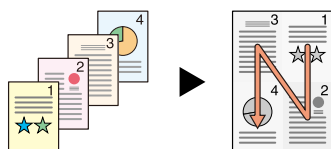

**NOTE**

- The paper sizes supported in Combine mode are A4, A5-R, B5, Folio, 216 × 340 mm, Letter, Legal, Statement, Oficio II, and 16K.
  - When placing the original on the platen, be sure to copy the originals in page order.
-


## Border Erase



Erases the black borders that form around the image. The border can be erased as follows:


### Standard

Erase the black frame created in the original. Erasing width is fixed.

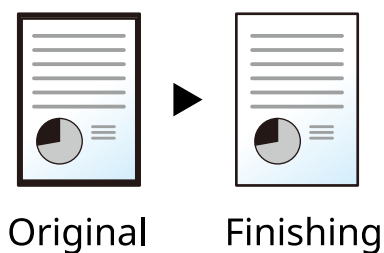


### Full Scan

Scan originals without white margins. No border erase.

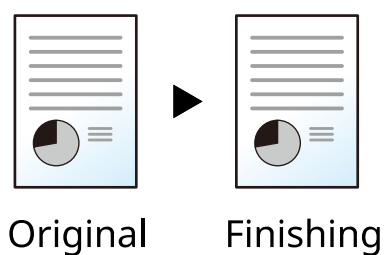

### Border Erase Sheet

Erase the black frame created in the original. Erasing width can be adjusted.

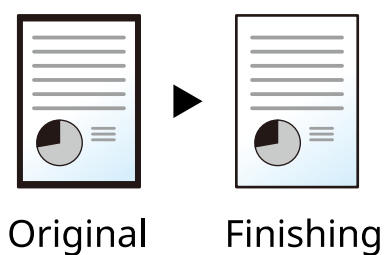


**[Border]**

Value	Description
Centimeters: 0 mm - 50 mm (in 1 mm increments), Inches: 0.00 - 2.00" (in 0.01" increments)	<p>Set the border erase width.*<sup>1</sup></p> <p>Set the value by using [+] or [-].</p> <p>Entry can also be made using the numeric keys.</p> <p>You can set the border erase width for the back side of double-sided originals by setting the border erase width of [Border] and selecting the [OK] key.</p>

Value	Description
[Same as Front Page], [Do Not Erase]	For 2-sided originals, select [Same as Front Page] or [Do Not Erase].

**Border Erase Book**

Erases black borders around the edges and in the middle of the original such as a thick book. You can specify the widths individually to erase the borders around the edges and in the center of the book.

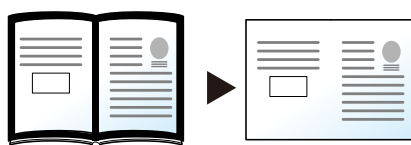

Original

Finishing

**[Border]**

Value	Description
Centimeters: 0 mm - 50 mm (in 1 mm increments), Inches: 0.00 - 2.00" (in 0.01" increments)	<p>Set the border erase width of Border and select the [OK] key.*<sup>1</sup></p> <p>Set the value by using [+] or [-].</p> <p>Entry can also be made using the numeric keys.</p>

**[Gutter]**

Value	Description
Centimeters: 0 mm - 50 mm (in 1 mm increments), Inches: 0.00 - 2.00" (in 0.01" increments)	<p>Set the border erase width of Gutter and select the [OK] key.*<sup>1</sup></p> <p>Set the value by using [+] or [-].</p> <p>Entry can also be made using the numeric keys.</p> <p>You can set the border erase width for the back side of double-sided originals by setting the border erase width of [Border] and [Gutter] and selecting the [OK] key.</p>

Value	Description
[Same as Front Page], [Do Not Erase]	For 2-sided originals, select [Same as Front Page] or [Do Not Erase].

## Individual Border Erase

You can specify border erase widths individually for all edges.



[□]/[□]/[Counter-clockwise]/[Clockwise]

Value	Description
Centimeters: 0 mm - 50 mm (in 1 mm increments), Inches: 0.00 - 2.00" (in 0.01" increments)	Set the border erase widths separately for top, bottom, left, and right, and select the [OK] key.* <sup>1</sup> Set the value by using [+] or [-]. Entry can also be made using the numeric keys. You can set the border erase width for the back side of double-sided originals by setting the border erase width of [Clockwise] and selecting the [OK] key.

Value	Description
[Same as Front Page], [Do Not Erase]	For 2-sided originals, select [Same as Front Page] or [Do Not Erase]

[Original Orientation]

Value	Description
[Top Edge on Top], [Top Edge on Left]	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

### NOTE

- [Full Scan] is not displayed when copying.
- The default setting for border erase width and back side can be changed. For details, refer to the following:
  - ➔ [Border Erase Default \(page 420\)](#)
  - ➔ [Border Erase to Back Page \(page 420\)](#)

\*1: The input units can be changed in System Menu. For details, refer to the following.

➔ [Measurement \(page 391\)](#)

# DuplexDuplex




Produces two-sided copies. You can also create single-sided copies from two-sided originals.

The following modes are available.


## 1-sided>>2-sided

Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank.

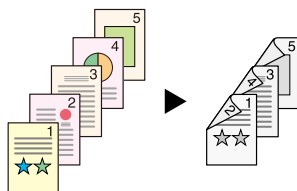

The following binding options are available.

- 1 Binding Left/Right: Images on the second sides are not rotated.
- 2 Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.

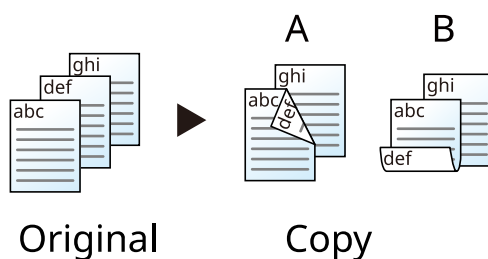

## 2-sided>>1-sided

Copies each side of a two-sided original onto two individual sheets. Place originals in the document processor.


The following binding options are available.

- Binding Left/Right: Images on the second sides are not rotated.
- Binding Top: Images on the second sides are rotated 180 degrees.



## 2-sided>>2-sided

Produces two-sided copies from two-sided originals. Place originals in the document processor.

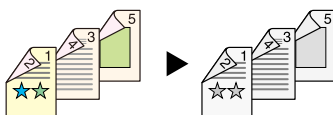

### NOTE

The paper sizes supported in Duplex mode: A4, A5-R, A6, B5, Letter, Legal, Statement, Executive, Oficio II, Folio, 16K, ISO B5

## Duplex (When copying)

Prints 1-sided originals to 2-sided, or 2-sided originals to 1-sided. Select the binding orientation for original and finished documents.

### [1-sided>>1-sided]

Disables the function.

### [1-sided>>2-sided]

→ [Function Defaults \(page 420\)](#)

If you select [Details], you can perform the [Binding in Finishing] and [Original Orientation] settings.

#### Finish. Binding

Value	Description
[BindingLeft/Right], [BindingTop]	Select the binding orientation and select the [OK] key.

#### Original Orientation

Value	Description
[Top Edge on Top], [Top Edge on Left]	Select the orientation of the original document top edge to scan correct direction. Select the orientation of the original from [Top Edge on Top] or [Top Edge on Left] and select the [OK] key.

### [2-sided>>1-sided]

If you select [Details], you can perform the [Binding in Original] and [Original Orientation] settings.

#### Binding in Original

Fixed value	Description
[BindingLeft/Right], [BindingTop] → <a href="#">Function Defaults (page 420)</a>	Select the binding direction of originals and select the [OK] key.

**Original Orientation**

Value	Description
[Top Edge on Top], [Top Edge on Left]	Select the orientation of the original document top edge to scan correct direction. Select the orientation of the original from [Top Edge on Top] or [Top Edge on Left] and select the [OK] key.

**[2-sided>>2-sided]**

➔ [Function Defaults \(page 420\)](#)

If you select [Details], you can perform the [Binding in Original], [Binding in Finishing], and [Original Orientation] settings.

**Binding in Original**

Value	Description
[BindingLeft/Right], [BindingTop]	Select the binding direction of originals and select the [OK] key.

**Finish. Binding**

Value	Description
[BindingLeft/Right], [BindingTop]	Select the binding orientation and select the [OK] key.

**Original Orientation**

Value	Description
[Top Edge on Top], [Top Edge on Left]	Select the orientation of the original document top edge to scan correct direction. Select the orientation of the original from [Top Edge on Top] or [Top Edge on Left] and select the [OK] key.

When placing the original on the platen, consecutively replace each original and press the [Start] key.

After scanning all originals, select [Finish Scan]. Copying begins.

## 2-sided (USB drive)

Prints the document on both sides.

Select binding orientation for duplex mode.

### [1-sided]

Disables the function.

### [Duplex]

➔ [Function Defaults \(page 420\)](#)

If you select [Details], you can perform the [Binding in Finishing] and settings.

If you select [Description], you can perform the [Finished Binding Direction] settings.

#### Binding

Value	Description
[Left/Right]	Prints on both sides so that the correct orientation is achieved when binding the paper on the left or right.
[Top]	Prints on both sides so that the correct orientation is achieved when binding the paper at the top.


## Continuous Scan



Scans a large number of originals in separate batches and then produces as one job.

Scanning of originals will continue until [Finish Scan] is selected.

Value: [Off]/[On]

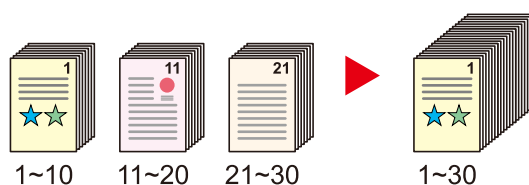

## Job Finish Notice



Sends E-mail notice when a job is complete.

It can also be set up to send a notice when a job is interrupted.

Users can be notified of the completion of a job while working at a remote desk, saving the time spent waiting beside the machine to finish.



### NOTE

- PC should be configured in advance so that E-mail can be used. For details, refer to the following:  
➔ [What is Embedded Web Server RX \(page 111\)](#)
- E-mail can be sent to a single destination.
- It is possible to download the scan data to PC from the URL provided in the Job Finish Notice E-mail in the event of "Send to Folder (SMB/FTP)". This is a useful function in case if it is not possible to send/receive a large amount of scan data due to the restriction of the mail attachment file size.

Item	Description
[Off]	—
[Addr. Book]	<p>Choosing from the Address Book or External Address Book For details on the External Address Book, refer to the following:</p> <p>Select the notification destination on the address book or external address book screen, then select [OK].</p>
[Address Entry]	Enter E-mail address directly. Enter the E-mail address (up to 128 characters) and select the [OK] key.

## File Name Entry



Name a document.

Additional information such as job number and date and time can also be set. You can check a job history or job status using the file name, date and time, or job number specified here.

Enter the file name (up to 32 characters).

To add a date and time, select [Date and Time]. To add a job number, select [Job No.]. To add both, select [[Job No.] & [Date and Time]] or [[Date and Time] & [Job No.]].

## Priority Override



Suspends the current job and gives a new job top priority.

The suspended job resumes after the other job is finished.

(Values [Off]/[On])



### NOTE

- This function is not available if current job was an override.
  - Priority printing may not be possible depending on the status of the job being printed and memory usage.
-

# Detect Folded Corner Originals



When scanning a document from the document processor, scanning is automatically stopped when a document with a folded corner is detected.

Value	Description
[Off]	It does not detect.
[On]	If a bent corner is detected, a message is displayed to stop reading the original.

## Skip Blank Page



When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.

Blank pages can be set as pages that include ruled lines and a small number of characters.

The machine detects blank pages, saving unnecessary printing without the need to check for blank pages in the document.

Value: [Off][On]

If [On], select > [Detect Items to Skip] and choose [Blank Pages + Ruled Lines], [Blank Pages Only], or [Blank Pages + Some Text].



### NOTE

The originals with punched holes or originals printed on a colored substrate may not be recognized as blank pages.

---

# Duplex



Select the type and orientation of the binding based on the original.

## [1-sided]

There is no setting for the binding or the original orientation.

## [2-sided]

➔ [Function Defaults \(page 420\)](#)

If you select [Details], you can perform the [Binding in Original] and [Original Orientation] settings.

### [Binding in Original]

Value	Description
[Left/Right], [Top]	Set the binding direction of originals and select the [OK] key.

### [Original Orientation]

Value	Description
[Top Edge on Top], [Top Edge on Left]	Specify the orientation of the original document top edge and select the [OK] key to scan the correct direction.

## Sample image

[2-sided] > [Left/Right]



[2-sided] > [Top]



## Sending Size



Select size of image to be sent.

Select [Same as Original Size], [Metric], [Inch] or [Others] and select Sending Size.

### [Same as Original Size]

Automatically sends the same size as the original.

### [Metric]

Value	Description
A4, A5, A6, B5, B6, Folio, 216 × 340 mm	Select from standard sizes of Metric.

### [Inch]

Value	Description
Letter, Legal, Statement, Oficio II, Executive	Select from standard sizes of Inch.

### [Others]

Value	Description
16K postcard, return postcard, Envelope Monarch, Envelope #10, Envelope #9, Envelope #6, Envelope DL, Envelope C5, ISO B5, Yougata 2, Yougata 4, Nagagata 3, Nagagata 4, Younaga 3	Select from special standard sizes.

## Regarding the relationship among Original Size, Sending Size, and Zoom

Original Size, Sending Size, and Zoom are related to each other. For details, see the table below.

- Original Size and sending size are the same

### Original Size

Specify as necessary.

➔ [Original Size \(page 305\)](#)

### Sending Size

Select [Same as Original Size].

### Zoom

Select [100%] (or [Auto]).

➔ [Zoom \(page 326\)](#)

- Original Size and sending size are different

### Original Size

Specify as necessary.

➔ [Original Size \(page 305\)](#)

### Sending Size

Select the desired size.

### Zoom

Select [Auto].

➡ [Zoom \(page 326\)](#)

---



### NOTE

When you specify the Sending Size that is different from Original Size and select [100%] as Zoom, you can send the image as the actual size (no zoom).

---


# File Format



Specify the image file format. Image quality level can also be adjusted.  
Select the file format from [PDF], [TIFF], [XPS], [JPEG], [OpenXPS], and [High Comp. PDF].  
When the color mode in scanning has been selected for Grayscale or Full Color, set the image quality.  
If you selected [PDF] or [High Comp.PDF], you can specify encryption or PDF/A settings.  
Select the [OK] key to save or send in PDF format. Image quality and PDF/A settings will be set to default values.

## NOTE

The image quality, PDF/A, etc. of each file are as the settings made in the function default settings. For the default settings, refer to the following:  
→ [Function Defaults \(page 420\)](#)

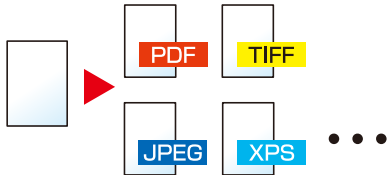

## [PDF]

[Image Quality]

Value	Description
1 Low Quality(High Comp) to 5 High Quality(Low Comp)	Selecting [Details] displays the [Image Quality] screen. Select the image quality, and select the [OK] key.

[Encryption]

Value	Description
[Off], [On]	Set the encrypted PDF and select the [OK] key. If you select [On], refer to the following. → <a href="#">PDF Encryption Functions (page 350)</a>

[PDF/A]

Value	Description
[Off], [PDF/A-1a], [PDF/A-1b], [PDF/A-2a], [PDF/A-2b], [PDF/A-2u]	Select the PDF/A-1 format and select the [OK] key.

[ Digital Signature]

Value	Description
[Off][On]	Selecting [On] enables you to set digital signature to file. ➔ <a href="#">PDF Electronic Signature (page 353)</a>

**[TIFF]**

[Image Quality]

Value	Description
1 Low Quality(High Comp) to 5 High Quality(Low Comp)	Selecting [Details] displays the [Image Quality] screen. Select the image quality, and select the [OK] key.

**[XPS]**

[Image Quality]

Value	Description
1 Low Quality(High Comp) to 5 High Quality(Low Comp)	Selecting [Details] displays the [Image Quality] screen. Select the image quality, and select the [OK] key.

**[OpenXPS]**

[Image Quality]

Value	Description
1 Low Quality(High Comp) to 5 High Quality(Low Comp)	Selecting [Details] displays the [Image Quality] screen. Select the image quality, and select the [OK] key.

**[JPEG]**

[Image Quality]

Value	Description
1 Low Quality(High Comp) to 5 High Quality(Low Comp)	Selecting [Details] displays the [Image Quality] screen. Select the image quality, and select the [OK] key.

**[High Comp. PDF]**

[Image Quality]

Value	Description
[Compression Ratio Priority], [Normal], [Quality Priority]	Selecting [Details] displays the [Image Quality] screen. Select the image quality, and select the [OK] key.

[Encryption]

Value	Description
[Off], [On]	Set the encrypted PDF and select the [OK] key. If you select [On], refer to the following. ➔ <a href="#">PDF Encryption Functions (page 350)</a>

[PDF/A]

Value	Description
[Off], [PDF/A-1a], [PDF/A-1b], [PDF/A-2a], [PDF/A-2b], [PDF/A-2u]	Select the PDF/A-1 format and select the [OK] key.

[ Digital Signature]

Value	Description
[Off][On]	Selecting [On] enables you to set digital signature to file. ➔ <a href="#">PDF Electronic Signature (page 353)</a>

## PDF Encryption Functions

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Select [PDF] or [High Comp. PDF], [Encryption] > select [On].

Items that can be set vary depending on the setting selected in Compatibility.

### If Acrobat 3.0 and later is selected

#### [Password to Open Document ]

Value	Description
[Off], [On]	Enter the password to open the PDF file. Select On, enter a password (up to 256 characters). Enter the password again for confirmation.

#### [Password to Edit/Print Document]

Value	Description
[Off], [On]	Enter the password to edit the PDF file. Select On, enter a password (up to 256 characters). Enter the password again for confirmation. When you have entered the password to edit document, you can specifically limit the operation.

#### Printing Allowed

Value	Description
[Not Allowed], [Allowed]	Disables the printing of PDF file.

**Changes Allowed**

Value	Description
[Not Allowed]	Disables the change to the PDF file.
[Commenting]	Can only add commenting.
[Page Layout except extracting Pages]	Can change the page layout except extracting the pages of the PDF file.
[Any except extracting Pages]	Can conduct all operations except extracting the pages of the PDF file.

**Copying of Text/Images/Others**

Value	Description
[Disable], [Enable]	Restricts the copying of text and objects on the PDF file.

**If Acrobat 5.0 and later is selected****[Password to Open Document ]**

Value	Description
[Off], [On]	Enter the password to open the PDF file. Select On, enter a password (up to 256 characters). Enter the password again for confirmation.

**[Password to Edit/Print Document]**

Value	Description
[Off], [On]	Enter the password to edit the PDF file. Select On, enter a password (up to 256 characters). Enter the password again for confirmation. When you have entered the password to edit document, you can specifically limit the operation.

**Printing Allowed**

Value	Description
[Not Allowed]	Disables the printing of PDF file.
[Allowed (Low Resolution only)]	Can print the PDF file only in low resolution.
[Allowed]	Can print the PDF file in original resolution.

**Changes Allowed**

Value	Description
[Not Allowed]	Disables the change to the PDF file.
[Inserting/Deleting/Rotating Pages]	Can only insert, delete, and rotate the pages of the PDF file.
[Commenting]	Can only add commenting.
[Any except extracting Pages]	Can conduct all operations except extracting the pages of the PDF file.

**Copying of Text/Images/Others**

Value	Description
[Disable], [Enable]	Restricts the copying of text and objects on the PDF file.

## PDF Electronic Signature

If [PDF] or [High Comp. PDF] is selected as a file format, electronic signature can be added to the PDF to be sent. Electronic signature can certify a sender of document and prevent falsification. To use this function, it is required to register a signing certificate from Embedded Web Server RX or NETWORK PRINT MONITOR and enable digital signature to files from the system menu. In this manual, a procedure to register a signing certificate from Embedded Web Server RX is described as an example.



### NOTE

- This function can be configured when [Off], [PDF/A-2a], [PDF/A-2b], [PDF/A-2u] is selected in PDF/A.
- To register a signing certificate from NETWORK PRINT MONITOR, refer to the following.

➔ **NETWORK PRINT MONITOR User Guide**

---

## 1 Access to Embedded Web Server RX.

➔ [Accessing Embedded Web Server RX \(page 112\)](#)

## 2 Register the signature certificate used in the digital signature addition setting

- 1 From the [Functions] menu, click [Common/Job Defaults].
- 2 Click [File Default Settings] in [Signing Certificate] > [Settings] to create or import the device certificate.

➔ **Embedded Web Server RX User Guide**

- 3 Click [Restart/Reset] > [Restart entire device] to restart the device.

## 3 Configure the digital signature settings.

- 1 [System Menu/Counter] key > [Function Settings] > [Send/Store] > [Signature to File]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Configure the digital signature addition settings.

Configurable items are as follows:

#### [Digital Signature]

Select whether to add a digital signature.

#### [Off]

Does not add a digital signature.

#### [Specify Each Job]

Whether to add a digital signature is selected each time of sending.

#### [On]

Always adds a digital signature when sending.

### **[Digital Signature Format]**

Select an algorithm used for encryption of digital signature.

Value: [SHA-1], [SHA-256], [SHA-384], [SHA-512]

---



#### **NOTE**

This function is displayed when Digital Signature is set to [Specify Each Job] or [On].

---

### **[Confirm Password]**

Select whether to confirm password when setting digital signature.

Value: [On], [Off]

---



#### **NOTE**

This function is displayed when Digital Signature is set to [Specify Each Job].

---

3 Select [OK].

## **4 Display the screen**

1 [Home] key > [Send] > [File Format]

## **5 Configure the settings**

1 Select [PDF] or [High Comp. PDF] as a file format.

2 From "Digital Signature", select [On] > [OK] key in order.

---



#### **NOTE**

This function is displayed when [Specify Each Job] is set in Step 3-2. When [On] is selected for [Confirm Password], the password entry screen will be displayed. Enter a password set in the system menu.

➔ [Password Policy Settings \(page 507\)](#)

---

## **6 Press the [Start] key.**

## File Separation



Creates multiple files for each scanned original data page.

(Value: [Off]/[Each Page])

When you select [Each Page], file separation is set.



### NOTE

A three-digit serial number such as "abc\_001.pdf, abc\_002.pdf..." is attached to the end of the file name.


---

## Scan Resolution



Select fineness of scanning resolution.

(Value: [600x600dpi]/[400x400dpi Ultrafine]/[300x300dpi]/[200x400dpi Superfine]/[200x200dpi Fine]/[200x100dpi Normal])

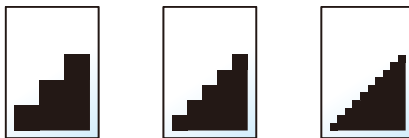

### NOTE

The larger the number, the better the image resolution. However, better resolution also means larger file sizes and longer send times.

---

## Clarify Text (Noise Removal)



When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text.


Value: [Off]/[On]

## Email Subject/Body



Adds subject and body when sending a document.

Select "Subject"/"Body" to enter the Email subject/body.

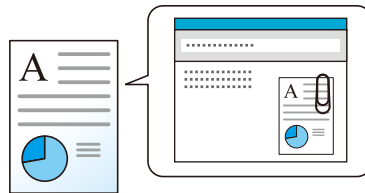

### NOTE

The subject can include up to 60 characters, and the body can include up to 500 characters.

---

## FTP Encrypted TX



Encrypts images when sending via FTP.

Encryption secures the document transmission.

(Values [Off]/[On])



### NOTE

In Embedded Web Server RX, click [Security Settings] → [Network Security] in order. Be sure that "TLS" of Secure Protocol Settings is [On] and one or more effective encryption are selected in Client side settings.

➡ **Embedded Web Server RX User Guide**

---

## Email Encrypted TX



Sends encrypted E-mail using the electronic certificate.

Encryption secures the document transmission.

(Values [Off]/[On])



### NOTE

To use this function, configure the certificate, protocol and email function in the Embedded Web Server RX.

➔ [Configuring S/MIME in Embedded Web Server RX \(page 361\)](#)

---


# Digital Signature to Email

Send

Add a digital signature to the email, using the electronic certificate.

By adding a digital signature to an email, you can confirm the identity of the destination and detect tampering during transmission.

(Values [Off]/[On])

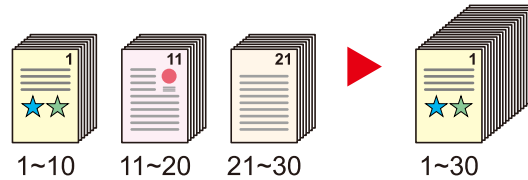

## NOTE

To use this function, configure the certificate, protocol and email function in Embedded Web Server RX.

➔ [Configuring S/MIME in Embedded Web Server RX \(page 361\)](#)

## Configuring S/MIME in Embedded Web Server RX

When using the Email Encrypted TX and Digital Signature to Email functions, make the following settings in Embedded Web Server RX.

### 1 Access to Embedded Web Server RX.

➔ [Accessing Embedded Web Server RX \(page 112\)](#)

### 2 Register the device certificate which is used for S/MIME.

- 1 From the [Security Settings] menu, click [Certificates].
- 2 Click "Device Certificate" of [Settings] (1 to 5) to create or import the device certificate.  
➔ **Embedded Web Server RX User Guide**
- 3 Click [Restart/Reset] > [Restart entire device] to restart the device.

### 3 Configure the protocol settings

- 1 From the [Network Settings] menu, click [Protocols].
- 2 Set "Send Protocol" and [SMTP (E-mail TX)] of [S/MIME] to [On].
- 3 Click [Submit].

### 4 Configure the E-mail function.

- 1 From the [Functions] menu, click [E-mail].
- 2 Configure the settings in "S/MIME Settings" as necessary.  
➔ **Embedded Web Server RX User Guide**
- 3 Click [Submit].

## **5 Link the E-mail address with S/MIME certificates**

- 1** From the [Address Book] menu, click [Machine Address Book].
- 2** Click the contact's [Number] or [Name] you want to edit.
- 3** Click "S/MIME Certificate" in [Settings].
- 4** Click [Import] on the required certificate to register it, and then click [Submit].
- 5** Click [OK].

## Storing Size



Select size of image to be stored.

Value	Description
Same as original size, A4, A5, A6, B5, B6, Letter, Legal, Statement, Executive, Oficio II, Folio, 216 × 340 mm, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Yougata 4, Yougata 2, Nagagata 3, Nagagata 4, Younaga 3	If you want to use a size different from the original size, select from the standard sizes.

### Regarding the relationship among Original Size, Storing Size, and Zoom

Original Size, Storing Size, and Zoom are related. For details, see the table below.

- Original Size and the size you wish to store as are the same

#### Original Size

Specify as necessary.

➔ [Original Size \(page 305\)](#)

#### Storing Size

Select [Same as Original Size].

#### Zoom

Select [100%] (or [Auto]).

➔ [Zoom \(page 326\)](#)

- Original Size and the size you wish to store as are different

#### Original Size

Specify as necessary.

➔ [Original Size \(page 305\)](#)

#### Storing Size

Select the desired size.

#### Zoom

Select [Auto].

➔ [Zoom \(page 326\)](#)



#### NOTE

When you select Storing Size that is different from Original Size, and select the Zoom [100%], you can store the image as the actual size (No Zoom).

## Encrypted PDF Password



Enter the password you set to print the PDF data.

Enter the password and select [OK].



### NOTE

For details on entering the password, refer to the following:


➔ [Character Entry Method \(page 784\)](#)

---

# JPEG/TIFF Print



Select the image size when printing JPEG or TIFF files.

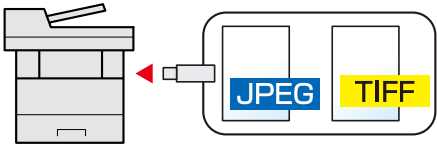


Item	Description
[Fit to Paper Size]	Fits the image size to the selected paper size.
[Image Resolution]	Prints at resolution of the actual image.
[Fit to Print Resolution]	Fits the image size to the print resolution.

## XPS Fit to Page



Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.

(Values [Off]/[On])

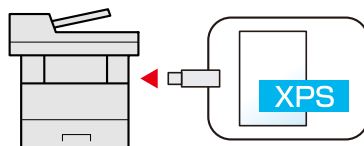

---

## **7 Status/Job Cancel**

---

# Checking Job Status

Check the status of jobs being processed or waiting to be printed.

## Available Status Screens

The processing and waiting statuses of jobs are displayed as a list on the touch panel in four different screens - Printing Jobs, Sending Jobs, Storing Jobs, and Scheduled Jobs.

The following job statuses are available.

Status Screens	Job status to be displayed
Print Job Status	<ul style="list-style-type: none"> <li>• Copy</li> <li>• Printer</li> <li>• Fax reception</li> <li>• Email reception</li> <li>• Printing data from USB Drive</li> <li>• Application</li> <li>• Printing Report/List</li> </ul>
Send Job Status	<ul style="list-style-type: none"> <li>• Email</li> <li>• Sending Job Folder</li> <li>• Fax transmission</li> <li>• Sending Job - Fax Server</li> <li>• Sending Job Application</li> <li>• Multiple destination</li> </ul>
Store Job Status	<ul style="list-style-type: none"> <li>• Scan</li> <li>• Fax</li> <li>• Printer</li> </ul>
Scheduled Job	Sending Job FAX using Delayed transmission

## Displaying Status Screens

### 1 Display the screen

Select the [Status/Job Cancel] key.

## 2 Select the job you want to check.

---



### NOTE

Select the job you wish to check from [Printing Jobs], [Sending Jobs], [Storing Jobs], and [Scheduled].  
Select [Sending Jobs] > [Scheduled] to check delayed transmission.


- ➡ [Print Job Status \(page 370\)](#)
  - ➡ [Send Job Status \(page 372\)](#)
  - ➡ [Store Job Status \(page 373\)](#)
  - ➡ [Scheduled Job Status \(page 374\)](#)
-

## Details of the Status Screens

### NOTE

- You can show the job statuses of all users, or only the statuses of your own jobs.  
→ [Status \(page 449\)](#)
- This setting can also be changed from Embedded Web Server RX. For details, refer to the following:  
→ [Embedded Web Server RX User Guide](#)

## Print Job Status

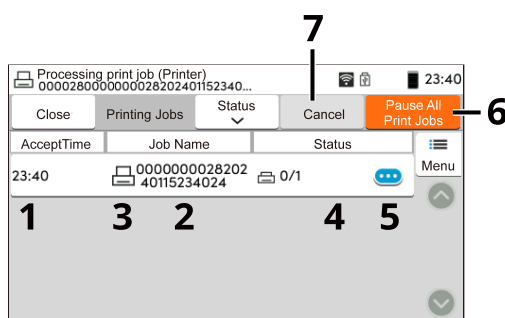

### 1 AcceptTime

Accepted time of job


### 2 Job Name

Job name or file name is displayed

### 3 Job Type

: Print copy

: Printer job


: Printing from a document box

: Fax reception and print

: Email reception and print

: Printing data from USB drive

: Application transmission

: Printing report/list

### 4 Status

Status of job


[Processing]: The status before starting to print

[Printing]: Printing

[Waiting]: Print Waiting

[Pause]: Pausing print job or error

[Canceling]: Canceling the job

5  (information icon)

Select the icon of the job whose detailed information you want to display.

➔ [Displaying Job History Screen \(page 375\)](#)


6 [Pause AllPrint Jobs]

The job in progress will be paused. Select it to resume printing.

7 [Cancel]


Select the job you want to cancel from the list, and select this key.

## Send Job Status

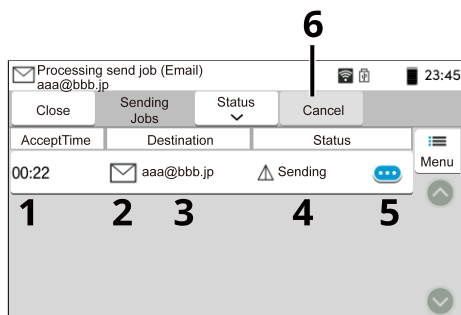


- 1 AcceptTime  
Accepted time of job
- 2 Job Type
  - ✉ Email transmission
  - 📁 Sending job folder
  - 📠 Fax transmission
  - 📠 Fax server transmission
  - 💻 Application transmission
  - 📍 Multiple destination
- 3 Destination  
Destination (any of destination name, FAX number, email address, or server name)
- 4 Status  
Status of job  
 [Processing]: The status before starting to send, such as during scanning originals  
 [Sending]: During Sending  
 [Waiting]: Waiting Sending  
 [Canceling]: Canceling the job  
 [Pause]: Pausing the job
- 5 🗨 (information icon)  
 Select the icon of the job whose detailed information you want to display.  
[➡ Displaying Job History Screen \(page 375\)](#)
- 6 [Cancel]  
 Select the job you want to cancel from the list, and select this key.

## Store Job Status

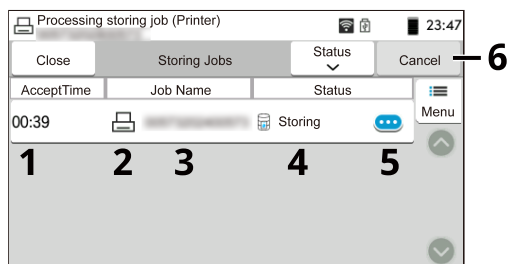

- 1 AcceptTime  
Accepted Time of job
- 2 Job Type  
  - Scan
  - Fax
  - Printer
- 3 Job Name  
Job name or file name is displayed
- 4 Status  
 Status of job  
 [Processing]: The status before starting to save, such as during scanning originals  
 [Storing]: Storing data  
 [Canceling]: Canceling the job  
 [Pause]: Pausing the job
- 5 (information icon)  
 Select the icon of the job whose detailed information you want to display.  
[Displaying Job History Screen \(page 375\)](#)
- 6 [Cancel]  
 Select the job you want to cancel from the list, and select this key.


## Scheduled Job Status

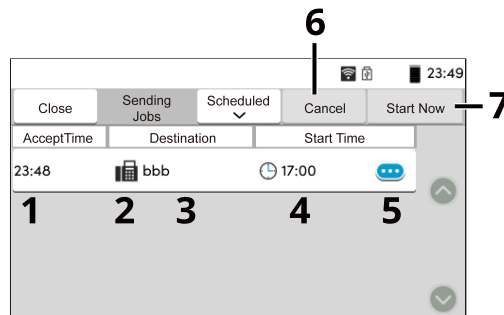

1 AcceptTime

Accepted time of job

2 Job Type

 Scheduling Job Fax

3 Status

Status of job

[Waiting]: Waiting Sending

4 Start Time

Time to start the scheduled job

5  (information icon)

Select the icon of the job whose detailed information you want to display.

➔ [Displaying Job History Screen \(page 375\)](#)

6 [Cancel]

Select the job you want to cancel from the list, and select this key.

7 [Start Now]

Select the job you want to send immediately from the list, and select this key.

# Checking Job History



## NOTE

- Job history is also available by Embedded Web Server RX or NETWORK PRINT MONITOR from the computer. For details, refer to the following:
  - ➔ **Embedded Web Server RX User Guide**
  - ➔ **NETWORK PRINT MONITOR User Guide**
- You can show the job log of all users, or only your own job log.
  - ➔ [Status \(page 449\)](#)
- This setting can also be changed from Embedded Web Server RX. For details, refer to the following:
  - ➔ **Embedded Web Server RX User Guide**

## Available Job History Screens

The job histories are displayed separately in three screens - Printing Jobs, Sending Jobs, and Storing Jobs. The following job histories are available.

Screen	Job histories to be displayed
Printing Jobs	<ul style="list-style-type: none"> <li>• Copy</li> <li>• Printer</li> <li>• Fax reception</li> <li>• Email reception</li> <li>• Printing data from USB Drive</li> <li>• Application</li> <li>• Printing Report/List</li> </ul>
Sending JobsS	<ul style="list-style-type: none"> <li>• Email</li> <li>• Sending Job Folder</li> <li>• Fax transmission</li> <li>• Sending Job - Fax Server</li> <li>• Sending Job Application</li> <li>• Multiple destination</li> </ul>
Storing Jobs	<ul style="list-style-type: none"> <li>• Scan</li> <li>• Fax</li> <li>• Printer</li> </ul>
Fax jobs	➔ <b>FAX Operation Guide</b>

## Displaying Job History Screen

### 1 Display the screen

- 1 Select the [Status/Job Cancel] key.

## **2 Select the job you want to check.**


- 1 Select [Log] and select the job you wish to check.


## Checking the Detailed Information of Histories









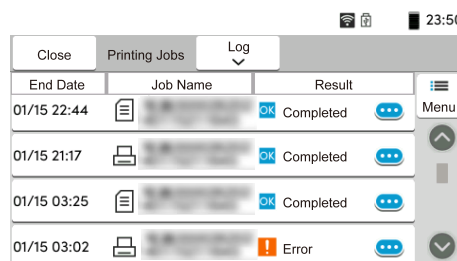



### 1 Display the screen

→ [Displaying Job History Screen \(page 375\)](#)

### 2 Check the information.

- 1 Select  (information icon) for the job you want to check.



Close	Printing Jobs	Log	
End Date	Job Name	Result	
01/15 22:44	 [Job Name]	 Completed 	Menu
01/15 21:17	 [Job Name]	 Completed 	
01/15 03:25	 [Job Name]	 Completed 	
01/15 03:02	 [Job Name]	 Error 	

Detailed information of the selected job is displayed.

- 2 After checking, select [Close].

## **Sending the Log History**

You can send the log history by E-mail. You can either send it manually as needed or have it sent automatically whenever a set number of jobs is reached.

# Job Operation

## Pause and Resumption of Jobs

Pause/resume all printing jobs in printing/waiting.

## Canceling of Jobs

A job in printing/waiting status can be canceled.

### **1 Display the screen**

- 1** Select the [Status/Job Cancel] key.

### **2 Select the job to be canceled from the list, and select [Cancel].**

### **3 Select [Yes] in the confirmation screen.**

# Device Information

Configure the devices/lines installed or connected to this machine or check their status.

## 1 Display the screen

1 Select the [Home] key.

2 Select [Device Info].

The screen to check the status or configure the devices is displayed.

## 2 Check the information.

The items you can check are described below.

### [Printing Jobs]

Status such as waiting and printing are displayed.

### [Sending Jobs]

Status such as waiting and sending are displayed.

### [Storing Jobs]

Status such as waiting and storing are displayed.

### [Fax CommunicationStatus]

You can check the local fax number, local fax name, local fax ID and other fax information. For details, refer to the following:

Information such as sending/receiving or dialing is displayed.

Select [Line Off] cancel the fax being sent/received.

➔ **FAX Operation Guide**



### NOTE

Displays only for fax models.

---

### [IncomingFax Log]

Displays the Incoming Fax Log screen.

### [OutgoingFax Log]

Displays the Outgoing Fax Log screen.

# Checking the Remaining Amount of Toner and Paper, and the Condition of the Unit

Check the remaining amount of toner, and paper on the touch panel.

## 1 Display the screen

- 1 Select the [Home] key.
- 2 Select [Device Info].
- 3 Select [Supplies/PaperPaper].

## 2 Check the information.

The items you can check are described below.

### [Toner Information]

The amount of toner remaining is shown in levels.

### [Paper]

You can check the size, orientation, type, and remaining amount of paper in each paper source. The amount of paper remaining is shown in levels.

### [Unit Condition]

You can check the status of each unit that makes up this machine.

---

## 8 System Menu

---

# Operation Method


Configure settings related to overall machine operation. System Menu is operated as follows:

## 1 Display the screen

Select the [System Menu/Counter] key.


→ [Using the Operation Panel \(page 53\)](#)

## 2 Select a function.

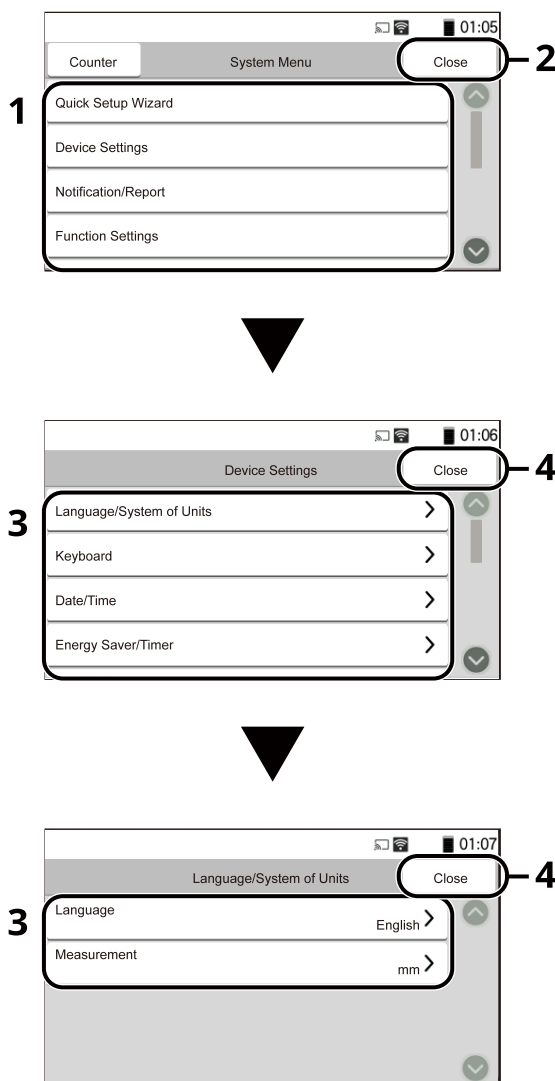

- 1 Displays the System Menu items. Items that are not displayed can be displayed by swiping the screen up and down.
- 2 Returns to the previous screen.
- 3 Displays setting items.  
Select the key of a function to display the setting screen.
- 4 Returns to the previous screen.

### 3 Configure the settings

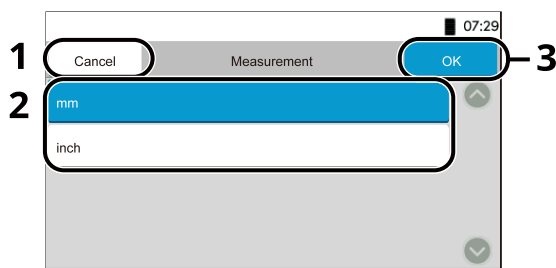

- 1 Returns to the previous screen without making any changes.
- 2 Enter a setting by selecting it and return to the previous screen.
- 3 Accepts the settings and exits.



#### NOTE

- If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.
- If function default settings have been changed, the [Reset] key can be selected in each function screen to immediately change the settings.

# System Menu Settings

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and select the setting item.

For details on each function, see the table below.

## [Quick SetupWizard]

The Quick Setup Wizard configures Energy Saver, Fax, Network, E-mail and Security Setup.

➔ [Quick Setup Wizard \(page 91\)](#)

## [Device Settings]

Configure overall machine operation.

➔ [Device Settings \(page 391\)](#)

Item	Description
[Language/System of Units]	Set the language to use for the touch panel display, and select inch or metric for the unit for paper dimensions. ➔ <a href="#">Language/System of Units (page 391)</a>
[Keyboard]	Change the layout of the touch panel keyboard used to enter characters. ➔ <a href="#">Keyboard (page 392)</a>
[Date/Time]	Configures settings related to the date and time. ➔ <a href="#">Date/Time (page 393)</a>
[Energy Saver/Timer]	Configure the Energy Saver settings. ➔ <a href="#">Energy Saver/Timer (page 394)</a>
[Display Settings]	Configure the touch panel display settings. ➔ <a href="#">Display Settings (page 396)</a>
[Sound]	Set options for buzzer sound during the machine operations. ➔ <a href="#">Sound (page 397)</a>
[Original/Scan Settings]	Configure settings for originals. ➔ <a href="#">Original/Scan Settings (page 398)</a>
[Paper Feeding]	Configure the paper and paper source settings. ➔ <a href="#">Paper Feeding (page 400)</a>
[Operation Assist]	It is possible to configure the settings for the Orientation Selection screen display and the Preset Limit on the number of copies that can be made at one time. ➔ <a href="#">Operation Assist (page 408)</a>
[Error Handling]	Select whether to cancel or continue the job when error has occurred. ➔ <a href="#">Error Handling (page 409)</a>
[Toner Settings]	Configure the toner settings. ➔ <a href="#">Toner Settings (page 410)</a>

Item	Description
[Device Managed by Administrator]	<p>If you are the same user of this machine as the administrator, such as at home or in a small office, you will be able to use functions that require logging in as an administrator without logging in.</p> <p>➔ <a href="#">Device Managed by Administrator (page 411)</a></p>

## [Notification/ReportReport]

Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.

➔ [Notification/Report \(page 412\)](#)

Item	Description
Print Report/List	<p>Print various reports and lists.</p> <p>➔ <a href="#">Print Report/List (page 412)</a></p>
Result Report Setting	<p>Configure settings for notices for sending and receiving.</p> <p>➔ <a href="#">Result Report Setting[Result Report Setting] (page 415)</a></p>
Device Status Notification	<p>Configure settings for toner notices.</p> <p>➔ <a href="#">[Device Status Notification] (page 416)</a></p>
Fax Communication Report	<p>Configure settings for Outgoing Fax report and Incoming Fax report. Displays only for fax models.</p> <p>➔ <a href="#">Fax Communication Report (page 417)</a></p>
History Settings	<p>Configure settings for printing the history of the machine use.</p> <p>➔ <a href="#">History Settings (page 418)</a></p>

## [Function Settings]

Configures settings for copying, sending and Document Box functions.

➔ [Function Settings \(page 420\)](#)

Item	Description
[Function Defaults]	<p>Defaults are the values automatically set after the warm-up is completed or the [Reset] key is selected. Set the defaults for available settings such as copying and sending. Setting the frequently-used values as defaults makes subsequent jobs easier.</p> <p>➔ <a href="#">Function Defaults (page 420)</a></p>
[Copy/Print]	<p>Configures settings for copying and printing functions.</p> <p>➔ <a href="#">Copy/Print (page 426)</a></p>
[Send/Store]	<p>Configures settings for sending and storing functions.</p> <p>➔ <a href="#">Send/Store (page 427)</a></p>
[Email]	<p>Configure settings for email transmission and receipt.</p> <p>➔ <a href="#">Email (page 429)</a></p>
[Sending Job - Folder]	<p>Configures settings for Sending Job Folder functions.</p> <p>➔ <a href="#">Sending Job - Folder (page 431)</a></p>

Item	Description
[Fax]	Configures settings for fax functions. Displays only for fax models. ➔ <b>FAX Operation Guide</b>
[WSD]	Configure settings for WSD Scan and WSD Print. ➔ <a href="#">WSD (page 433)</a>
[Address Book]	Configures Address Book settings. ➔ <a href="#">Address Book (page 434)</a>
[One-Touch Key]	Configures One Touch Key settings. ➔ <a href="#">One-Touch Key (page 435)</a>
[Send and Forward]	Select whether to forward the original to another destination when sending images. ➔ <a href="#">Send and Forward (page 436)</a>
[Printer]	Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine. ➔ <a href="#">Printer (page 438)</a>
[Document Box]	Configure the settings for USB Drive.
[Job Box]	Configure settings for Job Box. ➔ <a href="#">Job Box (page 444)</a>
[Fax Memory RX Box]	Set whether to perform print immediately for the FAX documents received or to save them in the Fax Memory RX Box. Displays only for fax models. ➔ <b>FAX Operation Guide</b>
[Home]	Configure settings for Home screen. ➔ <a href="#">Home screen (page 57)</a>
[Cloud Access Setting]	Configure your connection to Cloud Access and your editing permissions. ➔ <a href="#">Cloud Access Setting (page 448)</a>
[Status]	Configure settings for Status. ➔ <a href="#">Status (page 449)</a>
[Remote Services]	Configures remote services settings. ➔ <a href="#">Remote Services (page 450)</a>

## [Network Settings]

Configures network settings.

➔ [Network Settings \(page 452\)](#)

Item	Description
Network Settings	Configure the wired network and Wi-Fi settings. ➔ <a href="#">Network Settings (page 452)</a>

Item	Description
Connectivity	Configure the Connectivity settings of this machine to other devices. ➔ <a href="#">Connectivity (page 483)</a>
Others	Configure other network related settings. ➔ <a href="#">Others (page 485)</a>

## [Security Settings]

Configures security settings.

➔ [Security Settings \(page 486\)](#)

Item	Description
Security Quick Setup	The Security Level setting is primarily a menu option used by service personnel for maintenance work. There is no need for customers to use this menu. ➔ <a href="#">Security Quick Setup (page 486)</a>
Interface Block Setting	This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces. ➔ <a href="#">Interface Block Setting (page 488)</a>
Device Security Settings	Configures the device security settings. ➔ <a href="#">Device Security Settings (page 489)</a>
Authentication Security	Configure security settings for User Authentication. ➔ <a href="#">Authentication Security (page 493)</a>
Unknown User Settings	Configure settings for users whose IDs are unknown. This specifies the behavior for handling the jobs received from a computer with an unknown Login User Name (user ID), or without a Login User Name (user ID). ➔ <a href="#">Unknown User Settings (page 494)</a>
Network	Configure security settings on the network. ➔ <a href="#">Network (page 495)</a>

## [Job Accounting/AuthenticationAuthentication]

Configures settings related to machine management.

For details on user login administration, refer to the following:

➔ [Enable User Login Administration \(page 505\)](#)

For details on job accounting, refer to the following:

➔ [Enable job accounting \(page 543\)](#)

## [Add/Delete Application]

Configure settings for Application.

➔ [Add/Delete Application \(page 497\)](#)

Item	Description
Application	Configure settings for applications that help you perform your daily more efficiently such as a scan feature and an authentication feature. ➔ <a href="#">Using Applications (page 233)</a>
Optional Function	You can use the optional applications installed on this machine. ➔ <a href="#">Overview of the Applications (page 782)</a>

## Adjustment/Maintenance

Adjust printing quality and conduct machine maintenance.

➔ [Adjustment/Maintenance \(page 498\)](#)

Item	Description
Image Adjustment	Perform Image Adjustment. ➔ <a href="#">Image Adjustment (page 498)</a>
Others	Adjust Others. ➔ <a href="#">Others (page 501)</a>

# Device Settings

Configure overall machine operation.

## Language/System of Units

[System Menu/Counter] key > [Device Settings] > [Language/System of Units]

Item	Description
[Language]	Set the language to use for the touch panel display.
[Measurement]	Select inch or millimeter for the unit for paper dimensions. Value: [mm], [inch]


## Keyboard

[System Menu/Counter] key > [Device Settings] > [Keyboard]

Item	Description
[Keyboard Language]	[Follow Displayed Language], [English]
[Keyboard Layout]	Change the layout of the touch panel keyboard used to enter characters. Value: [QWERTY], [QWERTZ], [AZERTY]
[Optional Keyboard Type]	Select the optional keyboard type. Value: [US-English], [US-English with Euro], [French], [German], [UK-English]

## Date/Time

[System Menu/Counter] key > [Device Settings] > [Date/Time]

Item	Description
[Date and Time]	<p>Set the date and time for the location where you use the machine. If you perform Send as Email, the date and time set on the machine will be displayed on the header.</p> <p>Value: [Year(2000 - 2035)], [Month(1 - 12)], [Day(1 - 31)], [Hour(0 - 23)], [Minute(0 - 59)], [Second(0 - 59)]</p> <p>➡ <a href="#">Setting Date and Time (page 74)</a></p> <hr/> <p> <b>NOTE</b></p> <p>If you change the date/time while using the trial version of an application, you will no longer be able to use the application.</p> <hr/>
[Date Format]	<p>Select the display format of year, month, and date. The year is displayed in Western notation.</p> <p>Value: [MM/DD/YYYY], [DD/MM/YYYY], [YYYY/MM/DD]</p>
[Time Zone]	<p>Set the time difference from GMT. Choose the nearest listed location from the list.</p> <p>If you select a region that utilizes summer time, configure settings for summer time.</p> <p>➡ <a href="#">Setting Date and Time (page 74)</a></p>

## Energy Saver/Timer

[System Menu/Counter] key > [Device Settings] > [Energy Saver/Timer]

### [Auto Panel Reset]

If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not.

Value: Off, On



#### NOTE

For setting the time until the panel is automatically reset, refer to the following:

➔ [Panel Reset Timer \(page 394\)](#)

---

### [Panel Reset Timer]

If you select On for Auto Panel Reset, you can set the amount of time to wait before Auto Panel Reset.

Value: 5 to 495 seconds (in 5 second increments)



#### NOTE

This function is displayed when [Auto Panel Reset] is set to On.

---

### [Sleep Timer]

Set amount of time before entering Sleep.

Value: 1 to 120 minutes (1 minute increments)

➔ [Sleep \(page 86\)](#)

### [Sleep Rules]

Select whether to use the Sleep mode for the following functions individually:

This function will not be displayed when the optional Network Interface Kit or Fiery controller is installed.

- ID Card Reader  
(Displayed when the optional Card Authentication Kit is activated.)
- Application

Value: Off, On



#### NOTE

If the sleep condition is not turned off, the ID card cannot be recognized.

---

## **[Power Off Timer]**

Select whether to turn off the power automatically after a period of inactivity.

Value: [20 minutes], [1 hour], [2 hours], [3 hours], [4 hours], [5 hours], [6 hours], [9 hours], [9 hours], [12 hours], [1 day], [2 days], [3 days], [4 days], [5 days], [6 days], [1 week]

## **[Energy Saver Recovery Level]**

Select the method of recovery from energy saver.

Value

### **[Full Recovery]**

This mode enables the use of all functions immediately. However, this mode saves less energy.

### **[Normal Recovery]**

In this mode, you can select the method from the following: enabling the use of all functions immediately or enabling the use of desired functions only. If you want to use all functions immediately, select the [Energy Saver] key to execute recovery.

### **[Power Saving Recovery]**

This mode enables the use of the functions that you wish to use only. This is the most energy-efficient mode.

## **[Ping Timeout]**

Set the time until timeout occurs when "Network Settings" is executed in [Ping].

Value: 1 to 30 seconds (in 1 second increments)

## Display Settings

[System Menu/Counter] key > [Device Settings] > [Display Settings]

Item	Description
[Display Brightness]	Set the brightness of the message display. Value: 1 ("Darker"), 2, 3, 4, 5 ("Lighter")
[Default Screen]	Select the screen appearing right after start-up (default screen). Value: [Home], [Copy], [Send], [Fax] <sup>*1</sup> , [Status], [Job Box], [USB Drive], [Polling Box] <sup>*1</sup> , [Subaddress Box] <sup>*1</sup> , [Favorites], [Cloud Access], Application name <sup>*2</sup>
[Wallpaper]	➔ <a href="#">Editing the Home Screen (page 57)</a>
[Show Power Off Message]	Set the mode whether display a confirmation message in power supply off. Value: Off, On
[Quick Setup Registration (Copy)]	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: [Off], [Paper Selection], [Zoom], [Density], [Duplex], [Combine], [Collate], [Original Image], [Original Size], [Original Orientation], [Continuous Scan], [Background Density Adj.]
[Quick Setup Registration (Send)]	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: [Off], [Original Size], [Duplex], [Sending Size], [Original Orientation], [File Format], [Density], [Original Image], [Scan Resolution], [Fax TX Resolution] <sup>*1</sup> , [Color Selection], [Zoom], [Continuous Scan], [Background Density Adj.]
[Quick Setup Registration (Fax)] <sup>*1</sup>	➔ <b>FAX Operation Guide</b>
[Quick Setup Registration (Storing in Box)]	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: [Off], [Color Selection], [Storing Size], [Density], [Duplex], [Scan Resolution], [Zoom], [Original Orientation], [Original Size], [Original Image], [Continuous Scan], [Background Density Adj.]
[Quick Setup Registration (Box Print)]	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: [Off], [Paper Selection], [Collate], [Duplex], [Delete after Printed]

\*1

Displays only for fax models.

\* 2 The applications that are running are displayed.

➔ [Using Applications \(page 233\)](#)

## Sound

[System Menu/Counter] key > [Device Settings] > [Sound]

### [Buzzer]

Set options for buzzer sound during the machine operations.

Item	Description
[Key Confirmation]	Emit a sound when the operation panel and touch panel keys are selected. Value: [Off], [On]
[Job Finish]	Emit a sound when a print job is normally completed. Value: [Off], [On], [Fax Reception Only]
[Ready]	Emit a sound when the warm-up is completed. Value: [Off], [On]
[Warning]	Emit a sound when errors occur. Value: [Off], [On]
[Optional Keyboard]	Emit a sound to confirm key presses with a sound. Value: [Off], [On]

### [Fax Speaker Volume]

This item is displayed for fax-compatible machines.

For details, refer to the following:

➔ **FAX Operation Guide**

### [Fax Monitor Volume]

This item is displayed for fax-compatible machines.

For details, refer to the following:

➔ **FAX Operation Guide**

## Original/Scan Settings

[System Menu/Counter] key > [Device Settings] > [Original/Scan Settings]

### [Auto Detect Original Size (DP)]

Set whether to use the document processor to detect the original size. Platen cannot automatically detect the original size.

Item	Description
[Auto (Standard Size)]	Select whether to enable automatic detection of the Standard Size. The size that can be detected is A6, B6, A5, B5, A4, and Folio in the case of centimeter size. For inch size, Statement, Letter, and only one of Legal, Officio II, or 216mm x 340mm. Value: [Off], [On]
[Detect Non-standard Size (Copy)]	Set whether to detect non-standard size documents in the copy function. This setting takes precedence over the automatic (standard size) setting. Value: [Off], [On]
[Detect Non-standard Size (Send/Store)]	Set whether to detect non-standard size documents in the send or save function. This setting takes precedence over the automatic (standard size) setting. Value: [Off], [On]
[System of Units]	Select [Metric]Metric when automatically detecting the originals in centimeter sizes. Select [Inch] when detecting the originals in inch sizes. Value: [Metric], [Inch]
[Legal/OficioII/216 x 340 mm]	Since the third item options to be auto detected in inch are similar in size, set which size to use. This function is displayed when "System of Units" is set to [Inch]. Value: [Legal], [OficioII], [216 x 340 mm]

### [Custom Original Size]

Set up frequently-used custom original size. The custom size option is displayed on the screen to select original size.

Value

#### Metric

X: 50 to 356 mm (in 1 mm increments)


Y: 50 to 216 mm (in 1 mm increments)

#### Inch

X: 1.97 to 14.02" (in 0.01" increments)

Y: 1.97 to 8.50" (in 0.01" increments)

X=Length, Y=Width

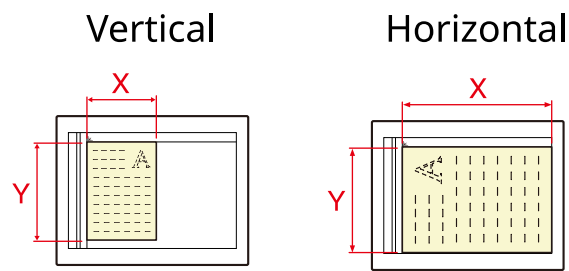

## [Default Original Size]

Set the default value for the original size.

Value

[Metric]: A4, A5, A6, B5, B6, Folio, 216 x 340 mm

[Inch]: Letter, Legal, Statement, Executive, Oficio II

[Others]: 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Younaga 3, Nagagata 3, Nagagata 4

## Paper Feeding

[System Menu/Counter] key > [Device Settings] > [Paper Feeding]

Configure the paper and paper source settings.

### [Cassette 1 Settings] to [Cassette 3 Settings]


[System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Cassette 1 Settings] > (to [Cassette 3 Settings])

#### NOTE

[Cassette 2] to [Cassette 3] are displayed when the following optional paper feeder is installed.



[Cassette 2]: Paper Feeder (300-sheet)

[Cassette 3]: Paper Feeder (300-sheet)

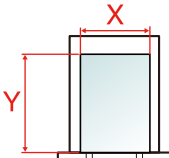Item	Description
[Paper Size]	<p>Select the paper size.</p> <p><b>Value (Cassette 1 to 3)</b></p> <p>[A4], [A5-R], [A5], [A6], [B5], [B6], [Folio], [216 x 340 mm], [Letter], [Legal], [Statement], [Executive], [OfficioII], [16K], [ISO B5], [Custom]</p> <p>For custom paper size, set the size for each cassette.</p> <p>➔ <a href="#">[Custom Paper Settings] (page 402)</a></p> <p style="text-align: center;"><b>Vertical</b></p> 
[Media Type]	<p><b>Value (Cassette 1 to 3)</b></p> <p>[Plain], [Recycled], [Preprinted], [Bond], [Color], [Prepunched][Letterhead], [Thick], [High Quality], [Vellum], [Custom 1] to [Custom 8]</p> <ul style="list-style-type: none"> <li>To change to a media type other than "Plain," refer to the following.           <p>➔ <a href="#">[Media Type Setting] (page 403)</a></p> </li> <li>When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.</li> <li>To print on preprinted or prepunched paper or on letterhead, refer to the following:           <p>➔ <a href="#">[Paper Feed Settings] (page 406)</a></p> </li> </ul>

## [MP Tray Settings]

[System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [MP Tray Settings]

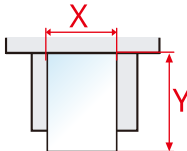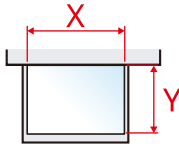Item	Description
[Paper Size]	<p>Select the paper size.</p> <p>Value: [A4], [A5-R], [A5], [A6], [B5], [B6], [Folio], [216 x 340 mm], [Letter], [Legal], [Statement], [Executive], [OfficioII], [16K], [ISO B5], [Envemope #10], [Envemope #9], [Envemope #6], [Envemope Monarch], [Envemope DL], [Envemope C5], [Cardstock], [Ofuku], [Youkei 4], [Youkei 2], [Younaga 3], [Nagagata 3], [Nagagata 4], [Custom]</p> <p>For custom paper size, set the size for each cassette.</p> <p>➔ <a href="#">[Custom Paper Settings] (page 402)</a></p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
[Media Type]	<p>Select the media type.</p> <p>Value: [Plain], [Labels], [Recycled], [Preprinted], [Bond], [Cardstock], [Transparency], [Vellum], [Color], [Prepunched], [Letterhead], [Envelope], [Thick], [High Quality], [Custom 1] to [Custom 8]</p> <p>To change to a media type other than "Plain," refer to the following.</p> <p>➔ <a href="#">[Media Type Setting] (page 403)</a></p> <p>To print on preprinted or prepunched paper or on letterhead, refer to the following:</p> <p>➔ <a href="#">[Special Paper Action] (page 406)</a></p>

### NOTE

The available media types for printing received faxes are as shown below.





Value: [Plain], [Labels], [Recycled], [Vellum], [Bond], [Color], [Envelope], [Cardstock], [Thick], [High Quality], [Custom 1] to [Custom 8]

Fax function is available for fax models.

## [Custom Paper Settings]

[System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Custom Paper Settings]

Set up frequently-used custom paper size. Register one custom size for each paper source. The registered size is displayed when the paper size is selected.

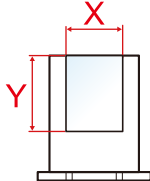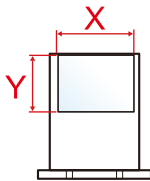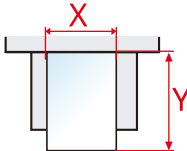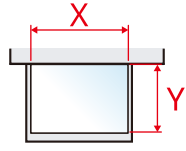Item	Description
[Cassette 1 Size] to [Cassette 3 Size]	<p>Register the custom size used for cassette 1.</p> <p>Value</p> <p><b>Metric</b></p> <p>X: 105 to 216 mm (in 1 mm increments)</p> <p>Y: 148 to 356 mm (in 1 mm increments)</p> <p><b>Inch</b></p> <p>X: 4.13 to 8.50" (in 0.01" increments)</p> <p>Y: 5.83 to 14.02" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
[Multipurpose Tray Size]	<p>Register the custom size used for Multipurpose Tray.</p> <p>Value</p> <p><b>Metric</b></p> <p>X: 70 to 216 mm (in 1 mm increments)</p> <p>Y: 148 to 356 mm (in 1 mm increments)</p> <p><b>Inch</b></p> <p>X: 2.76 to 8.50" (in 0.01" increments)</p> <p>Y: 5.83 to 14.02" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>

## [Media Type Setting]

[System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Media Type Setting]

Select weight for each media type.

The following media type and paper weight combinations are available.

Paper Weight	Weight (g/m <sup>2</sup> ) and Media Type
Light	52 g/m <sup>2</sup> to 59 g/m <sup>2</sup>
Normal 1	60 g/m <sup>2</sup> to 74 g/m <sup>2</sup>
Normal 2	75 g/m <sup>2</sup> to 90 g/m <sup>2</sup>
Normal 3	91 g/m <sup>2</sup> to 105 g/m <sup>2</sup>
Heavy 1 <sup>*1</sup>	106 g/m <sup>2</sup> to 135 g/m <sup>2</sup>
Heavy 2 <sup>*1</sup>	136 g/m <sup>2</sup> to 163 g/m <sup>2</sup>
Heavy 3 <sup>*1</sup>	164 g/m <sup>2</sup> to 220 g/m <sup>2</sup>

\*1 The processing speed will be slower than normal.

Each media type's default weight is indicated.

Media Type	Default
[Plain]	[Normal 1 (60 - 74g/m <sup>2</sup> )]
[Vellum]	[Normal 1 (60 - 74g/m <sup>2</sup> )]
[Labels]	[Heavy 1 (106 - 135g/m <sup>2</sup> )]
[Recycled]	[Normal 1 (60 - 74g/m <sup>2</sup> )]
[Preprinted]	[Normal 2 (75 - 90g/m <sup>2</sup> )]
[Bond]	[Normal 3 (91 - 105g/m <sup>2</sup> )]
[Cardstock]	[Heavy 3 (164 - 220g/m <sup>2</sup> )]
[Color]	[Normal 1 (60 - 74g/m <sup>2</sup> )]
[Prepunched]	[Normal 1 (60 - 74g/m <sup>2</sup> )]
[Letterhead]	[Normal 2 (75 - 90g/m <sup>2</sup> )]
[Envelope]	[Heavy 2 (136 - 163g/m <sup>2</sup> )]
[Thick]	[Heavy 2 (136 - 163g/m <sup>2</sup> )]
[Coated]	[Normal 3 (91 - 105g/m <sup>2</sup> )]
[High Quality]	[Normal 1 (60 - 74g/m <sup>2</sup> )]
[Custom 1] to [Custom 8]	[Normal 1 (60 - 74g/m <sup>2</sup> )]

For [Custom 1] to [Custom 8], settings for duplex printing and media type name can be changed.

## [Duplex]

Item	Description
[Permit]	Duplex printing allowed.
[Prohibit]	Duplex printing not allowed.

## **[Name]**


Change names for Custom 1-8. Names should be not more than 16 characters. Selecting media type at multipurpose tray, the name after change will be displayed.

➡ [Character Entry Method \(page 784\)](#)

## [Show Paper Setup Message]

[System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Show Paper Setup Message]

Set whether to display the confirmation screen for the paper setting when a new paper is set for each cassette.

Item	Description
[Cassette 1] to [Cassette 3] [MP Tray]	<p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>[Cassette 2] to [Cassette 3] are displayed when the following optional paper feeder is installed.</p> <p>[Cassette 2]: Paper Feeder (250-sheet)</p> <p>[Cassette 3]: Paper Feeder (250-sheet)</p> <hr/>

## [Paper Feed Settings]

[System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Paper Feed Settings]

### [Default Paper Source]

Select the default paper source.

Value: [Cassette 1] to [Cassette 3], [MP Tray]



#### NOTE

[Cassette 2] to [Cassette 3] are displayed when the following optional paper feeder is installed.

[Cassette 2]: Paper Feeder (250-sheet)

[Cassette 3]: Paper Feeder (250-sheet)

---

### [Paper Selection]

Set the default paper selection.

Value: [Auto], [Default Paper Source]

### [Auto Paper Selection]

If [Auto] is selected for Paper Selection, set the paper size selection method for when the zoom changes.

Value

[Most Suitable Size]: Selects optimum paper size based on the current zoom level and the size of the original.

[Same as Original Size]: Selects paper that matches the size of the original, regardless of the zoom level.

### [Media for Auto (B & W)]

When Auto is selected for Paper Selection, you can limit the paper that is automatically selected by paper type. For example, if [Plain] is selected, the paper source with plain paper loaded in the specified size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specified size.


Value: [All Media Types], [Plain], [Transparency], [Labels], [Recycled], [Preprinted], [Bond], [Cardstock], [Color], [Prepunched], [Vellum], [Letterhead], [Envelope], [Thick], [High Quality], [Custom 1] to, [Custom 8]

### [Special Paper Action]

When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down due to a combination of copying functions and the way originals are set. In such a case, select [Adjust Print Direction] to adjust the print direction. When paper orientation is not important, select [Speed Priority].

If [Adjust Print Direction] is selected, load paper according to the steps below.

Example: copying on Letterhead

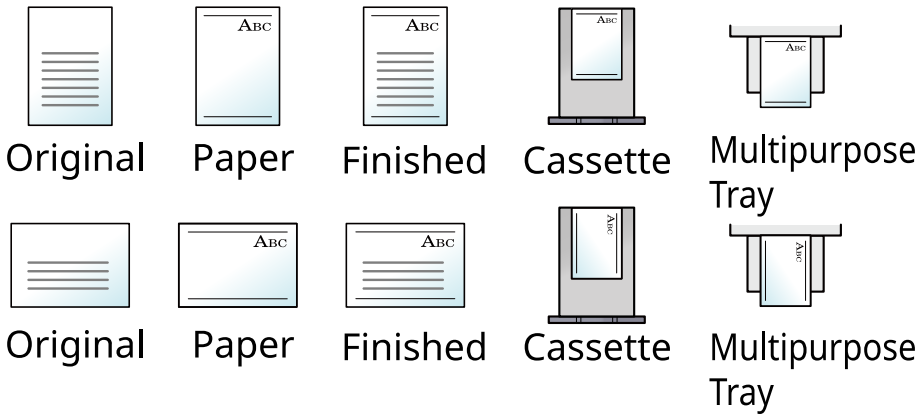

Value: [Adjust Print Direction], [Speed Priority]



## Operation Assist

[System Menu/Counter] key > [Device Settings] > [Operation Assist]

Item	Description
[Preset Limit]	Restrict the number of copies that can be made at one time. Value: 11 to 999999 department
[Clear Settings after Job Started]	Set whether to reset function settings to their defaults after the job starts. Value: [Clear], [Do Not Clear]

## Error Handling

[System Menu/Counter] key > [Device Settings] > [Error Handling]

Item	Description
[Duplexing Error]	<p>Set what to do when duplex printing is not possible for the selected paper sizes and media types.</p> <p>Value</p> <p>[1-sided]: Printed in 1-sided.</p> <p>[Display Error]: Message to cancel printing is displayed.</p>
[Paper Mismatch Error]	<p>Set what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multipurpose tray.</p> <p>Value</p> <p>[Ignore]: The setting is ignored and the job is printed.</p> <p>[Display Error]: Message to cancel printing is displayed.</p>
[Auto Error Clear]	<p>If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses.</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>If you select On for Auto Error Clear, set the amount of time to wait before automatically clearing errors. The setting range is 5 to 495 seconds (in 5 second increments).</p> <hr/>
[Continue or Cancel Error Job]	<p>Set which users can cancel or continue operations for jobs which were paused due to an error.</p> <p>Value: [All Users], [Job Owner Only]</p> <hr/> <p> <b>NOTE</b></p> <p>Administrator can cancel all jobs regardless of this setting.</p> <hr/>


# Toner Settings

[System Menu/Counter] key > [Device Settings] > [Toner Settings]

 **NOTE**

This setting is enabled when original consumables (specified toner) are used.

## [Low Toner Alert]

Item	Description
[Low Toner Alert Level]	<p>Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low. This notification is used for Event Reports, Status Monitors, and SNMPTraps (such as Printing Equipment Management Systems).</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>If On is selected, set the amount of remaining toner to alert. The setting range is 5 to 100% (in 1% increments).</p> <hr/>

## Device Managed by Administrator

[System Menu/Counter] key > [Device Settings] > [Device Managed by Administrator]

If you are the same user of this machine as the administrator, such as at home or in a small office, you will be able to use functions that require logging in as an administrator without logging in.




Value: [No (home or small office)], [Yes (medium or large offices)]



# Notification/Report


Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.

## Print Report/List

[System Menu/Counter] key > [Notification/ReportReport] > "Print Report/List" [Print Report/List]

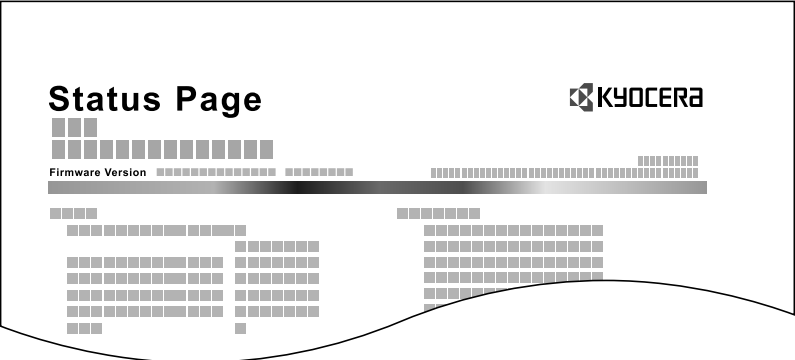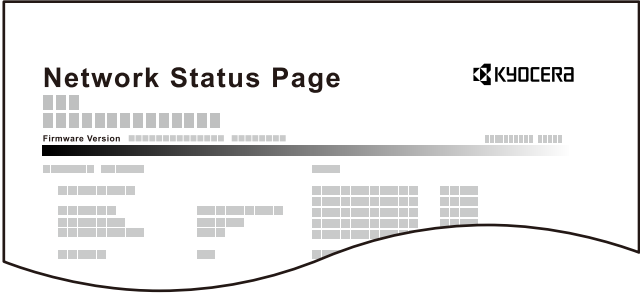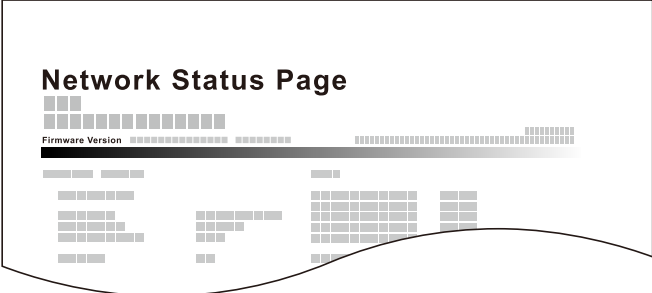Item	Description
[Status Page]	<p>Prints the status page. You can check information such as the current settings, available memory, and installed optional equipment.</p>  A screenshot of the 'Status Page' from a Kyocera device. The page has a header with 'Status Page' on the left and the Kyocera logo on the right. Below the header, there are several sections of information represented by placeholder text and icons, including a 'Firmware Version' section with a progress bar.
[Service Status]	<p>Prints the service status. More detailed information is available than on the Status Page. Service personnel usually print the service status pages for maintenance purpose.</p>
[Network Status]	<p>Prints the Network status page. You can check information such as the firmware version, network address, and network protocol of the network interface.</p>   Two screenshots of the 'Network Status Page' from a Kyocera device. The top screenshot shows the page header with 'Network Status Page' and the Kyocera logo, followed by a 'Firmware Version' section with a progress bar. The bottom screenshot is a similar view of the same page, showing the same layout and content.

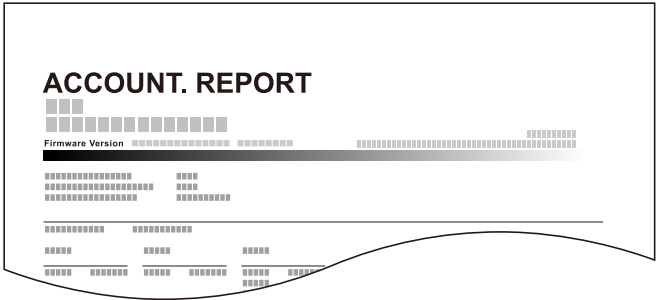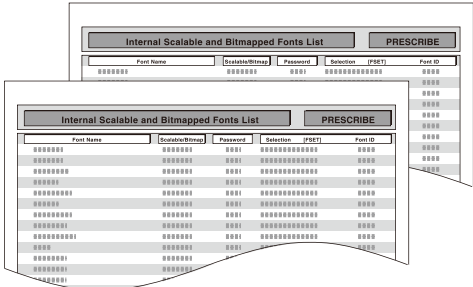Item	Description
[Print Accounting Report]	<p>If job accounting is enabled, the total pages counted of all relevant accounts can be printed as an accounting report.</p> <p>➔ <a href="#">Print Accounting Report (page 558)</a></p> 
[Font List]	<p>Prints the font list. You can check the fonts installed in this machine with a sample.</p> 
[Outgoing Fax Report]	<p>Displays only for fax models.</p> <p>➔ <b>FAX Operation Guide</b></p>
[Incoming Fax Report]	<p>Displays only for fax models.</p> <p>➔ <b>FAX Operation Guide</b></p>
[Address Book (Index) ]	<p>Displays only for fax models.</p> <p>➔ <b>FAX Operation Guide</b></p>
[Address Book (No.) ]	<p>Displays only for fax models.</p> <p>➔ <b>FAX Operation Guide</b></p>
[One-Touch List]	<p>Prints One Touch List, allowing you to check the destinations that have been registered on the One Touch Keys.</p>
[Subaddress Box List]	<p>Displays only for fax models.</p> <p>➔ <b>FAX Operation Guide</b></p>
[Application Status]	<p>Prints the Application status. You can check the information of the applications installed on this machine.</p>

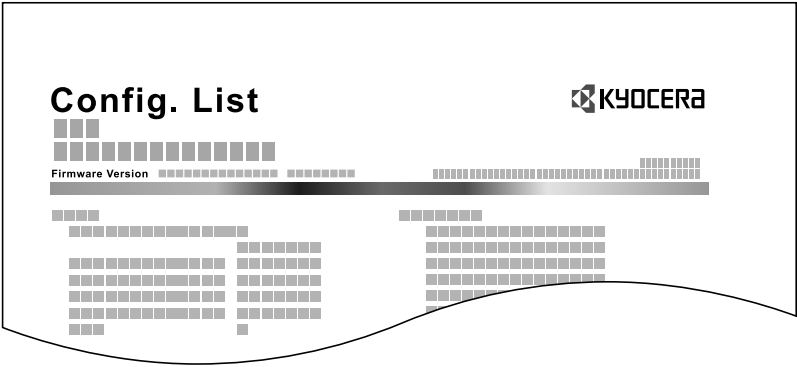Item	Description
[Configuration List]	<div>Print the system settings as the list.</div> <div></div>
[Data Sanitization Report]	<div>Prints the data sanitization report.</div>

## Result Report Setting[Result Report Setting]

[System Menu/Counter] key > [Notification/ReportReport] > "Result Report Setting"

Configure settings for notices for sending and receiving.

### [Send Result Report]

Automatically print a report of transmission result when a transmission is complete.

Item	Description
[Email/Folder]	Automatically print a report of transmission result when Email or SMB/FTP transmission is complete. Value: [Off], [On], [Error Only]
[Fax]	➔ <b>FAX Operation Guide</b>
[Canceled before Sending]	Print a send result report if the job is canceled before being sent. Value: [Off], [On] (Not displayed when both [Email/Folder] and [Fax] are [Off].)
[Recipient Format]	Select the Recipient Format for the send result report. Value: [Name or Destination], [Name and Destination] (Not displayed when both [Email/Folder] and [Fax] are [Off].)

### [RX Result]

Displays only for fax models.

➔ **FAX Operation Guide**

### [Job Finish Notice Setting]

This item is displayed for fax-compatible machines.

For details, refer to the following:


➔ **Fax Operation Guide**

## [Device Status Notification]

[System Menu/Counter] key > [Notification/ReportReport] > "Device Status Notification"

### [Low Toner Alert]

### [Time for Maintenance Alert]

Item	Description
[Notify via Operation Panel]	Set whether or not to display on the operation panel when a periodic inspection is near. Value: [Off], [Display Status], [Display Status and Error],
[Notify Externally (for administration use)]	<p>Set the timing at which the administrator will be notified of the period remaining before the upcoming scheduled inspection when it is near. This notification is used for Event Reports, Status Monitors, and SNMPTraps (such as Printing Equipment Management Systems). Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>If On is selected, set the alert timing. The range is from 5 to 100 percent (in increments of 1 percent).</p> <hr/>

## Fax Communication Report

[System Menu/Counter] key > [Notification/ReportReport] > "Fax Communication Report"

Configure settings for Outgoing Fax report and Incoming Fax report.


Displays only for fax models.

For details, refer to the following:

➔ **FAX Operation Guide**

## History Settings

[System Menu/Counter] key > [Notification/ReportReport] > [Send Log History]"History Settings"

Item	Description
[History Settings]	-
[Auto Sending]	<p>This function automatically sends the log history to the specified destinations whenever a set number of jobs has been logged. Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>If [On] is selected, specify the number of job histories to be sent automatically. The setting range is 1 to 16.</p> <hr/>
[Destination]	<p>Set the destination to which log histories are sent. Only E-mail address can be set. Value: [Addr. Book], [Address Entry]</p>
[Subject]	<p>Set the subject automatically entered when sending log histories by E-mail. Value: Up to 60 characters</p>
[SSFC]	Enter the subject of the printed job history with IC card authentication.
[Personal Information]	<p>Select whether to include personal information in the job log. Value: [Include], [Exclude]</p>
[Send Log History]	<p>You can also send the log history to the specified destinations manually. You must have already specified the destination in [Destination].</p>

## History Management

It is possible to perform Log Management for the following logs on this machine.

### Jobs Log

#### Log subject

Copy/Fax/Scan/Send/Print job completion

Checking job status/Changing of jobs/Canceling of jobs

#### Log information

Event occurrence date and time

Event type

Information on users logged in (or users who attempted to log in)



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

# Function Settings

Configures settings for copying, sending and Document Box functions.

## Function Defaults

[System Menu/Counter] key > [Function Settings] > [Function Defaults]

### [Common]

[System Menu/Counter] key > [Function Settings] > [Function Defaults] > [Common]

### [Original Orientation]

Value: [Top Edge on Top], [Top Edge on Left]

### [Clear Settings after Job Started]

Set whether to reset function settings to their defaults after the job starts.

Value: [Clear][Do Not Clear],

### [File Name Entry]

Set an automatically entered name (default) for jobs. Additional information such as Date and Time and Job No. can also be set.

Value

File Name: Up to 32 characters can be entered.

Additional information: [None], [Job No.], [Date and Time], [Job No. & Date and Time], [[Date and Time] & [Job No.]]

### [Border Erase Default]

Set the default width to be erased as a border.

Value: Both outer frame and inner frame

#### Metric

0 to 50 mm (in 1 mm increments)

#### Inch

0 to 2" (in 0.01" increments)



#### NOTE

To specify border erase widths around original, set the value in "Border". To specify border erase widths in the middle of original, set the value in "Gutter".

Item	Description
[Border Erase to Back Page]	Select the Border Erase Method for Back Page of a sheet. Value: [Same as Front Page], [Do Not Erase]

**[Zoom]**

Select the enlarged/reduced default when paper size/sending size changed after the originals set.

Value: [100%], [Auto]

**[DP Read Action]**

Set the operation when a document is scanned from the document processor.

Value: [Speed Priority], [Quality Priority]

**[Detect Folded Corner Originals]**

Value	Description
[On]	When scanning a document from the document processor, scanning is automatically stopped when a document with a folded corner is detected.
[Off]	It does not detect.

**[Copy/Print]**

[System Menu/Counter] key &gt; [Function Settings] &gt; [Function Defaults] &gt; [Copy/Print]


Item	Description
[Original Image (Copy)]	Set the default original document type for copying. Value: [Text+Photo], [Photo], [Text], [Graphic/Map], [Printer Output]
[Background Density Adj. (Copy)]	Set the default Background Density (Copy). Value: [Off], [Auto], [Manual (Darker 5)]
[Continuous Scan (Copy)]	Select the default Continuous Scan (Copy) setting. Value: [Off], [On]
[Prevent Bleed-through (Copy)]	Set the default value for preventing bleed-through (Copy). Value: [Off], [On]
[Skip Blank Page]	Set the default Skip Blank Page status. Value: [Off], [On]
[EcoPrint]	Select the EcoPrint default. Value: [Off], [On]
[Border Erase (Copy)]	Set the defaults for Border Erase (Copy). Value: [Normal], [Border Erase Sheet], [Border Erase Book], [Individual Border Erase]
[Collate]	Set the defaults for Collate. Value: [Off], [On]
[JPEG/TIFF Print]	Select the image size (resolution) when printing JPEG or TIFF file. Value: [Fit to Paper Size], [Image Resolution], [Fit to Print Resolution]
[XPS Fit to Page]	Set the default value for the XPS fit to page function. Value: [Off], [On]
[Auto % Priority]	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed. Value: [Off], [On]

Item	Description
[Duplex]	<p>Produces two-sided copies. You can also create single-sided copies from two-sided originals.</p> <p><b>[1-sided&gt;&gt;1-sided]</b></p> <p>-</p> <p><b>[1-sided&gt;&gt;2-sided]</b></p> <p>[Finishing]</p> <p>Value: [Left/Right], [Top]</p> <p><b>[2-sided&gt;&gt;1-sided]</b></p> <p>[Duplex]</p> <p>Value: [Left/Right], [Top]</p> <p><b>[2-sided&gt;&gt;2-sided]</b></p> <p>[Duplex]</p> <p>Value: [Left/Right], [Top]</p> <p>[Finishing]</p> <p>Value: [Left/Right], [Top]</p>

**[Send/Store]**

[System Menu/Counter] key &gt; [Function Settings] &gt; [Function Defaults] &gt; [Send/Store]

Item	Description
[Original Size]	Set the default value for the original size. When Standard Size Detection is OFF, the size set in the default original size is displayed as an option. These settings are in [Device Settings] > [Original/Scan Settings] > [Auto Detect Original Size (DP)]. Detection of standard size: [On] Value: [Auto (Standard Size)], [Auto (Non-standard Size)] Detection of standard size: [Off] Value: [Auto (Non-standard Size)], Original Size (default size)
[Color Selection]	Set the color. Value: [Auto Color (Color/Grayscale)], [Auto Color (Color/B & W)], [Full Color], [Grayscale], [Black & White]
[Scan Resolution]	Select the default scanning resolution for scanning documents. Value: [600x600dpi], [400x400dpi Ultrafine], [300x300dpi], [200x400dpi Superfine], [200x200dpi Fine], [200x100dpi Normal]
[Fax TX Resolution]	Displays only for fax models. ➡ <b>FAX Operation Guide</b>
[Org. Image (Send/Store)]	Set the default original document type for sending/storing. Value: [Text+Photo], [Photo], [Text], [Text (Fine Line)]
[Clarify Text (Noise Removal) Settings]	When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text. Value: [Off], [On]
[Background Density Adj. (Send/Store)]	Set the default Background Density (Send/Store). Value: [Off], [Auto], [Manual (Darker 5)]
[Continuous Scan (Send/Store)]	Select the default Continuous Scan (Send/Store) setting. Value: [Off], [On]
[Continuous Scan (Fax)]	Displays only for fax models. ➡ <b>FAX Operation Guide</b>
[Prevent Bleed-through (Send/Store)]	Set the default Prevent Bleed (Send/Store). Value: [Off], [On]
[Border Erase/Full Scan (Send/Store)]	Set the defaults for Border Erase/Full Scan (Send/Store). Value: [Standard], [Full Scan], [Border Erase Sheet], [Border Erase Book], [Individual Border Erase]
[Border Erase/Full Scan (Fax)]	Displays only for fax models. ➡ <b>FAX Operation Guide</b>
[Skip Blank Page (Send/Store)]	Set the default Skip Blank Page status. Value: [Off], [On]
[File Format]	Set the default type of the files. Value: [PDF], [TIFF], [JPEG], [XPS], [OpenXPS], [High Comp. PDF]

Item	Description
[Image Quality (File Format)]	Select the default PDF/TIFF/JPEG/XPS/OpenXPS file quality. Value: [1] Low Quality (High Comp.) to [5] High Quality (Low Comp.)
[High Comp. PDF Image]	Select the default quality setting for high compressed PDF files. Value: [Compression Ratio Priority], [Standard], [Quality Priority]
[Color TIFF Compression]	Select the compression method for sending the color documents in the TIFF format. Value: [TIFF V6], [TTN2]
[PDF/A]	Select the default PDF/A setting. Value: [Off], [PDF/A-1a], [PDF/A-1b], [PDF/A-2a], [PDF/A-2b], [PDF/A-2u]  <div>  <b>NOTE</b>            If [On] is selected in "Digital Signature", [PDF/A-1a] and [PDF/A-1b] cannot be selected.         </div>
[File Separation]	Select the default file separation setting. Value: [Off], [Each Page]
[Email Subject/Body]	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by E-mail. Value Subject: Up to 256 characters can be entered. Body 1 to 3: Up to 500 characters can be entered.
[Duplex]	Select the type and orientation of the binding based on the original. Value: [1-sided], [2-sided] If you select [2-sided], you can select the binding direction([Left/Right], [Top]).

# Copy/Print

[System Menu/Counter] key > [Function Settings] > [Copy/Print]

Item	Description
[Quick Setup Registration (Copy)]	➡ <a href="#">Quick Setup Registration (Copy) (page 396)</a>

## Send/Store

[System Menu/Counter] key > [Function Settings] > [Send/Store]

### [Default Screen]

Set the default screen displayed when you select the [Send] key.

Value: [Destination], [Address Book], [One-Touch Key]





### [Prevent Mis-sending Settings]

Item	Description
[Destination Check before Send]	Select whether to display the confirmation screen of destinations after pressing the [Start] key when performing sending jobs. Value: [Off], [On]
[Entry Check for New Dest.]	When adding new destination, select whether to display the entry check screen to check the entered destination. Value: [Off], [On]
[Destination Check on Selecting]	Set whether to display a confirmation screen when selecting a destination from the address book or one-touch key. Value: [Off], [On]
[New Destination Entry]	Select whether to permit direct entry of destination. Value: [Prohibit], [Permit]
[Recall Destination]	Select whether to permit usage of [Recall Destination] on the Send screen. Value: [Prohibit], [Permit]
[Broadcast]	Set whether to enable broadcast. Value: [Prohibit], [Permit]
[Destination History Usage]	Allow to use the destination history. Value: [Prohibit], [Permit]
[Delete Destination History]	Delete the destination history.

### [Quick Setup Registration (Send)]

➔ [Quick Setup Registration \(Send\) \(page 396\)](#)



**[Signature to File]**

Item	Description
[Digital Signature]	<p>Select whether to add a digital signature.</p> <p>Value</p> <p><b>[Off]</b></p> <p>Does not add a digital signature.</p> <p><b>[Specify Each Job]</b></p> <p>Whether to add a digital signature is selected each time of sending.</p> <p><b>[On]</b></p> <p>Always adds a digital signature when sending.</p> <hr/> <p> <b>NOTE</b></p> <p>When [On] is selected, [PDF/A-1b] and [PDF/A-1a] cannot be selected in "PDF/A".</p> <hr/>
[Digital Signature Format]	<p>Select an algorithm used for encryption of digital signature.</p> <p>Value: [SHA-1], [SHA-256], [SHA-384], [SHA-512]</p> <hr/> <p> <b>NOTE</b></p> <p>This function is displayed when Digital Signature is set to [Specify Each Job] or [On].</p> <hr/>
[Password Confirmation on Signature Permission]	<p>Select whether to confirm password when setting digital signature.</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>This function is displayed when Digital Signature is set to [Specify Each Job].</p> <hr/>
[Password]	<p>Set a password required for setting digital signature. Enter a new security password 6 to 16 alphanumeric characters and symbols.</p> <hr/> <p> <b>NOTE</b></p> <p>This function is displayed when "Password Confirmation on Signature Permission" is set to [On].</p> <hr/>

# Email

[System Menu/Counter] key > [Function SettingsSettings] > [Email]

## [Email Settings]

Item	Description
[SMTP (Email TX)]	Select whether to send E-mail using SMTP. Value: [Off], [On]
[SMTP Server Name]	Enter the host name or IP address of the SMTP server.   <b>NOTE</b>  Up to 256 characters can be entered.
[SMTP Port Number]	Specify the port number to be used for SMTP. The factory default port number is 25. Value: 1 to 65535 (Port Number)
[Connection Test]	Tests to confirm the proper operation under the settings without sending an email.
[Sender Address]	Specify the sender address for when the machine sends E-mails. Non-delivery report may be sent back to the sender address specified here. It is recommended that you specify an e-mail address that can be received by the device administrator. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 256 characters.
[SMTP Auth and Sender Address]	When the user login is set to ON, login user name, password and E-mail address of login user are used for SMTP authentication and e-mail sender address. Value  <b>[Use System Settings]</b> Information set with [Sender Address] is used for SMTP authentication and E-mail sender address information.  <b>[Use Login User Information]</b> Login User information is used for SMTP authentication and E-mail sender address information.   <b>NOTE</b>  If there is no e-mail address set for the user who logged in, the Sender Address set with [Sender Address] is used for E-mail sender address information.

**[POP3]**

Item	Description
[POP3]	Select whether to receive E-mail using POP3. Value: [Off], [On]
[Remote Printing]	➡ <a href="#">Remote Printing (page 442)</a>

## Sending Job - Folder

[System Menu/Counter] key > [Function Settings] > [Sending Job - Folder]

Item	Description
[FTP Settings]	Select whether to send documents using FTP. To use this function, set it to On in "Protocol Settings". The factory default port number is 21. Value: [Off], [On], 1 to 65535 (Port Number)
[SMB Settings]	Select whether to send documents using SMB. To use this function, set it to "Protocol Settings" in [On]. The factory default value for the port number is 445 or SMBv1. [Protocol Settings] Value: [Off], [On], 1 to 65535 (Port Number) [SMBv1] Value: [Off], [On], 1 to 65535 (Port Number)

## Fax

[System Menu/Counter] key > [Function SettingsSettings] > [Fax]

Configures settings for fax functions.

Displays only for fax models.

For details, refer to the following:

➔ **FAX Operation Guide**

## WSD

[System Menu/Counter] key > [Function Settings] > [WSD]

### [WSD Scan]

Item	Description
[Protocol Settings]	Select whether to use WSD Scan. The setting will be changed after restarting the device or network. Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

### [WSD Print]

Item	Description
[Protocol Settings]	Set whether to use our proprietary web services. WIA driver, TWAIN driver and Network FAX driver use this Enhanced WSD web service. The setting will be changed after restarting the device or network. Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

# Address Book

[System Menu/Counter] key > [Function Settings] > [Address Book]

## [Add/Edit Machine Address Book]

Configure settings for address book.

➔ [Adding a Destination \(Address Book\) \(page 155\)](#)

## [Machine Address Book]

Item	Description
[Sort]	Select the default sort setting of the address for the address book. Value: [No.], [Name (Kana)]
[Narrow Down]	This procedure can be used to filter (narrow down) the types of destination listed when the address book is displayed. Value: [Off], [Email], [Folder], [Fax] <sup>*1</sup> , [Group]
[Edit Restriction]	Restrict editing of the address book. If you select [Administrator Only], you can only edit the Address Book by logging in as administrator. Value: [Off], [Administrator Only]

\*1 <ph conkeyref="paragraph/ph\_2">This item is displayed for fax-compatible machines.</ph>

## [External Address Book]

➔ [Embedded Web Server RX User Guide](#)

## [Address Book Type]

Sets whether to display the main address book or extended address book when the address book is displayed. This is only displayed if the extended address book is available.

Value: [Machine Address Book], [External Address Book]

## One-Touch Key

[System Menu/Counter] key > [Function SettingsSettings] > [One-Touch Key]

Item	Description
[Add/Edit One-Touch Key]	Configure settings for One Touch Key. ➡ <a href="#">Add One Touch Keys. (page 167)</a>
[Edit Restriction]	Restrict editing of the One Touch Key. If you selected [Administrator Only], you can only edit the One Touch Key by logging in with administrator privileges. Value: [Off], [Administrator Only]

# Send and Forward

[System Menu/Counter] key > [Function Settings] > [Send and Forward]

## [Forward Settings]

Select whether to forward the original.

Value: [Off], [On]

 **NOTE**

If you select On, select the forwarding conditions from the following:

- [Email]
- [Folder (SMB)]
- [Folder (FTP)]
- [Fax]  
Displays only for fax models.
- [Cloud]

## [Destination]

Item	Description
[Menu] > [Add]	<p>Set the destination to forward the original. You can set only one of the following forwarding destinations.</p> <ul style="list-style-type: none"><li>• Addr. Book</li><li>• Email</li><li>• SMB</li><li>• FTP</li></ul> <p>➡ <a href="#">Specifying Destination (page 268)</a></p>

## Forward setting

[System Menu/Counter] key > [Function SettingsSettings] > [Forward setting]

Configure the Forwarding settings.

Displays only for fax models.


For details, refer to the following:

➔ **FAX Operation Guide**

# Printer

[System Menu/Counter] key > [Function Settings] > [Printer]

Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.

Item	Description
[Emulation]	<p>Select the emulation for operating this machine by commands oriented to other types of printers.</p> <p>Value: [PCL6], [IBM Proprinter], [Line Printer], [EPSON LQ-850], [KPDL], [KPDL (Auto)]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>When you have selected [KPDL (Auto)], set "Alt Emulation", too.</li> </ul> <hr/>
[KPDL Error Report]	<p>When you have selected [KPDL] or [KPDL (Auto)], set "KPDL Error Report", too.</p> <p>When an error has occurred during printing in KPDL emulation mode, set whether or not the error report is output.</p> <p>Value: [Off], [On]</p>
[Alt Emulation]	<p>If you select [KPDL (Auto)] as the emulation mode, you can automatically switch between KPDL and another emulation mode (alternative emulation) depending on the data to be printed.</p> <p>Value: [PCL6], [PC-PR201/65A], [IBM 5577], [EPSON VP-1000]</p>

Item	Description
[EcoPrint]	<p>EcoPrint conserves toner when printing. This is recommended for test copies where faded printing is not a problem.</p> <p>Value: [Off], [On]</p>

Item	Description
[Override A4/Letter]	<p>Select whether to treat A4 size and Letter, which are similar in size, as the same size when printing.</p> <p>Value:</p> <p><b>[Off]</b></p> <p>A4 and Letter are not regarded as the same in size.</p> <p><b>[On]</b></p> <p>A4 and Letter are regarded as the same in size. The machine will use whichever size is in the paper source.</p>

Item	Description
[Duplex]	<p>Select binding orientation for duplex mode.</p> <p>Value: [1-sided], [2-sided (Bind Long Edge)], [2-sided (Bind Short Edge)]</p>


Item	Description
[Copies]	Set the default number of copies, from 1 to 999. Value: 1 to 999 copies

Item	Description
[Orientation]	Set the default orientation, [Portrait] or [Landscape]. Value: [Portrait], [Landscape]

Item	Description
[Form Feed Timeout]	Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints paper. The options are between 5 and 495 seconds. Value: 5 to 495 seconds (in 5 second increments)

Item	Description
[LF Action]	Set the line feed action when the machine receives the line feed code (character code 0AH). Value: [LF Only], [LF and CR], [Ignore LF]

Item	Description
[CR Action]	Set the character return action when the machine receives the character return code (character code 0DH). Value: [CR Only], [LF and CR], [Ignore CR]


Item	Description
[Job Name]	Set whether the job name set in the printer driver is displayed. Value: [Off], [On]   <b>NOTE</b>  If you select On, select from [Job Name], [Job No. & Job Name] or [Job Name & Job No.] to use as the job name.

Item	Description
[User Name]	Set whether the user name set in the printer driver is displayed. Value: [Off], [On]


Item	Description
[Paper Feed Mode]	<p>While printing from the computer, select how to feed paper when the paper source and type are specified.</p> <p>Value</p> <p>[Auto] Search the paper source that matches the selected paper size and type.</p> <p>[Fixed] Print on paper loaded in the specified paper source.</p>

Item	Description
------	-------------

Item	Description
[MP Tray Priority]	<p>If paper is set in the MP Tray then it is possible for priority to be given to that MP tray in the paper feed.</p> <p>Value</p> <p>[Off] [Auto Feed] The printer driver settings are followed.</p> <p>If Auto is selected in the printer driver and there is paper in the MP tray then the paper feed will be from the MP tray.</p> <p>[Always] If there is paper in the MP tray then the paper feed will be from the MP tray regardless of what is set in the printer driver.</p>


Item	Description
[Auto Cassette Change]	<p>Select the following actions when the paper runs out in the paper source while printing.</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• If you select [Off], when the printer runs out of paper, it displays "Add the following paper in cassette #." (where # is the cassette number) or "Add paper in Multipurpose Tray." and stops printing.</li> <li>• When you load the paper in the cassette displayed in the message, printing resumes.</li> <li>• If you wish to print from another cassette, select the desired paper source with [Paper Selection].</li> <li>• When selecting [On], the machine continues printing automatically when the other cassette contains the same paper as the currently-used cassette.</li> </ul> <hr/>

Item	Description
[Wide A4]	<p>Turn this to On to increase the maximum number of characters that can be printed in a line for an A4 page (78 characters at 10 pitch) and Letter size page (80 characters at 10 pitch). This setting is only effective in PCL6 emulation.</p> <p>Value: [Off], [On]</p>

Item	Description
[Resolution]	<p>Set the resolution used for printing.</p> <p>Value: [300dpi], [600 dpi], [Fine1200], [Fast1200]</p> <hr/> <p> <b>NOTE</b></p> <p>Settings that are received from the printer driver have priority over the operation panel settings.</p> <hr/>

Item	Description
[KIR]	<p>Select the default KIR (smoothing) setting.</p> <p>Value: [Off], [On]</p>

Item	Description
[Printing Job Terminator]	<p>You can select the condition which is regarded as a job termination if the print job could not be processed until the end due to your environment and the other reason.</p> <p>Value</p> <p>[EOJ (End of Job)]</p> <p>The command recognized as a termination of the job data is regarded as one job until it is detected.</p> <p>[End of Network Session]</p> <p>The data included in a network session at network connection is regarded as one job.</p> <p>[UEL (Universal Exit Language)]</p> <p>The UEL included in the termination of the job data is regarded as one job until it is detected.</p>

Item	Description
[Remote Printing]	<p>Select whether to prohibit printing that is performed without operating the machine.</p> <p>When [Prohibit] is selected, a document that has been stored in the document box from the printer driver can be printed from the machine. This prevents another person from seeing that document.</p> <p>Value: [Prohibit], [Permit]</p> <hr/> <p> <b>NOTE</b></p> <p>If [Prohibit] is selected, printing and storing using Quick Copy and Proof and Hold functions are disabled. Printing a received FAX is not prohibited.</p> <hr/>

Item	Description
[Direct Printing from Web]	<p>Set whether to allow Direct Printing from Embedded Web Server RX.</p> <p>Value: [Not Allowed], [Allowed]</p> <p>➡ <b>Embedded Web Server RX User Guide</b></p>

## Document Box



[System Menu/Counter] key > [Function Settings] > Document Box

Item	Description
[Quick Setup Registration (Storing in Box)]	➡ <a href="#">Quick Setup Registration (Storing in Box) (page 396)</a>
[Quick Setup Registration (Box Print)]	➡ <a href="#">Quick Setup Registration (Box Print) (page 396)</a>

## Job Box

[System Menu/Counter] key > [Function Settings] > [Job Box]

Configure settings for Job Box.

Item	Description
[Quick Copy Job Retention]	<p>To maintain free space on the hard disk, you can set the maximum number of stored jobs. Value: number between 0 and 300</p> <hr/> <p> <b>NOTE</b></p> <p>When 0 is set, Quick Copy cannot be used.</p> <hr/>
[Deletion of Job Retention]	<p>This setting specifies that documents, such as Private Printing, Quick Copying, or Proof and Hold Printing, saved temporarily in the job box are automatically deleted after they have been saved for a set time. Value: [Off], [1 hour], [4 hours], [1 day], [1 week]</p> <hr/> <p> <b>NOTE</b></p> <p>This function is valid for documents saved after the function is set. Regardless of this function setting, temporary documents are deleted when the power switch is turned off.</p> <hr/>
[Storage Media]	<p>Set the save destination of the Job Box. Displayed when the optional SD card is installed. Value: [SD Card]</p>

## Subaddress Box

[System Menu/Counter] key > [Function SettingsSettings] > [Subaddress Box]

Registers a subaddress box that uses subaddress based communication.

Displays only for fax models.

For details, refer to the following:

➔ **FAX Operation Guide**

## Fax Memory RX Box

[System Menu/Counter] key > [Function Settings] > [Fax Memory RX]

Set whether to perform print immediately for the FAX documents received or to save them in the Fax Memory RX Box.

Displays only for fax models.

For details, refer to the following:

➔ **FAX Operation Guide**

## Home

[System Menu/Counter] key > [Function SettingsSettings] > [Home]

Configure settings for Home screen.

➔ [Editing the Home Screen \(page 57\)](#)

## Cloud Access Setting

[System Menu/Counter] key > [Function Settings] > [Cloud Access Setting]

Set connection and editing restrictions for Cloud Access.

➡ [Cloud Linkage Function \(page 289\)](#)

## Status

[System Menu/Counter] key > [Function Settings] > [Status]

Set the display of Job Status/Jobs History.

Item	Description
[Display Jobs Detail Status]	Value: [Show All], [My Jobs Only], [Hide All]
[Display Jobs Log]	Value: [Show All], [My Jobs Only], [Hide All]
[Display Fax Log]	Value: [Show All], [Hide All] Displays only for fax models.
[Pause/Resume of All Print Jobs]	Value: [Prohibit], [Permit]

## Remote Services

[System Menu/Counter] key > [Function Settings] > [Remote Services]

When the trouble occurs on this product, it is possible to explain the operational procedure and the troubleshooting method through the internet from our sales office by accessing the operation panel screen of this product while operating the screen.



### NOTE

When using the remote service settings, it is necessary to make a contract with our company. Please contact our sales office or our authorized dealer (purchase source) for the details.

---

## TWAIN/WIA

[System Menu/Counter] key > [Function Settings] > [TWAIN/WIA]

Item	Value
[Enhanced WSD]	Set whether to use our proprietary web services. Value: Protocol Settings:[Off], [On] Available networks: Wi-Fi Direct, Wi-Fi, and wired
[Enhanced WSD over TLS]	Set whether to use our proprietary web services. Value: Protocol Settings:[Off], [On] Available networks: Wi-Fi Direct, Wi-Fi, and wired



### NOTE

The setting will be changed after restarting the device or network.

If you select [Off], the WIA driver, TWAIN driver, and Network FAX driver are not available.

# Network Settings

Configure the machine system.  
[System Menu/Counter] key > [Network Settings]  
Configures network settings.

## Host Name

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Host Name]

Item	Description
[Host Name]	Check the host name of the machine. Host name can be changed from Embedded Web Server RX. ➡ <a href="#">Changing Device Information (page 114)</a>

## Proxy





[System Menu/Counter] key > [Network Settings] > "Network Settings" [Proxy]


Item	Description
[Proxy]	Set the proxy for connection to the Internet from an application. Value: [Off], [Use Different Proxy Server], [Use the Same Proxy Server for All Protocols]
[Proxy Server (HTTP)]	Set MC. Value: (Enter the address and port number of the proxy)
[Proxy Server (HTTPS)]	Set Proxy Server (HTTPS)Proxy Server (HTTP). This can be set if [Proxy] is selected to [Use Different Proxy Server]. Value: (Enter the address and port number of the proxy)
[Do Not Use Proxy for Following Domains]	Set Do Not Use Proxy for Following Domains. Value: (Enter the domain)

## Wi-Fi Direct Settings

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

Set Wi-Fi Direct.

Item	Description
[Wi-Fi Direct]	<p>Select whether to use Wi-Fi Direct. Value: [Off], [On]</p>
[Device Name]	<p>Specify the device name.</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• Up to 32 characters can be entered.</li> <li>• This function is displayed when [Wi-Fi Direct] is set to On.</li> </ul> <hr/>
[IP Address]	<p>Check the IP address of the machine. ➔ <a href="#">TCP/IP Settings (page 463)</a></p> <hr/> <p> <b>NOTE</b></p> <p>This function is displayed when [Wi-Fi Direct] is set to On.</p> <hr/>
[Auto Disconnect]	<p>Automatically disconnect devices connected through Wi-Fi Direct. Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• If you select On, set the waiting time for automatic disconnection.</li> <li>• This function is displayed when [Wi-Fi Direct] is set to On.</li> </ul> <hr/>
[Persistent Group]	<p>Set whether Wi-Fi Direct connection as Persistent Group (information for the connection is kept even if the power is turned off). Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>This function is displayed when [Wi-Fi Direct] is set to On.</p> <hr/>


Item	Description
[Password]	<p>Select whether the Wi-Fi Direct password is automatically generated or created manually.</p> <p>If you set [Manual Creation] to [Off], the "Persistent Group" setting is toggled on.</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>If "Manual Creation" is set to [On], set a password (8 or more characters).</p> <hr/>
[Frequency Band]	<p>Set the frequency band to be used.</p> <p>Value: [2.4GHz], [5GHz]</p>

# Wi-Fi Settings

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Wi-Fi Settings]

Set Wi-Fi Direct.

## Wi-Fi Settings

Item	Description
[Wi-Fi]	<div>Set whether to use Wi-Fi. Value: [Off], [On]</div> <div> <b>NOTE</b> If you select [On] , restart your network for the setting to take effect.</div>

## Setup

### [Available Network]

Select access points to which the machine can be connected, enter the Preshared Key and start a connection.  
If you select [Menu], you can perform the following operations.

Item	Description
[Reload]	Updates the available networks (access point) list.
[Index]	Select the key index of the access point. Value: 0 to 3

### [Push Button Method]

If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.

**NOTE**


The push button method supports only the WPS.


### [PIN Code Method (Device)]

Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.

### [Custom Setup]

The detailed settings for wireless LAN can be changed.

Item	Description
[Network Name (SSID)]	<p>Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.</p> <hr/> <div> <b>NOTE</b></div> <p>Up to 32 characters can be entered.</p> <hr/>
[Network Authentication]	<p>Select network authentication type.</p> <p>Value: [Open], [WPA2/WPA-PSK], [WPA2-PSK], [WPA2/WPA-EAP], [WPA2-EAP], [WPA3-SAE/WPA2-PSK], [WPA3-SAE], [WPA3/WPA2-EAP], [WPA3-EAP]</p>

Item	Description
[Encryption]	<p>Select encryption method. The setting values vary depending on the Network Authentication setting.</p> <p><b>Open</b></p> <p>Value: [Disable], [WEP]</p> <hr/> <p> <b>NOTE</b></p> <p>If you selected [WEP], set the WEP key (up to 26 characters) and WEP Key Index (0 to 3).</p> <hr/> <p><b>WPA2/WPA-PSK</b></p> <p>Value: [AES], [Auto], [Preshared Key] (up to 64 characters)</p> <p><b>WPA2-PSK</b></p> <p>Value: [Preshared Key] (up to 64 characters)</p> <p><b>WPA2/WPA-EAP</b></p> <p>Value: [AES], [Auto]</p> <p><b>WPA2-EAP</b></p> <p>Value: —</p> <p><b>WPA3-SAE/WPA2-PSK</b></p> <p>Value: [Preshared Key] (up to 64 characters)</p> <p><b>WPA3-SAE</b></p> <p>Value: [Preshared Key] (up to 64 characters)</p> <p><b>WPA3/WPA2-EAP</b></p> <p>Value: —</p> <p><b>WPA3-EAP</b></p> <p>Value: —</p>
[Automatic Channel Control]	Select [On] to use the best channel by checking the radio wave conditions around you.

## TCP/IP Settings[TCP/IP Settings]TCP/IP Settings

### [TCP/IP]




Select whether to use TCP/IP Protocol.


Value: [Off], [On]

### [IPv4 Settings]

Set up TCP/IP (IPv4) to connect to the network.

This setting is available when [TCP/IP] is [On].

Item	Description
[DHCP]	<p>Select whether to use the DHCP (IPv4) server.</p> <p>Value: [Off], [On]</p>
[Auto-IP]	<p>Select whether to use Auto-IP.</p> <p>Value: [Off], [On]</p>
[IP Address]	<p>Set the IP address.</p> <p>Value: ###.###.###.###</p> <hr/> <p> <b>NOTE</b></p> <p>When DHCP is set to [Off], the value cannot be entered.</p> <hr/>
[Subnet Mask]	<p>Set the IP subnet mask.</p> <p>Value: ###.###.###.###</p> <hr/> <p> <b>NOTE</b></p> <p>When DHCP is set to [Off], the value cannot be entered.</p> <hr/>
[Default Gateway]	<p>Set the IP gateway address.</p> <p>Value: ###.###.###.###</p> <hr/> <p> <b>NOTE</b></p> <p>When DHCP is set to [Off], the value cannot be entered.</p> <hr/>

Item	Description
[DNS Server Address]	<p>Set the IP address of DNS (Domain Name System) server. Value: [Use DNS Server from DHCP], [Use the following DNS Server]</p> <hr/> <p> <b>NOTE</b></p> <p>When [Use the following DNS Server] is selected, enter the DNS server IP address into [DNS Server (Primary)] and [DNS Server (Secondary)].</p> <hr/>
[DNS over TLS]	<p>Set whether to connect to a DNS server during communication protected by TLS. Value: [Off], [On], [Auto]</p>


### **IMPORTANT**





- When setting the Auto-IP, enter "0.0.0.0" in IP Address.
- After changing the setting, restart the network or turn the machine OFF and then ON.

## **[IPv6 Settings]**

Set up TCP/IP (IPv6) to connect to the network.

This setting is available when [TCP/IP] is [On].

Item	Description
[IPv6 SettingsIPv6 Settings]	<p>Select whether to use IPv6. Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>Selecting [On] displays IP address in "IPAddr.(LinkLocal)" after restarting the network.</p> <hr/>

Item	Description
[Manual Setting]	<p>Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6).</p> <p>Value</p> <p><b>[IP Address (Manual)]</b></p> <p>128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).</p> <p><b>[Prefix Length]</b></p> <p>0 to 128</p> <p><b>[Default Gateway]</b></p> <p>128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• This function is displayed when [IPv6] is set to [On].</li> <li>• To enter [Default GatewayDefault Gateway], set [RA (Stateless)] to Off.</li> </ul> <hr/>
[RA (Stateless)]	<p>Select whether to use RA (Stateless).</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• This function is displayed when [IPv6] is set to [On].</li> <li>• Selecting [On] displays IP address in [IP Address (Stateless)] after restarting the network.</li> </ul> <hr/>
[DHCPDHCP]	<p>Select whether to use the DHCP (IPv6) server.</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• This function is displayed when [IPv6] is set to [On].</li> </ul> <hr/>
[DNS Server Address]	<p>Set the IP address of DNS (Domain Name System) server.</p> <p>Value: [Use DNS Server from DHCP], [Use the following DNS Server]</p> <hr/> <p> <b>NOTE</b></p> <p>When [Use the following DNS Server] is selected, enter the DNS server IP address into [DNS Server (Primary)] and [DNS Server (Secondary)].</p> <hr/>

Item	Description
[DNS over TLS]	Set whether to connect to a DNS server during communication protected by TLS. Value: [Off] , [On] , [Auto]

---

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

---

## Wired Network Settings

[System Menu/Counter] key > [Network Settings] > "Network Settings"[Wired Network Settings]

Configure wired network settings.

### TCP/IP Settings

#### [TCP/IP]




Select whether to use TCP/IP Protocol.


Value: [Off], [On]

#### [IPv4 Settings]

Set up TCP/IP (IPv4) to connect to the network.

This setting is available when [TCP/IP] is [On].

Item	Description
[DHCP]	<p>Select whether to use the DHCP (IPv4) server. Value: [Off], [On]</p>
[Auto-IP]	<p>Select whether to use Auto-IP. Value: [Off], [On]</p>
[IP Address]	<p>Set the IP address. Value: ###.###.###.###</p> <hr/> <p> <b>NOTE</b></p> <p>When DHCP is set to [Off], the value cannot be entered.</p> <hr/>
[Subnet Mask]	<p>Set the IP subnet mask. Value: ###.###.###.###</p> <hr/> <p> <b>NOTE</b></p> <p>When DHCP is set to [Off], the value cannot be entered.</p> <hr/>
[Default Gateway]	<p>Set the IP gateway address. Value: ###.###.###.###</p> <hr/> <p> <b>NOTE</b></p> <p>When DHCP is set to [Off], the value cannot be entered.</p> <hr/>

Item	Description
[DNS Server Address]	<p>Set the IP address of DNS (Domain Name System) server. Value: [Use DNS Server from DHCP], [Use the following DNS Server]</p> <hr/> <p> <b>NOTE</b></p> <p>When [Use the following DNS Server] is selected, enter the DNS server IP address into [DNS Server (Primary)] and [DNS Server (Secondary)].</p> <hr/>
[DNS over TLS]	<p>Set whether to connect to a DNS server during communication protected by TLS. Value: [Off], [On], [Auto]</p>


### **IMPORTANT**





- When setting the Auto-IP, enter "0.0.0.0" in IP Address.
- After changing the setting, restart the network or turn the machine OFF and then ON.

## **[IPv6 Settings]**

Set up TCP/IP (IPv6) to connect to the network.

This setting is available when [TCP/IP] is [On].

Item	Description
[IPv6 SettingsIPv6 Settings]	<p>Select whether to use IPv6. Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>Selecting [On] displays IP address in "IPAddr.(LinkLocal)" after restarting the network.</p> <hr/>

Item	Description
[Manual Setting]	<p>Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6).</p> <p>Value</p> <p><b>[IP Address (Manual)]</b></p> <p>128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).</p> <p><b>[Prefix Length]</b></p> <p>0 to 128</p> <p><b>[Default Gateway]</b></p> <p>128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• This function is displayed when [IPv6] is set to [On].</li> <li>• To enter [Default GatewayDefault Gateway], set [RA (Stateless)] to Off.</li> </ul> <hr/>
[RA (Stateless)]	<p>Select whether to use RA (Stateless).</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• This function is displayed when [IPv6] is set to [On].</li> <li>• Selecting [On] displays IP address in [IP Address (Stateless)] after restarting the network.</li> </ul> <hr/>
[DHCPDHCP]	<p>Select whether to use the DHCP (IPv6) server.</p> <p>Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• This function is displayed when [IPv6] is set to [On].</li> </ul> <hr/>
[DNS Server Address]	<p>Set the IP address of DNS (Domain Name System) server.</p> <p>Value: [Use DNS Server from DHCP], [Use the following DNS Server]</p> <hr/> <p> <b>NOTE</b></p> <p>When [Use the following DNS Server] is selected, enter the DNS server IP address into [DNS Server (Primary)] and [DNS Server (Secondary)].</p> <hr/>

Item	Description
[DNS over TLS]	Set whether to connect to a DNS server during communication protected by TLS. Value: [Off] , [On] , [Auto]

---

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

---

[Others]

Item	Description
[LAN Interface]	Specify the settings for the LAN interface to be used. Value: [Auto], [10BASE-T Half], [10BASE-T Full], [100BASE-TX Half], [100BASE-TX Full], [1000BASE-T]

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

## Protocol Settings

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Protocol Settings]

Configures protocol settings.

### [SMTP (Email TX)]

➔ [SMTP \(Email TX\) \(page 429\)](#)

### [POP3 (Email RX)]

➔ [\[POP3\] \(page 430\)](#)

### [FTP Client (Transmission)]

➔ [FTP Settings \(page 431\)](#)

### [FTP Server (Reception)]

Item	Description
[Protocol Settings]	Set whether to send documents using FTP. *1 Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

### [SMB Client (Transmission)]

Item	Description
[Protocol Settings]	Select whether to send documents using SMB. Value: [Off], [On] Set whether to send documents using SMB or SMBv1. To use this, select [On] in these settings. To use SMBv1 furthermore, set these settings to [On]. The factory default port number is 445. SMBv1 Values: [Off], [On], 1 to 65535
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

### [SMB Server (Reception)]

Item	Description
[Protocol Settings]	Set whether to send documents using SMB. Value: [Off], [On] Set whether to send documents using SMB or SMBv1. To use this, select [On] in these settings. To use SMBv1 furthermore, set these settings to [On]. *1

Item	Description
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]



\*1 The setting will be changed after restarting the device or network.

## [WSD Scan]

→ [WSD Scan \(page 433\)](#)

## [WSD Print]

## [ThinPrint]

Item	Settings
[ThinPrint]	<p>Set whether to use ThinPrint. If the setting is [Enable], you can specify the port number used by ThinPrint. Typically, use 4000. <sup>*1</sup> <sup>*2</sup> Value: [Disable], [Enable] (Port Number: 1 to 32767)</p> <hr/> <p> <b>NOTE</b></p> <p>This feature does not appear if the optional ThinPrint Option is not running.</p> <hr/>
[ThinPrintoverTLS]	<p>To use ThinPrint over TLS, select [Enable] for this setting. <sup>*1</sup> <sup>*2</sup> Value: [Disable], [Enable]</p> <hr/> <p> <b>NOTE</b></p> <p>If the setting is [Enable], you must install the certificate.</p> <p>→ <b>Embedded Web Server RX User Guide</b></p> <hr/>
[Wi-Fi Direct]	<p>Select [Details] to set whether to enable this function for each network. Value: [Disable], [Enable]</p>
[Wi-Fi]	
[Wired Network]	

\*1 The setting will be changed after restarting the device or network.

\*2 In Security Settings set TLS to [On].

→ [TLS \(page 495\)](#)

## [LPD]

Item	Description
[Protocol Settings]	Set whether to send documents using LPD. <sup>*1</sup> Value: [Off], [On]

Item	Description
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

## [Raw]

Item	Description
[Protocol Settings]	Set whether to receive documents using the Raw Port. *1 Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

## [IPP]

Item	Description
[Protocol Settings]	Set whether to send documents using IPP. To use it, select On in these settings, and select [Off] in [TLS] from "Security Settings". Then select [Not Secure (IPPS & IPP)] in the security settings from Embedded Web Server RX. The factory default port number is 631. Value: [Off], [On], 1 to 32767 (Port Number)
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

## [IPP over TLS]

Item	Settings
[Protocol Settings]	Sets whether to receive documents using TLS-protected IPP. To use this, select [On] for this setting, and select [On] for [TLS] in the "Security Settings". The factory default port number is 443. *1*2 Value: [Off], [On], 1 to 32767 (Port Number)
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

\*2 In Security Settings set TLS to [On].

➔ [TLS \(page 495\)](#)

**[HTTP]**

Item	Description
[Protocol Settings]	Select whether to communicate using HTTP. *1 Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

**[HTTPS]**

Item	Description
[Protocol Settings]	Set whether to communicate using HTTPS. *1*2 Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

\*2 In Security Settings set TLS to [On].

➔ [TLS \(page 495\)](#)

**[LDAP]**

Select whether to use LDAP.

Value: [Off], [On]

**[SNMPv1/v2c]**

Item	Description
[Protocol Settings]	Select whether to communicate using SNMP. *1 Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.


**[SNMPv3]**

Item	Description
[Protocol Settings]	Set whether to communicate using SNMPv3. *1 Value: [Off], [On]

Item	Description
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]


\*1 The setting will be changed after restarting the device or network.

## [Enhanced WSD]

Item	Description
[Protocol Settings]	Set whether to use our proprietary web services. *1 Value: [Off], [On]   <b>NOTE</b>  If you select [Off], the WIA driver, TWAIN driver, and Network FAX driver are not available.
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

## [Enhanced WSD over TLS]

Item	Description
[Protocol Settings]	Set whether to use our proprietary Web service on TLS. *1 *2 Value: [Off], [On]   <b>NOTE</b>  If you select [Off], the WIA driver, TWAIN driver, and Network FAX driver are not available.
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

\*1 The setting will be changed after restarting the device or network.

\*2 In Security Settings set TLS to [On].

➔ [TLS \(page 495\)](#)

**[eSCL]**

Item	Description
[Protocol Settings]	Sets whether to receive scanned documents using eSCL. Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

**[eSCL over TLS]**

Item	Description
[Protocol Settings]	Sets whether to receive scanned documents using TLS-protected eSCL. Value: [Off], [On]
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]


**[VNC (RFB)]**

Item	Description
[Protocol Settings]	Set when using a remote operation by starting up a VNC Viewer other than ours (example: Real VNC). The factory default port number is 9062. Value: [Off], [On], 1 to 32767 (Port Number)
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

**[VNC (RFB) over TLS]**

Item	Description
[Protocol Settings]	Set when using a remote operation protected by TLS by starting up a VNC Viewer other than ours (example: Real VNC). The factory default port number is 9063. Value: [Off], [On], 1 to 32767 (Port Number)
[Available Network]	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]

**[Enhanced VNC (RFB) over TLS]**

Item	Description
[Protocol Settings]	<p>Start Embedded Web Server RX and set for using TLS-protected remote operation. The factory default port number is 9061. Value: [Off], [On], 1 to 32767 (Port Number)</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• The factory default setting is [On].</li> <li>• When the setting is On, TLS certificate is required. The factory certificate is the certificate owned by the machine.</li> </ul> <p>➔ <b>Embedded Web Server RX User Guide</b></p> <hr/>
[Available Network]	<p>Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]</p>

**[REST]**

Item	Description
[Protocol Settings]	<p>Set whether to send documents using REST. To use this, select [On] for this setting, and select [Off] for [TLS] in the "Security Settings". Then select [Not Secure (IPPS &amp; IPP)] in the security settings from Embedded Web Server RX. The factory default port number is 9080. <sup>*1</sup> Value: [Off], [On], 1 to 32767 (Port Number)</p>
[Available Network]	<p>Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]</p>

\*1 The setting will be changed after restarting the device or network.

**[REST over TLS]**

Item	Description
[Protocol Settings]	<p>Set whether to send documents using REST over TLS. To use this, select [On] for this setting, and select [Off] for [TLS] in the "Security Settings". Then select [Not Secure (IPPS &amp; IPP)] in the security settings from Embedded Web Server RX. The factory default port number is 9081. Value: [Off], [On], 1 to 32767 (Port Number)</p>
[Available Network]	<p>Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: [Disable], [Enable]</p>

[Communication Protocol]

Configure the messaging protocol as appropriate for your environment.

Value: [MQTT], [XMPP]

 **IMPORTANT**

Depending on the protocol, it may be necessary to restart the network or turn the power off/on after changing the settings.

[Data Security]

[System Menu/Counter] key > [Security SettingsSettings] > "Device Security Settings "[Data Security]

Configure settings related to data stored in memory.

[Data Sanitization]

This function returns the following information stored in the machine to the factory default.

- Address Book
- Favorite Data
- System Settings
- Fax Send/Receive/Transfer Data
- Outgoing and Incoming Fax Log
- Local Fax Station Name
- Local Fax Station Number
- Optional applications

 **NOTE**

- Print [Data Sanitization Report] and check that security data has definitely been erased.  
➡ [Data Sanitization Report \(page 414\)](#)
- You cannot cancel a process in the middle.
- Disconnect any modular or network cables before performing this operation.
- Before executing this function, set all [Interface Block Setting] to [Unblock].  
➡ [Interface Block Setting \(page 488\)](#)
- Do not turn off the power during data sanitization. If the power is turned off during erasing, erasing will be performed automatically after the power is turned on, but complete operation cannot be guaranteed.

Item	Settings
[Run Immediately]	Execute security data sanitization.

Item	Settings
[Reserve a Sanitization Time]	<p>The address information and image data in the machine will be completely erased at the specified time.</p> <p>Value: [Off], [On]</p> <p>If you select [On], set the date and time for complete erasure. The range of settings is [Year(2000 - 2035)], [Month(1 - 12)], [Day(1 - 31)], [Hour(0 - 23)].</p>
[Device Use After Sanitization]	<p>After data sanitization, the usage of this machine will be restricted. If [Prohibit] is selected, machine operation is disabled.</p> <p>Value: [Allowed], [Prohibit]</p>
[Data Sanitization Report]	Prints the data sanitization report.

## Items to be erased

Category	Data to be erased
Equipment / Job	<ul style="list-style-type: none"> <li>• Job value set by the user</li> <li>• Network Settings</li> <li>• Data registered inOne-Touch Key</li> <li>• Jobs Log</li> <li>• User information (user list, Address Book)</li> <li>• Account Information of Job Accounting</li> <li>• Network Certificates</li> <li>• This machine's startup screen changed by a service representative</li> </ul>
Fax	<ul style="list-style-type: none"> <li>• Fax value set by the user</li> <li>• Communication restriction settings</li> <li>• Encryption key settings</li> <li>• Communication log</li> <li>• Scheduled Job</li> <li>• Conditional Receive / Forward Settings</li> </ul>
Application / Program	<ul style="list-style-type: none"> <li>• Applications / programs registered by users and service representative</li> <li>• Trial function</li> </ul>

## Ping

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Ping]

Item	Description
[Ping]	Check if you can communicate with the destination by entering the host name or IP address of the destination.
[Ping Timeout]	➔ <a href="#">Ping (page 477)</a>

# Bonjour

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Bonjour]

Item	Description
[Bonjour]	Select whether to use [Bonjour]. Value: [Off], [On]

## IP Filter (IPv4)

[System Menu/Counter] key > [Network Settings] > "Network Settings" [IP Filter (IPv4)]

Item	Description
[IP Filter (IPv4)]	<p>Configure the IP Filter Setting. IP filter is a function used to restrict the access to the machine by setting the IP address and protocol.</p> <p>The IP address or network address of permitted hosts is set from Embedded Web Server RX. Not setting the IP Filter will allow access from all hosts.</p> <p>Value: [Off], [On]</p> <p>➡ <b>Embedded Web Server RX User Guide</b></p>

## IP Filter (IPv6)

[System Menu/Counter] key > [Network Settings] > "Network Settings" [IP Filter (IPv6)]

Item	Description
[IP Filter (IPv4)]	<p>Configure the IP Filter Setting. IP filter is a function used to restrict the access to the machine by setting the IP address and protocol.</p> <p>The IP address or network address of permitted hosts is set from Embedded Web Server RX. Not setting the IP Filter will allow access from all hosts.</p> <p>Value: [Off], [On]</p> <p>➡ <b>Embedded Web Server RX User Guide</b></p>

## IPSec

[System Menu/Counter] key > [Network Settings] > "Network Settings" [IPSec]

Item	Description
[IPSec]	Set whether or not to use the IPSec. Value: [Off], [On]

# Restart Network

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Restart Network]

Item	Description
[Restart Network]	Restarts the network.

## Connectivity

[System Menu/Counter] key > [Network Settings] > "Connectivity"

### [Bluetooth Settings]

Item	Description
[Bluetooth]	Bluetooth keyboard is used. Value: [Off], [On]
[Device]	Select a keyboard.

### [Address Book Type]

Set the extended address book to use.




#### NOTE

- This function is displayed when [Fax Server] is set to [On].
- If the extended address book is not set, it is not displayed.

➔ [Embedded Web Server RX User Guide](#)

### [Fax Server]

Item	Description
[Fax Server]	Select whether to use the Fax Server. Value: [Off], [On]
[Address Settings]	Set the prefix, suffix and domain name to attach to the destination.  <div>  <b>NOTE</b>            For information about the fax server, contact the fax server administrator.         </div>
[File Format]	Set the default type of the files. Value: [PDF], [TIFF], [XPS]

## [Remote Operation]

Configures remote operation settings.

Value: [Off], [On]

If you select [On], set the restriction.

Value: [Off], [Use Password], [Administrator Only]

If you selected [Off], users with no administrator privileges can perform remote operation.

If you selected [Use Password], enter the password for remote operation.

If you selected [Administrator Only], only administrators can perform remote operations.



### NOTE

If you selected [Administrator Only], remote operation from VNC software is not possible.

---

## Others

[System Menu/Counter] key > [Network Settings] > "Others"


Item	Description
[Primary Network (Client)]	Select the network interface to be used for the send function that this machine functions as a client, the network authentication and connecting to external address book. Value: [Wi-Fi], [Wired Network] E-mails can be set and used separately by [Wired Network] or [Wi-Fi].
[Restart Entire Device]	You can restart the device without turning the power switch off. Use this to deal with any unstable operation by the machine (this is the same as a computer restart).

# Security Settings

Configures security settings.

## Security Quick Setup

[System Menu/Counter] key > [Security Settings] > [Security Quick Setup]

Item	Description
[Security Quick Setup]	<p>Select security settings from levels 1 to 3 that are close to your environment, and change (customize) the functions as needed.</p> <p>Value</p> <p><b>[Level 1]</b></p> <p>The factory default setting.</p> <p><b>[Level 2]</b></p> <p>The security function of the network will change.</p> <p><b>[Level 3]</b></p> <p>All functions that protect the machine are enabled, and functions that do not protect the machine are disabled.</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"><li>• This function can be set only when logged in with administrator privileges. ➡ <a href="#">Log in as Machine Administrator or Administrator (page 108)</a></li><li>• Restart the device or network after selecting a level for the settings to take effect.</li><li>• If you change the security settings after selecting a level, the security quick setups will show as "Custom".</li><li>• For more information on each security level setting, refer to the following: ➡ <a href="#">Security Quick Setup Function List (page 810)</a></li></ul>

# Configuring Security Quick Setup

## 1 Display the screen

- 1 [System Menu/Counter] key > [Security Settings] > [Security Quick Setup]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

## 2 Select the security level according to the usage environment.

## 3 Configure the security function as necessary.



### NOTE

Refer to the following for the settings of each security level.

➔ [Security Quick Setup Function List \(page 810\)](#)



---

## 4 Restart the device or network.

- ➔ [Restart Entire Device \(page 485\)](#)
- ➔ [Restart Network \(page 482\)](#)

## Interface Block Setting

[System Menu/Counter] key > [Security Settings] > "Interface Block Setting"



Item	Description
[USB HOST]	Block and protect the USB port and USB port (USB Host). Value: [Unblock], [Block] Value: ,
[USB Device]	Block and protect the USB interface connector (USB Device). Value: [Unblock], [Block] Value: ,
[USB Drive]	Block and protect the USB memory slot. Value: [Unblock], [Block]   <b>NOTE</b>  This function can be configured when the USB host is set to [Unblock] .
[Restart Entire Device]	Restart the machine without turning the power switch off.   <b>IMPORTANT</b>  Restart the Device or turn the power off and on to reflect the change in the "Interface Block Setting".




### **IMPORTANT**

After changing the setting, restart the system or turn the machine OFF and then ON.

## Device Security Settings

[System Menu/Counter] key > [Security Settings] > "Device Security Settings "

Item	Description
[Unusable Time]	<p>Set a time period during which the machine will not print received faxes.</p> <p>Displays only for fax models.</p> <p>➔ <b>FAX Operation Guide</b></p>
[Job Status/Job Logs Settings]	<p>➔ <a href="#">Status (page 449)</a></p>
[Security Level]	<p>Specify the security level.</p> <p>Value</p> <p><b>[Low]</b></p> <p>Used during maintenance. Do not use normally.</p> <p><b>[High]</b></p> <p>This is the security setting we recommend. Normally use this setting.</p> <p><b>[Very High]</b></p> <p>In addition to the [High] state, disables changing of machine settings with external commands.</p> <hr/> <p> <b>NOTE</b></p> <p>This function can be set only when logging in with the authority of the device administrator.</p> <p>➔ <a href="#">Adding a User (Local User List) (page 508)</a></p> <hr/>
[Remote Printing]	<p>➔ <a href="#">Printer (page 438)</a></p>
[RAM Disk Setting]	<p>Create a RAM disk and set its capacity. You can print print data from the job box by creating a RAM disk.</p> <p>Value</p> <p>[RAM Disk Size]:[Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <p>Set [RAM Disk Size] to [On] and enter the amount of RAM disk space. Setting range varies depending on size of onboard memory.</p> <hr/>

Item	Description
[Software Verification]	<p>Verify the software in the machine. Select [Start Verification] to run the verification. If you experience any abnormalities in software verification, contact your service representative.</p> <hr/> <p> <b>IMPORTANT</b></p> <p>After changing the setting, restart the system or turn the machine OFF and then ON.</p> <hr/>
[Administrator Authentication on Firmware Update]	<p>Request approval from the administrator when updating the firmware. Value: [Off], [On]</p>
[Allowlisting]	<p>In case if the unauthorized program or the program that has tampered are installed, the stored data or the contents of the communication in this program might be stolen. Once this function is activated, execution of the unauthorized software or the tampering of the software can be prevented, and possible to maintain the reliability of the system. Value: [Off], [On]</p> <hr/> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>• After setting it to [On], you need to shutdown and restart the machine.</li> <li>• Enabling this feature slows the machine start-up.</li> <li>• If malware is detected, an event report can be used as a way to understand its content. The Event reports can be enable by the Embedded Web Server RX &gt; "Notification/Report" &gt; [Recipient 1 E-mail Address] to [Recipient 3 E-mail Address] and [Notify when Malicious Program is Detected] is set to [On].</li> </ul> <hr/>
[Remaining Print Jobs]	<p>These settings are for print jobs that require security considerations, such as passwords. If you select [Cancel], any user attempts to log out will be aborted, including any jobs waiting to print. Value: [Cancel], [Continue]</p>
[Secure Boot]	<p>Secure boot is a function that detects tampering with the BIOS or firmware when starting the machine. It verifies the electronic signature given to the BIOS or firmware, and stops the execution of the BIOS or firmware if tampering is detected. Value: [BIOS], [BIOS + Firmware]</p> <hr/> <p> <b>IMPORTANT</b></p> <p>If tampering is detected and secure boot fails, the panel screen will turn white after 1 minute.</p> <hr/>
[Firmware Update Tool]	<p>Set whether to allow firmware updates using the firmware update tool. Value: [Prohibit], [Allowed]</p>

## [Data Security]

[System Menu/Counter] key > [Security SettingsSettings] > "Device Security Settings "[Data Security]

Configure settings related to data stored in memory.

## [Data Sanitization]

This function returns the following information stored in the machine to the factory default.

- Address Book
- Favorite Data
- System Settings
- Fax Send/Receive/Transfer Data
- Outgoing and Incoming Fax Log
- Local Fax Station Name
- Local Fax Station Number
- Optional applications



### NOTE

- Print [Data Sanitization Report] and check that security data has definitely been erased.  
➡ [Data Sanitization Report \(page 414\)](#)
- You cannot cancel a process in the middle.
- Disconnect any modular or network cables before performing this operation.
- Before executing this function, set all [Interface Block Setting] to [Unblock].  
➡ [Interface Block Setting \(page 488\)](#)
- Do not turn off the power during data sanitization. If the power is turned off during erasing, erasing will be performed automatically after the power is turned on, but complete operation cannot be guaranteed.

Item	Settings
[Run Immediately]	Execute security data sanitization.
[Reserve a Sanitization Time]	The address information and image data in the machine will be completely erased at the specified time. Value: [Off], [On] If you select [On], set the date and time for complete erasure. The range of settings is [Year(2000 - 2035)], [Month(1 - 12)], [Day(1 - 31)], [Hour(0 - 23)].
[Device Use After Sanitization]	After data sanitization, the usage of this machine will be restricted. If [Prohibit] is selected, machine operation is disabled. Value: [Allowed], [Prohibit]
[Data Sanitization Report]	Prints the data sanitization report.

**Items to be erased**

Category	Data to be erased
Equipment / Job	<ul style="list-style-type: none"><li>• Job value set by the user</li><li>• Network Settings</li><li>• Data registered in One-Touch Key</li><li>• Jobs Log</li><li>• User information (user list, Address Book)</li><li>• Account Information of Job Accounting</li><li>• Network Certificates</li><li>• This machine's startup screen changed by a service representative</li></ul>
Fax	<ul style="list-style-type: none"><li>• Fax value set by the user</li><li>• Communication restriction settings</li><li>• Encryption key settings</li><li>• Communication log</li><li>• Scheduled Job</li><li>• Conditional Receive / Forward Settings</li></ul>
Application / Program	<ul style="list-style-type: none"><li>• Applications / programs registered by users and service representative</li><li>• Trial function</li></ul>

## Authentication Security

[System Menu/Counter] key > [Security Settings] > "Authentication Security"

Configure security settings for User Authentication.

➡ [Authentication Security \(page 506\)](#)

## Unknown User Settings

[System Menu/Counter] key > [Security Settings] > "Unknown User Settings"

This specifies the behavior for handling the jobs sent with unknown or unsent login user names or User ID.

---



### NOTE

This function is displayed when User Login Administration or Job accounting is set to On.

---

➔ [Unknown User Settings \(page 563\)](#)

## Network

[System Menu/Counter] key > [Security Settings] > "Network"

Item	Description
[TLS]	Set whether to use TLS for communication. Value: [Off], [On]
[Network Access]	Set whether to use SNMP or IPSec for communication. ➡ <a href="#">Protocol Settings (page 468)</a> ➡ <a href="#">Protocol Settings (page 468)</a> ➡ <a href="#">IPSec (page 481)</a>

# Job Accounting/AuthenticationAuthentication

[System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]

Configures settings related to machine management.

➔ [Overview of User Login Administration \(page 503\)](#)

➔ [Overview of Job Accounting \(page 541\)](#)

➔ [Unknown User Settings \(page 563\)](#)

# Add/Delete Application

[System Menu/Counter] key > [Add/Delete Application]

Configure the application settings.

➔ [Using Applications \(page 233\)](#)

➔ [Overview of the Applications \(page 782\)](#)

# Adjustment/Maintenance

Adjust printing quality and conduct machine maintenance.

## Image Adjustment

[System Menu/Counter] key > [Adjustment/Maintenance] > "Image Adjustment"

### [Density Adjustment]

Make the overall density darker or lighter.

Item	Description
[Copy]	Adjust copy density. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (normal), +1, +2, +3 ([Darker])
[Send/Box]	Adjust scan density when sending or storing the data in Document Box. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (normal), +1, +2, +3 ([Darker])
[Fax]	Displays only for fax models. ➔ <b>FAX Operation Guide</b>

### [Clarify Text (Noise Removal) Settings]

Adjust the legibility of characters.

Item	Description
[Clarify Text Level]	Value: [1 (Low)], [2 (Normal)], [3 (High)]
[Noise Removal Level]	Value Off On: [1 (Low)], [2 (Normal)], [3 (High)]

### [Background Density Adj.]

Make the overall background darker or lighter.

Item	Description
[Copy (Auto)]	Darkens or lightens overall background density adjustment during copying. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (normal), +1, +2, +3 (Darker)
[Send/Box (Auto)]	Darkens or lightens overall background density when sending images or storing them in the Document Box. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (normal), +1, +2, +3 (Darker)

### [Sharpness Adjustment]

Adjusts the sharpness of image outlines.

Item	Description
[Copy]	Sharpen or blur overall image outlines during copying. Adjustment can be made in 7 levels. Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
[Send/Box]	Sharpen or blur overall image outlines when sending or storing them in the Document Box. Adjustment can be made in 7 levels. Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)

**[Contrast]**

Make the overall contrast higher or lower.

Item	Description
[Copy]	Increases or decreases the overall contrast of copies. Value: -3 ([Lower]), -2, -1, 0 (normal), +1, +2, +3 ([Higher])
[Send/Box]	Increases or decreases the overall contrast when documents are sent or saved in a document box. Value: -3 ([Lower]), -2, -1, 0 (normal), +1, +2, +3 ([Higher])

**[Toner Save Level (EcoPrint)]**

Item	Description
[Copy]	Select the default Toner Save Level (EcoPrint). Value: [1 (Low)] to [5 (High)] Raising the level reduces toner consumption, but image quality falls.
[Printer]	Select the default Toner Save Level (EcoPrint). Value: [1 (Low)] to [5 (High)] Raising the level reduces toner consumption, but image quality falls.

**[Print Density]**

Make the overall print density darker or lighter. Adjustment can be made in 5 levels.

Value: 1(Lighter) to 5(Darker)

**[Auto Color Correction]**

This setting allows you to adjust the detection level used by the machine to determine whether the original is color or black and white in Auto Color Selection Mode. Setting a lower value will result in more originals being identified as color, while a larger value will tend to increase the number of originals being identified as black and white.

Value: 1 (color), 2,3,4,5 (black and white)

**[Correcting Black Line]**

Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used.

Value	Description
[Off]	Does not perform black streak reduction processing.
[On (Low)]	Make the streaks less noticeable. The reproducibility of fine lines in originals may be reduced than in [Off].
[On (High)]	Select if you are still concerned with the streaks that appear with [On (Low)] on. The reproducibility of fine lines in originals may be reduced than in [On (Low)].

## [Drum Refresh]

Remove image blur and white dots from the printout.



### NOTE

Drum refresh cannot be performed while printing. Execute drum refresh after the printing is done.

## Others

[System Menu/Counter] key > [Adjustment/MaintenanceMaintenance] > "Others"

### [Altitude Adjustment]

Adjust the height.

Value: [Normal], [1001 - 2000m], [2001 - 3000m], [3001 - 3500m]

### [MC]

Set this when the following problems occur with images.

- The white part of the image looks entirely gray
- Black dots appear on the white background of the image
- Irregular horizontal lines appear in the image
- Part of the image is periodically faint or shows white lines
- A lighter version of the previous image remains and is repeatedly printed

Value: 1 to 7

### [Diagnostics]

Item	Description
[Software Verification]	➡ <a href="#">Software Verification (page 490)</a>

### [Test Page]

Output the test page for identifying the cause of the image defects.

### [Restart/Initialization]

Item	Description
[Restart Network]	➡ <a href="#">Restart Network (page 482)</a>
[Restart Entire Device]	➡ <a href="#">Others (page 485)</a>
[Format SD Card]	Format the SD card. To use an SD card, it is necessary to format the SD card on this machine first. When the formatting is complete, data can be written to the SD card.

### [Service Settings]

Perform the maintenance and inspection of the machine. This menu is primarily used by service personnel for maintenance work.

---

## **9 User Authentication and Accounting (User Login, Job Accounting)**

---

# Overview of User Login Administration

User login administration specifies how the user access is administered on this machine. Enter a correct login user name and password for user authentication to login.

- 1 Enable User Login Administration


➔ [Enable User Login Administration \(page 505\)](#)

- 2 Set the user

➔ [Setting User Login Administration \(page 506\)](#)

- 3 Enter the login user name and password and execute the job

➔ [Login \(page 69\)](#)

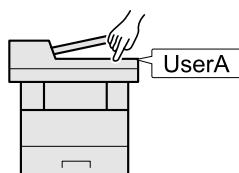


## Managing the Job Account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

### To Manage the Users to Print from PCs

Printer driver settings are necessary to manage the users that print on the machine from PCs.

➔ [Managing the Users that Print on This Machine from a PC \(page 514\)](#)

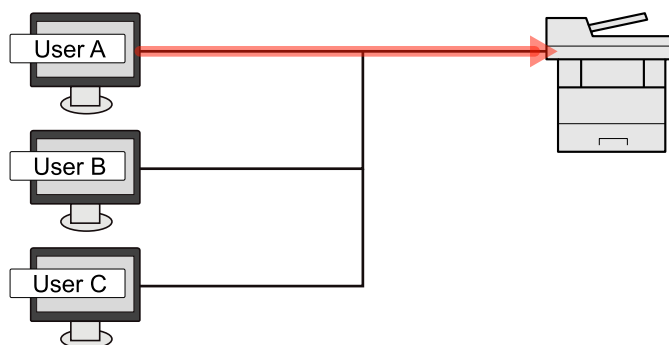

### Managing the Users to Use TWAIN for Scanning

TWAIN driver settings on the PC are necessary to manage the users that use TWAIN for scanning.

➔ [Managing the Users to Scan Using TWAIN \(page 516\)](#)

### Managing the Users to Use WIA for Scanning

WIA driver settings on the PC are necessary to manage the users that use WIA for scanning.

➔ [Managing the Users to Scan Using WIA \(page 517\)](#)

## **Managing the Users that Send Faxes from a PC**

FAX driver settings on the PC are necessary to manage the users that send faxes from a PC.

➡ [Managing the Users that Send Faxes from a PC \(page 518\)](#)

The fax function can be used on products equipped with fax capability.

# Enable User Login Administration

This enables user login administration.

Select one of the following authentication methods:

Item	Description
[Local Authentication]	User authentication based on user properties on the local user list stored in the machine.
[Network Authentication]	User authentication based on Authentication Server. Use a user property stored in Authentication Server to access the network authentication login page.

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

- 2 Select [User Login] from "User Login Setting".

## 2 Configure the settings

- Select [Local Authentication] or [Network Authentication].
- Select [Off] to disable user login administration.
- If [Local Authentication] is selected, set [Local Authorization].  
➔ [Local Authorization \(page 519\)](#)
- If [Network Authentication] is selected, set "Server Settings".  
➔ [Server Settings \(page 520\)](#)



### NOTE

If you cannot login because of the setting of the machine, login with any administrator registered in the local user list and correct the settings.

# Setting User Login Administration

This registers, alters and deletes users and configures the settings for User Login Administration.

## Authentication Security

If user authentication is enabled, configure the user authentication settings.

### User Account Lockout Setting

You can prohibit the use of a user account if an incorrect password is entered repeatedly to login with that account.

#### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication] > "Authentication Security" [User Account Lockout Settings]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

#### 2 Configure the settings.

Configurable items are as follows:

##### [Lockout]

Select whether or not account lockout policy is enabled.

Value: [Off], [On]

##### [Lockout Policy]

Specify the conditions and the extent to which the account lockout is applied.

Value

[Number of Retries until Locked]: Specify how many login retries are allowed until the account is locked out. (1 to 10 times)

[Lockout Duration]: Specify how long the account is to be locked out until it is unlocked. (1 to 60 minutes)

[Lockout Target]: Specify the extent to which the account lockout is applied. Select from [Remote Login Only] and [All]. Remote Login Only locks out all operations from outside the operation panel.

##### [Locked out Users List]

Displays a list of locked out users. You can unlock a user by selecting the user in the list, and selecting [Unlock].



#### NOTE

This function is displayed when account lockout policy is enabled.

---

## Password Policy Settings

You can prohibit the setting and use of passwords that do not comply with the password policy. Setting the Password Policy makes it more difficult to break the password.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication] > "Authentication Security" [Password Policy Settings]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

### 2 Configure the settings.

Configurable items are as follows:

#### [Password Policy]

Select whether or not password policy is enabled.

Value: [Off], [On]

#### [Minimum Password Length]

Set the minimum password length of characters for password.

Value: [Off], [On] (1 to 64 characters)

#### [Password Complexity]

Set the password complexity.

Value

[No more than two consecutive identical char]: Off, On

[At least one uppercase letter (A-Z)]: Off, On

[At least one lowercase letter (a-z)]: Off, On

[At least one number (0 - 9)]: Off, On

[At least one symbol]: Off, On

#### [Maximum Password Age]

Set the maximum password age.

Value: [Off], [On] (1 to 180 days)

#### [Policy Violated User List]

List of users who do not meet password policy requirements.

## Adding a User (Local User List)

You can add up to 1000 users (including the default login user name).

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Add/Edit Local User] from "User Login Setting".

### 2 Enter the user information.

[Menu] > [Add] > Configure each item

#### User Name

Enter the name displayed on the user list (up to 32 characters).

#### Login User Name

Enter the login user name to login (up to 64 characters). The same login user name cannot be registered.

#### Login Password

Enter the password to login (up to 64 characters).

#### [Access Level Settings]

Configure user privilege.

#### [Access Level]

Select [Administrator] or [User] for user access privileges.

#### [System Administration Permissions]

If the user privileges level set in Access Level is [User], select the items for which the user has setting privileges from the following:

- Original/Paper Settings
- Address Book
- User/Job Account Information
- Basic Network Settings
- Basic Device Settings
- Advanced Device/Network Settings

#### [Account Name]

Add an account where the user belongs. The user, who registered his/her account name, can login without entering the account ID.

➔ [Overview of Job Accounting \(page 541\)](#)

**NOTE**

- Search by account ID or account name. Select either [Menu] > [ID] or [Furigana] to switch between [ID] and [Furigana].
  - Select [Account Name] or [Account ID] to sort the account list.
- 

**Email Address**

The user can register his/her E-mail address. Register if you wish to use E-mail sending. The registered address will be automatically selected for subsequent operations that need any E-mail function.

**[ID Card Info]**

Register ID card information. Place the ID card on the ID card reader.

---

**NOTE**

This function is displayed when the optional ID Card Authentication Kit is activated.

➔ [Option configuration \(page 779\)](#)

---

**Local Authorization**

Set usage authority for each user.

**Print Restriction**

Select whether or not use of the print function of the printer is prohibited. Applicable print functions are as follows:

Value: [Off], [Reject Usage]

- Print from USB Drive
- Print Report
- Print from PC

**Copy Restriction**

Select whether or not use of the copy print function is prohibited.

Value: [Off], [Reject Usage]

**Duplex Restriction**

Select whether only duplex printing is allowed.

Value: [Off], [Permit 2-sided]

**Combine Restriction**

Specify whether only Combine is allowed.

Value: [Off], [Permit 2 in 1 and 4 in 1 Only], [Permit 4 in 1 Only]

**EcoPrint Restriction**

Specify whether only EcoPrint is allowed.

Value: [Off], [Permit EcoPrint]

**Send Restriction**

Select whether or not use of the send function is prohibited.

Value: [Off], [Reject Usage]

#### **Fax TX Restriction**

Select whether or not use of the fax send function is prohibited.

Displays only for fax models.

Value: [Off], [Reject Usage]

#### **Storing Restriction in Box**

Select whether or not to reject usage of storing in the document boxes.

Value: [Off], [Reject Usage]

#### **Storing Restr. in USB**

Set whether or not to reject usage of storing in the USB drive.

Value: [Off], [Reject Usage]

➔ [Local Authorization \(page 519\)](#)



#### **NOTE**

- For details on entering characters, refer to the following:  
➔ [Character Entry Method \(page 784\)](#)
  - If you selected [Send] or [Fax] in the Default Screen for My Panel, select [Destination], [Machine Address Book], or [External Address Book] as the screen to display.
- 

### **3 Select [Register].**

A new user is added on the local user list.



#### **NOTE**

If simple login is enabled, a confirmation screen appears when new registration is finished asking if you will configure simple login settings. To configure simple login settings, select [Yes]. If you select [No], you will return to the user list screen.

For the procedure for configuring simple login settings, refer to the following:

➔ [Simple Login Settings \(page 530\)](#)

---

# Change the user properties

Types of user properties that could be changed may be different depending on user access privilege.

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]




### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Add/Edit Local User] from "User Login Setting".

## 2 Change the user properties

- 1 Select  (information icon) for the user whose properties you wish to change.



### NOTE

- Select [User Name] or [Login User Name] to sort the user list.
  - Search by name or login user name. Select either [LoginName] or [Name] to switch between [LoginName] and [Name].
- 

- 2 Configure the settings.

- User Name
- Login User Name<sup>\*1</sup>
- Domain Name<sup>\*3</sup>
- Login Password
- Access Level Settings<sup>\*1</sup>
- Account Name<sup>\*1</sup>
- Email Address
- ID Card Info<sup>\*1</sup>
- Local Authorization<sup>\*1\*2</sup>
- My Panel

\*1 You can change only when you log in with machine administrator authority.

\*2 Displayed when Local Authorization is enabled.

➔ [Local Authorization \(page 519\)](#)

For details on each item, refer to step 3 of "Adding a User (Local User List)" to change a user property.

➔ [Adding a User \(Local User List\) \(page 508\)](#)

\*3 If the user is a network user with local user privileges, the Domain Name is displayed.

➔ [Configure Network User Rights \(page 521\)](#)

**3** Select [Save].

The user information is changed.

## Deleting a user.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Add/Edit Local User] from "User Login Setting".

### 2 Deleting a user.

- 1 Select the user to delete.
- 2 [Menu] > [Delete] > [Delete]  
The selected user will be deleted.



#### NOTE

The default user with machine administrator rights cannot be deleted.

➔ [Administrator Privileges Overview \(page 107\)](#)

---

# Managing the Users that Print on This Machine from a PC

To manage the users that print on this machine from a PC, the following settings are necessary in the printer driver. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen

- 1 Select the Windows [Start] button → [Windows System] → [Control Panel] → [Devices and Printers].




### NOTE

For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers], in that order.

- 2 Right-click the printer driver icon of the machine, and click the [Printer Properties] menu of the printer driver.
- 3 Click [Administrator Settings] in the [Device Settings] tab.

## 2 Configure the settings

- 1 Select [User login] in the [User login] tab.

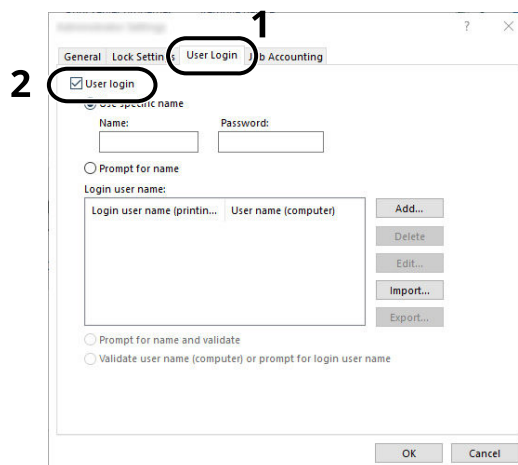

- 2 Set the User Login Administration.

### [Use specific Login User Name]

This option can be used to specify a user name and password to use the same User login for every print job. If this option is selected, the user does not have to type the name and password for each print job.

### [Prompt for name]

A screen for entering the user name and password will be displayed when attempting a printing. The user name and password must be entered each time a printing is attempted.

**[Prompt for name andd validate]**

A screen for entering the user name and password will be displayed when attempting a printing. The user name and password stored in the "Login user name" needs to be entered. The user name and password must be entered each time a printing is attempted.

**[Validate user name (computer) or prompt for login user name]**

When printing, the Windows user name is searched in the "Login user names list" and printing is possible if the name is registered. If the name is not registered, the printing will be canceled for users with only user authority. If the user has administrator privileges, the screen to enter the user name and password will appear.

- 3 Click [OK].



**NOTE**

For other settings of job accounting, refer to the following:

➔ **Printing System Driver User Guide**


---

# Managing the Users to Scan Using TWAIN

The following TWAIN driver settings are necessary to manage the users that use TWAIN for scanning. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen

- 1 Click the search box in the taskbar, and enter [TWAIN Driver Setting]. Select [TWAIN Driver Setting] in the search list. Displays the TWAIN Driver Settings screen.
- 2 Select the machine, and click [Edit].

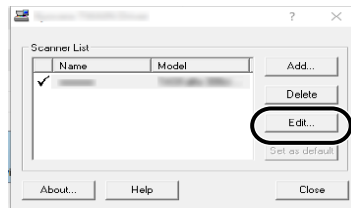

## 2 Configure the settings

- 1 Click [User Authentication Setting].
- 2 Select [Authentication], and enter Login User Name and Password.



- 3 Click [OK].

# Managing the Users to Scan Using WIA

The following WIA driver settings are necessary to manage the users that use WIA for scanning. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen


- 1 Please select the Windows [Start] button → [Windows Tools] → [Control Panel]. Enter "Scanner" into the search field on the control panel. Select [View scanners and Cameras] in the search list, then the Scanners and Cameras screen appears.



### NOTE


- For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel], in that order. Enter "Scanner" into the search field on the control panel. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and click the [Properties] button.

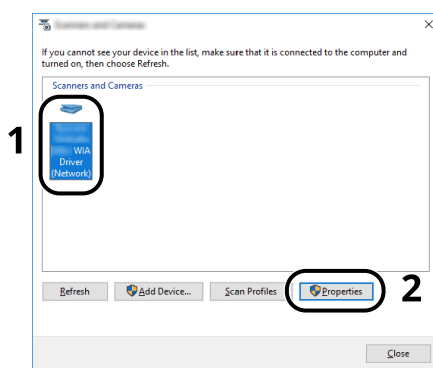

## 2 Configure the settings

- 1 Select [Authentication] on the [Settings] tab, and enter Login User Name and Password.

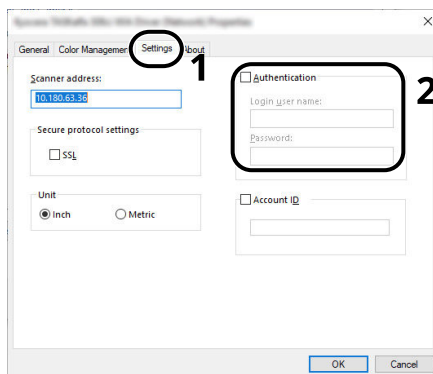

- 2 Click [OK].

# Managing the Users that Send Faxes from a PC

To manage the users that send faxes from a PC, the following settings are necessary in the FAX driver. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen

- 1 Select the Windows [Start] button → [Windows Tools] → [Control Panel] → [Devices and Printers].




### NOTE

For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers], in that order.

- 2 Right-click the Fax Driver icon of the machine, and then click the [Printing preferences] menu.
- 3 Click [FAX TX Setting] in the [Printing Preferences] tab.

## 2 Configure the settings

- 1 Select [User Login] in the [Authentication] tab.

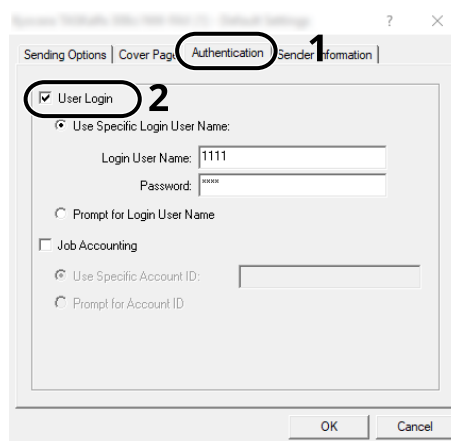

- 2 Set the User Login Administration.

### [Use Specific Login User Name]

This option can be used to specify a user name and password to use the same User login for every FAX job. If this option is selected, the user does not have to type the name and password for each FAX job.

### [Prompt for Login User Name]

A screen for entering the user name and password will be displayed when attempting a transmission. The user name and password must be entered each time a transmission is attempted.

- 3 Click [OK].

## Local Authorization

Select whether or not to use Local Authorization.

---



When using Local Authorization, the user authentication type must be set to [Local Authentication].

→ [Enable User Login Administration \(page 505\)](#)

---

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]
- 



If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Local Authorization] from "User Login Setting".

### 2 Configure the settings

- 1 Select [Off] or [On].

# Server Settings

Set the server type when network authentication is enabled.

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "User Login Setting" [User Login] > [Network Authentication].

## 2 Configure the settings

- 1 If you want to use multiple authentication servers, set [Use Multiple Authentication Server] to [On].
- 2 Select [Ext.], [NTLM] or [Kerberos] as the "Server Type" and enter the host name (256 characters or less) for the Authentication Server.

When selecting [Ext.] as the server type, enter the port number.



### NOTE

- Selecting [Add/Edit/Delete Domain] displays the domain registration list. In the domain registration list screen, select [Add/Edit], and enter the domain name. Up to 10 domain names can be registered.
  - If two or more domains are registered, select [Default Domain] and select the default domain.
- 

- 3 Select [OK].



### NOTE

If the login user name and password are rejected, check the following settings.

- Network Authentication setting of the machine
  - User property of the Authentication Server
  - Date and time setting of the machine and the Authentication Server
-

## Configure Network User Rights

Select whether or not to grant local user rights to network users. If this setting is applied, when a network user logs in, the logged in network user's information is registered as a local user. By setting the account name on the registered local user information, network users can coordinate with job accounting. Displays the "Domain Name" in the user information for local users with rights.

---

### NOTE

- This setting is valid when the server type is [NTLM] .
- For local user information, refer to the following:

→ [Adding a User \(Local User List\) \(page 508\)](#)

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]

---

### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Network User Authority] from "User Login Setting".

## 2 Configure the settings

Enable "Give Local User Authority" to configure the settings.

### "User Full Action"

Configure the action when the number of users is exceeded when granting local user rights.

Value: [Do Not Add New User], [Delete Old User]

Set the expiration date for local user rights that have been granted and that do not require network authentication.

Value: [Always Enabled], [Specify Enabled Period] (up to 180 days)

### [Local Authorization Defaults]

Set the default local user rights that are granted.

## Group Authorization Settings

Set restrictions of the machine usage by each individual group registered in the authentication server.

---



### NOTE

To use the group authorization settings, "User Login Setting" must be selected for the authentication method in [Network Authentication] . In addition, set "Protocol Settings" to On in "LDAP".

➔ [Enable User Login Administration \(page 505\)](#)

➔ [Protocol Settings \(page 468\)](#)

Settings to enable group authorization are made on the operation panel. Groups must be registered in Embedded Web Server RX.

➔ **Embedded Web Server RX User Guide**

---

## Group Authorization

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Group Authorization] from "User Login Setting".

### 2 Configure the settings

- 1 Select [Off] or [On].

## Group List (Up to 20)

Register the groups that are restricted the machine usage. Other users and groups belong to "Others".

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Group List] from [User Login Setting].

### 2 Configure the settings

- 1 [Menu] > [Add] > Configure the settings.

#### Group name

Enter the name displayed on the group list (up to 32 characters).

#### Group ID\*1

Enter the ID displayed on the group list (between 1 and 4294967295).

#### Access Level

Select [Administrator] or [User] for group access privileges.

#### Print Restriction

Select whether or not use of the print function of the printer is prohibited. Applicable print functions are as follows:

Value: [Off], [Reject Usage]

- Print from USB Drive
- Print Report
- Print from PC

#### Copy Restriction

Select whether or not use of the copy print function is prohibited.

Value: [Off], [Reject Usage]

#### Duplex Restriction

Select whether only duplex printing is allowed.

Value: [Off], [Permit 2-sided]

#### Combine Restriction

Specify whether only Combine is allowed.

Value: [Off], [Permit 2 in 1 and 4 in 1 Only], [Permit 4 in 1 Only]

#### EcoPrint Restriction

Specify whether only EcoPrint is allowed.

Value: [Off], [Permit EcoPrint]

#### **Send Restriction**

Select whether or not use of the send function is prohibited.

Value: [Off], [Reject Usage]

#### **Fax TX Restriction**

Select whether or not use of the fax send function is prohibited.

Displays only for fax models.

Value: [Off], [Reject Usage]

#### **Storing Restr. in USB**

Set whether or not to reject usage of storing in the USB drive.

Value: [Off], [Reject Usage]

\*1 For "Group ID", specify PrimaryGroupID assigned by Active Directory of Windows.



#### **NOTE**

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

### **3 Register the user.**

- 1 Select [Save].

A new group is added on the group list.

## Guest Authorization Settings

When User Login Administration is enabled, set the functions that guest users who cannot log in to the machine are allowed to use.



### NOTE

To use Guest Authorization, [User Login] must be enabled in "User Login Setting".

→ [Enable User Login Administration \(page 505\)](#)

---

## Enabling Guest Authorization

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Guest Authorization Set.] from "User Login Setting".

### 2 Configure the settings

- 1 Select [Off] or [On].



### NOTE

- If the guest authorization setting is enabled, the [Logout] must be selected when logging in.
  - In the guest user default settings, only monochrome copying can be used. If you wish to use a different function, log in as a user who can use that function, or change the settings in the guest properties.
-

## Configuring Guest Property

Register guest user information and functions that are restricted.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Guest Property] from "User Login Setting".

### 2 Configure the settings

Configure the settings.

#### User Name

Enter the name displayed on the user list (up to 32 characters). The default setting is "Guest User".

#### Access Level

The authority of the user appears. This cannot be changed.

#### Account Name

Add an account where the user belongs.

If the user does not belong to any account, select [Others].

#### Authorization Rules

Set usage authority for each user.

The items you can restrict the access level with are as follows.

##### Print Restriction

Select whether or not use of the print function of the printer is prohibited.

Applicable print functions are as follows:

- Print from USB Drive

##### Copy Restriction

Select whether or not to prohibit use of copy print functions.

##### Duplex Restriction

Select whether only duplex printing is allowed.

##### Combine Restriction

Specify whether only Combine is allowed.

##### EcoPrint Restriction

Specify whether only EcoPrint is allowed.

##### Send Restriction

Select whether or not use of the send function is prohibited.

**Fax TX Restriction**

Select whether or not use of the fax send function is prohibited.

Displays only for fax models.

**Storing Restr. in USB**

Set whether or not to reject usage of storing in the USB drive.

### **3 Register the user.**

- 1 Select the [OK] key.

## Obtain NW User Property

Set the required information to obtain the network user property from the LDAP server. The user name and E-mail address obtained with this setting is shown in the user information, the status confirmation screen, and the header of E-mail.



### NOTE

- To obtain the network user property from the LDAP server, [Network Authentication] must be selected for the user authentication method in "User Login Setting". In addition, set "Protocol Settings" to On in [LDAP].
- The settings for obtaining network user property are configured on the operation panel. Further details on the information to be obtained can be set in Embedded Web Server RX.

➔ **Embedded Web Server RX User Guide**

➔ [Enable User Login Administration \(page 505\)](#)

➔ [Protocol Settings \(page 468\)](#)

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Obtain NW User Property] from "User Login Setting".

## 2 Configure the settings

- 1 Enable "Obtain NW User Property" to configure the settings.

### LDAP Server Information

#### Server Name\*1

Enter the LDAP server name or the IP address (up to 64 characters). If a server name is not entered, user information will be acquired from the server set for Network Authentication.

#### Port

Port number for LDAP server. The factory default port number is 389.

### Acquisition of User Information

#### Name 1\*2

Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).

#### Name 2\*3

Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).

**Email Address\*4**

Enter the LDAP Attribute to obtain the E-mail address from the LDAP server (up to 256 characters).

**Authentication Type\*5**

Set the authentication method. Select [Simple] or [SASL]. After changing the setting, restart the system or turn the power OFF and then ON.

**Search Timeout**

Set the amount of time to wait before time-out in seconds (from 5 to 255 seconds).

**LDAP Security**

Select the type of encryption according to the type of security employed by the LDAP server. The value is [Off], [TLS] or [STARTTLS].

\*1 If using Active Directory of Windows, the server name may be the same as the server name entered in the network authentication.

\* 2 For Active Directory on Windows, typically use the displayName attribute.

\*3. "Name 2" can be left out. When you assign "displayName" in "Name 1" and "department" in "Name 2", and if the value of displayName is "Mike Smith" and the value of department is "Sales" in Active Directory of Windows, the user name appears as "Mike Smith Sales".

\*4 If using Active Directory of Windows, mail of Attribute may be used as E-mail Address.

\*5. This function is displayed when "Server Type" is set to [Kerberos] in "Network Authentication".

**3 Select [OK].**

## Simple Login Settings

The simple login function allows users to log in simply by selecting a user name. Users must be registered in advance to use this functionality.



### NOTE

- For user registration, refer to the following:
    - ➔ [Adding a User \(Local User List\) \(page 508\)](#)
  - To use Simple Login, User Login Administration must be enabled in "User Login Setting".
    - ➔ [Enable User Login Administration \(page 505\)](#)
  - When the guest authorization setting is enabled, the Simple Login screen is not displayed.
- 

## Enabling Simple Login

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Simple Login] from "User Login Setting".

### 2 Configure the settings

- 1 Select [Off] or [On].

## Simple Login Key

Register users to use simple login. You can add up to 20 users.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Simple Login Key] from "User Login Setting".

### 2 Enter the user information.

- 1 Select the key to which you want to register a user.
- 2 Enter the user name to be displayed.



#### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

- 3 Select [Select user].
- 4 To specify the user from local users, select [Local User]. To specify from network users, select [Network User].  
The procedure differs depending on the transmission method selected.
- 5 (When specifying the user from [Local User]) Select the user to be set for simple login.



#### NOTE

- Select [User Name] or [Login User Name] to sort the user list.
-

- 6 (When specifying the user from [Network User]) Select the entry field for "Login User Name" and "Login Password", enter the information of the user to be registered, and select OK[OK].

If you are specifying a user for whom a domain is set in network authentication, select the "Domain" and select the domain where the user is registered.



#### NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 784\)](#)

---

- 7 Select [Password] Off or On.
- 8 Select the user icon to be displayed.

### 3 Register the user.

- 1 Select [Save].

## IC Card Authentication Kit Settings

The IC card authentication kit allows user authentication using an IC card.

---

### **IMPORTANT**

The deployment procedure requires a license key. The license key is issued when the "machine number" of the machine and the "product ID" written on the license certificate of this product are registered on the website specified by the distributor.

---

For instructions on how to read an IC card, refer to the instructions included with the card reader. In order to perform the local authentication with IC card, IC card information has to be registered to the local user list in advance.

To use an IC card for network authentication, you must install aQrate on the network authentication server. Register a user from the server and enter the ID number of the IC card. For details, refer to aQrate Install Manual.

---

### **CAUTION**

This product is an inductive read/write communication equipment which has received the type designation from the Minister for Internal Affairs and Communications based on the Radio Law. Do not use in areas where radio wave usage is restricted. People with implantable medical devices (such as cardiac pacemakers) should use this device at a distance of at least 22 cm from the implanted site. (In general, studies have shown that wireless card "contactless IC card" systems and RFID "electronic tag" devices may have an effect on implantable medical devices.) For details, please visit the Ministry of Internal Affairs and Communications website.

---

## Enabling the IC Card Authentication Kit

To perform user authentication using an IC card, you must enable the IC Card Authentication Kit.

➔ [Starting Application Use \(page 782\)](#)

## Set the user login administration

If you enable user login administration on the machine itself, you must set up user login administration for the printer driver in order to print from the computer.

➔ **Printing System Driver User Guide**

➔ [Managing the Job Account from PC \(page 503\)](#)

## Register ID card information.

To log in by ID card, register your IC card information in user information.

---

### **NOTE**

If the user authentication is displayed, refer to the login or keyboard login procedure and log in using an IC card or login user name registered with administrator authority.

---

- 1** [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication] < [User Login Setting] > [Add/Edit Local User]
- 2** Select the user to register IC card information > [...] > [ID Card Info]
- 3** Hold the IC card you want to register over the card reader and select [Read]. If "Completed. " is displayed, select [Close].



**NOTE**

Depending on the card reader, [Read] may not be displayed.

---

- 4** **Select [Add].**  
The confirmation screen is displayed.
- 5** **Select [OK]**  
Register ID card information.

## Delete the ID card information

Register ID card information from the user information.

---



### NOTE

If the user authentication is displayed, refer to the login or keyboard login procedure and log in using an ID card or login user name registered with administrator authority.

---

- 1** [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication] < [User Login Setting] > [Add/Edit Local User]
- 2** Select the user to register ID card information > [...] > [ID Card Info]
- 3** [Delete] < [Delete] < [Close]
- 4** Select [Add].  
The confirmation screen is displayed.
- 5** Select [OK].  
ID card information is deleted

## ID Card Settings

If ID card authentication is enabled, select the authentication type.



This functions appears when the Card Authentication kit is activated.

→ [Option configuration \(page 779\)](#)

---

## Keyboard Login

When ID card authentication is enabled, select whether or not login by keyboard is allowed.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Keyboard Login] from "ID Card Settings".

### 2 Configure the settings

- 1 [Prohibit] or [Allowed] > [OK]

## Additional Authentication

Select whether or not to require password entry after authenticating by ID card.

---

### NOTE

This function is not displayed when "Server Type" from "Network Authentication" is set to [NTLM] or [Kerberos].

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]
- 

### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Additional Authentication] from "ID Card Settings".

## 2 Configure the settings

- 1 Select [Off], [Use Password], or [Use PIN].
- 

### NOTE

[Use PIN] is displayed only when using PIN Code Authorization.

➔ [PIN Login \(page 539\)](#)

---

## Simple Job Printing

Displays a list of print jobs saved to the Stored Job Box when logging in with an IC card via user login.

---

### NOTE

For details on Simple Job Printing, refer to the following:

→ [Simple Job Printing \(page 193\)](#)

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]
- 

### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [Quick Job Printing] from [User Login Setting].

## 2 Configure the settings

Enable "Display List on Login" to configure the settings.

### **[Logout after Printing]**

Select whether or not to automatically log out after printing.

### **[Skip Password and Copies Confirmation]**

Select whether or not to skip entering the PIN code and confirming the number of copies when printing when a PIN code is set.

# PIN Login

---

## NOTE

When using PIN Code Authorization, the network authentication must be enabled and [Ext.] must be selected for server type.

→ [Enable User Login Administration \(page 505\)](#)

→ [Server Settings \(page 520\)](#)

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]

### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select [PIN Login] from "User Login Setting".

## 2 Configure the settings

- 1 Select [Off] or [On].

## Using User Login Administration

This section explains procedures while setting job accounting.

### Login/Logout

If user login administration is enabled, the login user name and login password entry screen appears each time you use this machine. Use the procedure below to login and logout.

#### Login

If the login user name entry screen appears during operations, log in by referring to the following:

➡ [Login \(page 69\)](#)


#### Logout

When the operation is complete, select the [Logout] key. You will return to the login user name/login password entry screen.

# Overview of Job Accounting

Job accounting manages the copy/print/scan/FAX count accumulated by individual accounts by assigning an ID to each account.


- 1 Enable job accounting
  - ➔ [Enable job accounting \(page 543\)](#)
- 2 Setting an account.
  - ➔ [Set the Job Accounting\(Local\) \(page 544\)](#)
- 3 Enter the assigned account ID when performing the job.
  - ➔ [Login \(page 559\)](#)
- 4 Count the number of pages printed.

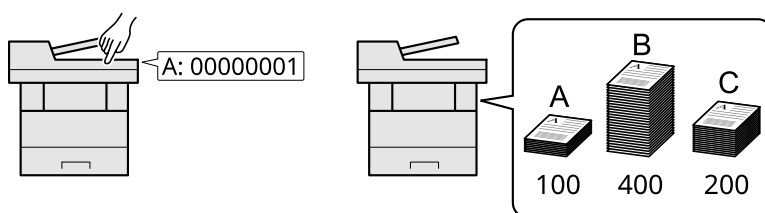

## To Manage the Number of Sheets Used on Jobs Printed from a PC

To manage the number of jobs to be printed from the PC on the network, you need to configure settings by using the printer driver on the PC.

- 1 Set Job Accounting for the PC on the network by using the printer driver.
  - ➔ [Job Accounting for Printing \(page 548\)](#)
- 2 Execute printing.
- 3 Count the number of pages printed.

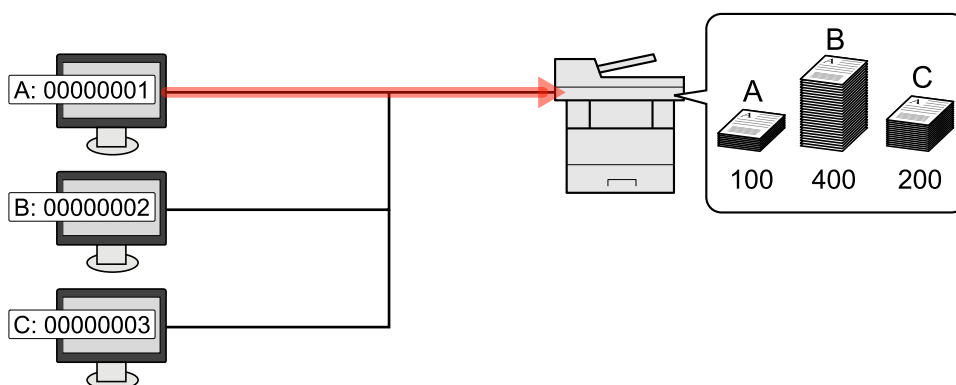

## Managing the Scan Job Account by Using TWAIN

To manage the scan job account by using TWAIN, you need to configure the TWAIN driver settings on the computer connected to the machine.

- ➔ [Job Accounting for Scan Using TWAIN \(page 550\)](#)

## **Managing the Scan Job Account by Using WIA**

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer connected to the machine.

➔ [Job Accounting for Scan Using WIA \(page 551\)](#)

## **Managing the FAX Jobs Transmitted from a PC**

To manage the number of FAX jobs transmitted from the PC, you need to configure the settings by using the FAX Driver on the PC.

➔ [Job Accounting for the FAX Transmitted from a Computer \(page 552\)](#)

Fax function is available for fax models.

# Enable job accounting

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Job Accounting Setting" [Job Accounting].

## 2 Configure the settings

Select [Local] or [Network].

Select [Off] to disable job accounting.



### NOTE

When the display returns to System Menu default screen, logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

---

# Set the Job Accounting(Local)

You can add, change and delete an account and set the restriction for each account.

## Adding an Account

Up to 100100 individual accounts can be added.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Job Accounting Setting" [Add/Edit Job Accounting].

### 2 Enter the account information.

- 1 [Menu] > [Add] > Configure each item

#### Account Name

Enter the account name (up to 32 characters).

#### Account ID

Enter the account ID as many as eight digits (between 0 and 99999999).

#### Restriction

This prohibits printing/scanning or restricts the number of sheets to load.

➔ [Restricting the Use of the Machine \(page 545\)](#)



#### NOTE

- For details on entering characters, refer to the following:  
➔ [Character Entry Method \(page 784\)](#)
  - Any "Account ID" that has already registered cannot be used. Enter any other account ID.
- 

- 2 Select [Add].

A new account is added on the Account List.

## Restricting the Use of the Machine

This section explains how to restrict the use of the machine by account or the number of sheets available.

### Usage Restriction Items

"Copy/Printer Count Method" is "Individual"

Item	Description
[Copy Restriction (Total)]	Limits the number of sheets used for copying.
[Print Restriction (Total)]	Limits the number of sheets used for printing.
[Scan Restriction (Others)]	Limits the number of sheets scanned (excludes copying).
Fax TX Restriction	Limits the number of sheets sent by fax.

"Copy/Printer Count Method" is "Total"

Item	Description
[Print Restriction (Total)]	Limits the total number of sheets used for copying and printing.
[Scan Restriction (Others)]	Limits the number of sheets scanned (excludes copying).
Fax TX Restriction	Limits the number of sheets sent by fax.

### Applying Usage Restriction

Usage restriction can be applied in the following modes:

Item	Description
[Off]	No restriction is applied.
[Counter Limit]	Restricts the print counter in one-page increments up to 9,999,999 copies. Selecting [Counter Limit] displays the [Limit]. Enter the limit number of pages using the numeric keypad, and select the [Enter] key.
[Reject Usage]	Restriction is applied.

## Editing an Account

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]




#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Job Accounting Setting" [Add/Edit Job Accounting].

### 2 Edit an account

- 1 Select  (information icon) for the account name you wish to edit.



#### NOTE

- Select [Account Name] or [Account ID] to sort the account list.
- 

- 2 Change the account information.

- 3 Select [Add].

The account information is changed.

## Deleting an Account

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Job Accounting Setting" [Add/Edit Job Accounting].

### 2 Deleting

- 1 Select the account name you wish to delete.



#### NOTE

- Select [Account Name] or [Account ID] to sort the account list.
- 

- 2 [Menu] > [Delete] > [Yes]

The account is deleted.

# Job Accounting for Printing

To manage the number of pages used for jobs to be printed from the PC, you need to configure the following settings by using the printer driver. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen

- 1 Select the Windows [Start] button → [Windows Tools] → [Control Panel] → [Devices and Printers].




### NOTE

For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers], in that order.

- 2 Right-click the printer driver icon of the machine, and click the [Printer Properties] menu of the printer driver.
- 3 Click [Administrator] in the [Device Settings] tab.

## 2 Configure the settings

- 1 Select [Job Accounting] in the [Job Accounting] tab.

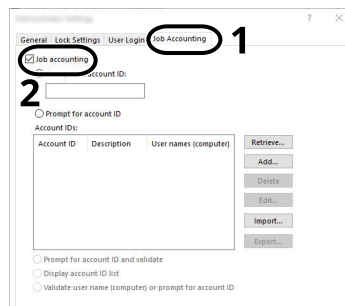

- 2 Set the Job Accounting.

### [Use Specific Account ID]

Enter the Account ID. Printing will be performed using the entered Account ID. If this option is selected, the user does not have to enter the Account ID for each print job.

### [Prompt for account ID]

A screen for entering the Account ID will be displayed when attempting a printing. The Account ID must be entered each time a printing is attempted.

### [Prompt for account ID and validate]

A screen for entering the Account ID will be displayed when attempting a printing. The Account ID stored in the Account ID list needs to be entered. The Account ID must be entered each time a printing is attempted.

### [Display account ID list]

The Account ID list is displayed when printing. The Account ID to be used needs to be selected from the list.

### [Validate user name (computer) or prompt for account ID]

When printing, the Windows user name is searched in the "Account IDs" and printing is possible if the name is registered. If the Account ID is not registered, the screen for entering the Account ID will appear.

- 3 Click [OK].



#### NOTE

For other settings of job accounting, refer to the following:

➔ **Printing System Driver User Guide**


---

## Job Accounting for Scan Using TWAIN

To manage the number of jobs scanned by using TWAIN, you need to configure the following settings by using the TWAIN Driver on the computer. Instructions are based on interface elements as they appear in Windows 10.

### 1 Display the screen

- 1 Click the search box in the taskbar, and enter "TWAIN Driver Setting". Select [TWAIN Driver Setting] in the search list. Displays the TWAIN Driver Settings screen.
- 2 Select the machine, and click [Edit].

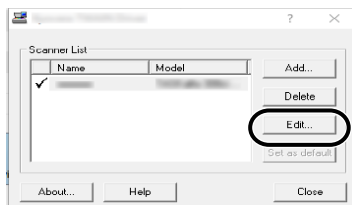

### 2 Configure the settings

- 1 Click [User Authentication Settings].
- 2 Select [Account], and enter the account ID.



- 3 Click [OK].

# Job Accounting for Scan Using WIA

To manage the number of jobs scanned by using WIA, you need to configure the following settings by using the WIA Driver on the computer. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen


- 1 Please select the Windows [Start] button → [Windows System] → [Control Panel]. Enter "Scanner" into the search field on the control panel. Select [View scanners and cameras] in the search list, then the Scanners and Cameras screen appears.



### NOTE


- For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel], in that order. Enter "Scanner" into the search field on the control panel. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and click the [Properties] button.

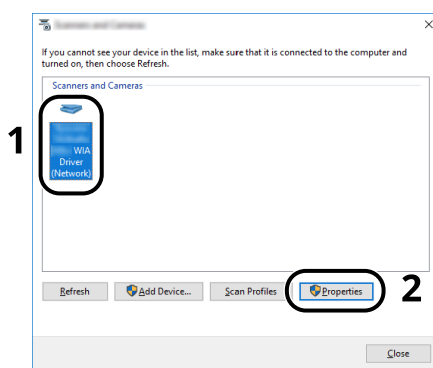

## 2 Configure the settings

- 1 Select [Account ID] on the [Settings] tab, and enter the Account ID.

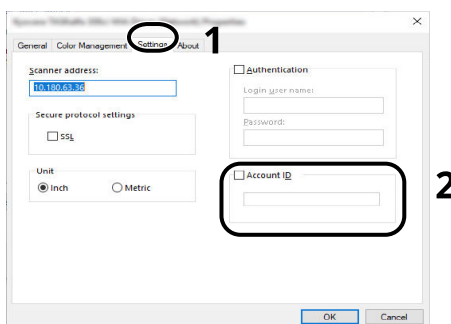

- 2 Click [OK].

# Job Accounting for the FAX Transmitted from a Computer

To manage the number of FAX jobs transmitted from the computer, you need to configure the following settings by using the FAX Driver on the computer. Instructions are based on interface elements as they appear in Windows 10.

## 1 Display the screen

- 1 Select the Windows [Start] button > [→] > [Windows Tools] > [→] > [Control Panel] > [→] > [Devices and Printers].




### NOTE

For Windows 11, select the Windows [Start] button → [All apps] → [Windows Tools] → [Control Panel] → [Devices and Printers], in that order.

- 2 Right-click the Fax Driver icon of the machine, and then click the [Printing preferences] menu.
- 3 Click [FAX TX Setting] in the [Printing Preferences] tab.

## 2 Configure the settings

- 1 Select [Job Accounting] in the [Authentication] tab.

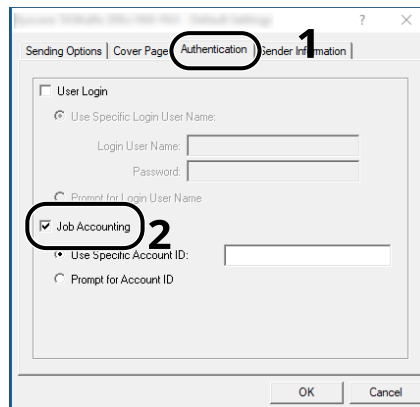

- 2 Set the Job Accounting.

### [Use Specific Account ID]

This option can be used to specify an account ID to use the same Account ID for every FAX job. If this option is selected, the user does not have to enter the Account ID for each FAX job.

### [Prompt for Account ID]

A screen for entering the Account ID will be displayed when attempting a transmission. The Account ID must be entered each time a transmission is attempted.

- 3 Click [OK].

# Configuring Job Accounting

## Default Counter Limit

When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999.

The items that can be set differ depending on whether [Individual] or [Total] is selected for [Copy/Printer Count].

→ [Copier/Printer Count \(page 562\)](#)

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

- 2 Select "Job Accounting Setting" [Job Accounting Setting].

### 2 Configure the settings

- 1 Select the item for "Default Counter Limit" > [+], [-], or the numeric keys to enter the default restriction on the number of sheets > [OK]

If [Copy/Printer Count] is [Individual]

#### [Copy Restriction (Total)]

Sets the default restriction on the number of sheets used for copying.

#### [Print Restriction (Total)]

Sets the default restriction on the number of sheets used for printing.

Applicable print functions are as follows:

- Print from USB Drive
- Print Report
- Print from PC

#### [Scan Restriction (Others)]

Sets the default restriction on the number of sheets used for scanning (excludes copying).

#### [Fax TX Restriction]

Sets the default restriction on the number of sheets used for sending faxes.

Displays only for fax models.

If [Copy/Printer Count] is [Individual]

#### [Print Restriction (Total)]

Sets the default restriction on the total number of sheets used for copying and printing.

#### [Scan Restriction (Others)]

Sets the default restriction on the number of sheets used for scanning (excludes copying).

**[Fax TX Restriction]**

Sets the default restriction on the number of sheets used for sending faxes.

Displays only for fax models.

## Counting the Number of Pages Printed

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.

### Total for all departments

This counts the number of pages for each account. In addition, you can reset the counts for all accounts at the same time.

### Total by department

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

The items that can be referenced are as follows:

Item	Description
[Copy/Print Pages]	The number of copies, printers and the total for both is displayed. Select the [▶] key to display the next page. Select the [◀] key to return to the previous page.
[FAX RX Pages]	Number of faxes received is displayed.
[Total PrintPages]	The total number of pages used is displayed.
[Duplex Pages]	[1-sided], [Duplex] and the total number of used pages can be checked. Select the [▶] key to display the next page. Select the [◀] key to return to the previous page.
[Combine Pages]	[None] (None combine) and the total number of used pages can be checked. Select the [▶] key to display the next page. Select the [◀] key to return to the previous page.

Item	Description
[Printed Pages]	Displays the number of pages used in printing for each of the following item.  <b>Count by Function</b> Displays the number of pages used to copy, print, FAX and their total, for each color mode.  <b>Count by Duplex</b> Displays the number of pages used in Duplex (1-sided) mode, Duplex (2-sided) mode and the total for both.  <b>Count by Combine</b> Displays the number of pages used in Combine (None) mode, Combine (2 in 1) mode, Combine (4 in 1) mode and the total for all three.
[Scanned Pages]	Displays the number of pages scanned for copying, faxing, printing and other functions, as well as the total number of pages scanned.
[Fax Transmission Pages]	Displays the number of pages faxed.
[Fax Transmission Time]	Displays the total duration of FAX transmissions.

Item	Description
[Counter Reset]	Resets the counter. Select [Reset] on the confirmation screen.

## Counting the Number of Pages for All Accounts

This counts the number of pages for each account. In addition, you can reset the counts for all accounts at the same time.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

- 2 Select "Job Accounting Setting" [Job Accounting Counter].

### 2 Check the number of pages.

- 1 Select [Menu] > [Total] to check the count.  
Select [Counter Reset] to reset the counter.
- 2 Confirm the count and select [Close].

## Counting the Number of Pages for Each Account

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Job Accounting Setting" [Job Accounting Counter].

### 2 Check the number of pages.

- 1 Select the department to view the consolidation



#### NOTE

- Select [Account Name] or [Account ID] to sort the account list.
  - To display an account other than your own account, select [Other Account].
- 

- 2 Check the count.  
Select [Counter Reset] to reset the counter.
- 3 Confirm the count and select [Close].

## Print Accounting Report

The total pages counted of all relevant accounts can be printed as an accounting report.

### 1 Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.

### 2 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

### 3 Execute printing.

- 1 "Job Accounting Setting" [Print Accounting Report] > [Print]

Account. Report is printed.

Reports have different formats depending on how the count of copiers and printers is administered. If count by paper size is being performed, then the report will be printed per size.

## Using Job Accounting

This section explains procedures while setting job accounting.

### Login

If job accounting is enabled, an account ID entry screen appears each time you use this machine.

---

1



#### NOTE

- If you entered a wrong character, select [Clear] and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.
- By selecting [Check Counter] , you can refer to the number of pages printed and the number of pages scanned.

---

If user login administration is enabled, the screen to enter the login user name and password appears instead of the screen to enter the account ID. Enter a login user name and password to login. If the user has already registered the account information, the account ID entry would be skipped.

➔ [Adding a User \(Local User List\) \(page 508\)](#)

## Logout

- 1 When the operation is complete, select the [Logout] key. Return to the Enter Account ID screen.**

## Apply Limit

This specifies how the machine behaves when the counter has reached the limit of restriction. The action is as follows:

Item	Description
[Immediately]	Job stops when the counter reaches its limit. If sending or storing in the box is already underway, prohibition will become effective from the next job.
[Subsequently]	The print or scan job currently underway will continue but the subsequent job will be rejected.
[Alert Only]	Job continues while displaying an alert message.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

- 2 "Job Accounting Setting" [Job Accounting Setting] > "Default Setting" [Apply Limit]

### 2 Configure the settings

- 1 Select [Immediately], [Subsequently], or [Alert Only].

## Copier/Printer Count

You can select how the copying and printing page counts are shown - either the total of both or each of copying and printing individually. The selection may influence restriction on the count and count method.

➔ [Restricting the Use of the Machine \(page 545\)](#)

➔ [Counting the Number of Pages Printed \(page 555\)](#)

➔ [Print Accounting Report \(page 558\)](#)

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 "Job Accounting Setting" [Job Accounting Setting] > "Default Setting" [Copy/Printer Count]

### 2 Configure the settings

- 1 Select [Total] or [Individual] .

# Unknown User Settings

## Unknown ID Job

This specifies the behavior for handling the jobs sent with unknown or unsent login user names or User ID. If the User Login is set to invalid and Job Accounting is set to valid, follow the procedure when the Account ID is unknown.

### 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Unknown User Settings" [Unknown ID Job].

### 2 Configure the settings

Select [Reject] or [Allowed].

#### [Allowed]

The job is permitted to be printed.

#### [Reject]

The job is rejected (not printed).

## Registering Information for a User whose ID is Unknown

If you register user information for a user whose ID is unknown, you can check information on the Job Status or Job History screens. In addition, you can restrict available functions.

---

### NOTE

This function is displayed when [Unknown ID Job] is set to [Allowed].

➔ [Unknown ID Job \(page 563\)](#)

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Job Accounting/AuthenticationAuthenticationAuthentication]

---

### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

- 2 Select "Unknown User Settings" [User Property].

## 2 Enter the user information.

- 1 Configure the settings > [Save] > [Account Name] > Select [Account]

---

### NOTE

- Select [Account Name] or [Account ID] to sort the account list.
- 

- 2 [OK] > [Save]

---

# 10 Troubleshooting

---

# Regular Maintenance

## Cleaning

Clean the machine regularly to ensure optimum printing quality.

---



### CAUTION

For safety, always unplug the power cord before cleaning the machine.

---

## Cleaning Platen


Wipe the inside of the document processor and the platen with a soft cloth dampened with alcohol or mild detergent.

---

✓ **IMPORTANT**

Do not use thinner or other organic solvents.

---

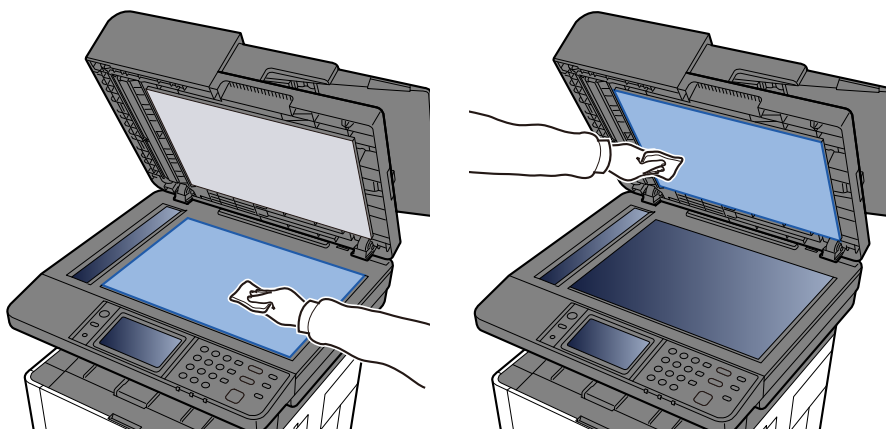

## Cleaning Slit Glass

When using the document processor, clean the slit glass surface and the reading guide with the dry cloth.

---

✓ **IMPORTANT**


Do not use water, soap or solvents for cleaning.

---

 **NOTE**

Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.


---

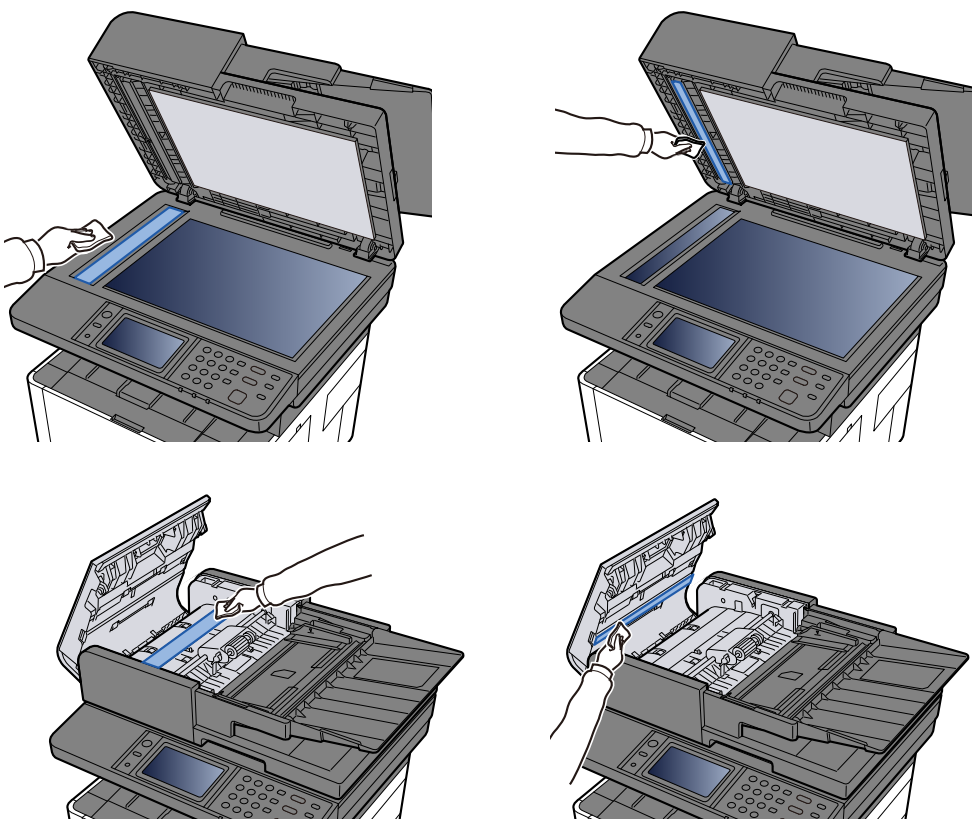


## Clean the inside of the main unit

To maintain optimum print quality, it is also recommended that the inside of the machine be cleaned when the toner container is replaced and when vertical streaks appear.

### 1 Open the top cover.

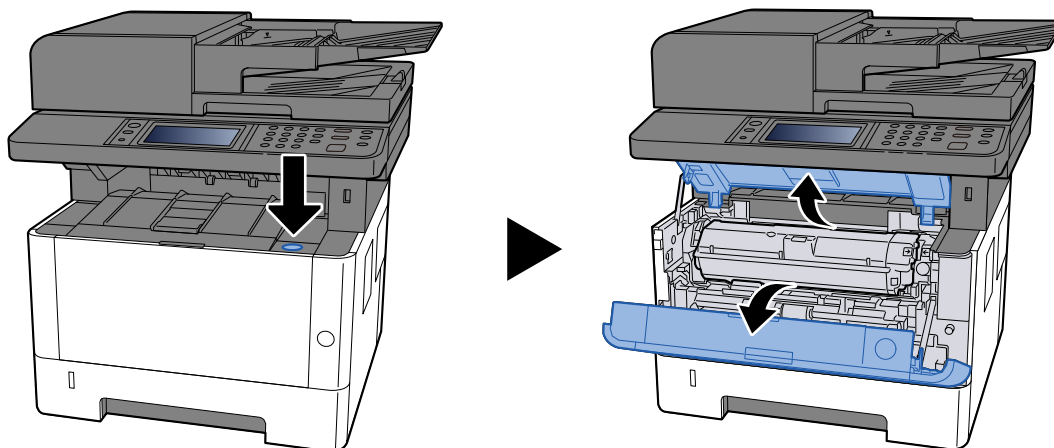


### 2 Remove the toner container and developer unit

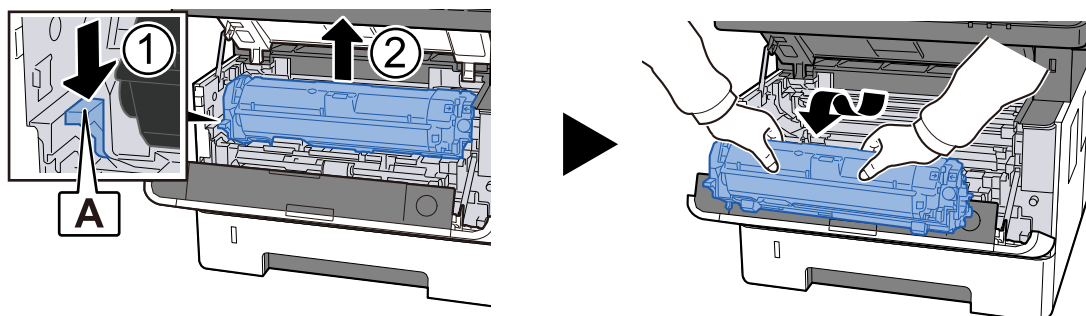

#### ✓ IMPORTANT

Do not touch the developing roller or subject it to impact. Print quality will deteriorate.


### 3 Place the toner container and developer unit on a level, clean surface.

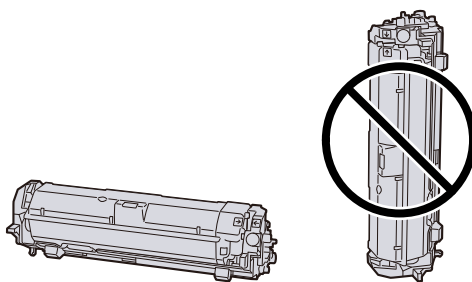

#### ✓ IMPORTANT

Do not place the toner container and developer unit upright.


### 4 Remove the drum unit

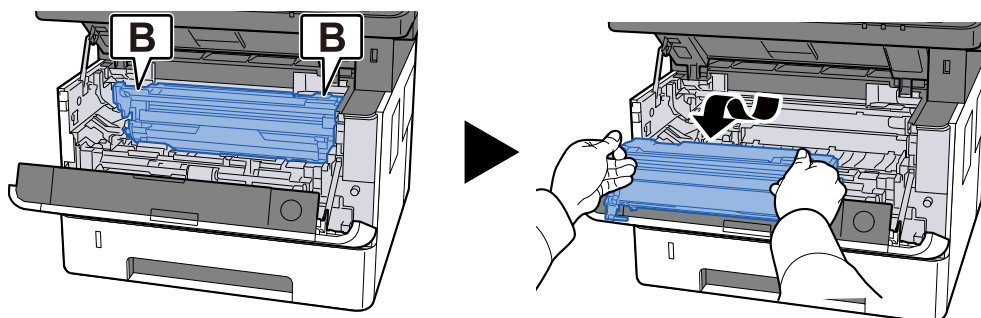

#### ✓ IMPORTANT

Do not touch the drum part or subject it to impact. Also, if exposed to direct sunlight or strong light, print quality will deteriorate.


### 5 Place the removed drum unit on a level, clean surface.

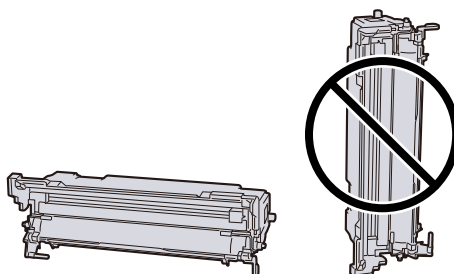


#### ✓ IMPORTANT

Do not stand the drum unit upright.

- 6** Use a soft, dry cloth to wipe off any paper dust or dirt from the metal resist rollers.

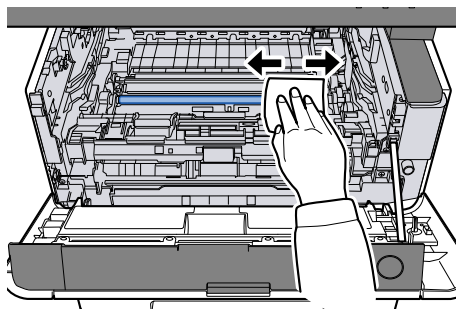

- 7** Slide the charger cleaner knob on the upper side of the drum unit left and right 2 or 3 times.

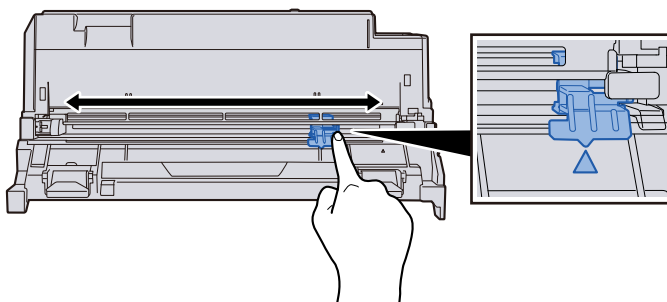


---


✓ **IMPORTANT**

- When cleaning the charger wire for the first time, remove the tape that secures the charger cleaner knob.
  - After cleaning, return the charger cleaner knob to its original position (CLEANER HOME POSITION)
- 


- 8** Return the drum unit

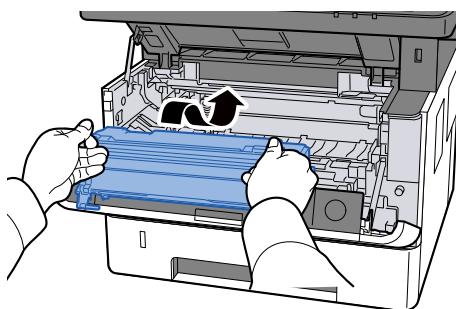

- 9** Return the toner container and developer unit

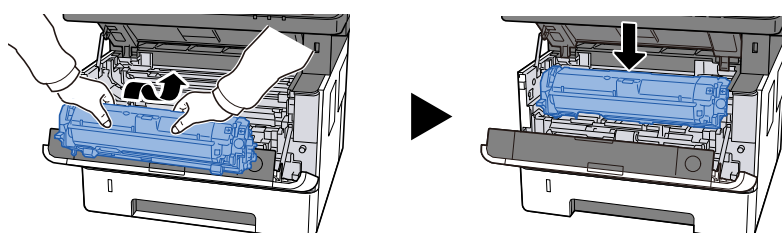

## 10 Close the top cover.

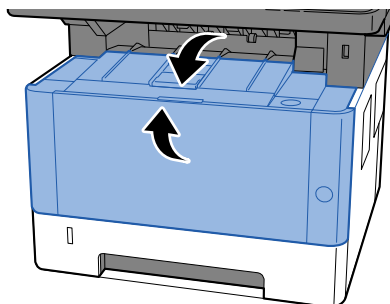

# Replacing the Toner Container

When toner is empty, the following message will be displayed. Replace the toner container.

"Toner is empty."

When toner runs low, the following message will be displayed. Make sure you have a new toner container available for replacement.

"Toner %s is low. (Replace when empty.)"

Toner color	Toner container model number
Black	PK-1014

The number of sheets that can be printed with one toner container depends on the print data (how much toner is used). Compliant with JIS X 6932 (ISO/IEC 19798), when the EcoPrint mode is turned [Off], the average number of printable sheets of the toner container is as follows: (When printing with A4.)

Toner color	Toner container yield (number of prints)
Black	10,000-sheets



## NOTE


- The average number of printable sheets of the toner container that comes with this machine is 3,600 sheets.
- For the toner container, always use a genuine toner container. Using a toner container that is not genuine may cause image defects and product failure.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.




## CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


## 1 Open the top cover.

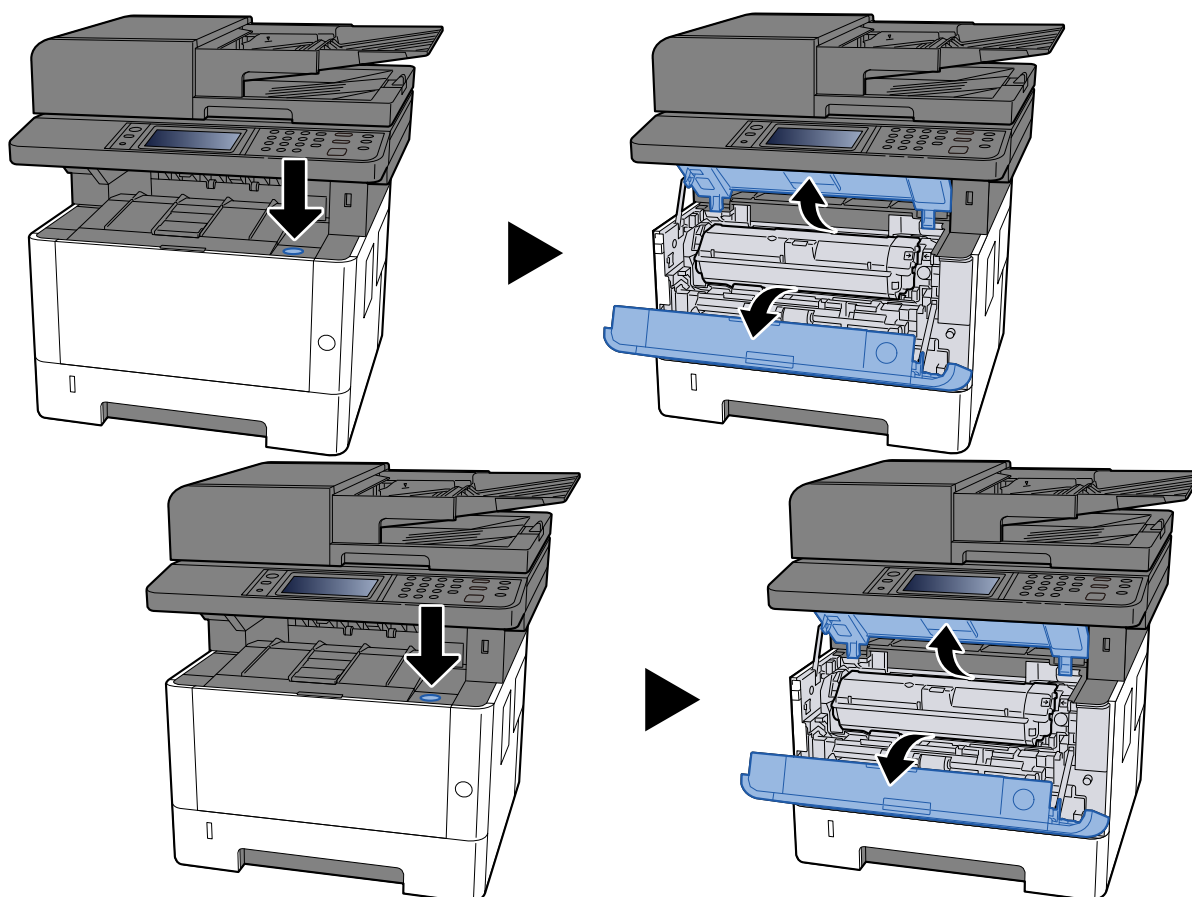


## 2 unlock

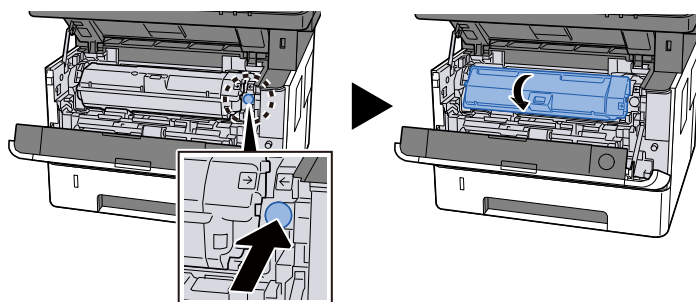


## 3 Remove the toner container.

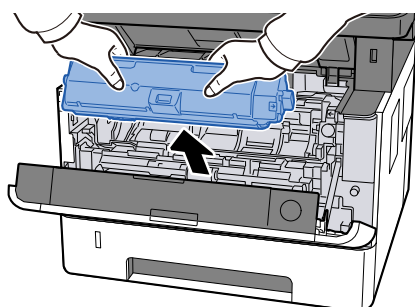

#### 4 Put used toner container into the plastic waste bag.

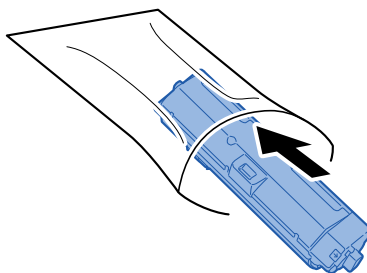


#### 5 Remove the new toner container from the box.

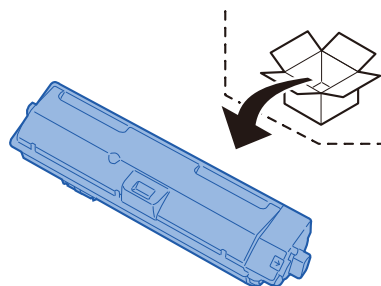


---

#### ⓘ IMPORTANT


Do not touch the points shown below.

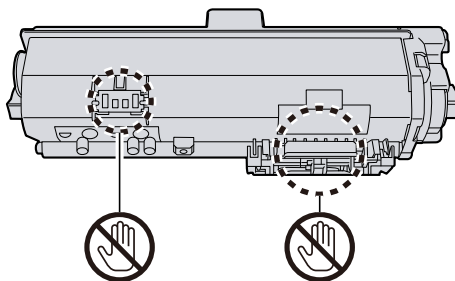


#### 6 Shake the toner container.

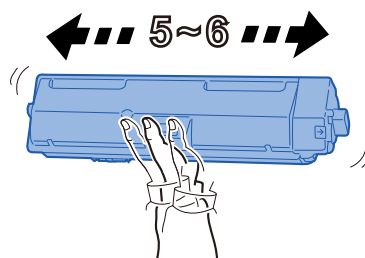

## 7 Install the toner container.

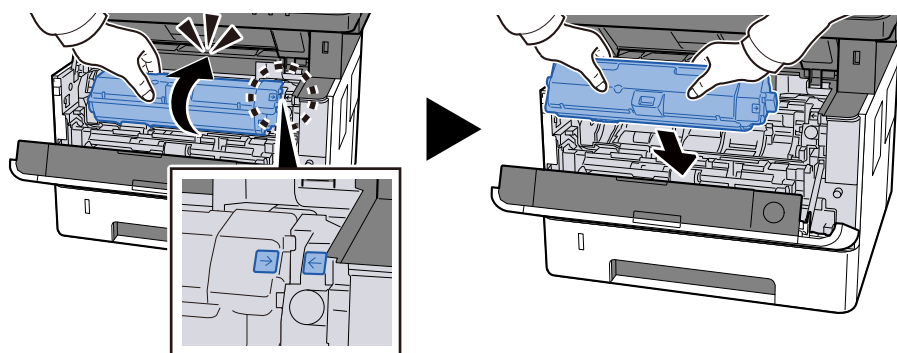

## 8 Close the top cover.

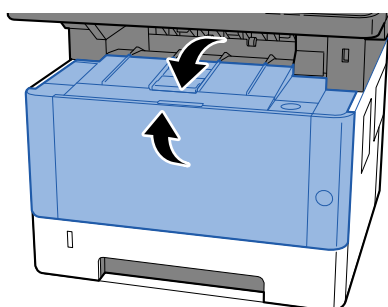

---

### ✓ IMPORTANT

- If the front cover does not close, check that the new toner container is installed correctly.
  - Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.
-

# Troubleshooting

## Solving Malfunctions

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. The table below provides general guidelines for problem solving. If the problem persists, contact your service representative.

---

### NOTE

When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

➔ [Preface \(page 2\)](#)

---

## Machine Operation Trouble

### The application does not start up

---

Is the auto panel reset setting time set too short?

Check the set time for auto panel reset.

- 1 [System Menu/Counter] key > [Device Settings] > [Energy Saver/Timer] > [Panel Reset Timer]**
- 2 Set the panel reset time to 30 seconds or more**  
It can be set in the range of 5 to 495 seconds (in 5 second increments).

## The screen does not respond when the power switch is turned on

---

Is the machine plugged in?

**1 Plug in the power cord that comes with this machine to an outlet.**

Make sure the power plug is securely plugged in.

## Machine does not print even when [Start] is pressed

---

### Is there a message displayed on the screen?

If a message is displayed on the screen, you may not be able to operate it depending on what is displayed. Determine the appropriate response to the message and respond accordingly.

### Is the machine in Sleep mode?

Operation can't be done when it is in sleep mode.

#### **1** Press the [Energy Saver] key.

## Blank sheets are ejected


---



### Is the original set correctly?

Placing Originals on the Platen

#### 1 Put the scanning side facedown.

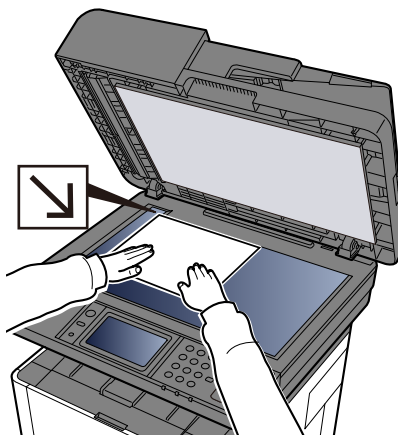

#### 2 Align it flush against the original size indicator plates with the back left corner as the reference point.



#### NOTE


For details on Original Orientation, refer to the following:

➡ [Original Size \(page 305\)](#)

---


## Placing Originals in the Document Processor

- 1 **Open the document tray and adjust the document width guide to the document size.**

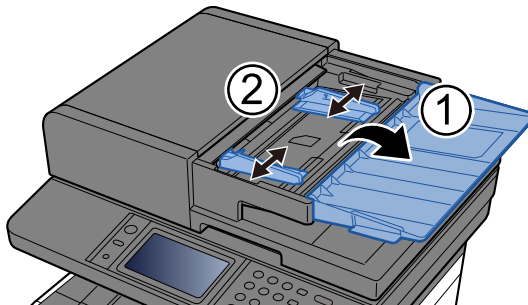

- 2 **Load paper.**

- 1 Put the side to be scanned (or the first side of two-sided originals) face-up.

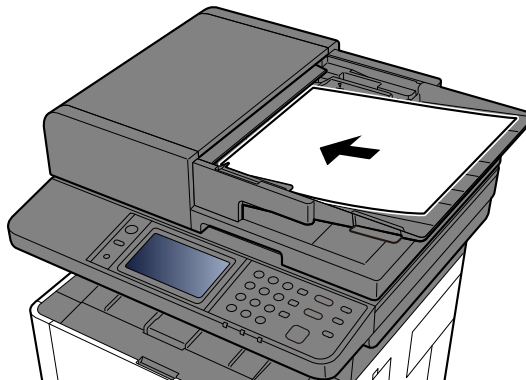

### NOTE

For details on Original Orientation, refer to the following:


➔ [Original Orientation \(page 311\)](#)

---



### IMPORTANT

Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

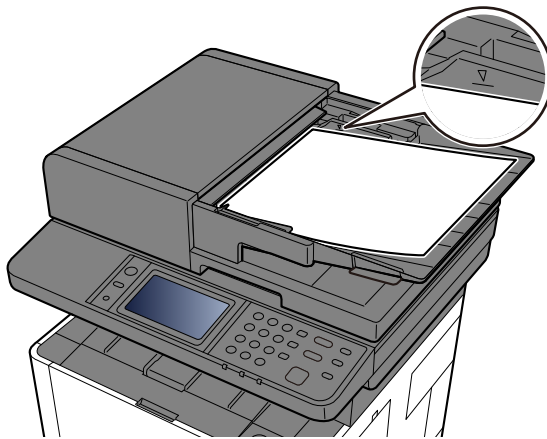


Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.

Originals with punched holes or perforated lines should be placed with the punched holes or perforated lines on the right side (so that they will be scanned last).

---

- 2 Open the original stopper. (If the original size is Folio/Legal)

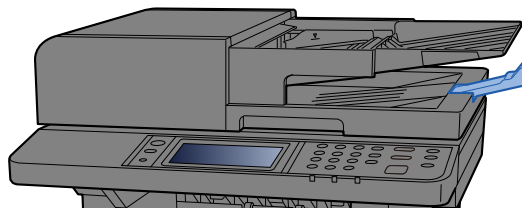

### **Is the application software set correctly?**

Check the settings of the application software.

## Paper often jams


---

### Is the paper loaded correctly?

Load the paper correctly.


When loading paper in a cassette

- 1 Pull the cassette completely out of the machine.**

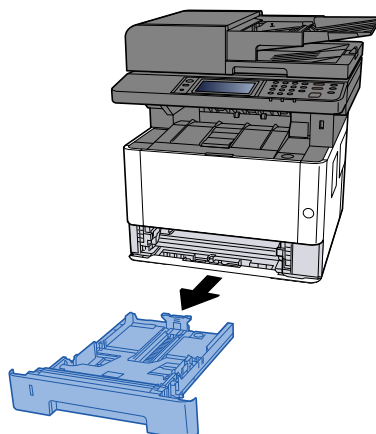

#### NOTE


If the baseplate is rising, push the baseplate until it locks.

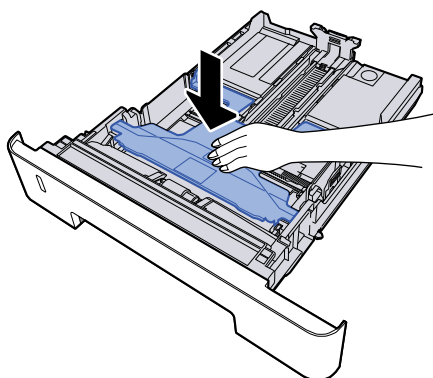

## 2 Adjust the cassette size.


- 1 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

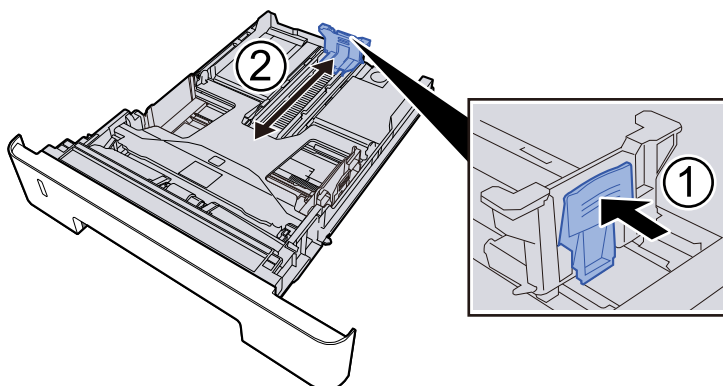


### ✓ IMPORTANT

When using Folio, Oficio II, or Legal

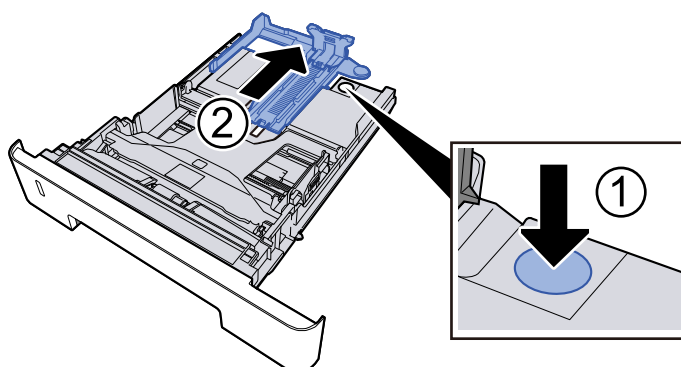


- 2 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

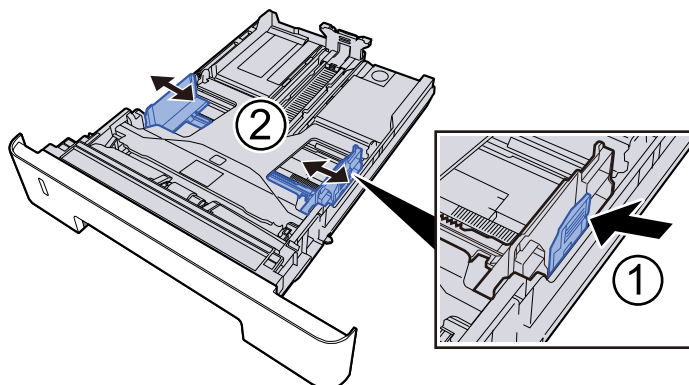

### 3 Load paper


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

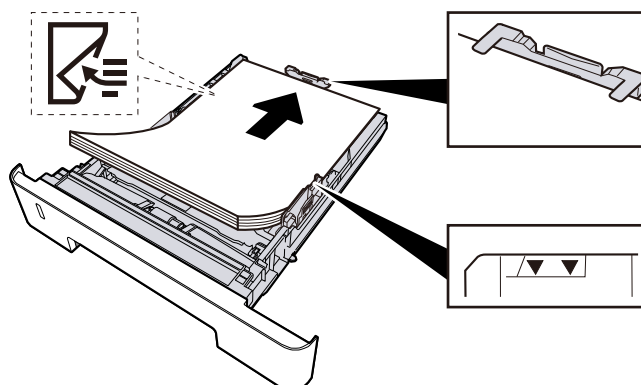

#### ✓ IMPORTANT

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan out the paper before loading it in the cassettes.
- ➔ [Precaution for Loading Paper \(page 129\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

## 4 Gently push the cassette back in.

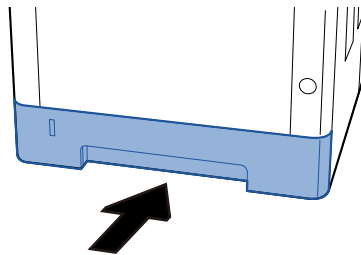

---

### **IMPORTANT**


Push all cassettes all the way in. If they are not pushed all the way in, they may cause a jam.

---

---

### **NOTE**

There is a paper gauge on the right side of the front of the cassette. The display changes up and down to match the remaining amount of paper.

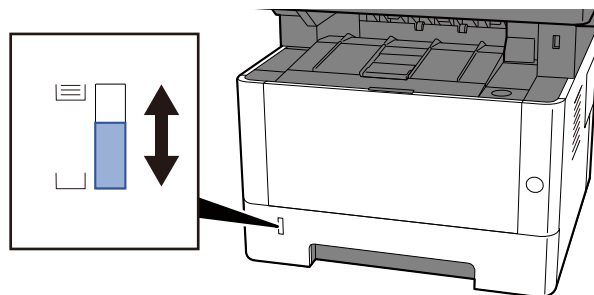


---

Remove the paper from the cassette once if there is no improvement, turn it over and reload it, or change the loading direction by rotating the paper 180 degrees.

➔ [Precaution for Loading Paper \(page 129\)](#)


When loading paper in the multipurpose tray

## 1 Open the multipurpose tray.

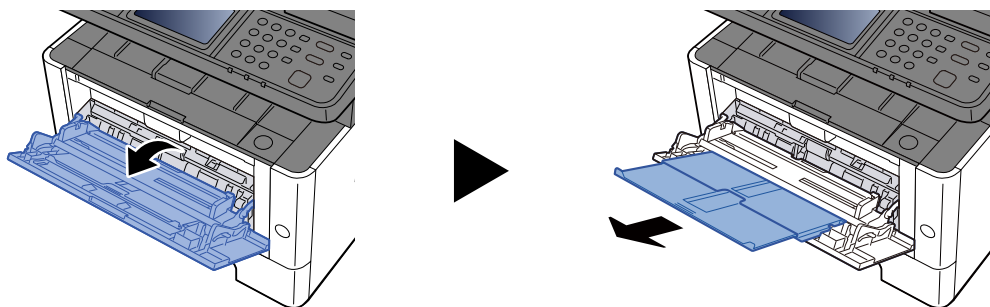


## 2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

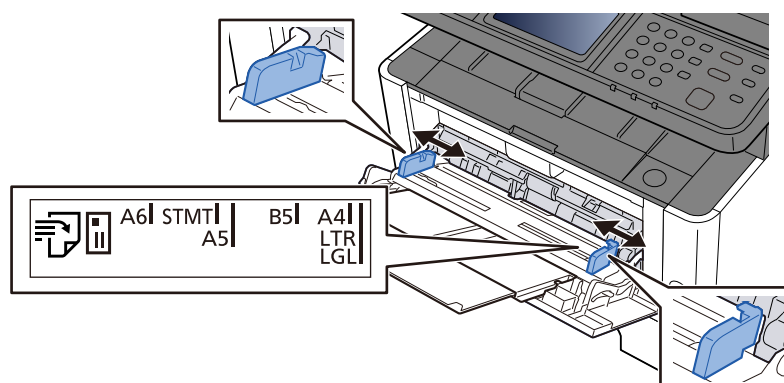

## 3 Load paper

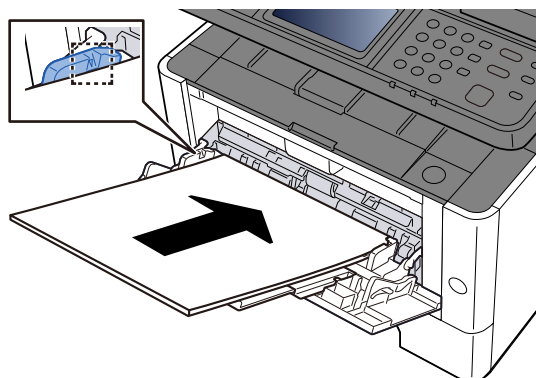

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

➔ [Precaution for Loading Paper \(page 129\)](#)

### ✓ IMPORTANT

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in


the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.

- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the load limits.

When you load envelopes or cardstock in the multipurpose tray, load the paper with the print side facing up. For the procedure for printing, refer to the Printer Driver User Guide.

#### ➔ **Printing System Driver User Guide**

**Example: When printing the address.**

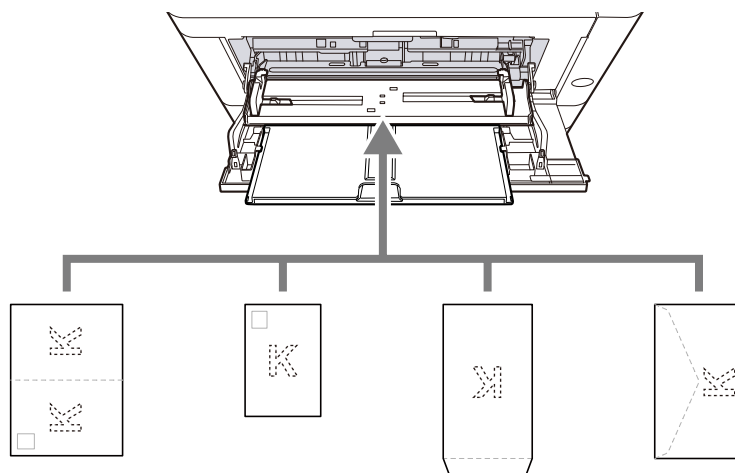

- Oufuku hagaki (Return postcard)
- Hagaki (Cardstock)
- Vertical envelope (open opening)
- Horizontal envelope (close opening)

#### ✓ **IMPORTANT**

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

#### 💡 **NOTE**

When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

➔ [\[MP Tray Settings\] \(page 401\)](#)

## **4 Specify the type of paper loaded in the multipurpose tray using the operation panel.**

Specifying Paper Size and Media Type

**Is the paper of the supported type? Is it in good condition?**

Remove the paper from the cassette, turn it over, and then reload it.

➔ [Precaution for Loading Paper \(page 129\)](#)

**Is the paper curled, folded or wrinkled?**

Replace the paper with new paper.


➔ [Precaution for Loading Paper \(page 129\)](#)

**Are there any loose scraps or jammed paper in the machine?**

Remove the jammed paper.

➔ [Clearing Paper Jams \(page 763\)](#)

## Two or more sheets are overlaps when ejected (multi feeding)

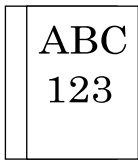


### Is the paper loaded correctly?

Load the paper correctly.


When loading paper in a cassette

- 1 Pull the cassette completely out of the machine.**

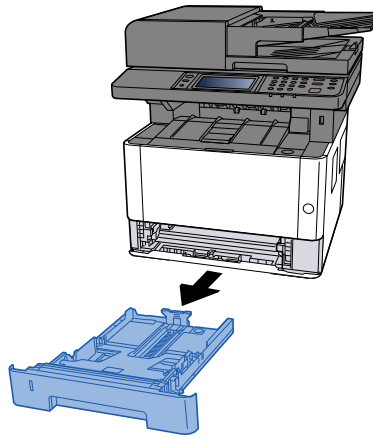

### NOTE


If the baseplate is rising, push the baseplate until it locks.

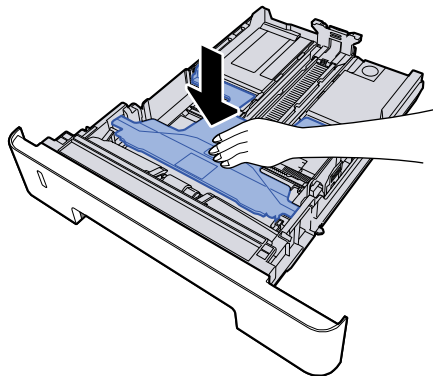

## 2 Adjust the cassette size.


- 1 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

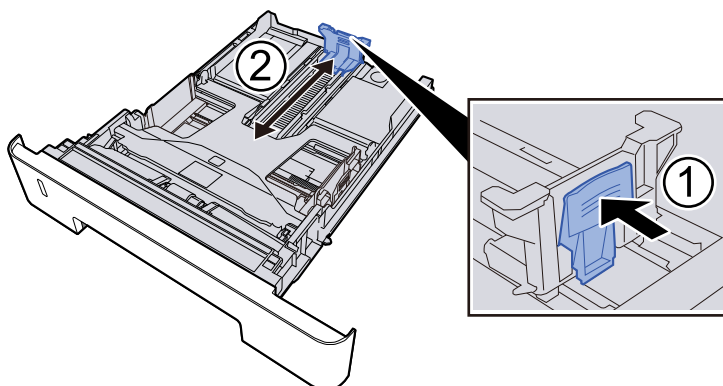


### ✓ IMPORTANT

When using Folio, Oficio II, or Legal

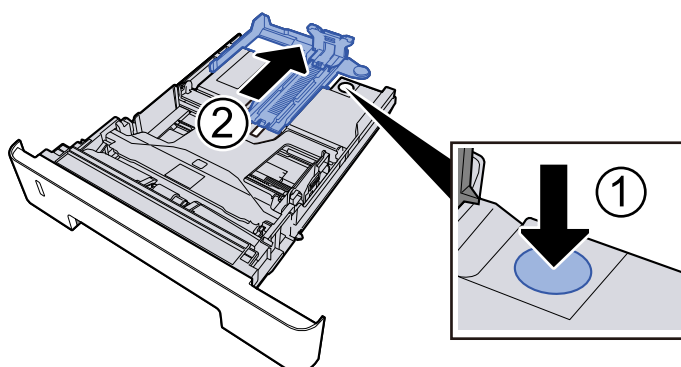


- 2 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

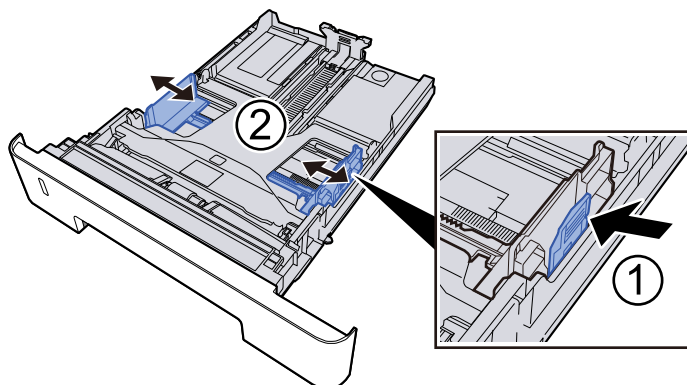

### 3 Load paper


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

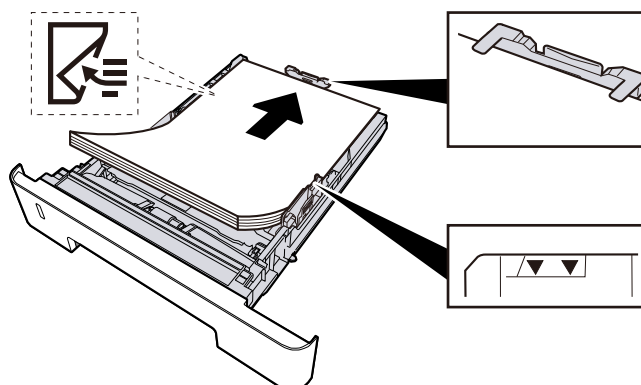

#### ✓ IMPORTANT

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan out the paper before loading it in the cassettes.
- ➔ [Precaution for Loading Paper \(page 129\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

## 4 Gently push the cassette back in.

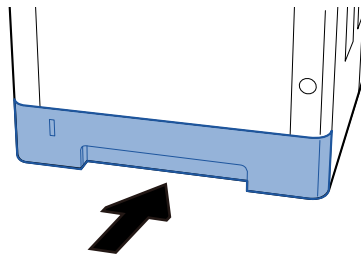

---


### ✓ IMPORTANT

Push all cassettes all the way in. If they are not pushed all the way in, they may cause a jam.

---

### 💡 NOTE

There is a paper gauge on the right side of the front of the cassette. The display changes up and down to match the remaining amount of paper.

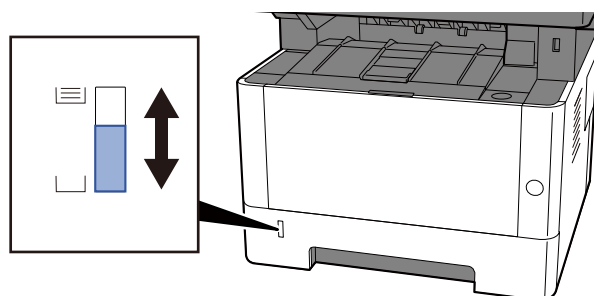


---

Remove the paper from the cassette once if there is no improvement, turn it over and reload it, or change the loading direction by rotating the paper 180 degrees.

➡ [Precaution for Loading Paper \(page 129\)](#)


When loading paper in the multipurpose tray

## 1 Open the multipurpose tray.

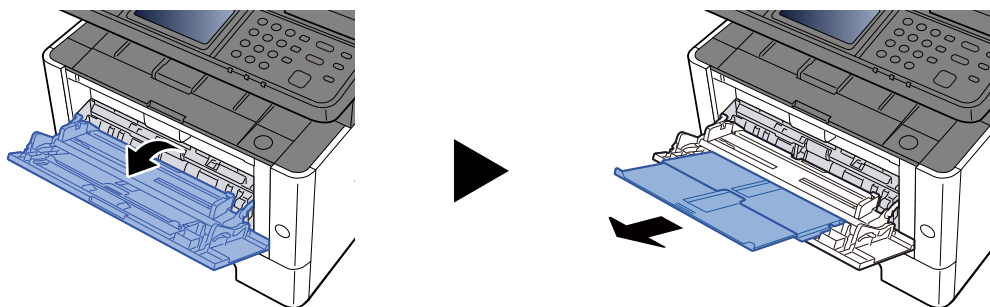


## 2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

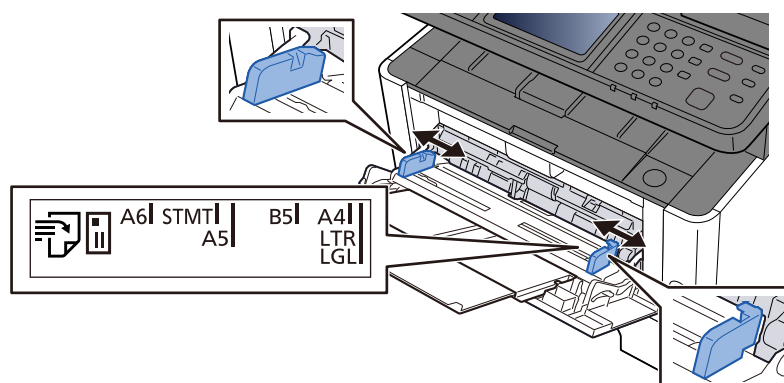

## 3 Load paper

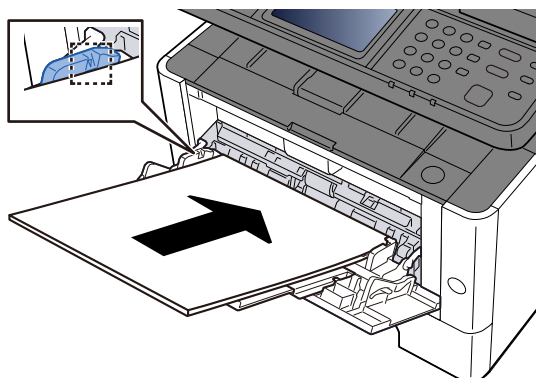

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

➔ [Precaution for Loading Paper \(page 129\)](#)

### ✓ IMPORTANT

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in


the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.

- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the load limits.

When you load envelopes or cardstock in the multipurpose tray, load the paper with the print side facing up. For the procedure for printing, refer to the Printer Driver User Guide.

#### ➔ **Printing System Driver User Guide**

**Example: When printing the address.**

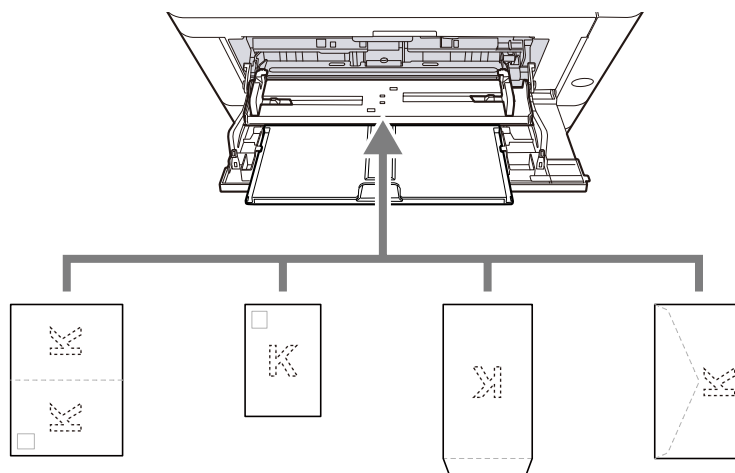

- Oufuku hagaki (Return postcard)
- Hagaki (Cardstock)
- Vertical envelope (open opening)
- Horizontal envelope (close opening)

#### ✓ **IMPORTANT**

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

#### 💡 **NOTE**

When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

➔ [\[MP Tray Settings\] \(page 401\)](#)

## **4 Specify the type of paper loaded in the multipurpose tray using the operation panel.**

Specifying Paper Size and Media Type


**Is the paper damp?**

Replace the paper with new paper.

➔ [Precaution for Loading Paper \(page 129\)](#)

## Printouts are wrinkled

---

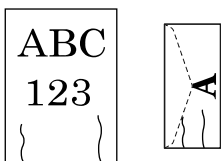


### Is the paper loaded correctly?

Load the paper correctly.


When loading paper in a cassette

- 1 Pull the cassette completely out of the machine.**

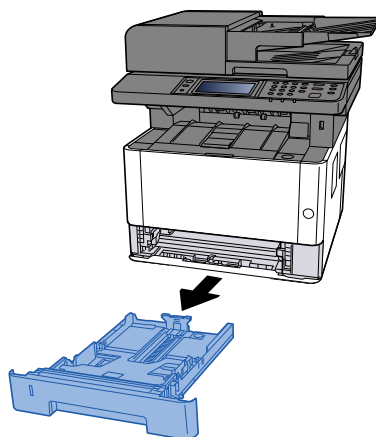

### NOTE


If the baseplate is rising, push the baseplate until it locks.

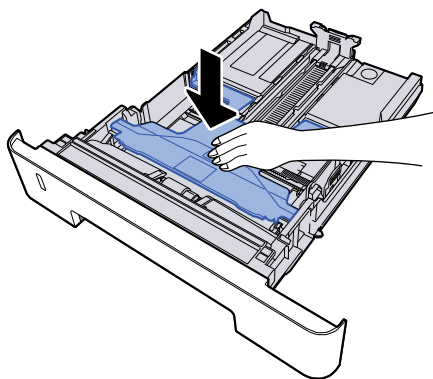

## 2 Adjust the cassette size.


- 1 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

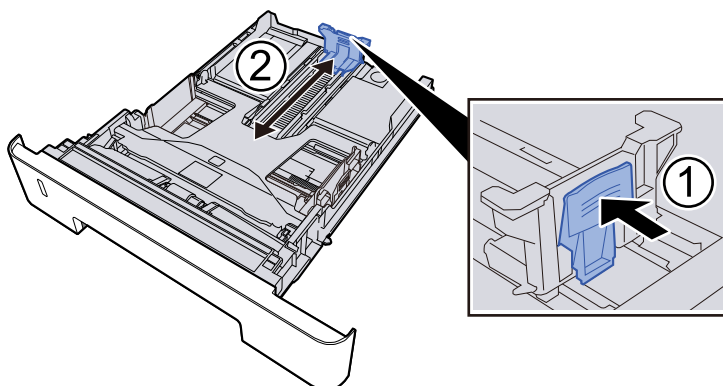


### ✓ IMPORTANT

When using Folio, Oficio II, or Legal

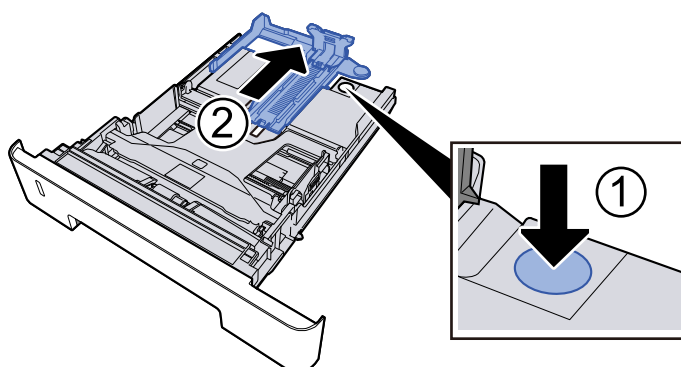


- 2 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

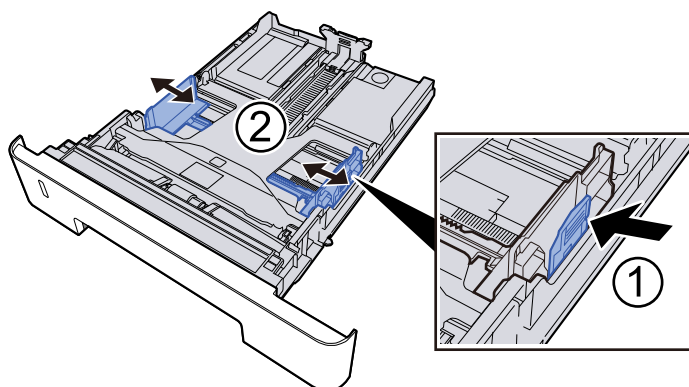

### 3 Load paper


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

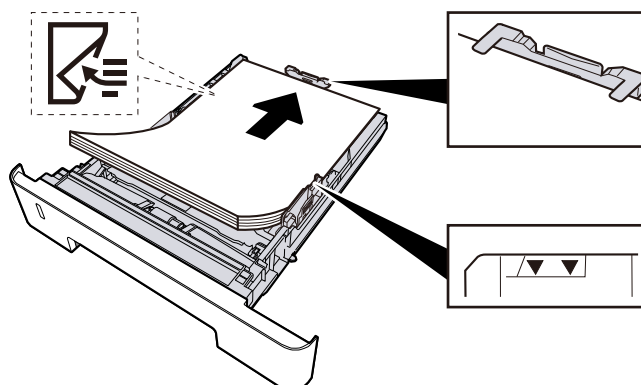

#### ✓ IMPORTANT

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan out the paper before loading it in the cassettes.
- ➔ [Precaution for Loading Paper \(page 129\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

## 4 Gently push the cassette back in.

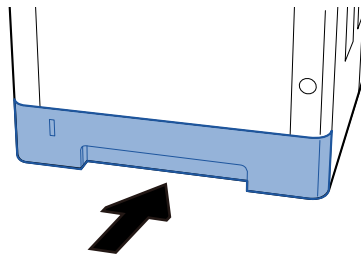

---


### **IMPORTANT**

Push all cassettes all the way in. If they are not pushed all the way in, they may cause a jam.

---

### **NOTE**

There is a paper gauge on the right side of the front of the cassette. The display changes up and down to match the remaining amount of paper.

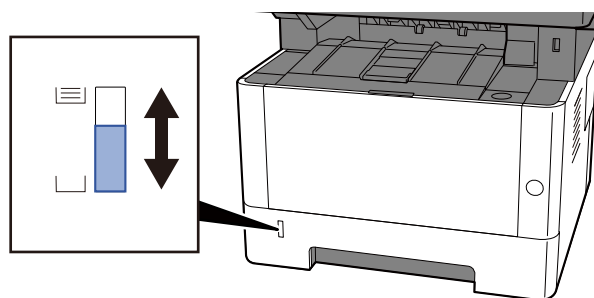


---

Remove the paper from the cassette once if there is no improvement, turn it over and reload it, or change the loading direction by rotating the paper 180 degrees.

➔ [Precaution for Loading Paper \(page 129\)](#)


When loading paper in the multipurpose tray

## 1 Open the multipurpose tray.

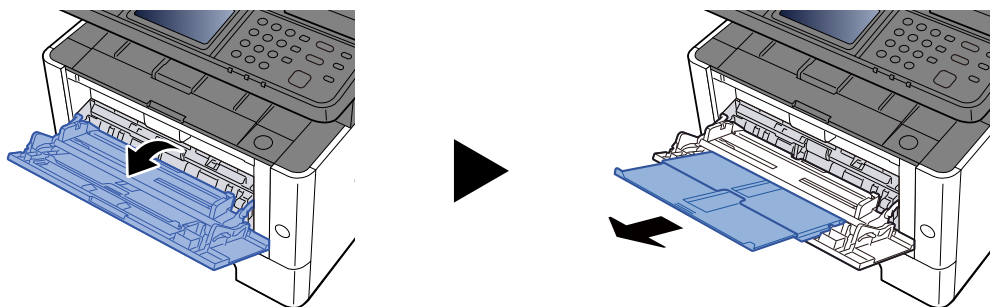


## 2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

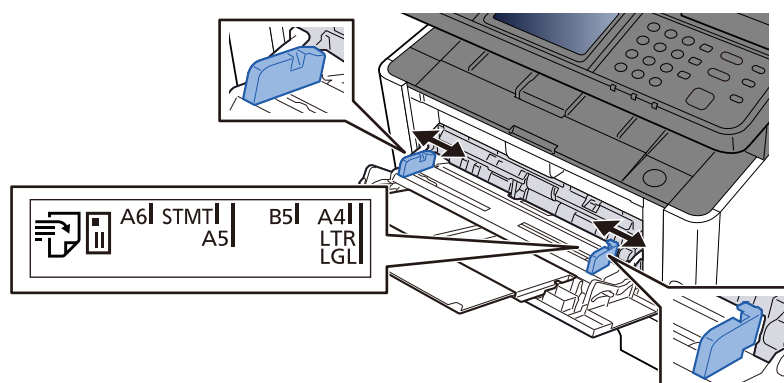

## 3 Load paper

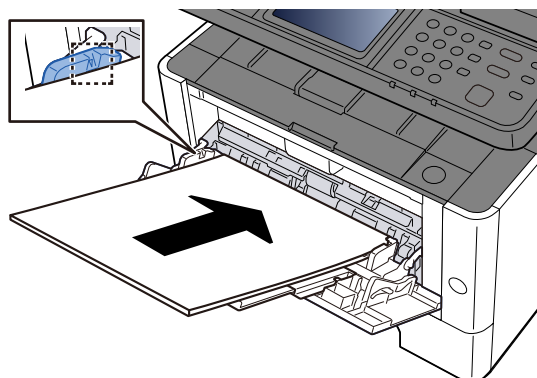

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

➔ [Precaution for Loading Paper \(page 129\)](#)

### ✓ IMPORTANT

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in


the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.

- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the load limits.

When you load envelopes or cardstock in the multipurpose tray, load the paper with the print side facing up. For the procedure for printing, refer to the Printer Driver User Guide.

#### → Printing System Driver User Guide

**Example: When printing the address.**

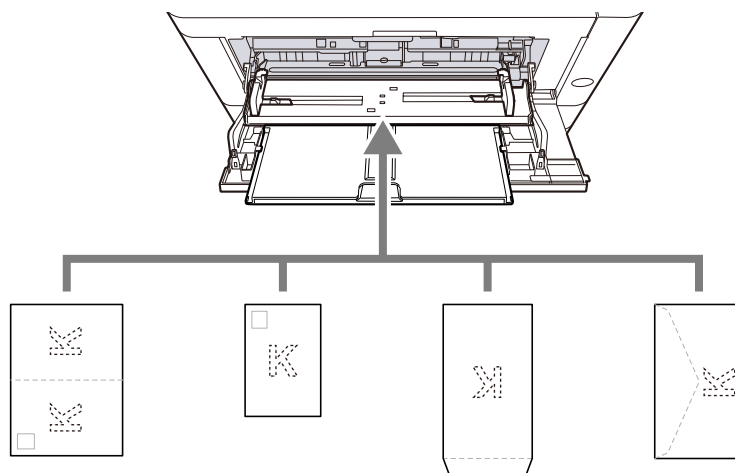

- Oufuku hagaki (Return postcard)
- Hagaki (Cardstock)
- Vertical envelope (open opening)
- Horizontal envelope (close opening)

#### ✓ IMPORTANT

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

#### 💡 NOTE

When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

→ [\[MP Tray Settings\] \(page 401\)](#)

## 4 Specify the type of paper loaded in the multipurpose tray using the operation panel.

Specifying Paper Size and Media Type


**Is the paper damp?**

Replace the paper with new paper.

➔ [Precaution for Loading Paper \(page 129\)](#)

## Printouts are curled

---

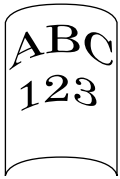


### Is the paper loaded correctly?

Load the paper correctly.


When loading paper in a cassette

- 1 Pull the cassette completely out of the machine.**

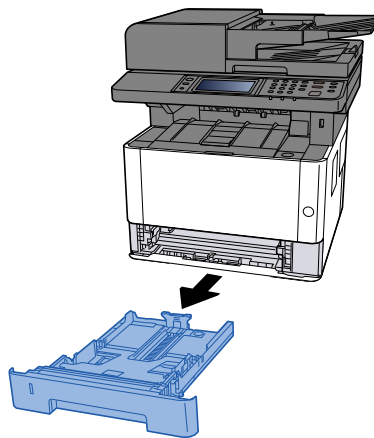

### NOTE


If the baseplate is rising, push the baseplate until it locks.

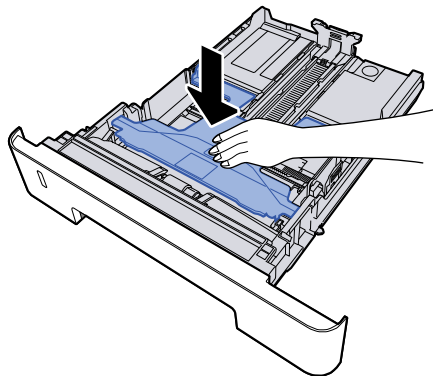

## 2 Adjust the cassette size.


- 1 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

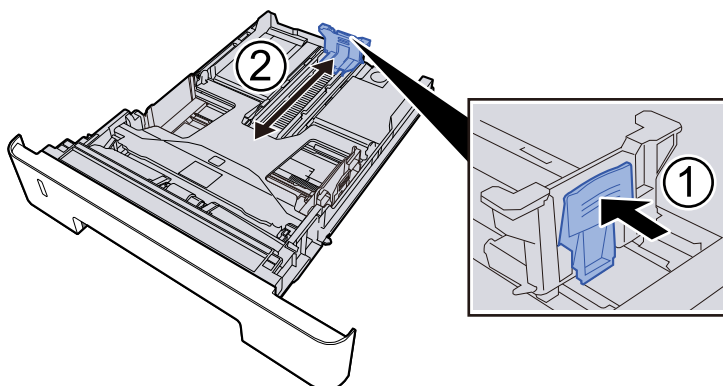


### ✓ IMPORTANT

When using Folio, Oficio II, or Legal

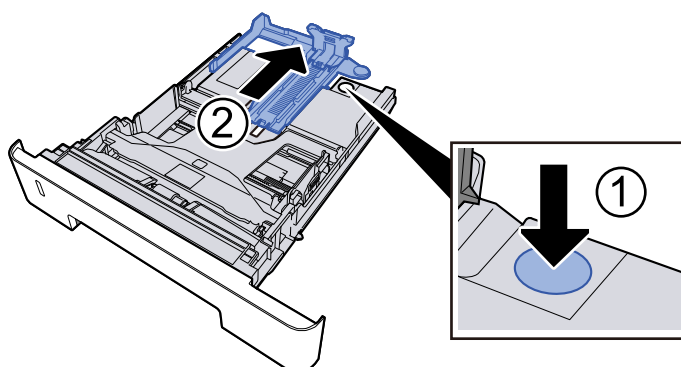


- 2 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

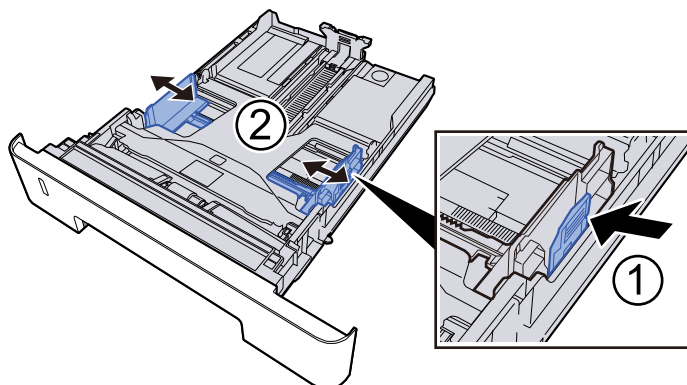

### 3 Load paper


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

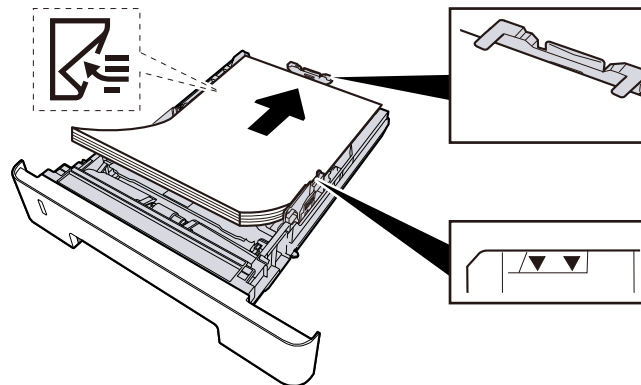

#### ✓ IMPORTANT

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan out the paper before loading it in the cassettes.
- ➔ [Precaution for Loading Paper \(page 129\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

## 4 Gently push the cassette back in.

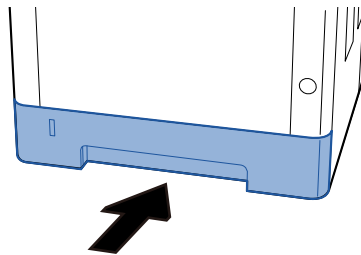

---


### **IMPORTANT**

Push all cassettes all the way in. If they are not pushed all the way in, they may cause a jam.

---

### **NOTE**

There is a paper gauge on the right side of the front of the cassette. The display changes up and down to match the remaining amount of paper.

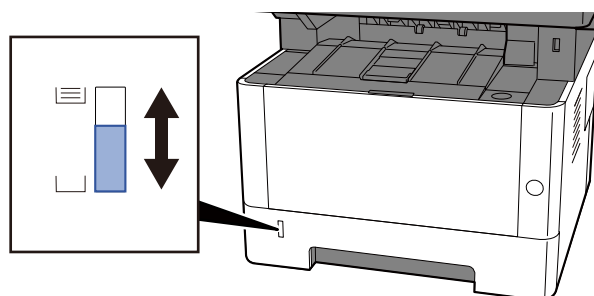


---

Remove the paper from the cassette once if there is no improvement, turn it over and reload it, or change the loading direction by rotating the paper 180 degrees.

➔ [Precaution for Loading Paper \(page 129\)](#)


When loading paper in the multipurpose tray

## 1 Open the multipurpose tray.

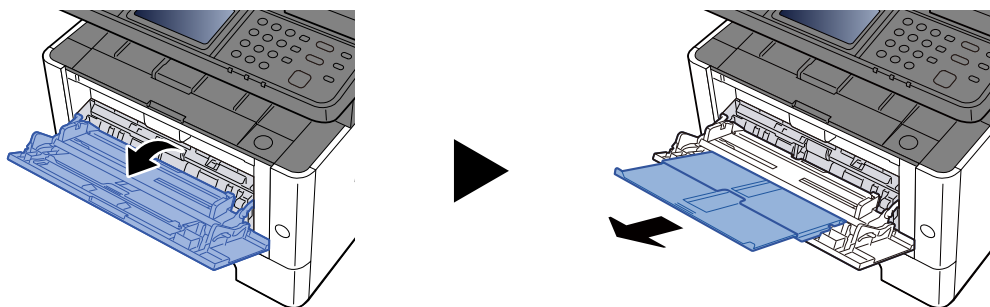


## 2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

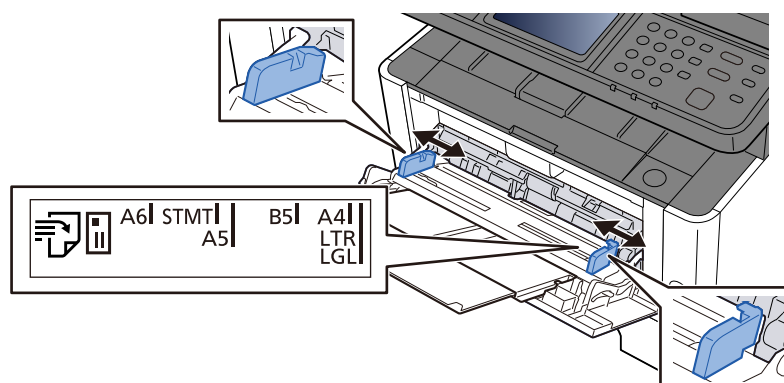

## 3 Load paper

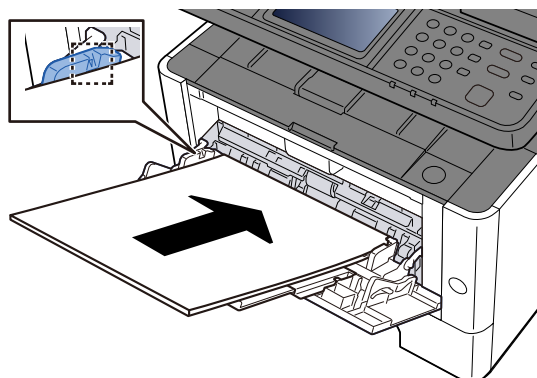

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

➔ [Precaution for Loading Paper \(page 129\)](#)

### ✓ IMPORTANT

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in


the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.

- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the load limits.

When you load envelopes or cardstock in the multipurpose tray, load the paper with the print side facing up. For the procedure for printing, refer to the Printer Driver User Guide.

#### ➔ **Printing System Driver User Guide**

**Example: When printing the address.**

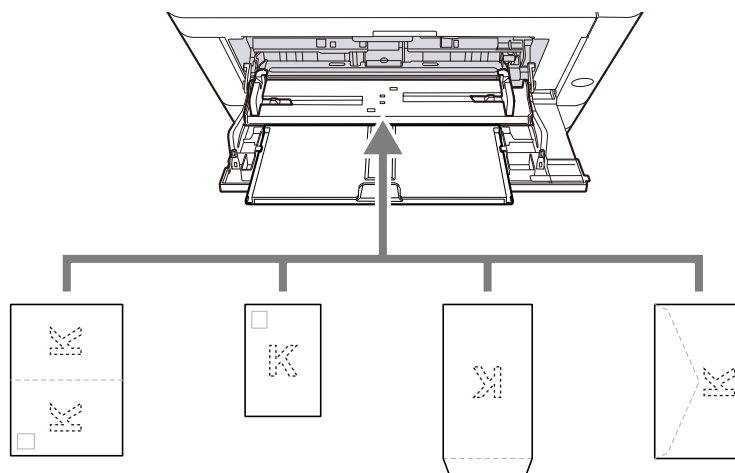

- Oufuku hagaki (Return postcard)
- Hagaki (Cardstock)
- Vertical envelope (open opening)
- Horizontal envelope (close opening)

#### ✓ **IMPORTANT**

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

#### 💡 **NOTE**

When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

➔ [\[MP Tray Settings\] \(page 401\)](#)

## **4 Specify the type of paper loaded in the multipurpose tray using the operation panel.**

Specifying Paper Size and Media Type

**Is the paper damp?**

Replace the paper with new paper.

## Printer driver cannot be installed

---

**Is the driver installed with the host name while Wi-Fi or Wi-Fi Direct function is available?**

Specify the IP address instead of the host name.

➔ [Installing Software \(page 94\)](#)

**Is Level 3 selected in Security Quick Setup?**

- 1** Acquire a root certificate for SSL communication from a trusted root certification authority. In Embedded Web Server RX, click [Security Settings] > [Certificates], and register the root certificate in [Root Certificate 1] to [Root Certificate 5].
- 2** After installing the certificate, restart the PC.
- 3** In Embedded Web Server RX, click [Network Settings] > [Protocols], and in [Other Protocols], set "SNMPv3" to [On].
- 4** In Embedded Web Server RX, click [Management Settings] > [SNMP], and set "SNMPv3".
- 5** Access [Control Panel], and click [Devices and Printers], [Add a printer], [The printer that I want isn't listed].
- 6** Check [Select a shared printer by name] and enter the address of the printer.  
E.g.: https://hostname:443/printers/lp1
- 7** Select the desired printer and specify the printer driver.

## Cannot start printing

---


### Is the machine plugged in?

Plug the power cord into an AC outlet.

### Is the power turned on?

Turn the power switch on.

#### 1 Turn the power switch on.

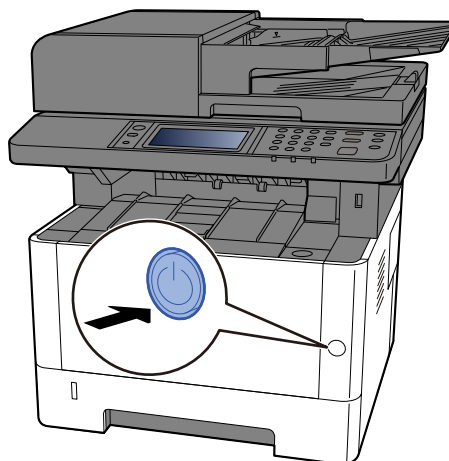

---

#### ✔ IMPORTANT

Wait more than 5 seconds, and then turn on the power switch.

---

### Are the USB cable and network cable connected?

Make sure to connect the USB cable and network cable securely.

## Connect the network cable

---

### ✔ **IMPORTANT**


If the power is on, turn the power switch off.

➔ [Power off \(page 52\)](#)

---

## 1 **Connect the cable to the machine.**

- 1 Connect the LAN cable to the network interface connector.

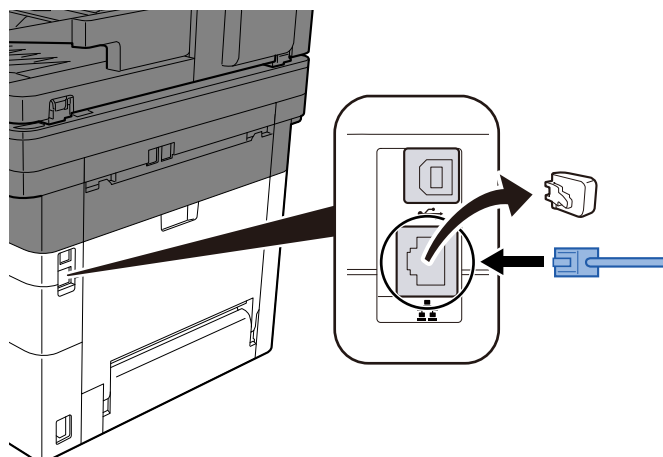

- 2 Connect the other end of the cable to the hub.

## 2 **Power on the machine and configure the network.**

➔ [Network Setup \(page 75\)](#)

Connect a USB cable to the machine.

---

✓ **IMPORTANT**


If the power is on, turn the power switch off.

➔ [Power off \(page 52\)](#)

---

## 1 Connect the cable to the machine.

- 1 Connect the USB cable to the USB interface connector.

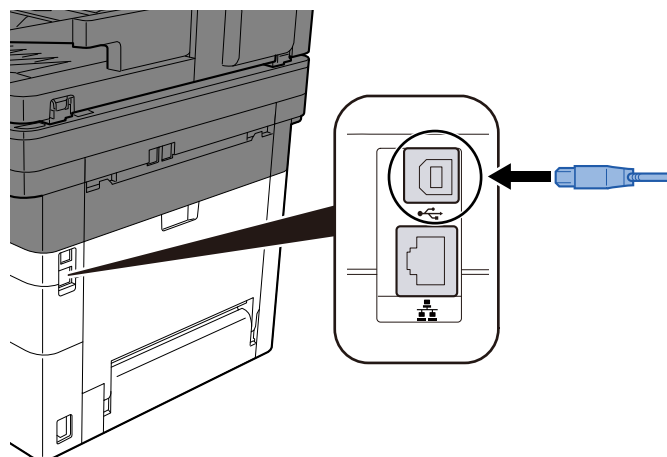

- 2 Connect the other end of the cable to the PC.

## 2 Power on the machine.

### Is the print job paused?

Resume printing.

## 1 Display the screen

- 1 Select the [Status/Job Cancel] key.

## 2 Select [Pause AllPrint Jobs] on the printing jobs status screen.

Printing is paused.

When resuming the printing of jobs that have been paused, select [Resume All Print Jobs].

## 3 Select [Pause].

Printing is paused.

When resuming the printing of jobs that have been paused, select [Resume].



### NOTE

Selecting a function key such as the [Back] key or the [Copy] key while the job is paused will [Resume paused jobs. Are you sure? ] is displayed. Select [Yes] and select the [OK] key to restart the job and display the following screen. If you select [No] and select the [OK] key, the job remains paused and the following screen appears.

---

## Are there a mixture of inaccessible addresses?

If you have configured wired and Wi-Fi networks with name resolution, you may have a mix of IP addresses (private addresses) on the other inaccessible network.

---



### IMPORTANT

Only one host name and one domain name can be used on this machine. Please consider this limitation when setting the network operation.

---

## 1 [System Menu/Counter] key > [Network Settings] > "Others" > [Primary Network (Client)]

Select Wi-Fi, Wired or Optional Network as the network to use without restrictions.

➔ [Protocol Settings \(page 468\)](#)

## 2 [System Menu/Counter] key > [Network Settings] > "Network Settings" [Protocol Settings]

Please [Enable] either [Wired Network] or [Wi-Fi] and [Disable] the other.

➔ [Protocol Settings \(page 468\)](#)

## 3 In Embedded Web Server RX, change the settings for name resolution of NetBEUI, DNS, etc., or change the network environment settings.

➔ [Embedded Web Server RX User Guide](#)

## Cannot print with USB drive / Does not recognize USB drive

---

### Is the USB drive connected to the machine firmly?

Connect the USB drive firmly to the machine.

### Are USB host settings set to [Block]?

#### 1 Change the USB host setting to [Unblock]

[System Menu/Counter] key > [Security Settings] > "Interface Block Setting"

➡ [Interface Block Setting \(page 488\)](#)

### Is the USB drive broken?

Use another USB drive.

## While [Auto-IP] is already set to [On], the IP address is not assigned automatically

---

Is a value other than "0.0.0.0" entered for the link local address of TCP/IP(v4)?

### 1 Enter "0.0.0.0" in IP Address of TCP/IP(v4).

- 1 [System Menu/Counter] key > [Network Settings] > "Network Settings" [Wired Network Settings] > "TCP/IP Settings" [IPv4 Settings]
- 2 Enter "0.0.0.0" in IP Address.  
➡ [TCP/IP \(IPv4\) setting \(page 75\)](#)


## Cannot send via SMB

### Is the network cable connected?

Connect the cable to the Machine and HUB securely.

#### 1 Connect the cable to the machine.

- 1 Connect the LAN cable to the network interface connector.

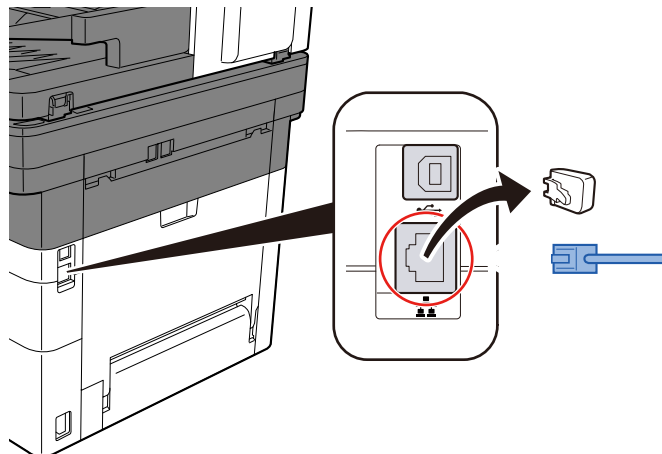

### Are the network settings on the machine configured correctly?

Check that TCP/IP is [On], and IPv4 or IPv6 is configured in accordance with the usage environment.

➔ [TCP/IP Settings \(page 463\)](#)

### Is SMB protocol configured?

#### 1 Set the SMB protocol settings to On.

[System Menu/Counter] key > [Network Settings] > "Network Settings" [Protocol Settings] > [SMB Client (Transmission)] > ON

#### 2 Set the SMB settings for folder sending to [On].

[System Menu/Counter] key > [Function Settings] > [Sending Job - Folder] > [SMB Settings] > On

### Are the host name, folder path, login user name, and login password of the destination computer correct?

#### 1 [Home] key > [Send]

#### 2 In the destination screen for sending, select [Enter destination.] > [SMB]

### 3 Enter the destination details.

To directly specify the SMB folder, select [Folder Path Entry] and enter each item.




#### NOTE

When selecting On for "Entry Check for New Dest.", the re-entering screen for the destination information appears.

➔ [Re-entering the New Destination \(page 276\)](#)

The table below explains the items to be entered.

Item	Description
Host Name	<p>Computer name</p> <p>Enter "Host Name" or "IP Address". To enter the IPv6 address, enclose the IPv6 address in brackets [ ].</p> <p>Limited character count: 256 characters or less</p> <p>Example: [2001:db8:a0b:12f0::10] (Example: [2001:db8:a0b:12f0::10])</p>
Port	<p>Port number</p> <p>If the port number is not specified, the default port number is 445.</p>
Folder Path	<p>Share name</p> <p>Limited character count: 260 characters or less</p> <p>For example: scannerdata</p> <p>If saving in a folder in the shared folder: share name\folder name in shared folder</p>
Login User Name	<ul style="list-style-type: none"> <li>• If the computer name and domain name are the same User Name For example: james.smith.</li> <li>• If the computer name and domain name are different Domain name\User name For example: abcdnet\james.smith</li> </ul> <p>Limited character count: 64 characters or less</p> <hr/> <div>  <b>NOTE</b> </div> <p>When transmitting using the wireless network, only alphanumeric characters are allowed. Also, if the computer name and domain name are different because "\" is not available, use @ to enter the user name in the following format:</p> <p>User name@Domain name (Example: james.smith@abcdnet)</p> <hr/>
Login Password	<p>Login password.</p> <p>Limited character count: 128 characters or less</p> <p>Upper case and lower case letters are distinguished (case sensitive).</p>

You can search for a folder on a PC on the network. Select [Search Folder from Network] or [Search Folder by Host Name]. Select the folder from the Search Results list.



#### NOTE

- If you selected [Search Folder from Network], you can search all PCs on the network for a destination.
- If you selected [Search Folder by Host Name], you can search for a destination from among PCs that are connected to the network by entering "Domain/Workgroup Name"/"Host Name".
- A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [OK]. The login user name and login password entry screen appears.
- After you enter the login user name and login password of the destination PC, the shared folders appear. Select the folder that you want to specify and select [OK]. The address of the selected shared folder is set.

### Are the folder sharing settings configured correctly?

Check the sharing settings and access permissions in the folder properties.

- 1 Right-click the shared folder and click [Properties] → [Security], in that order.**
- 2 Select a user and make sure the user you entered in the group name or user name field is displayed**
- 3 Make sure that checkmarks appear on the [Allows] checkbox for "Modify" and "Read & Execute".**
- 4 Click the [Close] button.**

➔ [Create a shared folder and make a note of the shared folder name \(page 143\)](#)

### Is the selected interface selected as the Primary Network?

Make sure the selected interface is selected as the Primary Network.

- 1 [System Menu/Counter] key > [Network Settings] > "Others"[Primary Network (Client)]**
- 2 Specify the host name or IP address of the interface selected as the Primary Network, or reconfigure it to the interface you want to use.**

For example, if you selected Wi-Fi as your preferred network, specify the host name or IP address of your wireless network.

### **Are the exception settings for Windows Firewall configured correctly?**

Make sure that the exception settings for Windows Firewall are configured correctly.

- 1** Select [Windows System] → [Control Panel] → [System and Security] → [Allow an app through Windows Firewall] from the desktop charm, in that order.
- 2** Make sure that checkmarks appear on the checkbox for [File and Printer Sharing]
- 3** Return to screen [System and Security] and select [Check Firewall Status] for Windows Defender Firewall.
- 4** Click [Advanced Setting] → [Inbound Rules], in that order.
- 5** Confirm that the registered exception settings (rules) are displayed in the list.  
➔ [Configuring Windows Firewall \(page 148\)](#)

### **Are the time settings of the machine, domain server, and data destination PC all synchronized?**

Synchronize the time settings of the machine domain server, and the data destination PC.

### **Is "Send error." displayed on the screen?**

For details, refer to the following:

- ➔ ["Send error." is displayed \(page 687\)](#)

## Cannot send via email

---

**Is the email send size limited in the SMTP server registered in this machine?**

Check email sending size in Embedded Web Server RX.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Functions] in the [E-mail] menu**
- 5 Check whether a restriction value is entered in [E-mail Size Limit] of "E-mail Send Settings", and change it as necessary.**
- 6 Click [Submit].**

➔ [SMTP and E-mail Settings \(page 115\)](#)

## The machine is emitting steam in the area around the paper ejection slot

---

### **Is the temperature in the room where the machine is running low? Or was damp paper used?**

Depending on the machine's printing environment and the condition of the paper, the moist contained in the paper may evaporate due to the heat generated during printing, and the water vapor emitted may look like smoke.

There is no problem, and you can continue printing. If the steam concerns you, raise the room temperature or replace the paper with a new dryer paper.

## **Even after replacing the toner container, the message to replace the toner container does not disappear**

---

### **Corrective Actions**

Make sure the rear cover, and other covers are closed.

## Cannot find the machine with WSD

---


### **Are you searching for this machine by specifying the IP address or host name?**

For security reasons, [HTTP] protocol is set to off, and therefore you cannot search by IP address or host name.

## Printed Image Trouble

### Printouts are totally too light

---

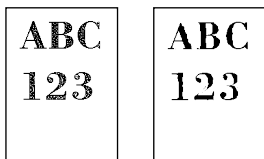

#### Is the paper damp?

Replace the paper with new paper.

#### Is the media type set correctly?

Check if the media type setting is correct.

- 1** [System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Media Type Setting]
- 2** Check the weight (paper thickness) for the paper type and change it to the correct value

#### Have you changed the density?

Select appropriate density level.

- 1** Set the concentration in the range of[-4] to [+4]

➔ [Density \(page 314\)](#)



#### NOTE

To print with the same density all the time, select from the [Adjustment/Maintenance]

Density can also be set from [System Menu/Counter] key > [Adjustment/Maintenance] > "Image Adjustment" > [Density Adjustment].

➔ [\[Density Adjustment\] \(page 498\)](#)

---

#### Have you set EcoPrint?

Set [EcoPrint] to [Off].

- 1** [System Menu/Counter] key > [Function Settings] > [Printer]
- 2** [EcoPrint] > [Off]

## **Drum refresh needs to be performed.**

### **1 Perform the Drum Refresh.**

Drum Refresh begins.



#### **NOTE**


Waiting time may be longer when the toner is refilled during drum refresh.

---

**Are the developer unit and drum unit installed properly?**

## White background parts of the image appear to have a slight overall grey coloration

---

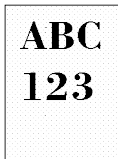

### Have you changed the density?

Select appropriate density level.

#### 1 Set the concentration in the range of[-4] to [+4]

→ [Density \(page 314\)](#)



#### NOTE

To print with the same density all the time, select from the [Adjustment/Maintenance]

Density can also be set from [System Menu/Counter] key > [Adjustment/Maintenance] > "Image Adjustment" > [Image Adjustment].

→ [\[Density Adjustment\] \(page 498\)](#)

---

### Drum refresh needs to be performed.

#### 1 Display the screen

1 [System Menu/Counter] key > [Adjustment/Maintenance] > [Image Adjustment] > [Image Adjustment]


#### 2 Execute

1 Perform the Drum Refresh.

Drum Refresh begins.

## Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly)

---

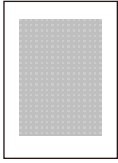

**Is it an original with a photo printed on it?**

Check the content structure of the original and change it to an appropriate image quality.


**1 Select a [Original Image] for each function**

**2 Select [Photo].**

➔ [Original Image \(page 315\)](#)

## Texts are not clearly printed

---

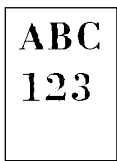


### Have you selected appropriate image quality for the original?

Check the content structure of the original and change it to an appropriate image quality.

- 1** Select a [Original Image] for each function
- 2** Select the image quality that matches the type of the original
  - ➔ [Original Image \(page 315\)](#)

## Black or color dots appear on the white background

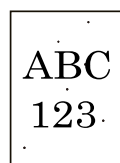


### Is the original holder or the platen dirty?

Wipe the inside of the document processor and the platen with a soft cloth dampened with alcohol or mild detergent.

### ✓ IMPORTANT

Do not use thinner or other organic solvents.

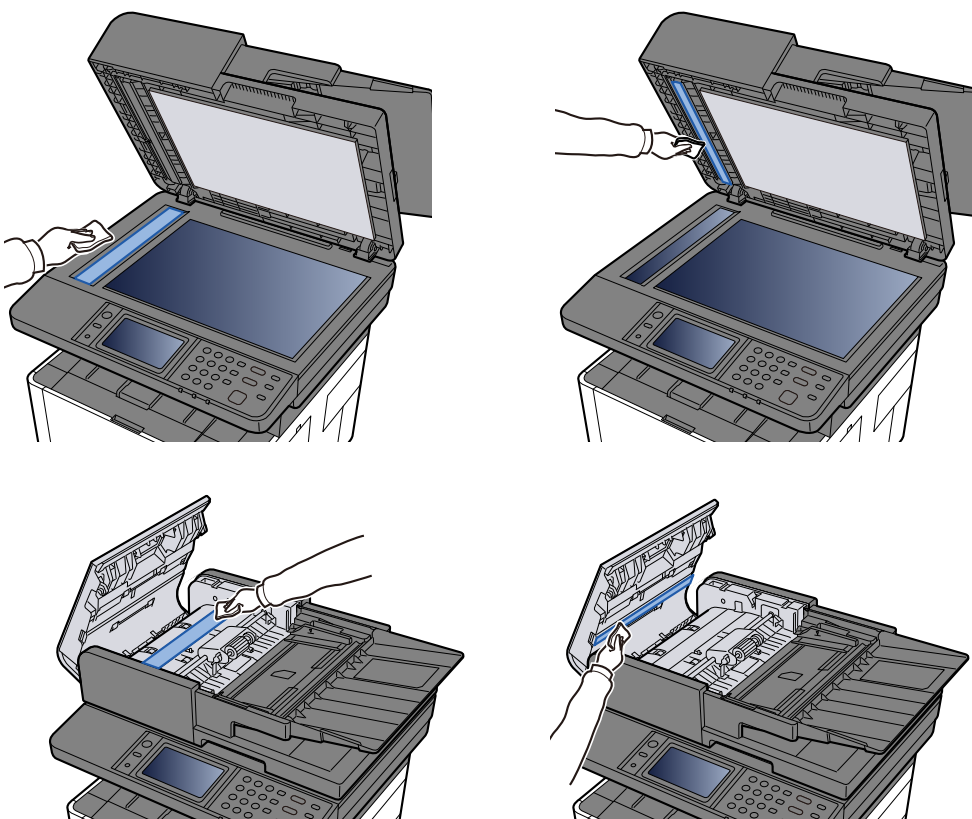

**Drum refresh needs to be performed.**

### 1 Display the screen

1 [System Menu/Counter] key > [Adjustment/Maintenance] > "Image Adjustment" > [Image Adjustment]


### 2 Perform the Drum Refresh.

1 Perform the Drum Refresh.

Drum Refresh begins.

## Printed images are fuzzy or cut off

---

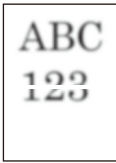

**Are you using the machine in a place with high humidity or drastic temperature and humidity fluctuations?**

Use the machine in an environment with appropriate humidity.

**Drum refresh needs to be performed.**

### **1 Display the screen**

- 1 [System Menu/Counter] key > [Adjustment/Maintenance] > "Image Adjustment" > [Image Adjustment]

### **2 Perform the Drum Refresh.**

- 1 Perform the Drum Refresh.  
Drum Refresh begins.

## Printed images are shifted

---



### Is the original set correctly?


- When setting the original on the platen, make sure to align the original with the original size indicator plate.  
➡ [Placing Originals on the Platen \(page 216\)](#)
- When loading the original in the document processor, make sure to align the original width guides before loading the original.  
➡ [Loading Originals in the document processor \(page 218\)](#)

### Is the paper loaded correctly?

Adjust the paper length guide and width guide of the cassette to fit the paper size.

- ➡ [Loading in the Cassettes \(page 131\)](#)

## Irregular horizontal lines appear in the image

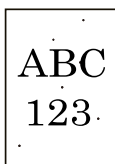

MC needs to be performed.

### 1 Display the screen

- 1 [Menu] key > [▲] [▼] keys > [Adjust/Maint.] > [OK] key > [▲] [▼] keys > [Service Setting] > [OK] key > [▲] [▼] keys > [MC] > [OK] key

### 2 Execute

- 1 Select [Yes].

Increase the setting value. When making adjustments, increase the current value by one level at a time. If the effect does not appear even after increasing the setting by one level, increase the setting by one more level. If the effect does not appear, reduce the original value by one level at a time. If the effect does not appear even after reducing the value by one level, try reducing the value by one more level. If the effect still does not appear, please change the value back to its original value.

**The usage environment is at a high altitude of 1000m or higher, and irregular horizontal white lines appear on the image.**


---



- 1** Select the [System Menu/Counter] key > [Adjustment/Maintenance] > "Others" [Altitude Adjustment] and set the altitude one step higher than the current setting.

**The usage environment is at a high altitude of 1000m or higher, and color dots appear in the image.**

---

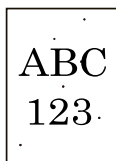

- 1** Select the [System Menu/Counter] key > [Adjustment/Maintenance] > "Others" [Altitude Adjustment] and set the altitude one step higher than the current setting.

## Printed images have vertical lines







### Is the slit glass dirty?

When using the document processor, clean the slit glass surface and the reading guide with the dry cloth.


#### ✓ IMPORTANT

Do not use water, soap or solvents for cleaning.

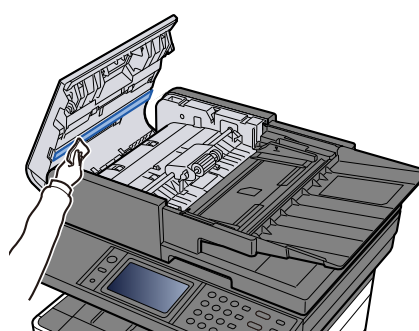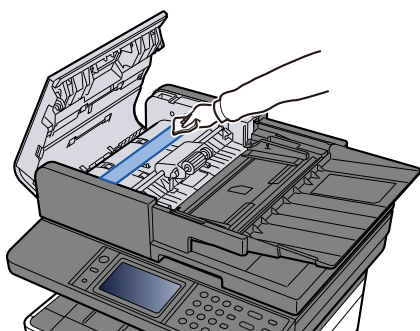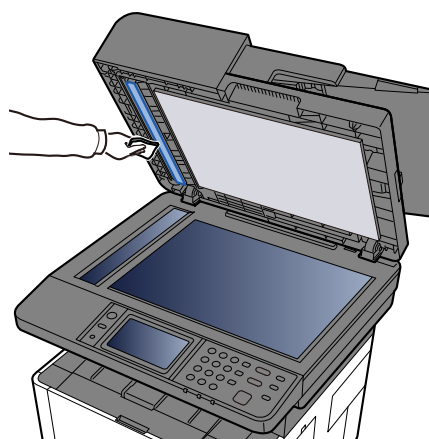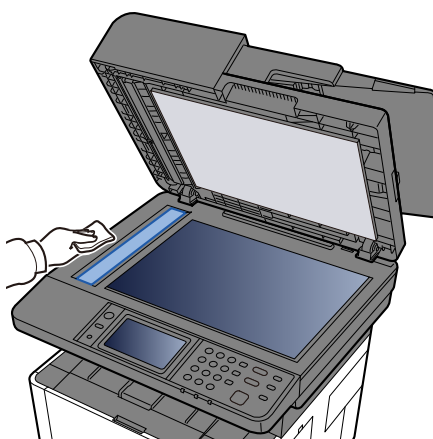


## Clean the charger inside the main unit.

### 1 Open the Front cover.

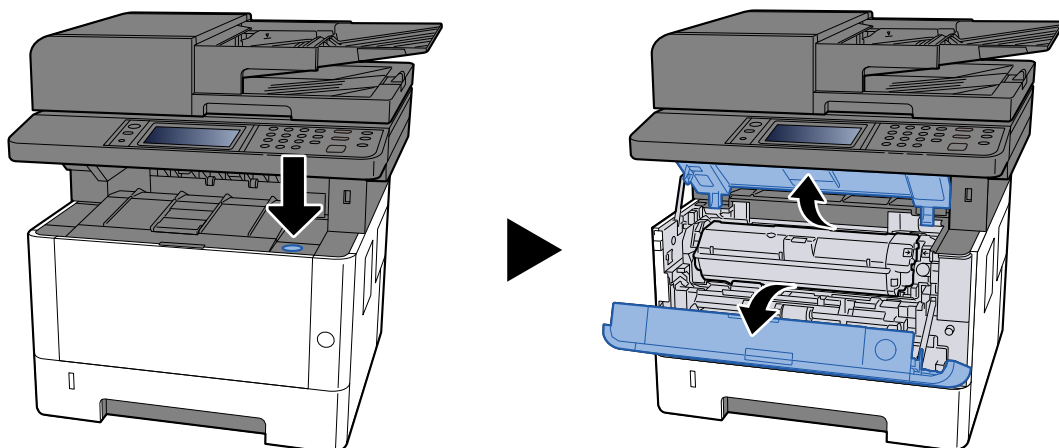


### 2 Remove Developer unit.

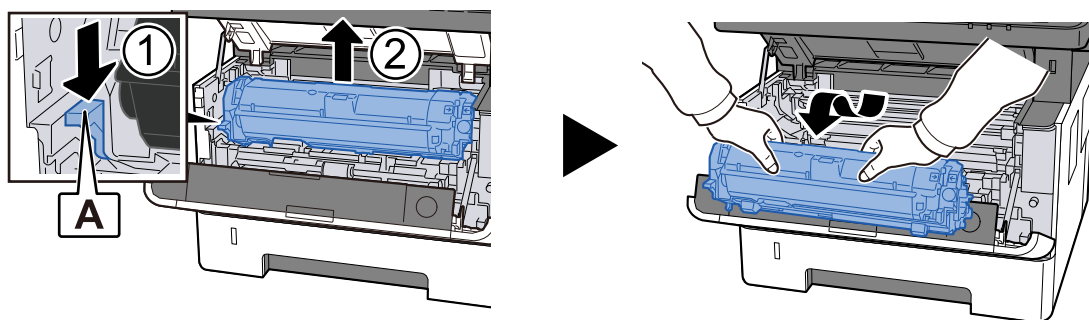

#### NOTE

Do not touch the developing roller or subject it to impact. Print quality will deteriorate.


### 3 Place the removed Developer unit on a clean, level surface.

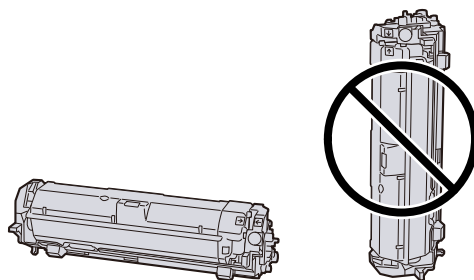

#### NOTE

Do not stand the Developer unit upright.


## 4 Remove Drum unit.

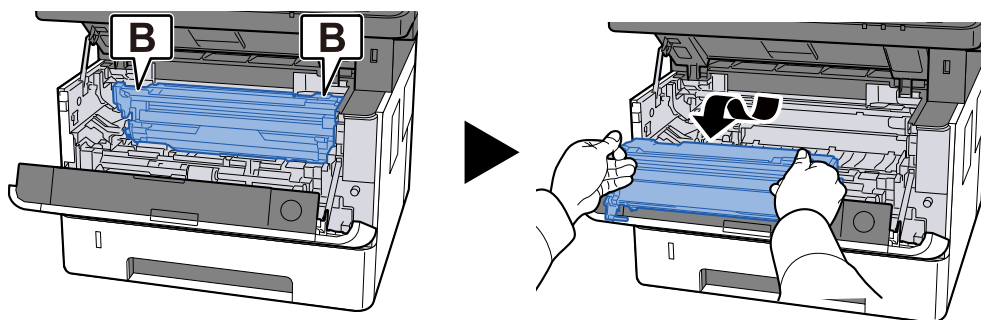

### NOTE

Do not touch the drum part or subject it to impact. Also, if exposed to direct sunlight or strong light, print quality will deteriorate.


## 5 Place the removed Drum unit on a clean, level surface.

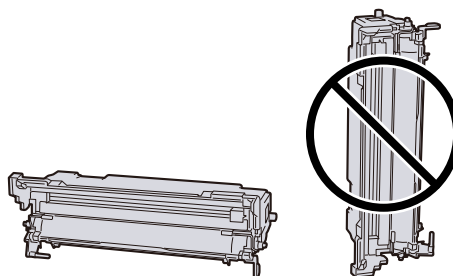


### NOTE

Do not stand the Drum unit upright.

## 6 Wipe away the paper dust and dirt on Registration roller (metal) using a soft, dry cloth.

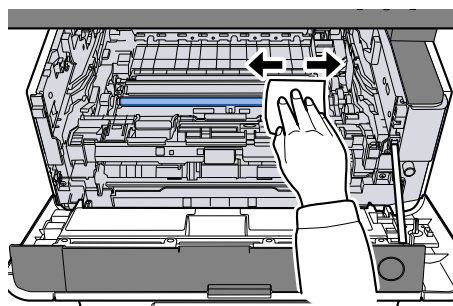


- 7** Slide the upper charger cleaner knob of the Drum unit to the left and right two or three times.

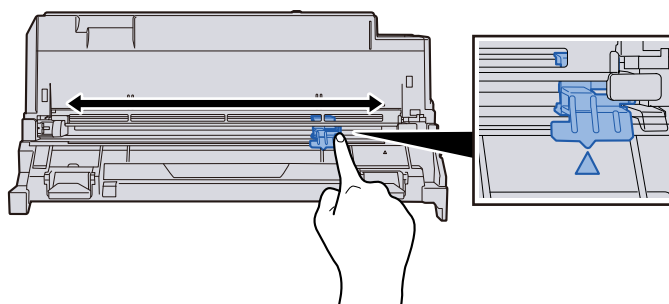


#### NOTE

- When cleaning the charger wire for the first time, remove the tape that secures the charger cleaner knob.
- After cleaning, return the charger cleaner knob to its original position.


- 8** Return the Drum unit.

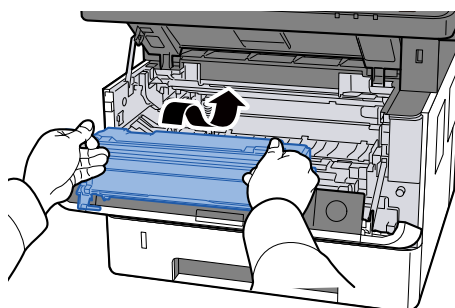


- 9** Return the Developer unit.

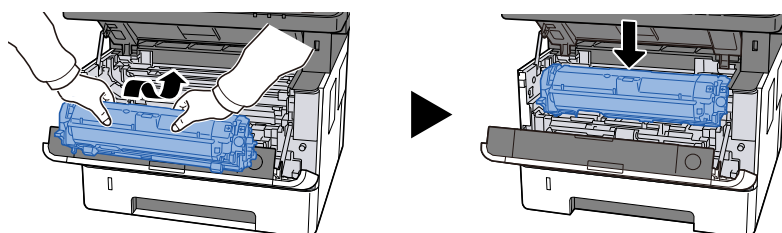

- 10** Close the Front cover.

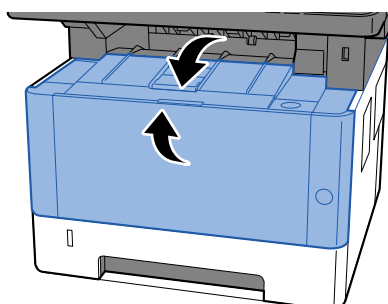


## Dirt on the top edge or back of the paper

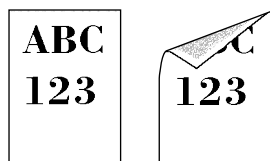


### Is the inside of the machine dirty?

To maintain optimum print quality, it is also recommended that the inside of the machine be cleaned when the toner container is replaced and when vertical streaks appear.

#### 1 Open the top cover.

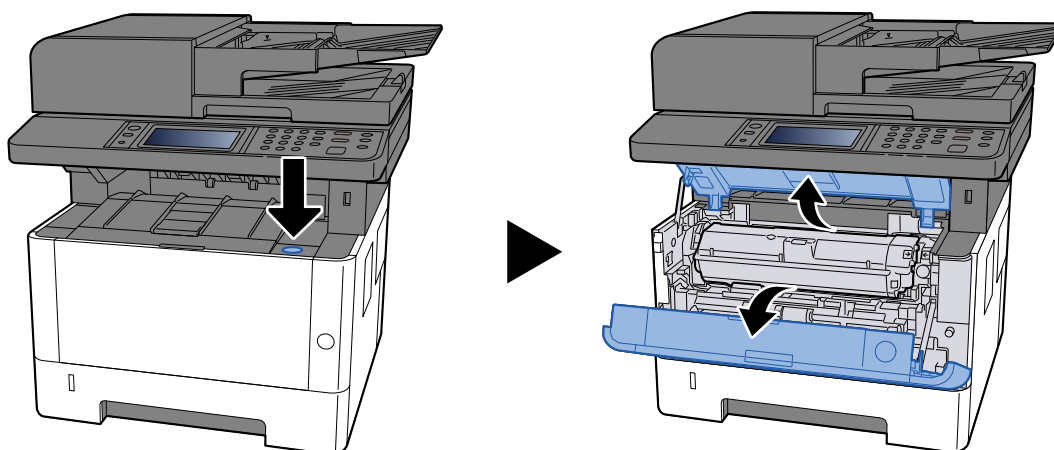


#### 2 Remove Developer unit.

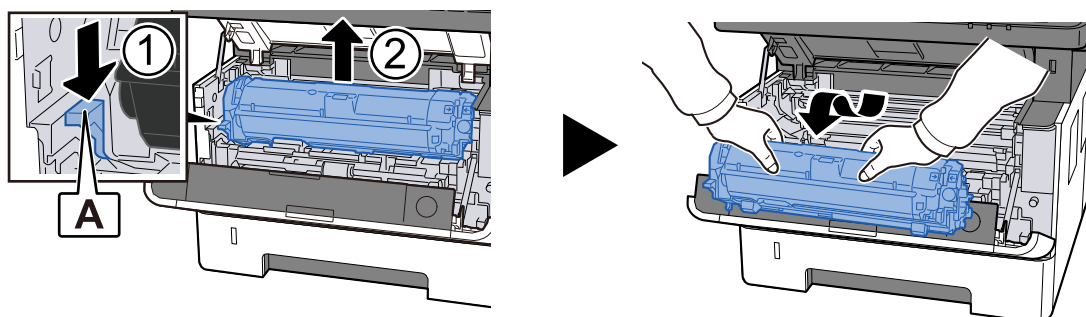

#### ✓ IMPORTANT

Do not touch the developing roller or subject it to impact. Print quality will deteriorate.


### 3 Place the removed Developer unit on a clean, level surface.

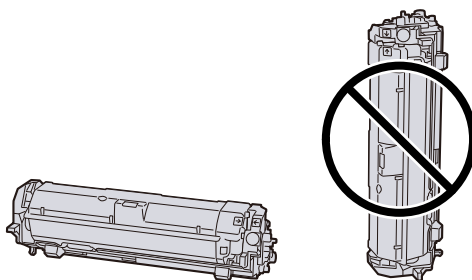

#### NOTE

Do not stand the Developer unit upright.


### 4 Remove Drum unit

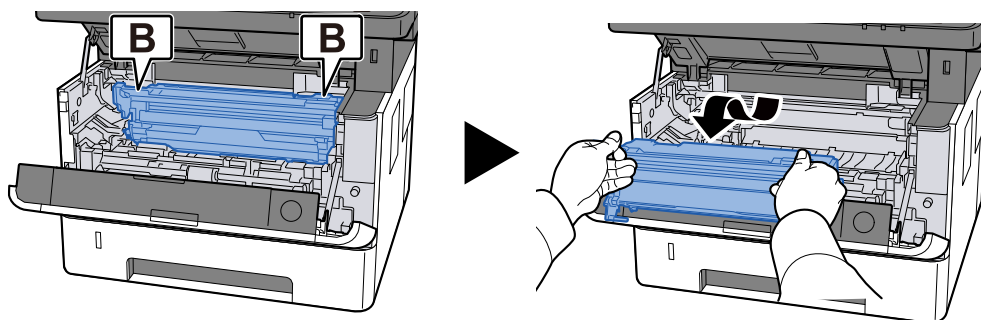

#### NOTE

Do not touch the drum part or subject it to impact. Also, if exposed to direct sunlight or strong light, print quality will deteriorate.


### 5 Place the removed Drum unit on a clean, level surface.

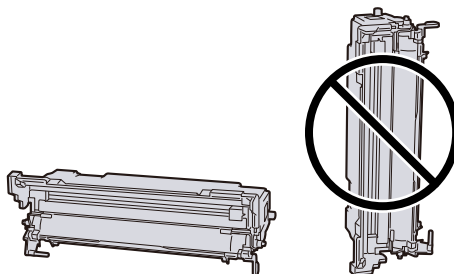


#### NOTE

Do not stand the Drum unit upright.

- 6 Wipe away the paper dust and dirt on Registration roller (metal) using a soft, dry cloth.

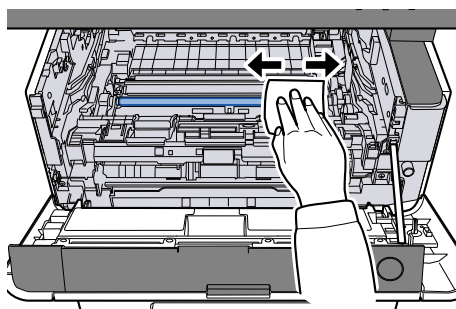


- 7 Slide the upper charger cleaner knob of the Drum unit to the left and right two or three times.

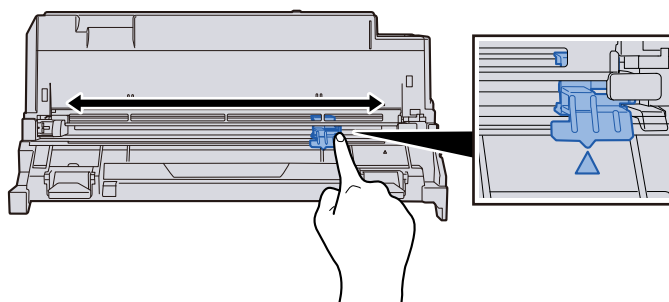


 **NOTE**

- When cleaning the charger wire for the first time, remove the tape that secures the charger cleaner knob.
- After cleaning, return the charger cleaner knob to its original position (CLEANER HOME POSITION)


- 8 Return the Drum unit.

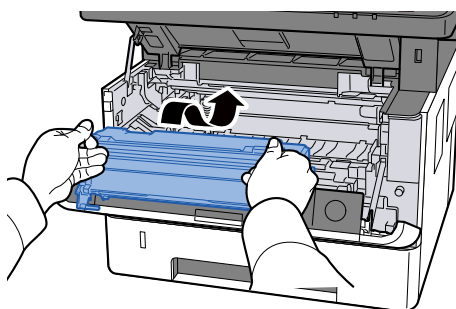

- 9 Return the Developer unit.

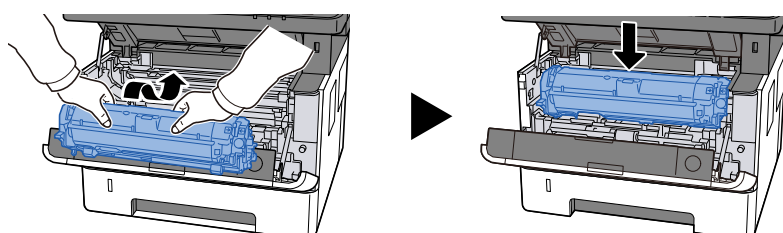

## 10 Close the top cover.

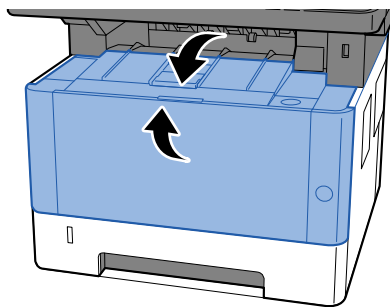

## Part of the image is periodically faint or shows white lines

---



### Is the Front Cover tightly closed?

Open the Front Cover and close it again.

### Drum refresh needs to be performed.

#### 1 Display the screen


- 1 [System Menu/Counter] key > [Adjustment/Maintenance] > [Image Adjustment] > [Image Adjustment]

#### 2 Execute

- 1 Perform the Drum Refresh.  
Drum Refresh begins.

## A lighter version of the previous image remains and is repeatedly printed

---

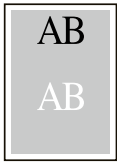

### Is the media type set correctly?

Check if the media type setting is correct.

- 1 [System Menu/Counter] key > [Device Settings] > [Paper Feeding] > [Media Type Setting]**
- 2 Check the weight (paper thickness) for the paper type and change it to the correct value**

## The print on the back page bleeds through

---



- 1 Select [Prevent Bleed-thru] from each function tab, and set it to ON.**
- 



### NOTE

You can also set the anti-reflection function in the following steps.

[System Menu/Counter] key > [Function Settings] > [Function Defaults] > [Copy/Print] > [Prevent Bleed-through (Copy)]

---

# Remote Operation

This function enables the system administrator to explain how to operate the panel and troubleshoot to user, by accessing operation panel of the machine at remote using browser and VNC software.

## Executing Remote Operation from Browser

The supported Browser is as follows. We recommend the latest version of browser to use Remote Operation.

- Google Chrome (Version 21.0 or later)
- Microsoft Edge
- Mozilla Firefox (Version 14.0 or later)
- Safari (Version 5.0 or later)

This section describes the procedure for performing remote operations from Embedded Web Server RX using Google Chrome.



### NOTE

To execute Remote Operation using other browsers, refer to the following:

➔ [Embedded Web Server RX User Guide](#)

---

## 1 Display the screen

- 1 [System Menu/Counter] key > [Network Settings] > "Network Settings" [Protocol Settings]

## 2 Set [Enhanced VNC (RFB) over TLS] to On

➔ [Enhanced VNC \(RFB\) over TLS \(page 474\)](#)

---



### NOTE

You can configure the protocol settings using Embedded Web Server RX.

➔ [Embedded Web Server RX User Guide](#)

---

## 3 Configure settings for remote operation.

- 1 [System Menu/Counter] key > [Network Settings] > "Connectivity" [Remote Operation] > On
- 2 Select from [Off], [Use Password], [Administrator Only]

When you select [Use Password], enter the password in "Password" and "Confirm Password", then select [OK].

➔ [Remote Operation \(page 484\)](#)

---



### NOTE

You can configure settings for remote operation using Embedded Web Server RX.

➔ [Embedded Web Server RX User Guide](#)

---

## **4 Restart the machine.**

## **5 Start up the browser.**

Specify `https: // [Host name of this Machine]` and start Embedded Web Server RX.

➔ [Accessing Embedded Web Server RX \(page 112\)](#)

## **6 [Device Information / Remote Operation] > [Remote Operation]**

## **7 Click [Start].**



### **NOTE**

- If the user is logged in to the device, the permission confirmation screen will be displayed on the operation panel. Select [Yes].
- If pop-up blocking of the browser occurs during connection of the Remote Operation, select Always allow pop-ups from `https:// [host name]`, and click [Completed]. Perform [Start] after waiting 1 minute or more.

---

When the Remote Operation is started up, the operation panel screen will be displayed on the system administrator's or user's PC screen.

## Executing Remote Operation from VNC Software

### 1 Display the screen

- 1 [System Menu/Counter] key > [Network Settings] > "Network Settings" [Protocol Settings]

### 2 Set [VNC (RFB)] to On.

➔ [Protocol Settings \(page 468\)](#)



#### NOTE

- If "VNC (RFB) over TLS" is set to On, the communication is encrypted.
- You can configure the protocol settings using Embedded Web Server RX.

➔ **Embedded Web Server RX User Guide**

---

### 3 Startup the remote operation.

- 1 Start up the VNC software.
- 2 Enter the following format separated by a colon to start up the remote operation.  
"IP address: port number"



#### NOTE

When setting "VNC (RFB)" to On in step 2, the default port number is 9062. When "VNC (RFB) over TLS" is set to On, the default port number is 9063.

➔ [Protocol Settings \(page 468\)](#)

---

## Responding to Messages

If the touch panel or the computer displays any of these messages, follow the corresponding procedure.

---



When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

➔ [Checking the Equipment's Serial Number \(page 2\)](#)

---

### "Access point was not detected." is displayed

---

Check if the access point has been set correctly.

## "Add paper in casset.#" is displayed.

---

### Is the indicated cassette out of paper?

- Replenish the paper.
  - ➡ [Loading in the Cassettes \(page 131\)](#)
- Select paper from another paper feed source.
- Select [Continue] to change the paper and print.

## **"Add paper in Multipurpose Tray." is displayed.**

---

### **Has the paper run out in the displayed paper source?**

- Replenish the paper.
  - ➡ [Loading in the Cassettes \(page 131\)](#)
  - ➡ [Loading Paper in the Multipurpose Tray \(page 136\)](#)
- Select paper from another source.
- Select [Continue] to change the paper and print.

## "Box limit exceeded." is displayed

---

### Is [End] displayed on the screen?

Jobs cannot be saved because the specified box is full. The job is canceled.

Select [End].

Print or delete the original in the box, and then try again.

## **"Broadcast error" is displayed**

---

**An error occurred while broadcasting.**

The job is canceled. Select [OK] key.

## "Cannot connect to Authentication Server." is displayed

---

### Does the machine time match the server's time?

- Set the machine time to match the server's time
  - ➔ [Setting Date and Time \(page 74\)](#)

### Is it properly registered with the authentication server?

- Enable User Login Administration.
  - ➔ [Enable User Login Administration \(page 505\)](#)
- Set the network authentication server.
  - Check the connection status with the server.
  - Confirm that the computer name and password for the authentication server are correct.

### Is the machine connected to the network correctly?

- ➔ [Connecting LAN Cable \(page 48\)](#)
- ➔ [Network Setup \(page 75\)](#)



#### NOTE

If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

- ➔ [Error Handling \(page 409\)](#)
-

## **"Cannot connect to Server." is displayed**

---

Check the connection status with the server.

## "Cannot connect." is displayed

---

### **Wi-Fi or Wi-Fi Direct connection could not be completed.**

Check the settings and signal conditions.

➔ [Wi-Fi Direct Settings \(page 454\)](#)

➔ [Wi-Fi Settings \(page 456\)](#)

## **"Cannot duplex print on this paper." is displayed**

---

### **Have you selected a size or type of paper that cannot be duplex printed?**

- Select [Continue] to cancel duplex printing and continue printing.
- Select paper from a different paper source and press [Continue] to change the paper for printing.
- Select [Canceled] to cancel the job.

## **"Cannot perform remote printing." is displayed**

---

### **Remote printing is prohibited.**

The job is canceled. Select [End].

## **"Cannot print the specified number of copies." is displayed.**

---

Only one copy is available.

- Select [Continue] to continue printing.
- Select [Canceled] to cancel the job.

## **"Cannot process this job." "Restricted by authorization settings." is displayed.**

---

### **Restricted by the authorization settings.**

The job is canceled. Select [Exit].

## **"Restricted by Job Accounting. Cannot print." is displayed.**

---

### **Restricted by the job accounting.**

The job is canceled. Select [Exit].

## **"This user account is locked out." is displayed.**

---

Please contact the administrator.

The job is canceled. Select [End].

## **"You cannot use this function." is displayed.**

---

This job will be aborted because user authorization prohibits that function. Select [End].

## "Cannot read data in this ID card." is displayed

---

**In registration process, the ID card information was not read correctly.**

Hold the IC card over the IC card reader again. If the same message is displayed again, the IC card may not be compatible with this product. Replace it with another IC card.

## **"Cannot recognize the ID card reader." is displayed.**

---

- Check if the USB connector of your IC card reader is correctly connected to the main unit.
- If [USB HOST] in [Interface Block Setting] is set to [Block], change it to [Unblock].

## "Failed to activate. Contact administrator." is displayed.

---


### Failed to activate the application.

Please contact the administrator.

### Extended authentication is disabled.

Turn the power switch off and then on again. If the error persists, contact administrator.

#### 1 Turn the power switch off.

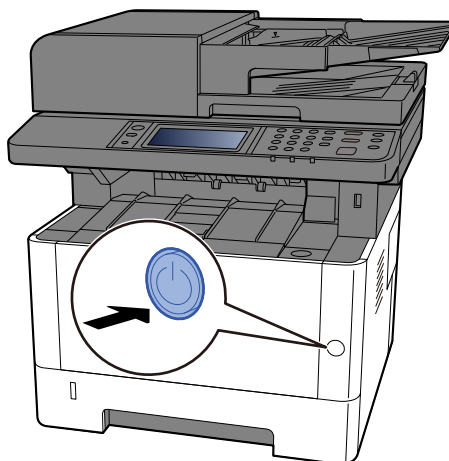

The confirmation message for power supply off is displayed.

It takes approximately 3 minutes for power off.

---

### CAUTION

If this machine will be left unused for an extended period (e.g. overnight), turn it off at the power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

---

---

### IMPORTANT

- If using the products equipped with the fax function, note that turning the machine off at the power switch disables fax transmission and reception.
  - Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.
-

## "Failed to send via SMB." is displayed.

---

### Are this machine and the scanned image destination PC connected to the network?

Check the network.

- Connecting LAN Cable
- Hub behavior
- The server status
- Host name or IP address
- Port number

➔ [Connecting LAN Cable \(page 48\)](#)

➔ [Network Setup \(page 75\)](#)

➔ [Network Settings \(page 452\)](#)

### Is the account information (user ID, password) used to access the shared folder to which the scanned image is to be sent incorrect?

Check the settings of the scanned image destination PC.

- Host Name
- Path
- Login user name



#### NOTE

If the sender is a domain user, specify the domain name. [Login User name]@[Domain name]

Example) sa720XXXX@km

- Login Password
  - Folder share permissions of the recipient
-

## **"Failed to store job retention data." is displayed**

---

The job is canceled. Select [End].

## "Failed to specify Job Accounting." is displayed.

---

### Failed to specify Job Accounting when processing the job externally.

The job is canceled. Select [End].

---



#### NOTE

If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

➔ [Error Handling \(page 409\)](#)

---

## **"Incorrect account ID." is displayed**

---

**The account ID was incorrect when processing the job externally.**

The job is canceled. Select [End].

## **"Job Accounting restriction exceeded." is displayed**

---

### **Is the acceptable printing count restricted by Job Accounting exceeded?**

The printing count exceeded the acceptable count restricted by Job Accounting. Cannot print any more.

The job is canceled. Select [End].

## "KPDLError." is displayed

---

### PostScript error has occurred.

The job is canceled. Select [End].

---



#### NOTE

If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

➔ [Error Handling \(page 409\)](#)

---

## **"Error occurred. Turn the power switch off and on." is displayed**

---

### **System error has occurred.**

Follow the instruction displayed on the screen.

## "Machine failure." is displayed

---

### **Internal error has occurred.**

Make a note of the error code displayed on the screen and contact service representative.

## **"Maximum number of scanned pages." is displayed**

---

### **Is the acceptable scanning count exceeded?**

Cannot scan pages any more. The job is canceled. Select [OK].

## "Memory is full." is displayed

---

### **The memory is full and the job cannot be continued.**

Select [OK]. This job is [Cancel]. When insufficient memory occurred frequently, contact your dealer or service representative.

---



#### **NOTE**

If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

➡ [Error Handling \(page 409\)](#)

---

## "Paper jam." is displayed

---

### **A paper jam has occurred.**

If a paper jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instructions to remove the jammed paper.

➔ [Jam Location Indicators \(page 763\)](#)

## **"Performing Drum Refresh..." is displayed**

---

**The machine is in adjustment mode to maintain quality.**

Please wait.

## **"Regulating the temperature..." is displayed.**

---

**The machine is in adjustment mode to maintain quality.**

Please wait.

## "Remove originals in Document Processor." is displayed.


### Are there any originals left in the document processor?

Remove the original from the document processor.


#### ✓ IMPORTANT

If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


### 1 Remove the originals from the Original Table.

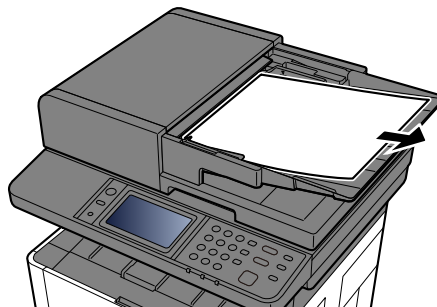


### 2 Open the top cover and remove the jammed paper.

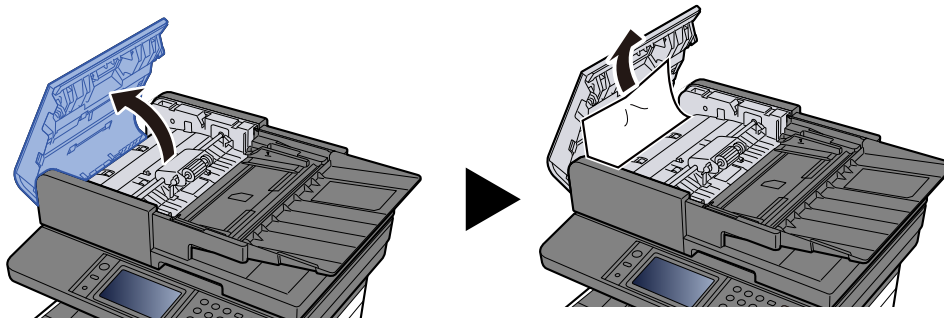

### 3 Remove the original from the document processor.

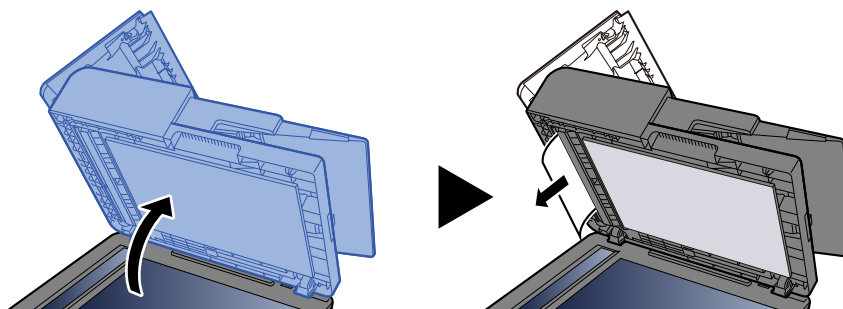

### 4 Return the cover to the original position.

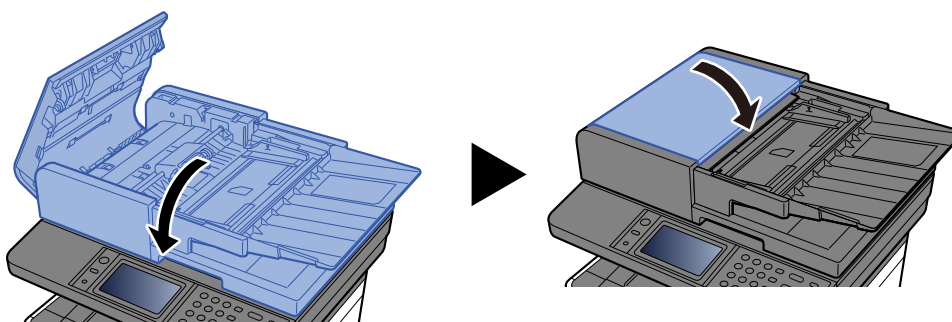

## **"Scanner memory is full." is displayed**

---

**Scanning cannot be performed due to insufficient memory of the scanner.**

The job is canceled. Select [OK].

## "Scheduled sending jobs exceeded." is displayed

---

**The number of timer transmissions that can be set has been exceeded.**

Select [End]. The job is canceled.

Wait until the delayed transmission is executed, or cancel the delayed transmission and then perform the job again.

## "Send error." is displayed

---

### **An error has occurred during sending.**

The job is canceled. Select [End]. Refer to the transmission error code list for the error code and its details.

➔ [List of Transmission Error Codes \(page 708\)](#)

---



### **NOTE**

If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

➔ [Error Handling \(page 409\)](#)

---

## **"The device cannot be connected because allowed connections would be exceeded." is displayed**

---

### **Are you connecting more than the maximum number of Wi-Fi Direct connections?**

Disconnect the mobile devices that you are not using, or set the [□□□□] of this unit to disconnect the mobile devices.

➡ [Wi-Fi Direct Settings \(page 454\)](#)

## **"The password does not meet password policy requirements." is displayed.**

---

### **Has your password expired?**

Change the login password. The job is canceled. Select [End].

➔ [Password Policy Settings \(page 507\)](#)

➔ [Change the user properties \(page 511\)](#)

### **Have your password policy requirements changed (password length, strings of characters to use, etc.)?**

Check your password policy requirements and change the login password.

The job is canceled. Select [End].

➔ [Password Policy Settings \(page 507\)](#)

➔ [Change the user properties \(page 511\)](#)

## **"Malicious program was detected." is displayed.**

---

**Execution was aborted due to a possible malware program.**

The names of applications for which malware has been detected are displayed.

Please contact the administrator.

## "RAM disk error." is displayed

---

A RAM disk error has occurred.

The job is canceled. Select [End].

The following error code is possible:

04: There is not enough free space on the RAM disk. If the optional RAM disk is installed, increase the RAM disk size by using [RAM Disk Setting] in the System Menu.

➔ [Device Security Settings \(page 489\)](#)

➔ [RAM Disk Setting \(page 489\)](#)



### NOTE

The volume of RAM disk size can be increased by selecting [Printer Priority] in the [Optional Memory] settings.

➔ [Others \(page 501\)](#)

---

## **"Maintenance is needed for imaging units." is displayed.**

---

Contact your service representative

The maintenance kit needs to be replaced at every 100,000 pages of printing.

## "The slit glass requires cleaning." is displayed.

### The slit glass requires cleaning.


When using the document processor, clean the slit glass surface and the reading guide with the dry cloth.

#### ✔ IMPORTANT

Do not use water, soap or solvents for cleaning.

#### 💡 NOTE

Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.

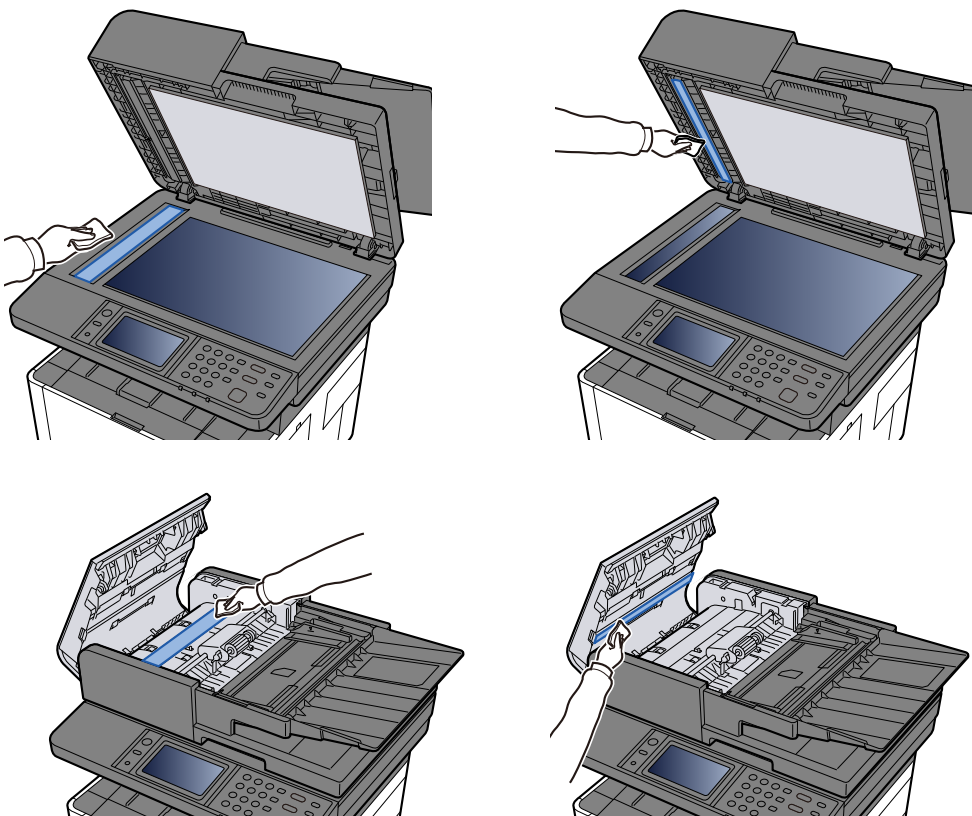

## "Toner is empty." is displayed.


Replace the toner container to our specified toner container.

### CAUTION


Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Here, we'll explain the procedures for replacing the toner container.


#### 1 Open the top cover.

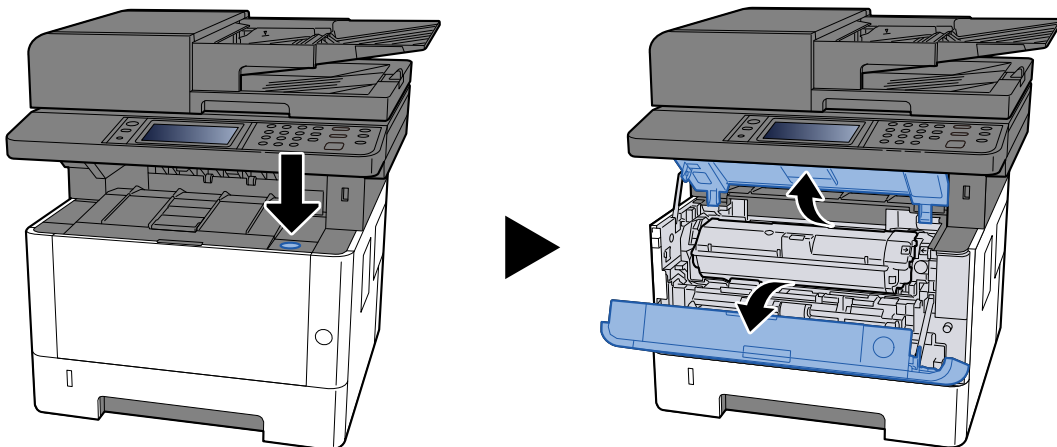


#### 2 unlock

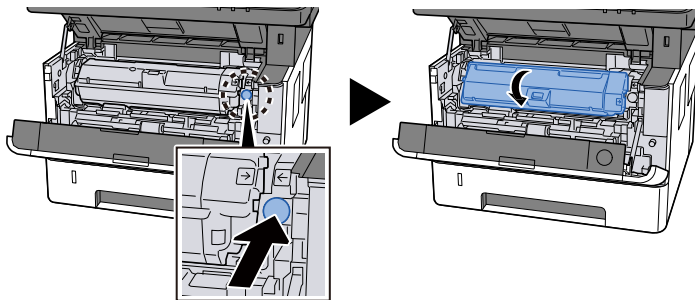


#### 3 Remove the toner container.

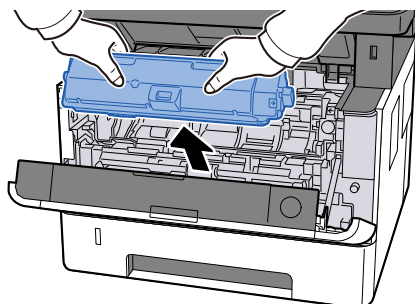

#### 4 Put the toner container into the toner container collection bag.

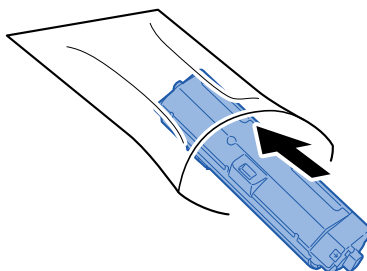


#### 5 Remove the new toner container from the box.

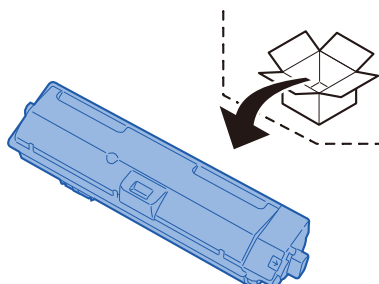


#### ✓ IMPORTANT


Do not touch the points shown below.

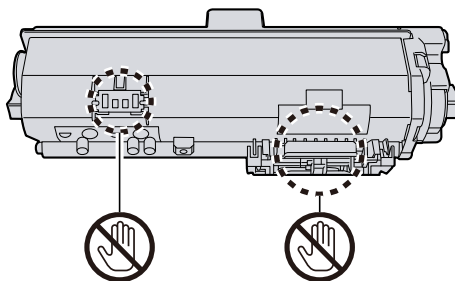


#### 6 Shake the toner container 5 to 6 times.

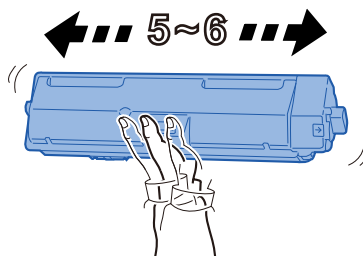

## 7 Install the toner container.

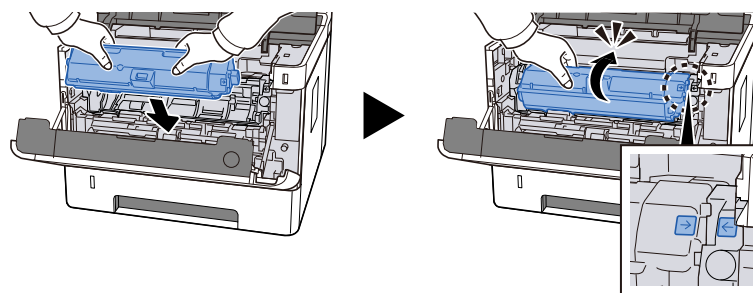

## 8 Close the top cover.

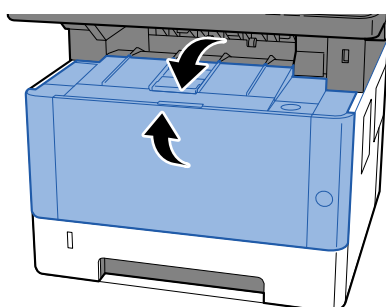

### NOTE

- If the front cover does not close, check that the new toner container is installed correctly.
  - Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.
-

## **"Toner is low. (Replace when empty.)" is displayed.**

---

**It is almost time to replace the toner container.**

Obtain a new toner container.

## **"Non-genuine toner installed." is displayed.**

---

**Does the type of toner you have match the model?**

Select [Help] and follow the instructions on the screen.

## **"Toner type mismatch. Please install correct toner." is displayed.**

---

**Does the sales region of the toner you have match the sales region of the main body?**

Use the toner that matches the sales region of the main body.

## **"The toner container is not properly installed." is displayed.**

---

### **Are the toner container and developer unit installed properly?**

The toner cartridge is not installed properly.

➡ [Clean the inside of the main unit \(page 569\)](#)

## "USB Drive error." is displayed

---

### Is the USB drive write-protected?

An error occurred in the USB drive. The job is canceled. Select [End].

The following error code is displayed:

01: Connect a writeable USB drive.

### An error occurred in the USB drive.

The job is canceled. Select [End].

The following error code is displayed:

01: The amount of data that can be saved at once has been exceeded. Restart the system or turn the power OFF/ON.

If the error still occurs, divide the file into smaller files. If the error persists, the USB drive is not compatible with the machine. Use the USB drive formatted by this machine. If the USB drive cannot be formatted, it is damaged. Connect a compatible USB drive.



### NOTE

If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

➔ [Error Handling \(page 409\)](#)

---

## "USB Drive is full." is displayed

---

**There is not enough free space on the USB drive.**

The job is canceled.

Delete unnecessary files on the USB drive.



If Auto Error Clear is set to [On], the process will resume automatically after a set period of time. For details, refer to the following:

➔ [Error Handling \(page 409\)](#)

---

## "Memory card error." is displayed.

---

### **An error has occurred on the memory card.**

An error has occurred on the memory card. The job is canceled. Select .

04: There is not enough free space on the memory card. Move data or delete unneeded data.

## **"Warning for high temp. Adjust the room temp." is displayed.**

---

Print quality may be deteriorated. Adjust the temperature and the humidity of your room.

## **"Warning for low temp. Adjust the room temp." is displayed**

---

Print quality may be deteriorated. Adjust the temperature and the humidity of your room.

## **"Warning low memory." is displayed.**

---

Cannot start the job. Try again later.

## **"You cannot use this box." is displayed**

---

This job will be aborted because user authorization prohibits that function. Select [End].

## List of Transmission Error Codes

### 1101 "Failed to send the email." is displayed

---

#### Message

Failed to send email.

Check the host name of the SMTP server with Embedded Web Server RX.

The job is canceled. Press [Finish].

#### Corrective Action

Enter the host name of the SMTP server in Embedded Web Server RX.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Functions] in the [E-mail] menu**
- 5 Check the [SMTP Server Name] in "SMTP".**  
Correct anything that is incorrect.
- 6 Click [Submit].**  
➔ [SMTP and E-mail Settings \(page 115\)](#)

## 1101 "Failed to send via SMB." is displayed

---

### Message

Unable to send SMB.

Check your SMB settings.

>Login user name or login password

Reference:

If the sender is a domain user, specify the domain name.

>Host name

>Path

The job is canceled. Press [Finish].

### Corrective Action

Check the host name of the destination computer.

#### 1 When entering the destination information, make sure that the host name or IP address of the destination computer is correct.

➔ [Sending Document to Desired Shared Folder on a Computer \(Scan to PC\) \(page 246\)](#)



#### NOTE

If the sender is a domain user, specify the domain name.

---

To specify a destination registered in the address book, proceed to the next step.

#### 2 Check the Address Book

1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]

2 Select the information icon for the destination.

3 Make sure that the host name or IP address of the destination computer is correct.



#### NOTE

If the sender is a domain user, specify the domain name.

---

If it is incorrect, correct it.

4 [Register] > [OK]

Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 1101 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the FTP "Host name" or "IP address".  
The job is canceled. Press [Finish].

### Corrective Action

Check the host name of the FTP.

#### 1 When entering the destination information, make sure that the host name or IP address of the FTP server is correct.

➔ [Sending Document to Folder on an FTP Server \(Scan to FTP\) \(page 250\)](#)

To specify a destination registered in the address book, proceed to the next step.

#### 2 Check the Address Book

1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]

2 Select the information icon for the destination.

3 Make sure that the host name or IP address of the FTP server is correct.

If it is incorrect, correct it.

4 [Register] > [OK]

Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 1102 "Failed to send the email." is displayed

---

### Message

Failed to send the email.

Check the followings on the Embedded Web Server RX

- > SMTP login user name and login password
- > POP3 login user name and login password

1102

### Corrective Action

Check the login user name and password for the SMTP server and POP3 server.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Functions] in the [E-mail] menu**
- 5 Check whether the login user name and password for the SMTP server have been entered in [Authentication Protocol] of "SMTP", and change the settings as necessary.**
- 6 Click [Settings] in "POP3 User Settings"**
- 7 Check whether the login user name and password have been entered and change the settings as necessary.**
- 8 Click [Submit].**

➔ [SMTP and E-mail Settings \(page 115\)](#)

# 1102 "Failed to send via SMB." is displayed

## Message

Unable to send SMB.  
 Check your SMB settings.  
 >Login user name or login password  
 Reference:  
 If the sender is a domain user, specify the domain name.  
 >Host name  
 >Path  
 The job is canceled. Press [Finish].

## Corrective Action

Check the login user name and password of the destination computer.

### 1 When entering the destination information, make sure that the login user name and password of the destination computer is correct.

➔ [Sending Document to Desired Shared Folder on a Computer \(Scan to PC\) \(page 246\)](#)



#### NOTE

- If the computer name and domain name are different, check that they are entered as follows.  
 Domain name\User name
- If you use a host name, make sure it does not contain the following forbidden characters:  
 `~!@#\$%^&\*()=+[ ]{} \ | ; : ' " < > / ?

To specify a destination registered in the address book, proceed to the next step.

### 2 Check the Address Book

- 1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
- 2 Select the information icon for the destination.
- 3 Make sure that the login user name and password of the destination computer are correct.  
 If it is incorrect, correct it.



#### NOTE

- If the computer name and domain name are different, check that they are entered as follows.  
 Domain name\User name
- If you use a host name, make sure it does not contain the following forbidden characters:  
 `~!@#\$%^&\*()=+[ ]{} \ | ; : ' " < > / ?

- 4 [Register] > [OK]  
 Register the changed destination.  
 ➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 1102 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.

Check your FTP settings.

>Login user name or login password

Reference:

If the sender is a domain user, specify the domain name.

The job is canceled. Press [Finish].

### Corrective Action

Check the login user name and password for the FTP.

#### 1 When entering the destination information, make sure that the login user name and password of the FTP server is correct.

➔ [Sending Document to Folder on an FTP Server \(Scan to FTP\) \(page 250\)](#)



#### NOTE

- If the sender is a domain user, specify the domain name.
  - If the computer name and domain name are different, check that they are entered as follows.  
Domain name\User name
- 

To specify a destination registered in the address book, proceed to the next step.

#### 2 Check the Address Book

- 1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
  - 2 Select the information icon for the destination.
  - 3 Make sure that the login user name and password of the FTP are correct.
- 



#### NOTE

- If the sender is a domain user, specify the domain name.
  - If the computer name and domain name are different, check that they are entered as follows.  
Domain name\User name
- 

If it is incorrect, correct it.

- 4 [Register] > [OK]

Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 1103 "Failed to send via SMB." is displayed

---

### Message

Unable to send SMB.

Check your SMB settings.

>Login user name or login password

Reference:

If the sender is a domain user, specify the domain name.

> Path

> Folder share permissions of the recipient

The job is canceled. Press [Finish].

### Corrective Action

Check the login user name and password of the destination computer, and the destination folder path.

- 1 When entering the destination information, make sure that the login user name and password of the destination computer, and the destination folder path are correct.**

➔ [Sending Document to Desired Shared Folder on a Computer \(Scan to PC\) \(page 246\)](#)



#### NOTE

If the computer name and domain name are different, check that they are entered as follows.

Domain name\User name

---

To specify a destination registered in the address book, proceed to the next step.

## 2 Check the Address Book

- [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
- Select the information icon for the destination.
- Make sure that the login user name and password of the destination computer are correct.  
If it is incorrect, correct it.



#### NOTE

If the computer name and domain name are different, check that they are entered as follows.

Domain name\User name

---

- [Register] > [OK]  
Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

### **3 Make sure the folder sharing settings are configured correctly**

Check the sharing settings and access permissions in the folder properties.

- 1 Right-click the shared folder and click [Properties] → [Security], in that order.
  - 2 Select a user and make sure the user you entered in the group name or user name field is displayed
  - 3 Make sure that checkmarks appear on the [Allow] checkbox for "Modify" and "Read & execute".
  - 4 Click the [OK] button.
- ➡ [Create a shared folder and make a note of the shared folder name \(page 143\)](#)

## 1103 "Failed to send via FTP." is displayed

---

### Message

Failed to send via FTP.  
Check the FTP settings.  
> Login user name and login password

1103

### Corrective Action

Check the destination folder path.

- 1 When entering the destination information, make sure that the login user name and password of the destination computer, and the destination folder path are correct.**

➔ [Sending Document to Folder on an FTP Server \(Scan to FTP\) \(page 250\)](#)



#### NOTE

If no path is entered, the file is stored in the home directory.

---

To specify a destination registered in the address book, proceed to the next step.

## 2 Check the Address Book

- [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]
- Select the information icon for the destination.
- Make sure that the destination folder path is correct.



#### NOTE

If no path is entered, the file is stored in the home directory.

---

If it is incorrect, correct it.

- [Register] > [OK]  
Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 1104 "Failed to send the email." is displayed

---

### Message

Failed to send email.

Check the Email Address.

Reference

You cannot send it if it is denied by domain restriction.

The job is canceled. Press [Finish].

### Corrective Action

Check the Email Address.

#### 1 When entering the destination information, make sure that the email address is correct.

➔ [Sending Document via E-mail \(page 244\)](#)

To specify a destination registered in the address book, proceed to the next step.

#### 2 Check the Address Book

1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]

2 Select the information icon for the destination.

3 Check the Email Address

If it is incorrect, correct it.

4 [Register] > [OK]

Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

If there is no improvement, proceed to the next step.

#### 3 Make sure your email address is not rejected due to domain restrictions

1 Launch a web browser.

2 In the address or location bar, enter the machine's IP address or the host name.

3 Log in with administrator privileges.

4 Click [Functions] in the [E-mail] menu

5 Click [Domain List] in "SMTP"

The SMTP domain restriction list is displayed.

6 If the email address you use is included in the list, delete it.

7 Click [Submit] twice.

➔ [SMTP and E-mail Settings \(page 115\)](#)

## 1105 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Turn SMTP [On] in Embedded Web Server RX.  
The job is canceled. Press [Finish].

### Corrective Action

From Embedded Web Server RX, check that SMTP (email sending) is On.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Network Settings] in the [Protocols] menu**
- 5 Set "SMTP (E-mail TX)" in "Send Protocol" to [On]**
- 6 Click [Submit].**
  - ➔ [SMTP and E-mail Settings \(page 115\)](#)

## 1105 "Failed to send via SMB." is displayed

---

### Message

Unable to send SMB.  
Turn SMB [On] in Embedded Web Server RX.  
The job is canceled. Press [Finish].

### Corrective Action

Make sure the protocol is set correctly.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Network Settings] in the [Protocols] menu**
- 5 Set "SMB" in "Send Protocol" to [On]**
- 6 Click [Submit].**
  - ➔ [SMTP and E-mail Settings \(page 115\)](#)

## 1105 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Turn FTP [On] in Embedded Web Server RX.  
The job is canceled. Press [Finish].

### Corrective Action

Make sure the protocol is set correctly.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Network Settings] in the [Protocols] menu**
- 5 Set "FTP Client (Transmission)" in "Send Protocol" to [On]**
- 6 Click [Submit].**
  - ➔ [SMTP and E-mail Settings \(page 115\)](#)

## 1106 "Failed to send the email." is displayed

---

### Message

Failed to send email.

Check the sender address on the SMTP in Embedded Web Server RX.

The job is canceled. Press [Finish].

### Corrective Action

Check the sender address on the SMTP server from Embedded Web Server RX.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Functions] in the [E-mail] menu**
- 5 Set the [Sender Address] in "E-mail Send Settings".**

Please specify an email address that can be received by the Machine Administrator. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 256 characters.

- 6 Click [Submit].**

➔ [SMTP and E-mail Settings \(page 115\)](#)

## 1131 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Turn the secure protocol TLS [On] in Embedded Web Server RX.  
The job is canceled. Press [Finish].

### Corrective Action

Please set to allow the use of TLS.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Security Settings] in the [Network Security] menu**
- 5 Set [TLS] to [On]**
- 6 Click [Submit].**

➔ [Embedded Web Server RX User Guide](#)

## 1132 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the destination server.  
> Supports FTPS  
> Supports the encryption method you have set  
The job is canceled. Press [Finish].

### Corrective Action

Check the destination server.

- 1 Make sure the destination server supports FTPS (File Transfer Protocol over TLS)**  
If there is no improvement, proceed to the next step.
- 2 Make sure the destination server supports the encryption method you have set.**

## 2101 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Check the Embedded Web Server RX and network settings.  
> Connecting the network cables  
> Hub operation  
> Server status  
> POP3 server name for POP3 user  
> SMTP server name  
The job is canceled. Press [Finish].

### Corrective Action

Check Embedded Web Server RX and network settings.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.  
If there is no improvement, proceed to the next step.

#### 4 Check the host name of the SMTP server in Embedded Web Server RX.

- 1 Launch a web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
- 3 Log in with administrator privileges.
- 4 Click [Functions] in the [E-mail] menu
- 5 Check the "SMTP" [SMTP Server Name].  
Correct anything that is incorrect.
- 6 Click [Submit].  
If there is no improvement, proceed to the next step.

## **5 Check the users in POP before SMTP authentication in Embedded Web Server RX.**

Set this when using POP before SMTP as SMTP authentication.

- 1 Launch a web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
- 3 Log in with administrator privileges.
- 4 Click [Functions] in the [E-mail] menu
- 5 Select "Authentication Protocol"
- 6 Check that [Other] is not selected from "Authenticate as"  
If this is not the case, select a valid POP3 user other than [Other].
- 7 Click [Submit] twice.  
If there is no improvement, proceed to the next step.

## **6 Check the POP3 server name for POP3 users in Embedded Web Server RX**

- 1 Launch a web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
- 3 Log in with administrator privileges.
- 4 Click [Functions] in the [E-mail] menu
- 5 Click "POP3 User Settings"  
The "POP3 User Settings" screen is displayed.
- 6 Check the [POP3 Server Name] in "User 2".  
Correct anything that is incorrect.
- 7 Click [Submit] twice.

## 2101 "Failed to send via SMB." is displayed

---

### Message

Unable to send SMB.

Check your network and SMB settings.

> Connecting the network cables

> Hub operation

> Server status

> Host name or IP address

> Port number

The job is canceled. Press [Finish].

### Corrective Action

Check your network and SMB settings.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.

If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.

If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

If there is no improvement, proceed to the next step.

#### 4 When entering the destination information, make sure that the host name or IP address of the destination computer and the port number are correct.

➔ [Sending Document to Desired Shared Folder on a Computer \(Scan to PC\) \(page 246\)](#)

To specify a destination registered in the address book, proceed to the next step.

#### 5 Check the Address Book

1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]

2 Select the information icon for the destination.

3 Make sure that the host name or IP address of the destination computer and the port number are correct.

If it is incorrect, correct it.

4 [Register] > [OK]

Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 2101 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check your network and FTP settings.  
> Connecting the network cables  
> Hub operation  
> Server status  
> Host name or IP address  
> Port number  
The job is canceled. Press [Finish].

### Corrective Action

Check your network and FTP settings.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.  
If there is no improvement, proceed to the next step.

#### 4 When entering the destination information, make sure that the host name or IP address of the destination computer and the port number are correct.

➔ [Sending Document to Folder on an FTP Server \(Scan to FTP\) \(page 250\)](#)

To specify a destination registered in the address book, proceed to the next step.

#### 5 Check the Address Book

1 [System Menu/Counter] key > [Function Settings] > [Address Book] > [Add/Edit Machine Address Book]

2 Select the information icon for the destination.

3 Make sure that the host name or IP address of the destination computer and the port number are correct.  
If it is incorrect, correct it.

4 [Register] > [OK]  
Register the changed destination.

➔ [Editing Contact Address in Address Book \(page 164\)](#)

## 2102 "Failed to send the email." is displayed

---

### Message

Failed to send email.

Check the network.

- > Connecting the network cables
- > Hub operation
- > Server status

The job is canceled. Press [Finish].

### Corrective Action

Check your network and destination server settings.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.

If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.

If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2102 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the destination server.  
> Supports FTPS  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check your network and destination server settings.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.  
If there is no improvement, proceed to the next step.

#### 4 Make sure the destination server supports FTPS (File Transfer Protocol over TLS)

## 2103 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2103 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check your network and destination server settings.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.  
If there is no improvement, proceed to the next step.

#### 4 Make sure the destination server supports FTPS (File Transfer Protocol over TLS)

## 2201 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2201 "Failed to send via SMB." is displayed

---

### Message

Unable to send SMB.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2201 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2202 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2202 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2203 "Failed to send via SMB." is displayed

---

### Message

Unable to send SMB.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2203 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 2204 "Failed to send the email." is displayed

---

### Message

Failed to send email.

Check the size restrictions for email sending in the SMTP settings of Embedded Web Server RX.

The job is canceled. Press [Finish].

### Corrective Action

Check the size restrictions for email sending in the SMTP settings in Embedded Web Server RX.

- 1 Launch your Web browser.**
- 2 In the address or location bar, enter the machine's IP address or the host name.**
- 3 Log in with administrator privileges.**
- 4 Click [Functions] in the [E-mail] menu**
- 5 Check whether a restriction value is entered in [E-mail Size Limit] of "E-mail Send Settings", and change it as necessary.**
- 6 Click [Submit].**

➔ [SMTP and E-mail Settings \(page 115\)](#)

## 2231 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 3101 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Check the source and destination authentication methods.  
The job is canceled. Press [Finish].

### Corrective Action

Check the source and destination authentication methods.

- 1 Check the source and destination authentication methods.**  
Make sure that the settings for using or not using SMTP/POP authentication of the source matches those of the destination.

## 3101 "Failed to send via FTP." is displayed

---

### Message

Unable to send FTP.  
Check the network.  
> Connecting the network cables  
> Hub operation  
> Server status  
The job is canceled. Press [Finish].

### Corrective Action

Check the network.

#### 1 Connect the network cable

Check that the LAN cable is properly connected.  
If there is no improvement, proceed to the next step.

#### 2 Check the operation of the hub.

Check that the hub access lamp is illuminated or flashing.  
If there is no improvement, proceed to the next step.

#### 3 Check the status of the server.

Check that the server is up and responding with ping.

## 3201 "Failed to send the email." is displayed

---

### Message

Failed to send email.  
Check the destination SMTP user authentication method.  
The job is canceled. Press [Finish].

### Corrective Action

- 1 Check the destination SMTP user authentication method

## 4801 "Job is canceled. Press [End]." is displayed

---

### Message

The job is canceled. Press [Finish].

### Corrective Action

Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the message display and contact the service representative.

## 4802 "Failed to send the email." is displayed

---

### Message

Failed to send email.

Check the encryption certificate for each destination in Embedded Web Server RX.

The job is canceled. Press [Finish].

### Corrective Action

Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the touch panel and contact the service representative.

## 4803 "Job is canceled. Press [End]." is displayed

---

### Message

The job is canceled. Press [Finish].

### Corrective Action

Server authentication has expired. Check your network and SMTP settings.

#### 1 Check the date and time of this machine

1 [System Menu/Counter] key > [Device Settings] > [Date/Time]

2 Set year, month, day and seconds

If there is no improvement, proceed to the next step.

#### 2 Make sure the server is using the correct certificate

If the server certificate has expired, please renew it.

## 4804 "Job is canceled. Press [End]." is displayed

---

### Message

The job is canceled. Press [Finish].

### Corrective Action

When communicating with the mail server using SMTP over TLS, communication cannot be started because the signature algorithm of the server certificate does not match the signature algorithm set on the machine.

Please access from Embedded Web Server RX to [Security Settings] > [Network Security]. Then, check the value of [Hash] of "Serverside Settings" and [Hash] of [Clientside Settings] and match it with the value on the server side.

Restart the machine after setting.

➡ **Embedded Web Server RX User Guide**

## The error code 4901 is displayed

---

An error occurred while validating the server certificate.

### **Corrective Action**

Check the SMTP server certificate.

## The error code 4902 is displayed

---

Your certificate has expired.

### **Corrective Action**

Check the SMTP server certificate.

## The error code 4903 is displayed

---

An error occurred while validating the X509 certificate.

### **Corrective Action**

Check the X509 certificate.

## The error code 4904 is displayed

---

The certificate has been revoked.

### **Corrective Action**

Check the SMTP server certificate.

## The error code 4905 is displayed

---

An error occurred while setting the encryption / signing certificate.

### **Corrective Action**

Check the settings related to the certificate and the imported certificate.

➡ **Embedded Web Server RX User Guide**

## The error code 4906 is displayed

---

Certificate verification did not complete within the set time.

### Corrective Action

- Check the verification environment of the OCSP/CRL certificate and other certificates
- Extend the timeout deadline
- Change the certificate verification level

[➡ Embedded Web Server RX User Guide](#)

## The error code 4a02 is displayed

---

Failed to initialize S/MIME.

### **Corrective Action**

Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the message display, check the operation description and then contact the service representative.

## The error code 4a03 is displayed

---

Failed to specify S/MIME encryption.

### **Corrective Action**

Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the message display, check the operation description and then contact the service representative.

## The error code 4a04 is displayed

---

Failed to scan the S/MIME encryption certificate.

### Corrective Action

- Check and correct the settings related to the S/MIME certificate.
- Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the message display, check the operation description and then contact the service representative.

➔ **Embedded Web Server RX User Guide**

## The error code 4a06 is displayed

---

Failed to specify job accounting S/MIME Signature.

### **Corrective Action**

Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the message display, check the operation description and then contact the service representative.

## The error code 4a07 is displayed

---

Failed to scan the S/MIME signature certificate.

### Corrective Action

- Check and correct the settings related to the S/MIME signature certificate.
- Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the message display, check the operation description and then contact the service representative.

➔ **Embedded Web Server RX User Guide**

## The error code 4a08 is displayed

---

The sender's email address and the email address on the signature certificate do not match.

### **Corrective Action**

Check the sender's email address and the email address on the signature certificate, and correct the email address(es).

## Other error code "Job is canceled. Press [End]." is displayed

---

### Message

The job is canceled. Press [Finish].

### Corrective Action

Select [End] and restart the machine.

#### **1 Turn the power switch off and then on again**


If it occurs repeatedly, write down the error code displayed on the message display and contact the service representative.

# Adjustment/Maintenance

## Overview of Adjustment/Maintenance

If there is an image problem and the message to run adjustment or maintenance menu appears, run Adjustment/ Maintenance in the system menu.

The table below lists the primary items you can carry out.

Item	Description
[Image Adjustment]	 <b>NOTE</b> Drum refresh cannot be performed while printing. Execute drum refresh after the printing is done.

## Perform image adjustment

### 1 Display the screen

- 1 [System Menu/Counter] key > [Adjustment/Maintenance] > "Image Adjustment" [Image Adjustment]

### 2 Execute

- 1 Select the item to execute.


- 2 Execute it.

If you select multiple items, they will start in sequence.

# Clearing Paper Jams


If a paper jam occurs, the touch panel will display "Paper jam." and the machine will stop.

## Jam Location Indicators

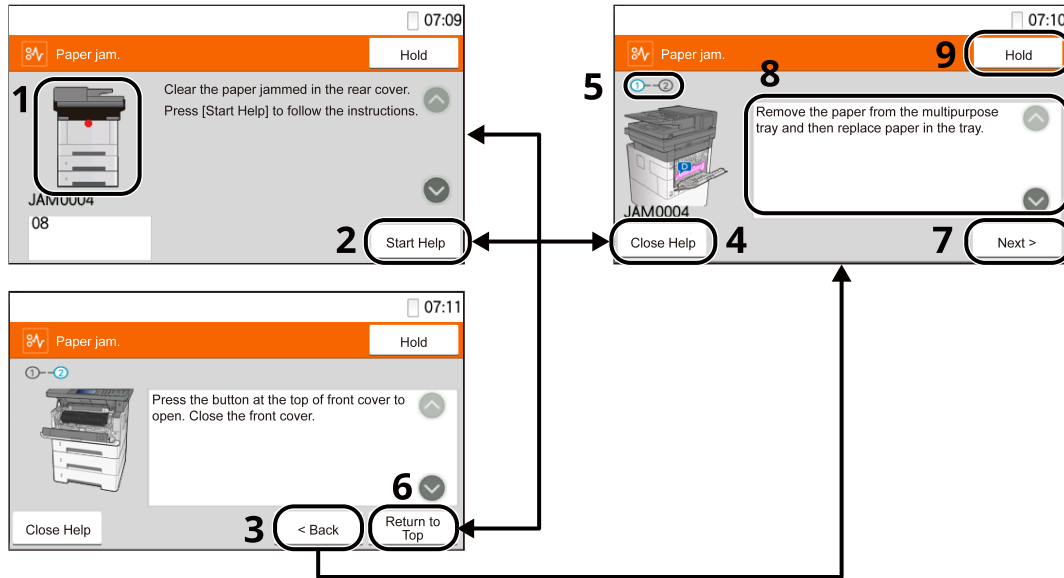

- 1 Shows the location of a paper jam.
- 2 Shows the Help screen. The Help screen shows the procedure to clear the jam.
- 3 Returns to the previous step.
- 4 Closes the Help screen and returns to the original screen.
- 5 Shows the selected step.
- 6 Returns to step 1.
- 7 Advances to the next step.
- 8 Shows the removal procedure.
- 9 Select [Hold] to display the status screen and check the status of jobs.

If a paper jam occurs, the location of the jam will be displayed on the touch panel as well as the clearing instructions.

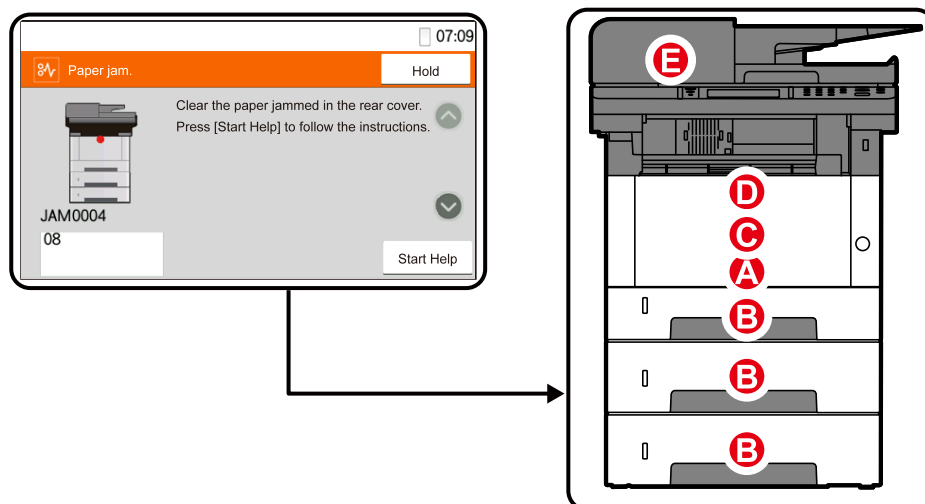

Paper Jam Location Indicator	Paper Jam Location
A	MultipurposeTray ➔ <a href="#">Remove any jammed paper in the Multipurpose Tray (page 765)</a>
B	Cassette 1 to 3 ➔ <a href="#">Remove paper jams from Cassette 1 to Cassette 3 (page 766)</a>
C	Inside the machine ➔ <a href="#">Remove the paper jammed inside the machine (page 768)</a>
D	Rear Cover and Duplex Unit ➔ <a href="#">Remove any jammed paper in Rear Cover and Duplex Unit (page 773)</a>
E	Document Processor ➔ <a href="#">Remove any jammed paper in the Document Processor (Reverse Automatic) (page 776)</a>


After you remove the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.

## Remove any jammed paper in the Multipurpose Tray


### CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


### 1 Remove any jammed paper.

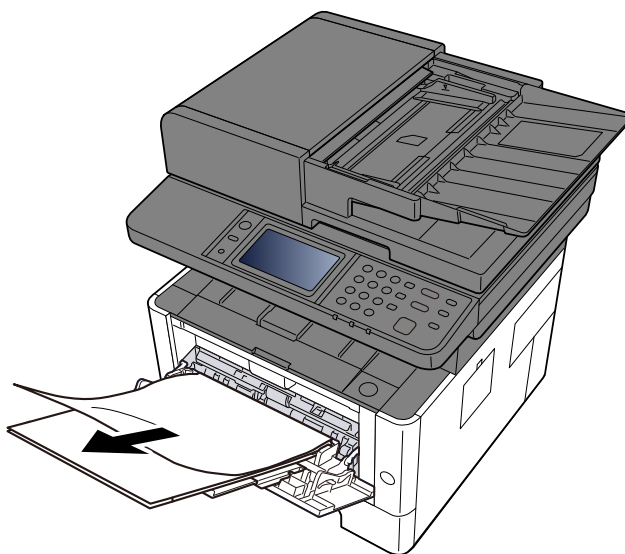

### 2 Remove all the paper.

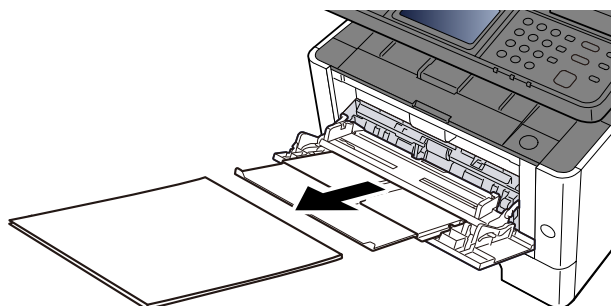

### 3 Reload the paper

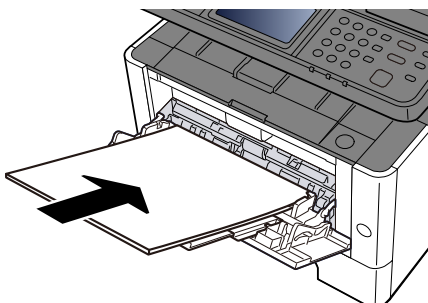


## Remove paper jams from Cassette 1 to Cassette 3

The procedure for handling paper jams in cassette 1 to cassette 3 is the same. Cassette 1 is used as an example here.


### CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### 1 Pull Cassette 1 out toward you until it stops.

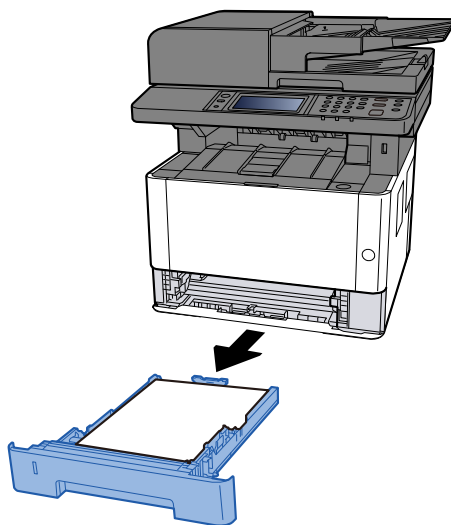


#### 2 Remove any jammed paper.

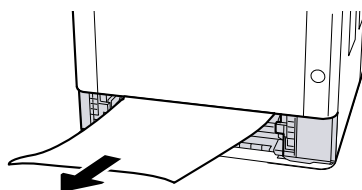


#### 3 Push Cassette 1 back in.

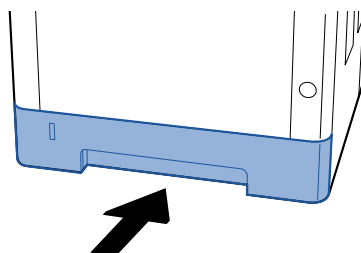

**4** Open the top cover.

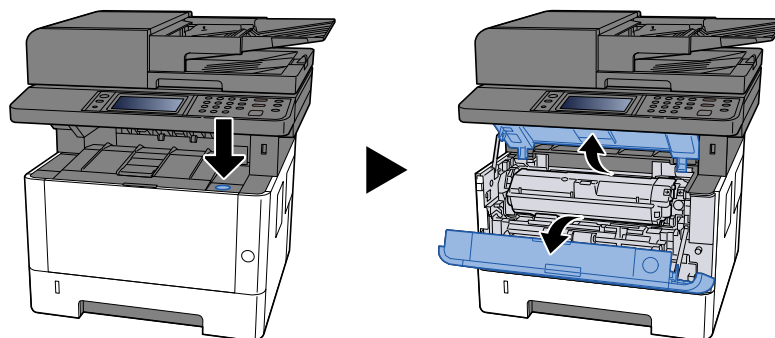

**5** Close the top cover.

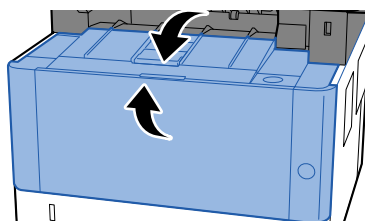


## Remove the paper jammed inside the machine


### CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


### 1 Pull Cassette 1 out toward you until it stops.

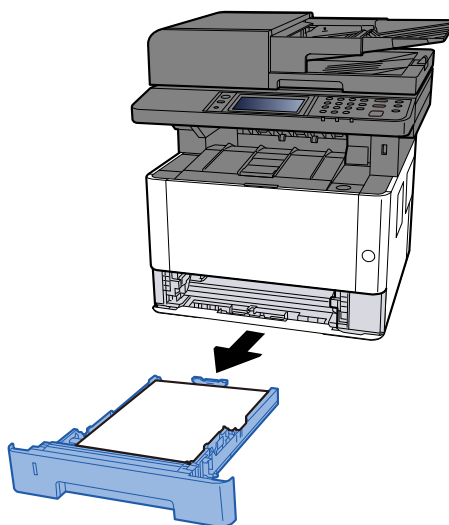


### 2 Remove any jammed paper.

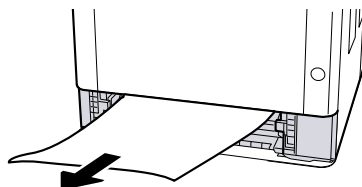


### 3 Push Cassette 1 back in.

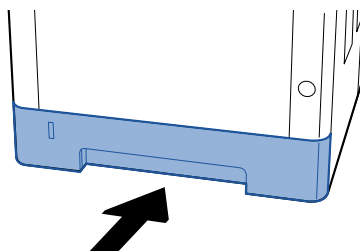

#### 4 Open the top cover.

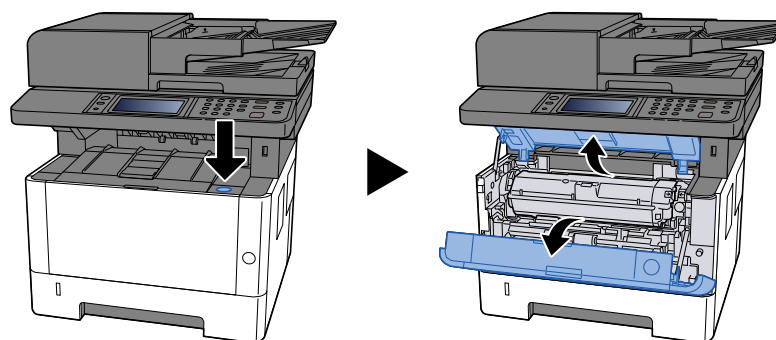


#### 5 Remove the toner container and developer unit

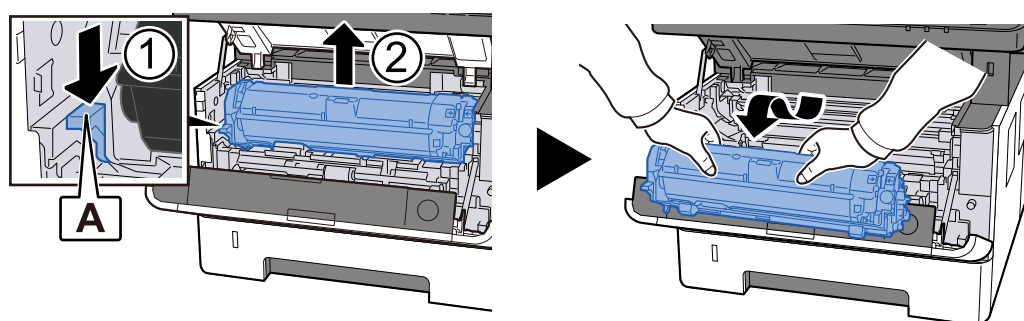

#### ✓ IMPORTANT

Do not touch the developing roller or subject it to impact. Print quality will deteriorate.


## 6 Place the removed toner container and developer unit on a clean, level surface.

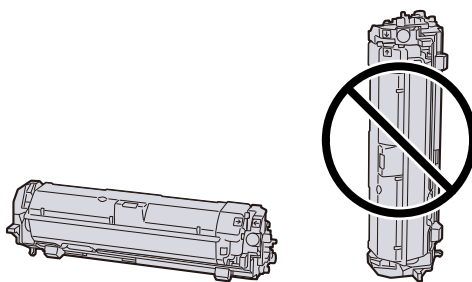

### ✓ IMPORTANT

Do not place the toner container and developer unit upright.


## 7 Take out the drum unit

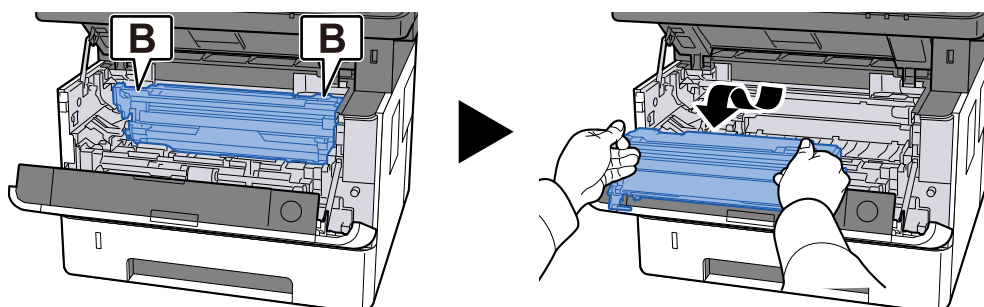

### ✓ IMPORTANT

- When removing the drum unit, some parts are very hot. Exercise caution as there is a risk of burn injury.
- Do not touch the drum part or subject it to impact. Also, if exposed to direct sunlight or strong light, print quality will deteriorate.


## 8 Place the removed drum unit on a clean, level surface.

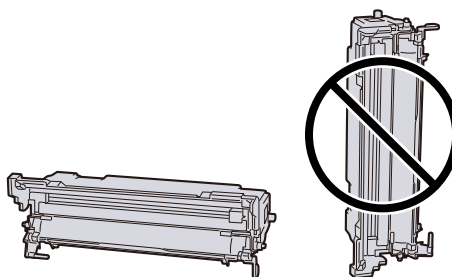


### ✓ IMPORTANT

Do not stand the drum unit upright.


## 9 Open feed cover C.

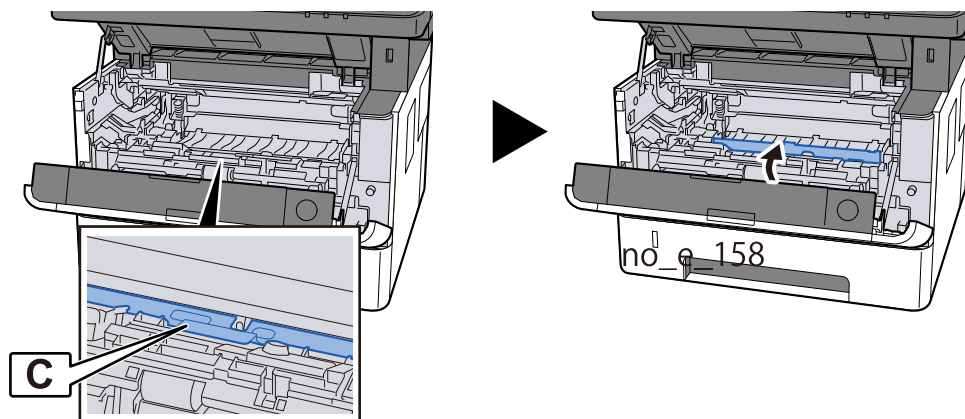


## 10 Remove any jammed paper.

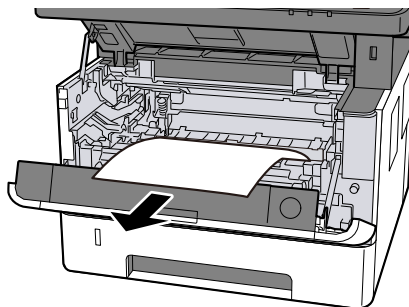


## 11 Close feed cover C.

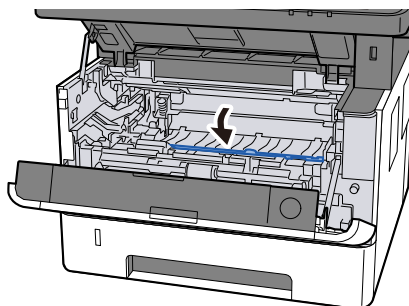


## 12 Return the drum unit

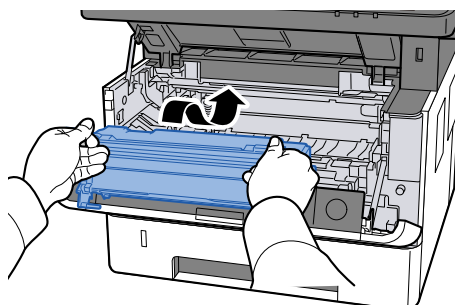

## 13 Return the toner container and developer unit

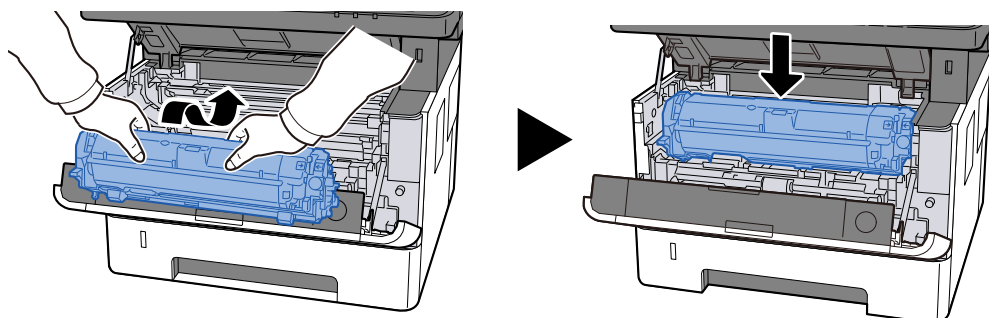

## 14 Close the top cover.

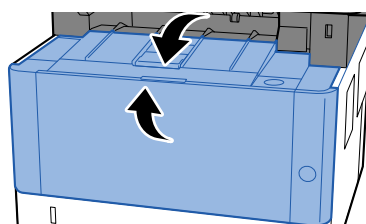


## Remove any jammed paper in Rear Cover and Duplex Unit


### ✔ IMPORTANT

Some parts are very hot inside the machine. Exercise caution as there is a risk of burn injury.


#### 1 Open the rear cover.

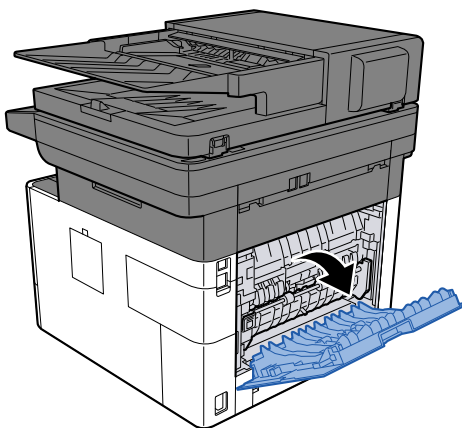


#### 2 Remove any jammed paper.

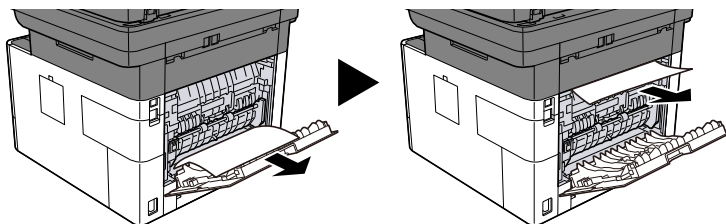


#### 3 Open the fixed cover D.

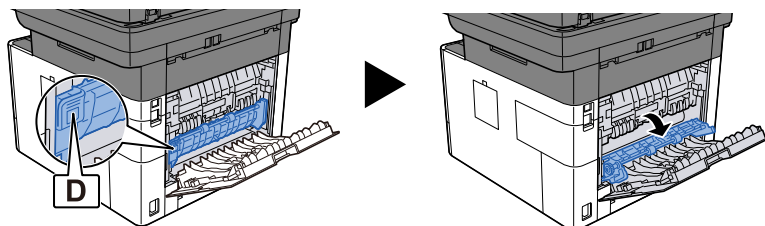


#### 4 Remove any jammed paper.

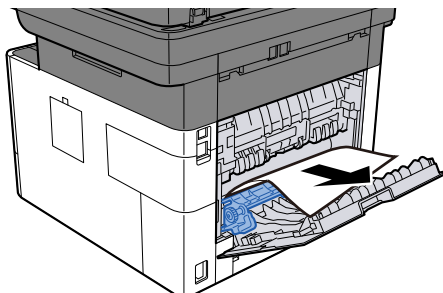


## 5 Pull Cassette 1 out toward you until it stops

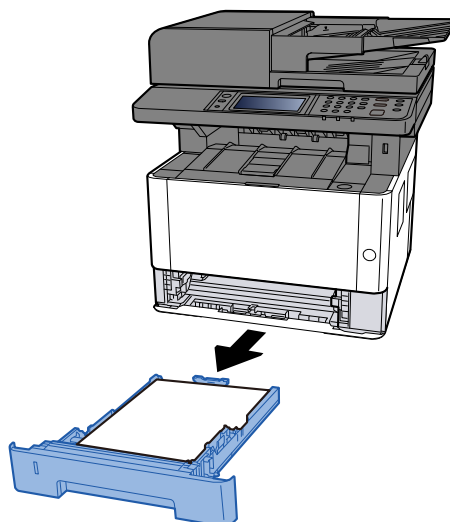


## 6 Open the feed cover.

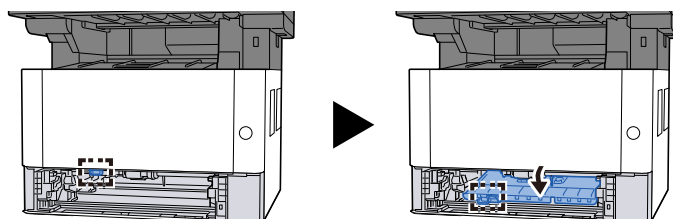


## 7 Remove any jammed paper.

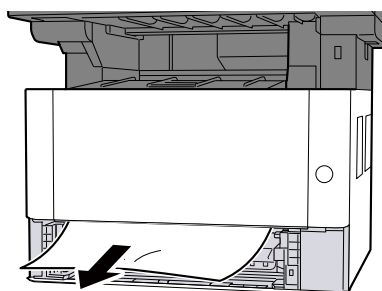


## 8 Return the feed cover to the original position.

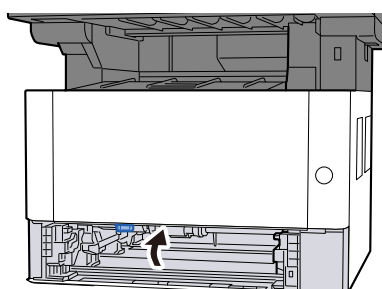


**9 Push Cassette 1 back in.**

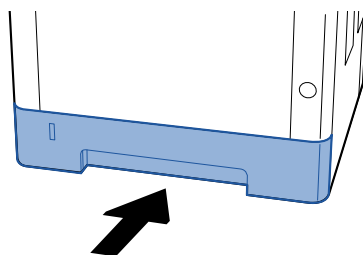


**10 Return the Rear Cover to the original position.**

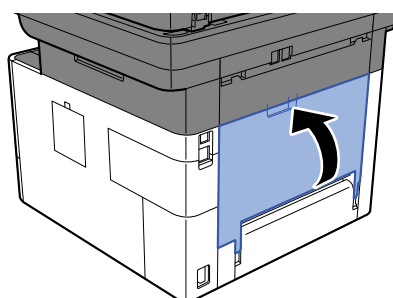

**11 Open the top cover.**

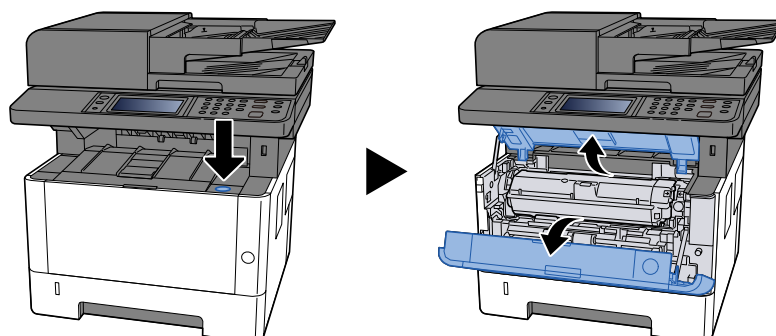

**12 Close the top cover.**

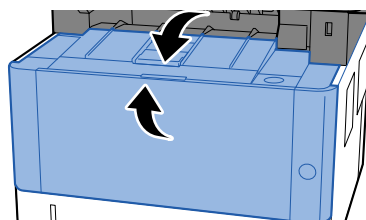


## Remove any jammed paper in the Document Processor (Reverse Automatic)


### ✓ IMPORTANT

If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### 1 Remove the originals from the Original Table.

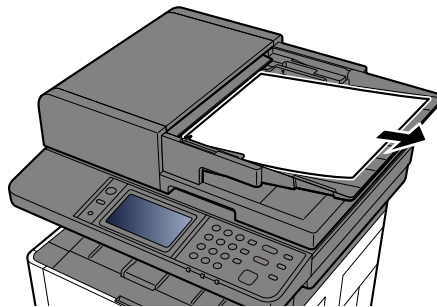


#### 2 Open the top cover and remove the jammed paper.

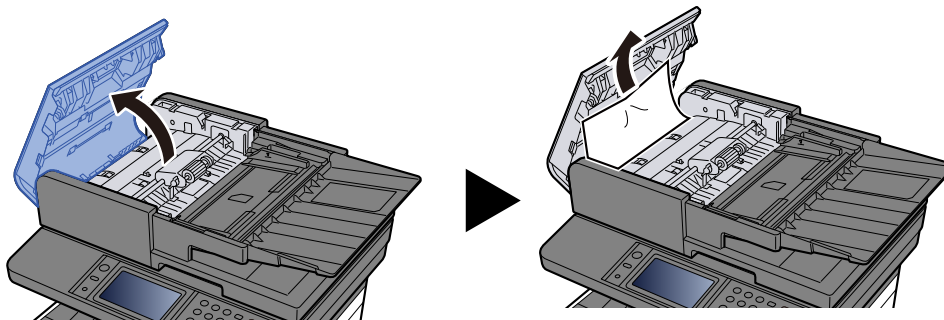

**3** Remove the original from the document processor.

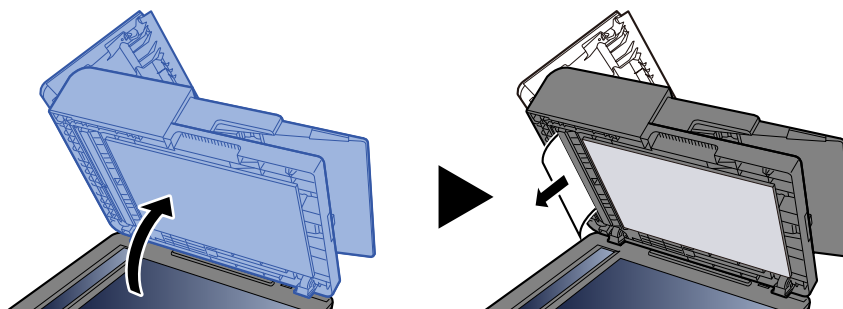

**4** Return the cover to the original position.

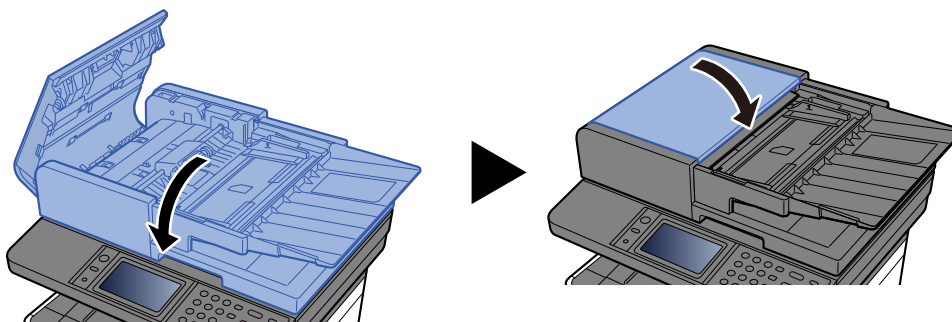

---


# 11 Appendix

---

# Optional Equipment

## Option configuration

The following enhancements are available for this model.

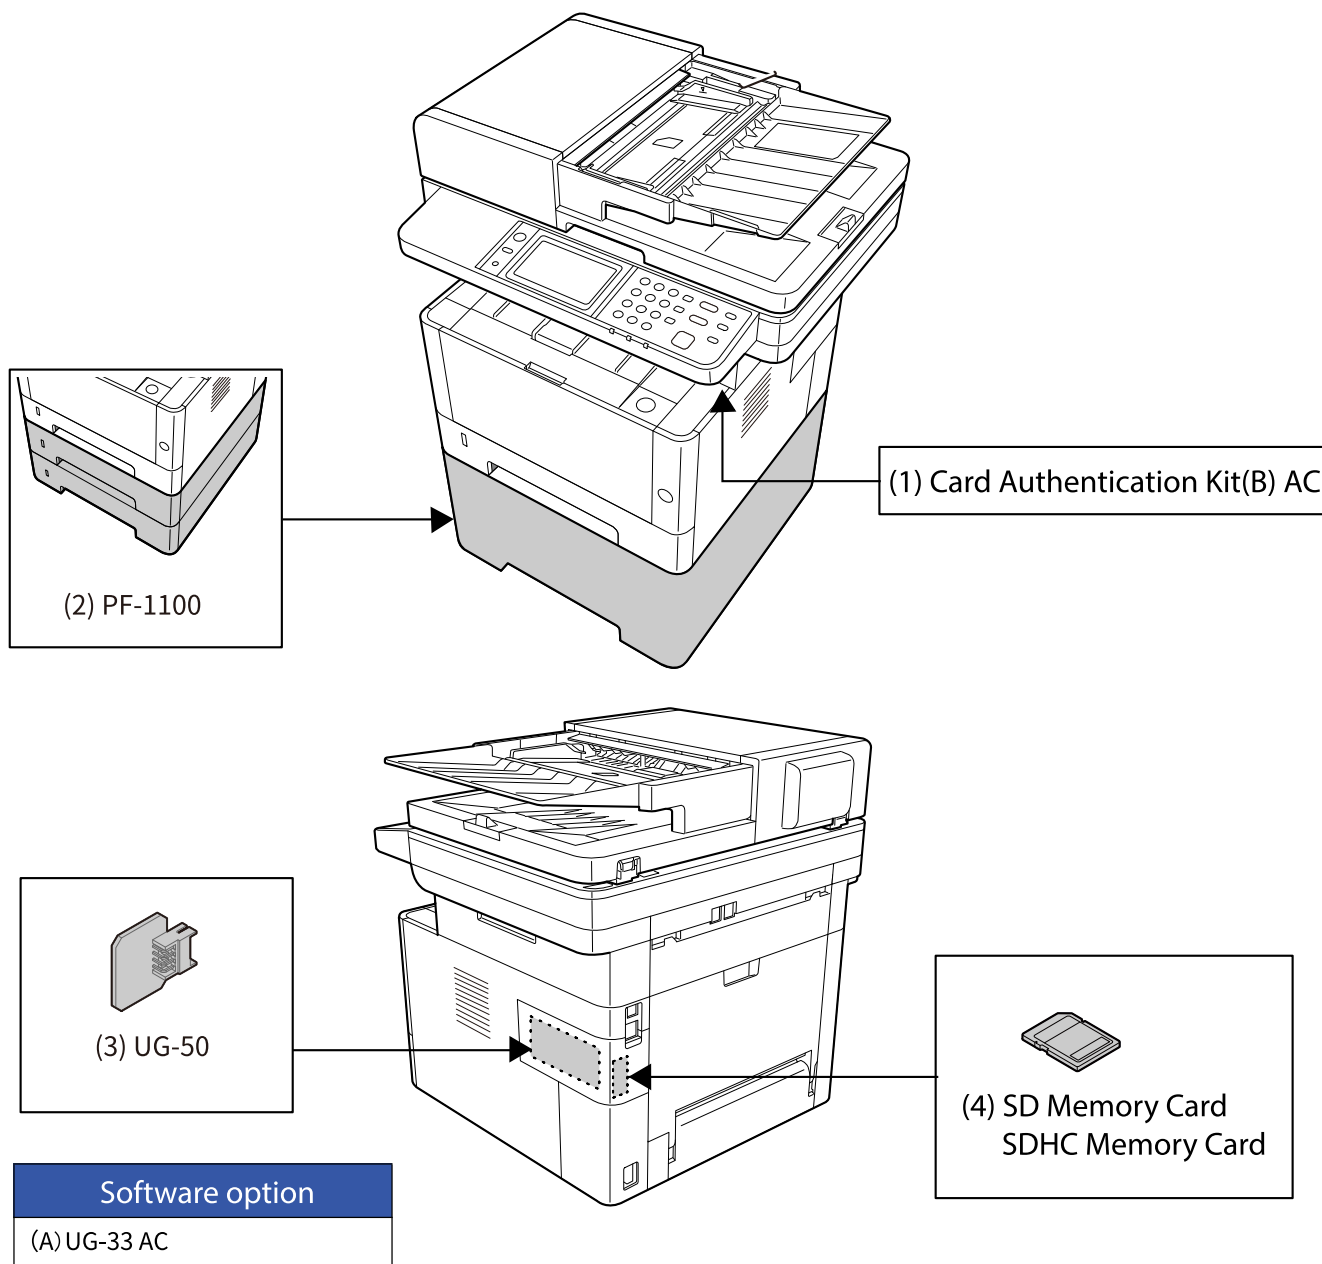

### 1 Card Authentication Kit(B) AC <IC card authentication kit (Activate)>

It is possible to make the user authentication with IC card. In order to perform the user authentication with IC card, IC card information has to be registered to the local user list in advance.

### 2 PF-1100 <Paper Feeder>

It is possible to add 2 drawers that is same as the cassette of the main unit.

The way of loading paper is same as the standard cassette.

### 3 UG-50 < Trusted Platform Module>

You can secure sensitive information with this option. The encryption key used to encrypt confidential information on this machine is stored in a dedicated storage area on the TPM chip. Since this storage area cannot be read from outside the TPM, confidential information can be safely protected.

#### 4 SD/SDHC Memory Card

SD/SDHC memory card is the micro-chip card that the option font, macro, form, etc. can be written. Insert SDHC memory card (Max. 32GB) and SD memory card (Max. 2GB) into the memory card slot.



#### NOTE

If removing the TPM chip after the data encryption function is enabled, the machine will stop working.

---

#### Software option

##### 1 UG-33 AC <ThinPrint expansion kit (Activate)>

It is possible print the print data directly even without the print driver.


### Reading the SD/SDHC Memory Card

Once inserted in the machine's slot, the contents of the SD/SDHC memory card can be read from the operation panel or automatically when you power on or reset the machine.


## Formatting the SD/SDHC Memory Card

To use an unused SD/SDHC Memory Card, you must first use the machine to format the SD/SD/SDHC Memory Card.


- 1 Turn off the power and disconnect the power cord and all cables connected to the unit.**
- 2 Open the cover.**

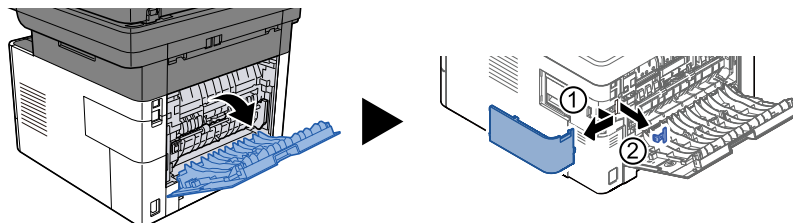

- 3 Insert SD/SDHC Memory Card into the memory card slot.**

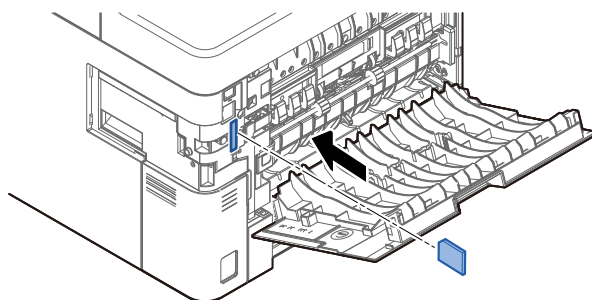

- 4 Attach the removed cover to the main unit.**

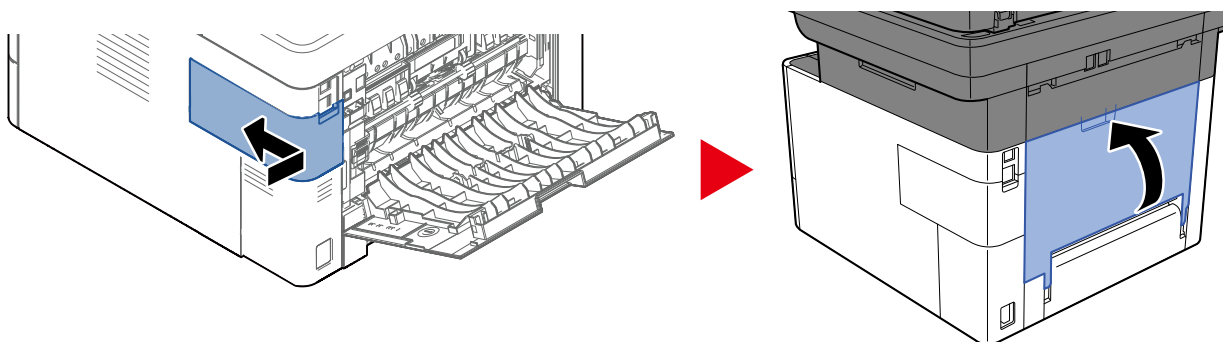

# Overview of the Applications

The applications listed below are installed on this machine.

- ThinPrint expansion kit (Activate)ThinPrint expansion kit (Activate)  
This can be used on a trial basis for a limited time.
- Authentication kit (Activate)  
This can be used on a trial basis for a limited time.

---

## NOTE

- Restrictions such as the number of times the application can be used during the trial period differ depending on the application.
  - If you change the date/time while using the trial version of an application, you will no longer be able to use the application.
- 

## Starting Application Use

### 1 Display the screen

[System Menu/Counter] key > [Add/Delete Application] > "Optional Function" [Optional Function List]

---

## NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

### 2 Select the desired application > [Menu] > [Activate]

You can view detailed information on the selected application by selecting  (information icon).

### 3 Enter the license key > [Official]

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to step 4.

To use the application as a trial, select [Trial] without entering the license key.

### 4 Select [Start] in the confirmation screen.

---

## NOTE

- If you start ThinPrint expansion kit (Activate) and enter the license key or if you select [Trial], you need to turn the power OFF/ON.
  - Icons of activated application are displayed in the Home screen.
-

## Checking Details of Application

### 1 Display the screen

[System Menu/Counter] key > [Add/Delete Application] > [Optional Function List]

---



#### NOTE

If the user authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login user name or password, please contact your administrator.

---

### 2 Select (information icon) for the application whose detailed information you want to check.

The detail information are available on the selected application.

The items that can be referenced are as follows:

- Function NameFunction Name
  - License
  - Remaining Trial Counts
  - Expiration Date of Trial
  - Status
- 



#### NOTE

To extend the trial period, select [Extend].

---

# Character Entry Method

To enter characters for a name, use the on-display keyboard in the touch panel following the steps as explained below.

 **NOTE**

Keyboard Layout


"QWERTY", "QWERTZ" and "AZERTY" are available as keyboard layouts the same as a PC keyboard. Select the [System Menu/Counter] key, [Device Settings], [Keyboard] and then [Keyboard Layout] to choose the desired layout. "QWERTY" layout is used here as an example. You may use another layout following the same steps.

## Input screen

### Entry Screens

Enter the character using the following key

### Lower-case Leter Entry Screen

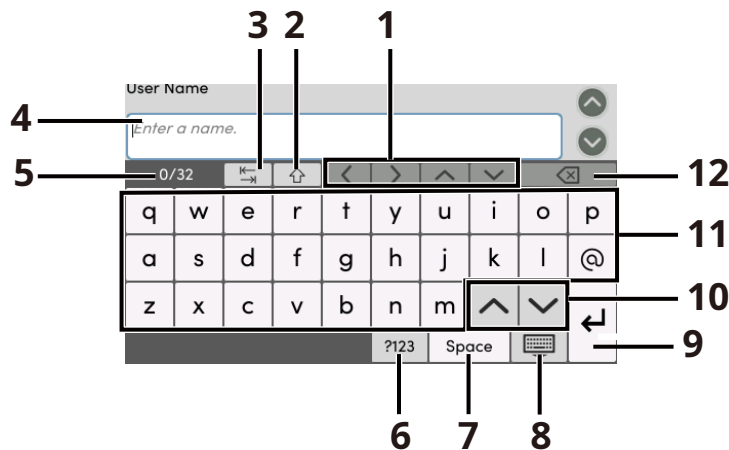

- 1 Cursor key  
Select to move the cursor on the display.
- 2 Shift key  
Select to switch between upper case and lower case.
- 3 Tab key  
Select to move to the next input box.
- 4 Input box  
Enter characters in the selected box.
- 5 Input/Limit display  
Displays maximum number of characters and the number of characters entered.
- 6 [?123]/[Character]  
Select the characters that are entered.
- 7 Space key  
Select to insert a space.

**8 Close key**

Select to close the entry screen.

**9 Enter key**

Select to finalize entry and return to the screen before the entry.

**10 Switch key**

Switch to character, numeric, and symbol keyboard. When selecting [?123] / [Character], the type of the keyboard switches.

**11 Keyboard**


Select the character to enter.

**12 Backspace key**

Select to delete a character to the left of the cursor.


## Upper-case Letter Entry Screen

Select the [Shift] key.

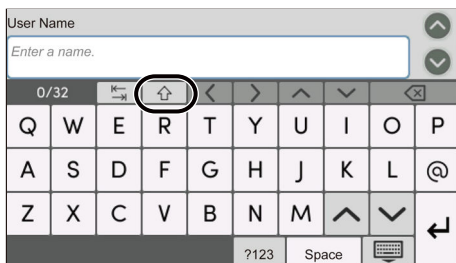

## Number/Symbol Entry Screen

Select [?123].

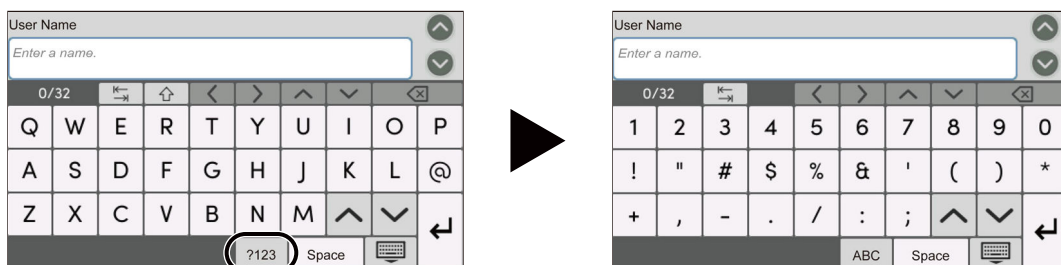

## Entering Characters

Follow the steps below to enter 'List #1' for an example.

# About Paper

This section explains the paper sizes and types that can be used in the paper source.

For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to the following:

➔ [Specifications \(page 801\)](#)

## Basic Paper Specifications

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

## Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

## Basic Paper Specifications

The following table lists the specifications of paper that is supported with this machine.

Item	Specifications
Weight	Cassettes: 60 to 163 g/m <sup>2</sup>
	Multipurpose tray: 60 to 220 g/m <sup>2</sup>
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°
Moisture Content	4 to 6%
Pulp content	80% or more



### NOTE

Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

## Choosing the Appropriate Paper

This section describes guidelines for choosing paper.

### Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Using such paper can cause poor print quality. In addition, poor paper feeding can cause paper jams and shorten the life of the machine. Use paper with a smooth and even surface. However, do not use paper that has been surface-treated, such as coating, as it may damage the drum and fusing unit.

### Ingredients

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum. Be sure to use standard paper that contains at least 80% pulp. Be sure to use standard paper with 20% or less of the paper content consisting of cotton or other fibers.

### Smoothness

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams. Basis Weight

### **In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area.**

In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper.

Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

### Moisture Content

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the box to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

## Other Paper Specifications

### Porosity:

The density of the paper fibers.

### Stiffness:

Paper must be stiff enough or it may buckle in the machine, causing jams.

### Curl:

Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

### Static electricity:

During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

### Whiteness:

Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

### Quality:

Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

### Packaging:

Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

### Specially treated paper:

We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- Glossy paper
- Watermarked paper
- Paper with an uneven surface
- Perforated paper

## Paper Sizes that can be Used with This Machine

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a  $\pm 0.7$  mm dimensional accuracy for length and width. Corner angles must be  $90^\circ \pm 0.2^\circ$ .

Paper Size	Cassette 1 to 3	MultipurposeTray
Envelope Monarch (3-7/8 × 7-1/2")	Paper of this size cannot be set	Paper of this size can be set
Envelope #10 (4-1/8 × 9-1/2")	Paper of this size cannot be set	Paper of this size can be set
Envelope DL (110 × 220 mm)	Paper of this size cannot be set	Paper of this size can be set
Envelope C5 (162 × 229 mm)	Paper of this size cannot be set	Paper of this size can be set
Executive (7-1/4 × 10-1/2")	Paper of this size can be set	Paper of this size can be set
Letter	Paper of this size can be set	Paper of this size can be set
Legal	Paper of this size can be set	Paper of this size can be set

Paper Size	Cassette 1 to 3	MultipurposeTray
A4 (297 × 210 mm)	Paper of this size can be set	Paper of this size can be set
B5 (257 × 182 mm)	Paper of this size can be set	Paper of this size can be set
A5-R	Paper of this size can be set	Paper of this size can be set
A5 (210 × 148 mm)	Paper of this size can be set	Paper of this size can be set
A6 (148 × 105 mm)	Paper of this size can be set	Paper of this size can be set
B6 (182 × 128 mm)	Paper of this size cannot be set	Paper of this size can be set
Envelope #9 (3-7/8 × 8-7/8")	Paper of this size cannot be set	Paper of this size can be set
Envelope #6 (3-5/8 × 6-1/2")	Paper of this size cannot be set	Paper of this size can be set
ISO B5 (176 × 250 mm)	Paper of this size can be set	Paper of this size can be set
Hagaki (Cardstock) (100 × 148 mm)	Paper of this size cannot be set	Paper of this size can be set
Oufuku hagaki (Return postcard) (148 × 200 mm)	Paper of this size cannot be set	Paper of this size can be set
Oficio II	Paper of this size can be set	Paper of this size can be set
216 × 340 mm	Paper of this size can be set	Paper of this size can be set
16K (273 × 197 mm)	Paper of this size can be set	Paper of this size can be set
Statement	Paper of this size can be set	Paper of this size can be set
Folio (210 × 330 mm)	Paper of this size can be set	Paper of this size can be set
Youkei 4 (105 × 235 mm)	Paper of this size cannot be set	Paper of this size can be set
Youkei 2 (114 × 162 mm)	Paper of this size cannot be set	Paper of this size can be set
Nagagata 3	Paper of this size cannot be set	Paper of this size can be set
Nagagata 4	Paper of this size cannot be set	Paper of this size can be set
Yougata 3	Paper of this size cannot be set	Paper of this size can be set
Size Input	Cassette: 105×148 to 216×356 mm Multipurpose Tray: 70 × 148 to 216 × 356 mm	

## Special Paper

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparencies
- Preprint
- Bond paper
- Recycled paper
- Thin paper
- Letterhead
- Colored Paper
- Prepunched paper
- Envelopes
- Hagaki (Cardstock)
- Thick Paper
- Labels
- Coated Paper
- High-quality paper

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multipurpose tray for thick paper, envelopes, cardstocks, and label paper.

### Choosing Special Paper

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multipurpose tray for special paper.

## Transparencies

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C
Thickness	0.100 to 0.110 mm
Material	Polyester
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°

If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

Labels

Be sure to feed labels from the multipurpose tray

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.



Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

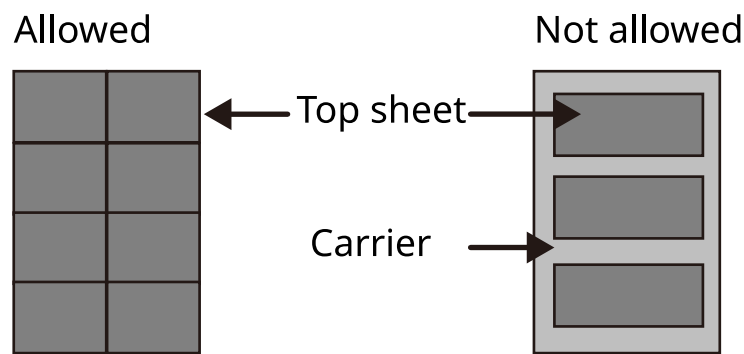

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m <sup>2</sup>
Basis weight(overall paper weight)	104 to 151 g/m <sup>2</sup>
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture Content	4 to 6 % (composite)

## Hagaki (Cardstock)

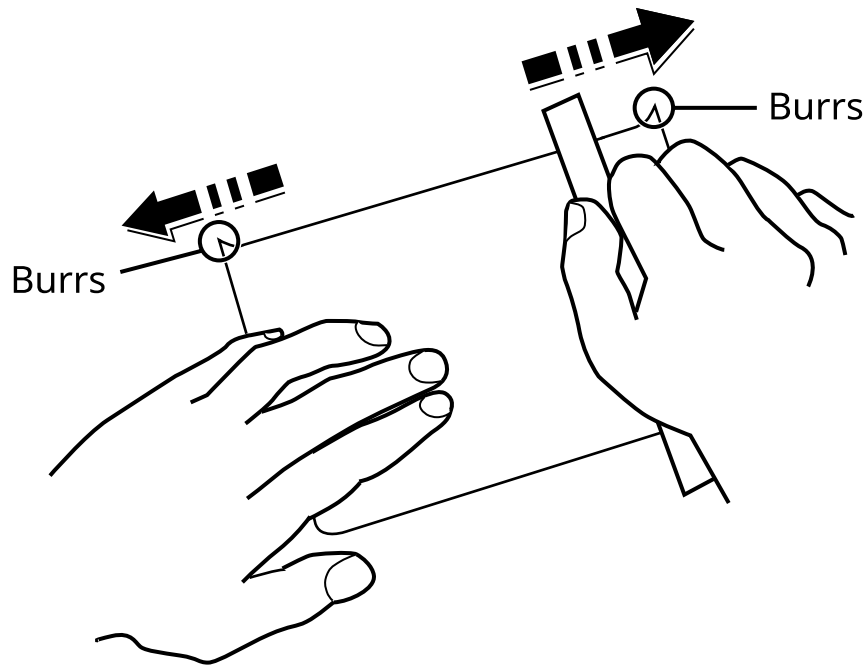

Before loading Hagaki (Cardstock) into the multipurpose tray, fan them and align the edges. If the Hagaki (Cardstock) paper is curled, straighten it before loading. Printing onto curled Hagaki (Cardstock) may cause jams.

Use unfolded Oufuku hagaki (Return postcard) (available at post offices). Some Hagaki (Cardstock) may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki (Cardstock) on a flat surface and rubbing the edges gently a few times with a ruler.

## Envelopes

Envelopes should be fed from the MP tray with the print-side down or the cassette and the optional paper feeder with the print-side up.



### NOTE

Do not load paper above the load limits located on the paper width guide of the cassette and the optional paper feeder.

---

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- If paper jams occur, load fewer envelopes at once.

## Thick Paper

Before loading thick paper, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki (Cardstock) by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.

---



### NOTE

If the paper is not supplied correctly even after it is smoothed, load the paper with the leading edge raised a few millimeters.

---

## Colored Paper

Colored paper must conform to the specifications.

➔ [Basic Paper Specifications \(page 787\)](#)

In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

## Preprint

Preprinted paper must conform to the specifications

➔ [Basic Paper Specifications \(page 787\)](#)

The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

## Recycled paper

Recycled paper must conform to the specifications; however, its whiteness may be considered separately.

➔ [Basic Paper Specifications \(page 787\)](#)



### NOTE

Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

---

## Coated Paper

Coated paper is created by treating the surface of the base paper with a coating that provides higher printing quality than plain paper. Coated paper is used for particularly high quality printing.

The surface of high-quality or medium-quality paper is coated with special agents that improve ink adhesion by making the paper surface smoother. These agents are used either to coat both sides of the paper or just one side. The coated side appears slightly glossy.

---

### **IMPORTANT**

When printing on coated paper in very humid environments, ensure that the paper is kept dry as moisture may cause sheets to stick together when they are fed into the machine. If printing in very humid environments, set coated paper for one sheet each.

---

# Specifications

## IMPORTANT

Specifications are subject to change without notice.

## NOTE

For more information on using the FAX, refer to the following:

➔ [FAX Operation Guide](#)

## Machine

Item	Specifications
Type	Desktop
Printing Method	Electrophotography by semiconductor laser
Paper Weight (Cassette)	60 to 163 g/m <sup>2</sup>
Paper Weight (Multipurpose Tray)	60 to 220 g/m <sup>2</sup> , 209.5 g/m <sup>2</sup> (Postal card)
Paper Type (Cassette)	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8 (Duplex printing is same as single-sided)
Paper Type (Multipurpose Tray)	Plain, Transparency, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick Paper, High Quality, Custom 1 to 8
Paper Size (Cassette)	A4, A5-R, A5, A6, B5, Letter, Legal, Folio, 216 x 340 mm, Statement, Executive, Oficio II, 16K, B5 (ISO), Custom (105 x 148 to 216 x 356 mm)
Paper Size (Multipurpose Tray)	A4, A5-R, A5, A6, B5, Letter, Legal, Folio, 216 x 340 mm, Statement, Executive, Oficio II, 16K, B5 (ISO), Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Envelope DL, Envelope C5, postcard, return postcard, Yougata 4, Yougata 2, Nagagata 3, Nagagata 4, Younaga 3, Custom (70 x 148 to 216 x 356 mm)
Print image width	Full surface 4.2 mm
Warm-up Time (23°C/73.4°F, 60%)	29 seconds or less (from power ON)
Paper Capacity (Cassette)	250 sheets (80 g/m <sup>2</sup> )
Paper Capacity (Multipurpose Tray)	100 sheets (80 g/m <sup>2</sup> )
Output Tray Capacity (Upper tray)	150 sheets (80 g/m <sup>2</sup> )
Image Write System	Semiconductor laser and electrophotography
Memory	2GB

Item	Specifications
Interface	<ul style="list-style-type: none"> <li>• Hi-Speed USB: 1</li> <li>• Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T)</li> <li>• 1 (Hi-Speed USB)</li> <li>• Wireless LAN compatible</li> <li>• Fax: 1</li> </ul>
Operating Environment (Temperature)	10 to 32.5 °C
Operating Environment (Humidity)	10 to 80 %
Operating Environment (Altitude)	3,500 m/11,482 ft maximum
Operating Environment (Brightness)	1,500 lux maximum
Dimension (W × D × H)	375 x 393 x 272 mm; 475 x 412 x 437 mm; 417 x 412 x 437 mm
Weight (without toner container)	19 kg
Space Required (W × D) (when using multipurpose tray)	417 x 548 mm
Power Source	AC220-240 V, 50/60Hz, 4.1 A
The power consumption of the product in networked standby (If all network ports are connected.)	<p>The information is available at the website below.</p> <p><b>Triumph-Adler</b></p> <p>EN:  <a href="https://www.triumph-adler.com/ta-en-de/customer-service/download-centre">https://www.triumph-adler.com/ta-en-de/customer-service/download-centre</a></p> <p>DE:  <a href="https://www.triumph-adler.com/ta-de-de/kundendienst/download-center">https://www.triumph-adler.com/ta-de-de/kundendienst/download-center</a></p> <p><b>UTAX</b></p> <p>EN:  <a href="https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre">https://www.utax.com/en-de/hardware/office-printer-and-mfp/download-centre</a></p> <p>DE:  <a href="https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center">https://www.utax.com/de-de/hardware/buerodrucker-und-mfp/download-center</a></p>
Options	➔ <a href="#">Option configuration (page 779)</a>

# Copy Functions

## Copy Speed

Paper Size	Specifications
A4	40 sheets/min
LetterR	42 sheets/min
B5R	15 sheets/min <sup>*1</sup>
A5R	15 sheets/min <sup>*2</sup>
A6R	19 sheets/min <sup>*3</sup>
Legal	34 sheets/min
A5	65 sheets/min
16K	12.5 sheets/min <sup>*4</sup>

\* 1: 8.5 sheets / min. for the 5th page and after

\* 2: 8.5 sheets / min. for the 6th page and after

\* 3: 8.5 sheets / min. for the 7th page and after

\* 4: 7.5 sheets / min. for the 5th and after

## Copy speed (when using EcoPrint)

Paper Size	Specifications
A4	20 sheets/min
LetterR	21 sheets/min
B5R	7.5 sheets/min <sup>*1</sup>
A5R	7.5 sheets/min <sup>*1</sup>
A6R	9.5 sheets/min <sup>*2</sup>
Legal	17 sheets/min
A5	33 sheets/min
16K	6.5 sheets/min <sup>*3</sup>

\* 1: 4.5 sheets/min. for the 7th and after

\* 2: 5.5 sheets/min. for the 7th and after

\* 3: 3.5 sheets/min. for the 5th and after

## Others

Item	Specifications
First Copy Time (A4, placed on the platen, feed from Cassette)	6.4 seconds or less

Item	Specifications
Zoom Level	Manual mode: 25 to 400%, 1% increments Preset zoom levels: 400%, 200%, 141%, 115%, 100%, 86%, 70%, 50%, 25%
Continuous Copying	1 to 999 sheets
Resolution	600 × 600 dpi
Original Type	Sheet, Book, 3-dimensional objects (maximum original size: 216×356 mm)
Original Feed System	Fixed

## Printer Function

### Print Speed

Paper Size	Specifications
A4	40 sheets/min
Letter	42 sheets/min
B5R	9.5 sheets/min <sup>*1</sup>
A5R	9.5 sheets/min <sup>*2</sup>
A6R	11 sheets/min <sup>*3</sup>
Legal	34 sheets/min
A5	65 sheets/min
16K	8.5 sheets/min <sup>*4</sup>

\* 1: 15 sheets/min until the 4th, 8.5 sheets/min from the 5th and after

\* 2: 15 sheets/min until the 5th, 8.5 sheets/min from the 6th and after

\* 3: 19 sheets/min until the 6th, 8.5 sheets/min from the 7th and after

\* 4: 12.5 sheets/min until the 4th, 7.5 sheets/min from the 5th and after

### Others

Item	Specifications
First Print Time (A4, feed from Cassette)	6.4 seconds or less
Resolution	600 × 600 dpi
Operating System	<ul style="list-style-type: none"> <li>• Windows 10</li> <li>• Windows 11</li> <li>• Windows Server 2016</li> <li>• Windows Server 2019</li> <li>• Windows Server 2022</li> <li>• Mac OS X v10.9 or higher</li> </ul>
Interface	<ul style="list-style-type: none"> <li>• Hi-Speed USB: 1</li> <li>• Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T)</li> <li>• Wireless LAN: 1 (For wireless network model)</li> </ul>
Page Description Language	PRESCRIBE
Emulation	<ul style="list-style-type: none"> <li>• PCL6 (PCL-XL, PCL5c)</li> <li>• KPDL3 (Postscript3 compatible)</li> <li>• XPS</li> <li>• OpenXPS</li> <li>• PDF</li> </ul>

## Scanner Functions

### Scanning Speed (A4 landscape, 300 dpi, Image quality: Text/Photo original)

When using the document processor (except TWAIN scanning)

Item	Black and White	Color
1-Sided	40 sheets/min	23 sheets/min
2-Sided	80 sheets/min	46 sheets/min

### Others

Item	Specifications
Resolution	<ul style="list-style-type: none"> <li>• 200 dpi x 200 dpi (Default)</li> <li>• 300 dpi x 300 dpi</li> <li>• 200dpi x 100dpi</li> <li>• 600dpi x 600dpi</li> <li>• 400dpi x 400dpi</li> <li>• 200dpi x 400dpi</li> </ul>
File Format	TIFF (MMR/JPEG compression), JPEG, PDF (MMR/JPEG compression), XPS, PDF/A, High-Compression PDF, Encrypted PDF, Open XPS
Interface	Ethernet (10 BASE-T/100 BASE-TX/1000 BASE-T), USB
Transmission System	SMB, SMTP, FTP, FTP over SSL, USB, TWAIN, WIA, WSD, eSCL

Available Operating Systems: Windows 10/Windows 11/Windows Server 2016/Windows Server 2019/Windows Server 2022

# Document Processor

Item	Specifications
Original Type	Sheet originals
Original Size	Maximum: Legal/Folio Minimum: A6/Statement
Original Weight	50 to 160 g/m <sup>2</sup>
Loading Capacity	50 sheets (50 to 80 g/m <sup>2</sup> ) maximum Thick paper: 25 sheets

## Paper Feeder (300 250 sheet x 2)

Item	Specifications
Paper Supply Method	Friction roller feeder Capacity 250 sheets (80 g/m <sup>2</sup> ) × up to 2 cassettes
Paper Size	A4, A5-R, A5, A6, B5, Letter, Legal, Folio, 216 x 340 mm, Statement, Executive, Oficio II, 16K, B5 (ISO), Custom (105 x 148 to 216 x 356 mm)
Supported Paper	Paper thickness: 60 to 163 g/m <sup>2</sup> Paper Type: Plain Paper, Recycled Paper, Preprint, Bond Paper, Color Paper, Punched Paper, Letterhead, Thick Paper, Fine Paper, Custom
Dimensions (W × D × H)	375 × 393 × 100 mm / 14.76" × 15.47" × 3.94"
Weight	2.9kg / 6.39lb

# Backing up your data

If the memory of this machine installed in the machine failed for any reason, the files in the box, fax received data and various settings saved there will be deleted and cannot be restored. To prevent erasing data, make regular backups as follows.

- Take a backup using NETWORK PRINT MONITOR.

➡ [Backing up your data using NETWORK PRINT MONITOR \(page 809\)](#)

## Backing up your data using NETWORK PRINT MONITOR

Use NETWORK PRINT MONITOR to regularly back up the data below that is saved on the machine.

- System Settings
- Network Settings
- User List
- Address Book

# Security Quick Setup Function List

The functions configured in each level of Security Quick Setup are as follows. After selecting the security level, configure the security function according to your operating environment.

## TLS

Level 1	Level 2	Level 3
On	On	On

## Serverside Settings

The setting item which can be set or configured from Embedded Web Server RX.

### TLS Version

Level 1	Level 2	Level 3
TLS1.2, TLS1.3	TLS1.2, TLS1.3	TLS1.2, TLS1.3

### Effective Encryption

Level 1	Level 2	Level 3
3DES, AES, AES-GCM, CHACHA20/ POLY1305	AES-GCM, AES, CHACHA20/ POLY1305	AES-GCM, AES, CHACHA20/ POLY1305

### Hash

level 1	level 2	level 3
SHA1, SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

### IPP Security

Level 1	Level 2	Level 3
Secure Only (IPPS)	Secure Only (IPPS)	Secure Only (IPPS)

### HTTP Security

Level 1	Level 2	Level 3
Secure Only (HTTPS)	Secure Only (HTTPS)	Secure Only (HTTPS)

### Enhanced WSD Security

Level 1	Level 2	Level 3
Secure Only (Enhanced WSD over TLS)	Secure Only (Enhanced WSD over TLS)	Secure Only (Enhanced WSD over TLS)

### eSCL Security

Level 1	Level 2	Level 3
Secure Only (eSCL over TLS)	Secure Only (eSCL over TLS)	Secure Only (eSCL over TLS)

### REST Security

Level 1	Level 2	Level 3
Secure Only (REST over TLS)	Secure Only (REST over TLS)	Secure Only (REST over TLS)

## Clientside Settings

The setting item which can be set or configured from Embedded Web Server RX.

### TLS Version

Level 1	Level 2	Level 3
TLS1.2, TLS1.3	TLS1.2, TLS1.3	TLS1.2, TLS1.3

### Effective Encryption

Level 1	Level 2	Level 3
3DES, AES, AES-GCM, CHACHA20/ POLY1305	AES-GCM, AES, CHACHA20/ POLY1305	AES-GCM, AES, CHACHA20/ POLY1305

### Hash

level 1	level 2	level 3
SHA1, SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# IPv4 Settings (Wired Network)

The setting item which can be set or configured from Embedded Web Server RX.

## DNS over TLS

level 1	level 2	level 3
Off	Auto	On

## Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

## Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# IPv4 Settings (Wireless Network)

The setting item which can be set or configured from Embedded Web Server RX.

## DNS over TLS

level 1	level 2	level 3
Off	Auto	On

## Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

## Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# IPv6 Settings (Wired Network)

The setting item which can be set or configured from Embedded Web Server RX.

## DNS over TLS

level 1	level 2	level 3
Off	Auto	On

## Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

## Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# IPv6 Settings (Wireless Network)

The setting item which can be set or configured from Embedded Web Server RX.

## DNS over TLS

level 1	level 2	level 3
Off	Auto	On

## Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

## Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

## Send Protocols: FTP Client (Transmission)

The setting item which can be set or configured from Embedded Web Server RX.

### Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

### Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

## Other Protocols: HTTP (Client)

The setting item which can be set or configured from Embedded Web Server RX.

### Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

### Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# Other Protocols: SOAP

The setting item which can be set or configured from Embedded Web Server RX.

**Use Default Settings**

Level 1	Level 2	Level 3
On	On	On

# Other Protocols: LDAP

The setting item which can be set or configured from Embedded Web Server RX.

**Use Default Settings**

Level 1	Level 2	Level 3
Off	Expiration Date	Expiration Date

# Send Protocols: SMTP (E-mail TX)

The setting item which can be set or configured from Embedded Web Server RX.

## Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

## Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# Email: POP3 User Settings

The setting item which can be set or configured from Embedded Web Server RX.

## Certificate Auto Verification

level 1	level 2	level 3
Expiration Date	Expiration Date	Expiration Date

## Hash

level 1	level 2	level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

# Print protocols

## SMB Server Protocol

level 1	level 2	level 3
Off	Off	Off

## LPD

Level 1	Level 2	Level 3
On	On	Off

## FTP (Receiving)

Level 1	Level 2	Level 3
On	Off	Off

## IPP

Level 1	Level 2	Level 3
On	Off	Off

## IPP over TLS

Level 1	Level 2	Level 3
On	On	On

## Raw

Level 1	Level 2	Level 3
On	On	Off

## ThinPrint

Level 1	Level 2	Level 3
On	Off	Off

## ThinPrint over TLS

Level 1	Level 2	Level 3
On	—*1	—*1

\*1 If you select [Level 2] or [Level 3] in "Security Quick Setup", this setting will disappear.

## WSD Print

Level 1	Level 2	Level 3
On	Off	Off

**POP (E-mail RX)**

Level 1	Level 2	Level 3
Off	Off	Off

## Send Protocol

### FTP Client (Transmission)

Level 1	Level 2	Level 3
On	Off	Off

### SMB

Level 1	Level 2	Level 3
On	On	Off

### WSD Scan

Level 1	Level 2	Level 3
On	Off	Off

### eSCL

Level 1	Level 2	Level 3
On	Off	Off

### eSCL over TLS

Level 1	Level 2	Level 3
On	On	Off

## Other Protocols

### SNMPv1/v2c

Level 1	Level 2	Level 3
On	On	Off

### SNMPv3

Level 1	Level 2	Level 3
Off	Off	Off

### HTTP

Level 1	Level 2	Level 3
On	Off	Off

### HTTPS

Level 1	Level 2	Level 3
On	On	On

### Enhanced WSD

Level 1	Level 2	Level 3
On	Off	Off

### Enhanced WSD (TLS)

Level 1	Level 2	Level 3
On	On	On

### LDAP

Level 1	Level 2	Level 3
Off	Off	Off

### LLTD

Level 1	Level 2	Level 3
Off	Off	Off

### REST

Level 1	Level 2	Level 3
On	Off	Off

**REST over TLS**

Level 1	Level 2	Level 3
On	On	On

**VNC (RFB)**

Level 1	Level 2	Level 3
Off	Off	Off

**VNC (RFB) over TLS**

Level 1	Level 2	Level 3
Off	Off	Off

**Enhanced VNC (RFB) over TLS**

Level 1	Level 2	Level 3
On	Off	Off

# TCP/IP: Bonjour Settings

## Bonjour

Level 1	Level 2	Level 3
On	On	Off

# Network Settings

## Wi-Fi Direct Settings

Level 1	Level 2	Level 3
Off	Off	Off

# Connectivity

## Bluetooth Settings

Level 1	Level 2	Level 3
Off	Off	Off

# Interface Block Setting

## USB Host

Level 1	Level 2	Level 3
Unblock	Unblock	Block

## USB Device

Level 1	Level 2	Level 3
Unblock	Unblock	Block

## USB Drive

Level 1	Level 2	Level 3
Unblock	Unblock	Block

# Energy Saver/Timer

## Auto Panel Reset

Level 1	Level 2	Level 3
On	On	On

# User Account Lockout Setting

Lockout

level 1	level 2	level 3
Off	Off	On

# Job Status/Job Logs Settings

## Display Jobs Detail Status

Level 1	Level 2	Level 3
Show All	Show All	Hide All (Display only when Administrator

## Display Jobs Log

Level 1	Level 2	Level 3
Show All	Show All	Hide All (Display only when Administrator

## Display Fax Log

Level 1	Level 2	Level 3
Show All	Show All	Hide All (Display only when Administrator

# Edit Restriction

## Address Book

Level 1	Level 2	Level 3
No limit	No limit	Administrator only

## One-Touch Key

Level 1	Level 2	Level 3
No limit	No limit	Administrator only

## Prevent Mis-sending Settings

### Destination Check before Send

Level 1	Level 2	Level 3
On	On	On

### Entry Check for New Dest.

Level 1	Level 2	Level 3
On	On	On

### New Destination Entry

Level 1	Level 2	Level 3
Permit	Permit	Prohibit

### New destination entry (FAX)

Level 1	Level 2	Level 3
Permit	Permit	—*1

\*1 If you select [Level 3] in "Security Quick Setup", this setting will disappear.

### Recall Destination

Level 1	Level 2	Level 3
Prohibit	Permit	Prohibit

### Broadcast

Level 1	Level 2	Level 3
Permit	Permit	Prohibit

